

DAP-2360

Version 2.0



AirPremier[®] N

PoE Access Point

User Manual

Business Class Networking

Table of Contents

Product Overview.....	4	LAN	28
Package Contents.....	4	IPv6	29
System Requirements	4	Advanced Settings	30
Introduction	5	Performance	30
Features.....	7	Wireless Resource	32
Wireless Basics	8	Multi-SSID	34
Standards-Based Technology.....	9	VLAN.....	36
Wireless Installation Considerations.....	10	VLAN List.....	36
Hardware Overview	11	Port List.....	37
Connect Power over Ethernet (PoE).....	12	Add/Edit VLAN	38
Four Operational Modes	13	PVID Setting.....	39
Getting Started	14	Intrusion.....	40
Configuration	15	Schedule	41
Save and Activate Settings.....	16	Internal RADIUS Server	42
Basic Settings	17	ARP Spoofing Prevention	43
Wireless	17	Bandwidth Optimization	44
Access Point mode	17	AP Arrey.....	46
WDS with AP mode	19	AP Array Scan	46
WDS mode	21	Configuration Settings.....	47
Wireless Client mode.....	23	Auto-RF	48
Open System/Shared Key Authentication	24	Load Balance	49
WPA/WPA2-Personal Authentication.....	25	Captive Portal	50
WPA/WPA2-Enterprise Authentication	26	Authentication Settings - Passcode	50
802.1x Authentication.....	27	Authentication Settings - Username/Password.....	51
		Authentication Settings - Remote RADIUS	52
		Authentication Settings - LDAP	53
		Authentication Settings - POP3.....	54

Login Page Upload	55	Console Settings	79
Web Redirection.....	56	SNMP Settings	80
DHCP Server	57	Central WiFiManager Settings.....	81
Dynamic Pool Settings.....	57	Firmware and SSL Certification Upload.....	82
Static Pool Setting	59	Configuration File Upload	83
Current IP Mapping List.....	61	Time and Date	84
Filters.....	62	Configuration and System.....	85
Wireless MAC ACL	62	System	86
WLAN Partition	63	System Settings	86
Traffic Control.....	64	Help	87
Uplink/Downlink Settings	64	Troubleshooting	88
QoS.....	65	Networking Basics.....	90
Traffic Manager.....	66	Check your IP address.....	90
Status	67	Statically Assign an IP address	91
Device Information	67	Technical Specifications	93
Client Information	68	Contacting Technical Support.....	95
Channel Analyze	69	Warranty.....	96
WDS Information	70	Registration	102
Stats	71		
Ethernet.....	71		
WLAN Traffic	72		
Log	73		
View Log.....	73		
Log Settings.....	74		
Maintenance	75		
Administration Settings	75		
Limit Administrator	76		
System Name Settings	77		
Login Settings	78		

Package Contents

- D-Link DAP-2360 AirPremier® N Plenum-Rated Gigabit PoE Access Point
- Power Adapter
- CAT5 Ethernet Cable
- CD-ROM with User Manual
- Install Guide
- two detachable antennas



Note: Using a power supply with a different voltage rating than the one included with the DAP-2360 will cause damage and void the warranty for this product.

System Requirements

- Computers with Windows®, Macintosh®, or Linux-based operating systems with an installed Ethernet Adapter
- For configuration, the following web browsers are supported:
 - Microsoft® Internet Explorer® 7.0 and higher
 - Mozilla Firefox 3.5 and higher
 - Google™ Chrome 20 and higher
 - Apple Safari 5.0 and higher

Introduction

The DAP-2360 802.11n AP increases productivity by allowing you to work faster and more efficiently. With the DAP-2360, bandwidth-intensive applications like graphics or multimedia will benefit significantly because large files are now able to move across the network quickly.

The DAP-2360 is capable of operating in one of four different wireless networking modes: access point, WDS (Wireless Distribution System) with AP, WDS, or Wireless Client mode.

Use less wiring, enjoy increased flexibility, save time and money with PoE (Power over Ethernet). With PoE, the DAP-2360 shares power and data over the CAT5 cable, making the setup of your network less expensive and more convenient.

An ideal solution for quickly creating and extending a wireless local area network (WLAN) in offices or other workplaces, trade shows, and special events, the DAP-2360 provides data transfer rates up to 300Mbps. (The 802.11n standard is backwards compatible with 802.11g and 802.11b devices.)

WPA/WPA2 is offered in two options: Enterprise (used for corporations) and Personal (used for home users).

WPA-Personal and WPA2-Personal are directed towards home users who do not have the server-based equipment required for user authentication. This method of authentication is similar to WEP because you define a "Pre-Shared Key" on the wireless router/AP. Once the pre-shared key is confirmed and satisfied at both the client and access point, access is then granted. The encryption method used is referred to as the Temporal Key Integrity Protocol (TKIP), which offers per-packet dynamic hashing. It also includes an integrity checking feature which ensures that the packets were not tampered with during wireless transmission.

WPA-Enterprise and WPA2-Enterprise are ideal for businesses that already have existing security infrastructures established.

Management and security implementation can now be centralized on a server participating on the network. Utilizing 802.1X with a RADIUS (Remote Authentication Dial-in User Service) server, a network administrator can define a list of authorized users who can access the wireless LAN. When attempting to access a wireless LAN with WPA-Enterprise configured, the new client will be requested to enter a username with a password. If the new client is authorized by the administration, and enters the correct username and password, then access is granted. In the case where an employee leaves the company, the network administrator is able to remove the previous employee from the authorized list to avoid compromising the network.

EAP (Extensible Authentication Protocol) is available through the Windows® XP operating system. You will need to use the same type of EAP protocol on all devices in your network when using the 802.1X feature.

*Maximum wireless signal rate derived from IEEE Standard 802.11n and 802.11g specifications. Actual data throughput may vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead can lower actual data throughput rate.

Features

- **Four different operation modes** - Capable of operating in one of four different operation modes to meet your wireless networking needs: Access Point, WDS with AP, WDS, or Wireless Client.
- Faster wireless networking with the 802.11n standard to provide a maximum wireless signal rate of up to 300 Mbps*.
- Compatible with the 802.11b standard to provide a wireless data rate of up to 11Mbps, allowing you to migrate your system to the 802.11n and 802.11g standards on your own schedule without sacrificing connectivity.
- Compatible with the 802.11g standard to provide a wireless data rate of up to 54Mbps in the 2.4GHz frequency range.
- Better security with WPA - The DAP-2360 can securely connect wireless clients on the network using WPA (Wi-Fi Protected Access) to provide a much higher level of security for your data and communications than its previous versions.
- **D-Link Central WiFiManager software** - The real-time display of the network's topology and AP's information makes network configuration and management quick and simple.
- **SNMP for management** - The DAP-2360 is not just fast, but also supports SNMP v.3 for better network management.
- Utilizes OFDM technology (Orthogonal Frequency Division Multiplexing).
- Supports 802.3af Power over Ethernet.
- Supports one 10/100/1000M Ethernet port.
- Operates in the 2.4 ~ 2.4835GHz frequency ranges.
- Web-based interface for managing and configuring.

*Maximum wireless signal rate derived from IEEE Standard 802.11n and 802.11g specifications. Actual data throughput may vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead can lower actual data throughput rate.

Wireless Basics

D-Link wireless products are based on industry standards to provide high-speed wireless connectivity that is easy to use within your home, business or public access wireless networks. D-Link wireless products provides you with access to the data you want, whenever and wherever you want it. Enjoy the freedom that wireless networking can bring to you.

WLAN use is not only increasing in both home and office environments, but in public areas as well, such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are allowing people to work and communicate more efficiently. Increased mobility and the absence of cabling and other types of fixed infrastructure have proven to be beneficial to many users.

Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards, allowing wireless users to use the same applications as those used on a wired network.

People use WLAN technology for many different purposes:

Mobility - productivity increases when people can have access to data in any location within the operating range of their WLAN. Management decisions based on real-time information can significantly improve the efficiency of a worker.

Low implementation costs - WLANs are easy to set up, manage, change and relocate. Networks that frequently change can benefit from WLAN's ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

Installation and network expansion - by avoiding the complications of troublesome cables, a WLAN system can be fast and easy during installation, especially since it can eliminate the need to pull cable through walls and ceilings. Wireless technology provides more versatility by extending the network beyond the home or office.

Inexpensive solution - wireless network devices are as competitively priced as conventional Ethernet network devices. The DAP-2360 saves money by providing users with multi-functionality configurable in four different modes.

Scalability - Configurations can be easily changed and range from Peer-to-Peer networks, suitable for a small number of users to larger Infrastructure networks to accommodate hundreds or thousands of users, depending on the number of wireless devices deployed.

Standards-Based Technology

The DAP-2360 Wireless Access Point utilizes the 802.11b, 802.11g, and 802.11n standards.

The IEEE 802.11n standard is an extension of the 802.11b and 802.11g standards that came before it. It increases the maximum wireless signal rate up to 300Mbps* within the 2.4GHz bands, utilizing OFDM technology.

This means that in most environments - within the specified range of this device - you will be able to transfer large files quickly, or even watch a movie in MPEG format over your network without noticeable delays. This technology works by transmitting high-speed digital data over a radio wave utilizing OFDM (Orthogonal Frequency Division Multiplexing) technology. OFDM works by splitting the radio signal into multiple smaller sub-signals that are then simultaneously transmitted at different frequencies to the receiver. OFDM reduces the amount of crosstalk (interference) in signal transmissions.

The D-Link DAP-2360 will automatically sense the best possible connection speed to ensure the greatest possible speed and range.

IEEE 802.11n offers the most advanced network security features available today, including WPA.

*Maximum wireless signal rate derived from IEEE Standard 802.11n and 802.11g specifications. Actual data throughput may vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead can lower actual data throughout rate.

Wireless Installation Considerations

The D-Link AirPremier® N wireless access point lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the access point and other network devices to a minimum. Each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters). Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle, it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building Materials make a difference. A solid metal door or aluminum studs may have a negative effect on the range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.

Hardware Overview



Power Receptacle

The supplied power adapter connects here.

Reset Button

A pinhole button located beside the Ethernet socket is used to reset the system or restore the factory default settings.

Note: After resetting the unit, you will still be able to access the data on your hard drives.

LAN (PoE) Port

An Gigabit Ethernet port that connects the unit to a network. This port can also be used to supply power to this unit using Power over Ethernet.



Power LED

This light will be solid green when the unit is powered on.


2.4 GHz LED

This light will be flickering green when the 2.4GHz frequency is in use.

LAN LED

This light will be flickering green when there is active LAN traffic.

Connect Power over Ethernet (PoE)

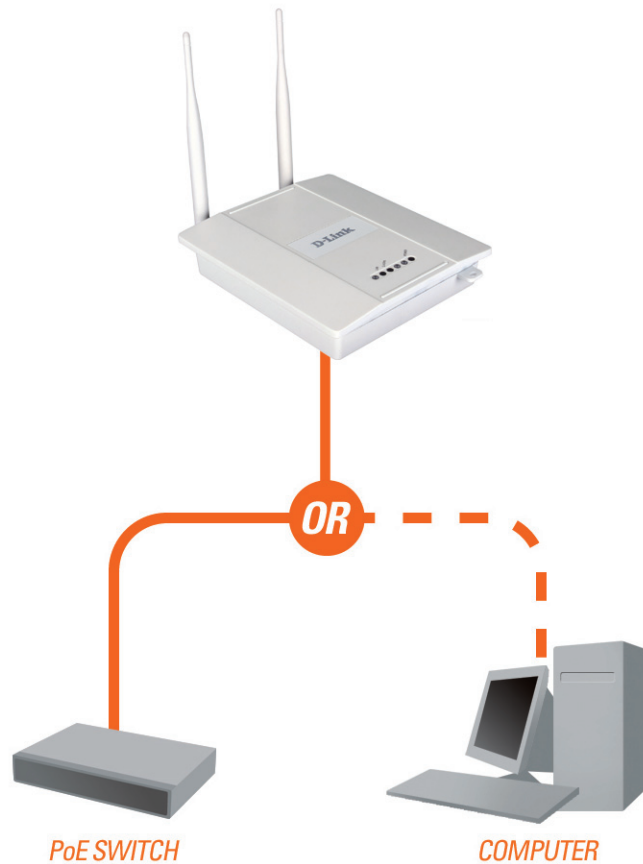


Connect one end of an Ethernet cable (included with your access point) to the LAN port on the DAP-2360 and the other end of the Ethernet cable to either your computer or to your PoE switch. The AP can be powered on by a PoE switch or by the power adapter shipped with the AP.

Four Operational Modes

Operation Mode (Only supports 1 mode at a time)	Function
Access Point (AP)	Create a wireless LAN
WDS with AP	Wirelessly connect multiple networks while still functioning as a wireless AP
WDS	Wirelessly connect multiple networks
Wireless Client	AP acts as a wireless network adapter for your Ethernet-enabled device

Getting Started

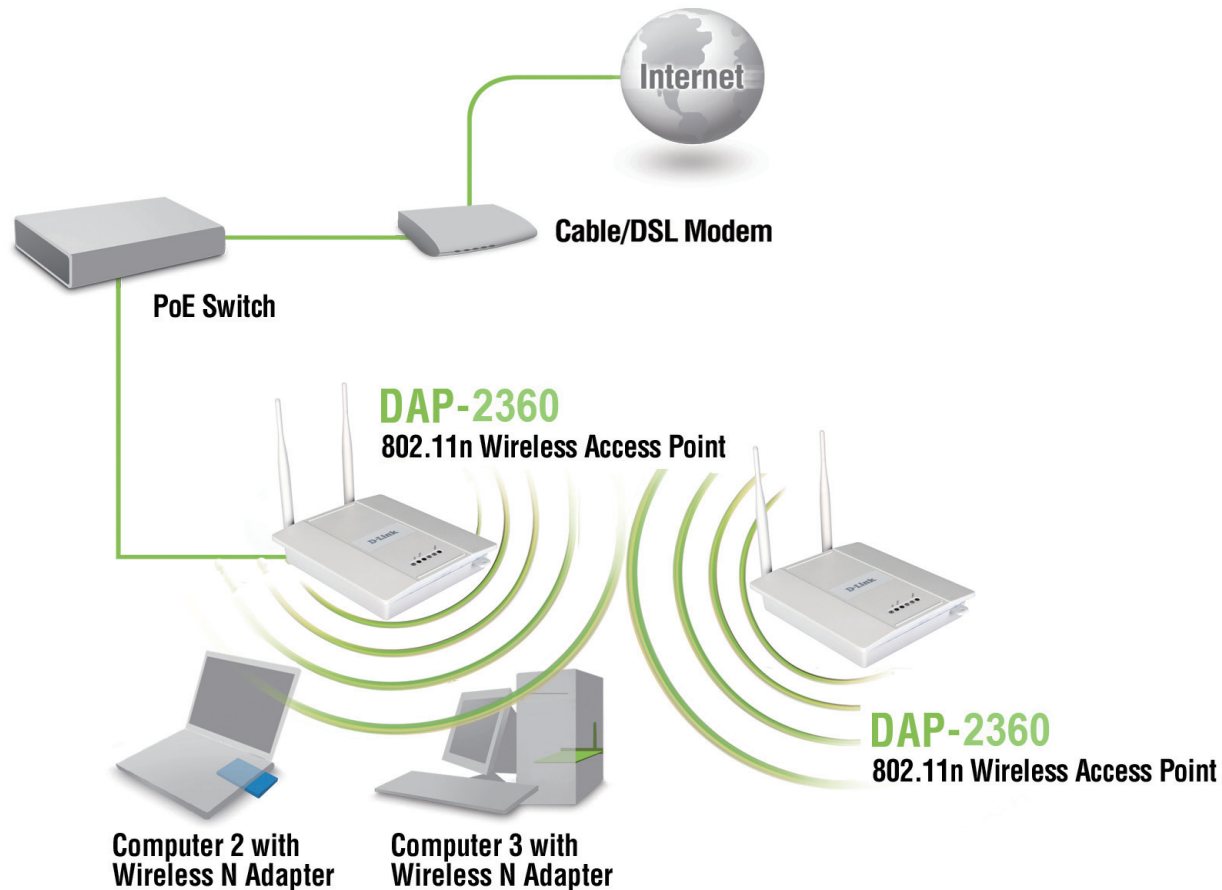


1. You will need broadband Internet access.
2. Consult with your cable or DSL provider for proper installation of the modem.
3. Connect the cable or DSL modem to a router. See the printed Install Guide included with your router.
4. If you are connecting a desktop computer to your network, install a wireless PCI adapter into an available PCI slot on your desktop computer.
5. Install the drivers for your wireless CardBus adapter into a laptop computer.

Configuration

To configure the DAP-2360, use a computer that is connected to the DAP-2360 with an Ethernet cable (see the *Network Layout diagram*).

Launch your web browser.

Type the IP address of the DAP-2360 in the address field (**http://192.168.0.50**) and press **Enter**. Make sure that the IP addresses of the DAP-2360 and your computer are in the same subnet.

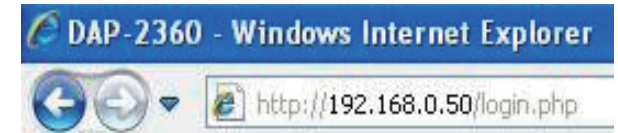


Note: If you have changed the default IP address assigned to the DAP-2360, make sure to enter the correct IP address.

Enter the user name (**admin**) and your password. Leave the password field blank by default and click **Login**.

A screenshot of the D-Link DAP-2360 login page. The page has a dark blue header with the "D-Link" logo on the left and "DAP-2360" on the right. Below the header is a light blue box containing a "LOGIN" section. The "LOGIN" section has the text "Login to the Access Point:" followed by two input fields: "User Name" and "Password". The "Password" field is currently blank. To the right of the "Password" field is a "Login" button.

Note: If you have changed the password, make sure to enter the correct password.


After successfully logging into the DAP-2360, the following screen will appear:

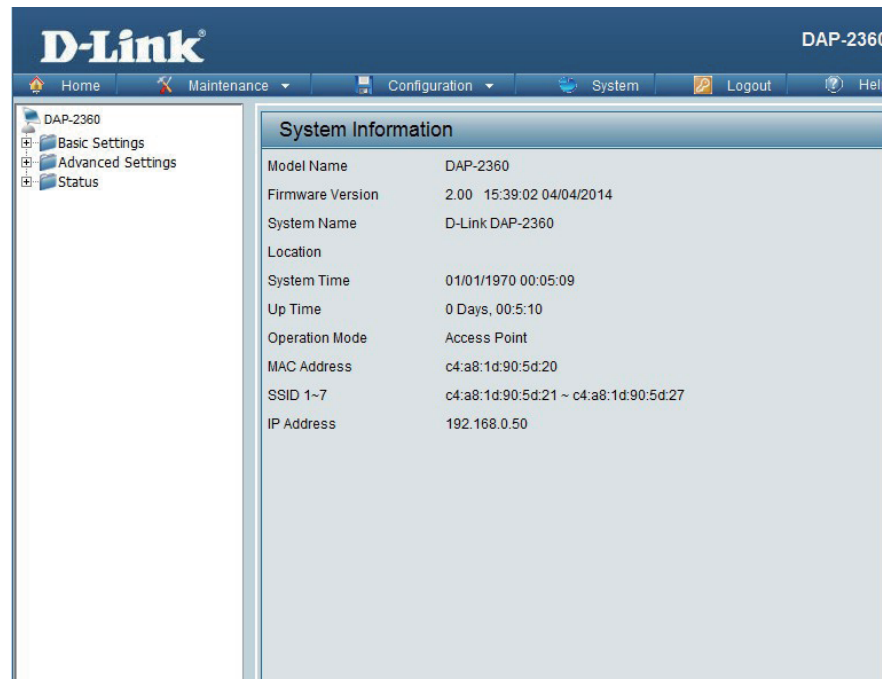

Save and Activate Settings

When making changes on most of the configuration screens in this section, use the  button at the bottom of each screen to save (not activate) your configuration changes.

You may change settings to multiple pages before activating. Once you are finished, click the **Configuration** button located at the top of the page and then click **Save and Activate**.

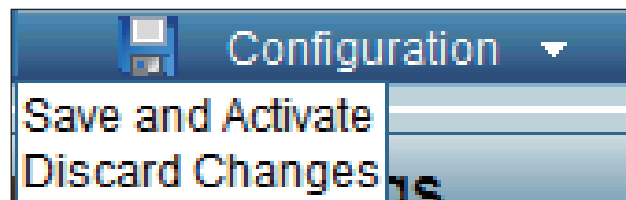

Basic Settings

Wireless

Access Point mode

Wireless Band: Select **2.4GHz** from the drop-down menu.

Mode: Select **Access Point** from the drop-down menu. The other three choices are **WDS with AP**, **WDS**, and **Wireless Client**.

Network Name (SSID): Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network. The SSID can be up to 32 characters and is case-sensitive.

SSID Visibility: **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.

Auto Channel Selection: Enabling this feature automatically selects the channel that provides the best wireless performance. **Enable** is set by default. The channel selection process only occurs when the AP is booting up.

Channel: All devices on the network must share the same channel. To change the channel, first toggle the Auto Channel Selection setting to **Disable**, and then use the drop-down menu to make the desired selection.

Note: The wireless adapters will automatically scan and match the wireless settings.

The screenshot displays the D-Link DAP-2360 configuration interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with 'Basic Settings' selected, containing sub-items for Wireless, LAN, IPv6, Advanced Settings, and Status. The main content area is titled 'Wireless Settings' and contains the following fields:

- Wireless Band:** 2.4GHz (dropdown)
- Mode:** Access Point (dropdown)
- Network Name (SSID):** dlink (text input)
- SSID Visibility:** Enable (dropdown)
- Auto Channel Selection:** Enable (dropdown)
- Channel:** 6 (dropdown)
- Channel Width:** 20 MHz (dropdown)
- Captive Profile:** Disable (dropdown)
- Authentication:** Open System (dropdown)
- Key Settings:**
 - Encryption:** Disable (radio button selected), Enable (radio button)
 - Key Type:** HEX (dropdown)
 - Key Index(1~4):** 1 (dropdown)
 - Key Size:** 64 Bits (dropdown)
 - Network Key:** (text input)
 - Confirm Key:** (text input)

A 'Save' button is located at the bottom right of the settings area.

Channel Width:	Allows you to select the channel width you would like to operate in. Select 20 MHz if you are not using any 802.11n wireless clients. Auto 20/40 MHz allows you to connect to both 802.11n and 802.11b/g wireless devices on your network.
Captive Profile:	Disable or select a Captive Portal profile for Primary SSID.
Authentication:	Use the drop-down menu to choose Open System, Shared Key, WPA-Personal, WPA-Enterprise, or 802.11x. Select Open System to communicate the key across the network. Select Shared Key to limit communication to only those devices that share the same WEP settings. If multi-SSID is enabled, this option is not available. Select WPA-Personal to secure your network using a password and dynamic key changes. No RADIUS server is required. Select WPA-Enterprise to secure your network with the inclusion of a RADIUS server. Select 802.1x to secure your network using 802.1x authentication.

WDS with AP mode

In WDS with AP mode, the DAP-2360 wirelessly connects multiple networks while still functioning as a wireless AP.

- Wireless Band:

Select 2.4GHz from the drop-down menu.
- Mode:

WDS with AP mode is selected from the drop-down menu.
- Network Name (SSID):


Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.
- SSID Visibility:

Enable or Disable SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.
- Auto Channel Selection:

Enabling this feature automatically selects the channel that will provide the best wireless performance. This feature is not supported in WDS with AP mode. The channel selection process only occurs when the AP is booting up.
- Channel:

To change the channel, use the drop-down menu to make the desired selection. (Note: The wireless adapters will automatically scan and match the wireless settings.)
- Channel Width:

Indicates whether the device is capable of 20MHz operation only or both 20MHz and 40MHz operation.

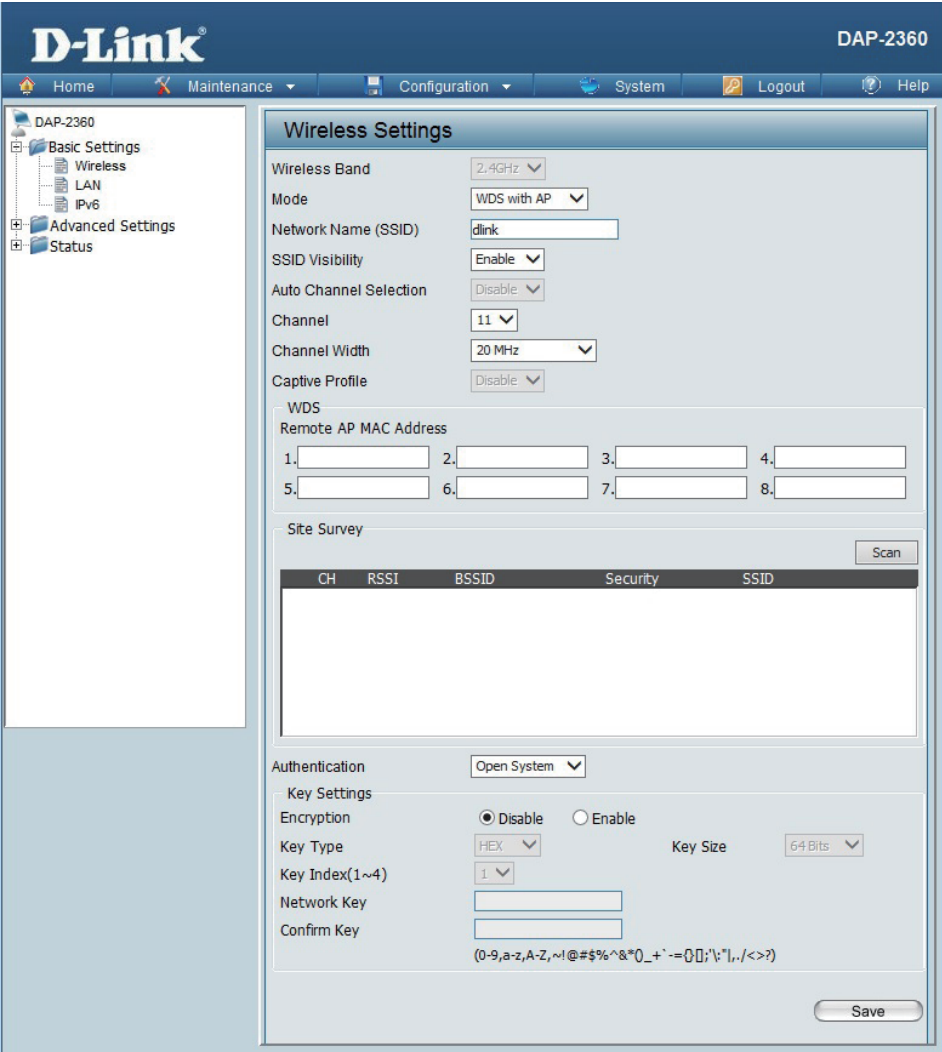

Captive Profile:	Disable or select a Captive Portal profile for Primary SSID.
Remote AP MAC Address:	Enter the MAC addresses of the APs on your network that will serve as bridges to wirelessly connect multiple networks.
Site Survey:	Click on the Scan button to search for available wireless networks, then click on the available network that you want to connect with.
Authentication:	Use the drop-down menu to choose Open System, Shared Key, or WPA-Personal. Select Open System to communicate the key across the network. Select Shared Key to limit communication to only those devices that share the same WEP settings. If multi-SSID is enabled, this option is not available. Select WPA-Personal to secure your network using a password and dynamic key changes. No RADIUS server is required.

WDS mode

In WDS mode, the DAP-2360 wirelessly connects multiple networks, without functioning as a wireless AP.

- Wireless Band:** Select **2.4GHz** from the drop-down menu.
- Mode:** **WDS** is selected from the drop-down menu.
- Network Name (SSID):** Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.
- SSID Visibility:** **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.
- Auto Channel Selection:** Enabling this feature automatically selects the channel that will provide the best wireless performance. This feature is not supported in WDS mode.
- Channel:** All devices on the network must share the same channel. To change the channel, use the drop-down menu to make the desired selection.
- Channel Width:** Use the drop-down menu to choose **20 MHz** or **Auto 20/40 MHz**.
- Remote AP MAC Address:** Enter the MAC addresses of the APs on your network that will serve as bridges to wirelessly connect multiple networks.

The screenshot shows the D-Link DAP-2360 configuration interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with Basic Settings (Wireless, LAN, IPv6), Advanced Settings, and Status. The main content area is titled 'Wireless Settings' and contains the following fields:

- Wireless Band:** 2.4GHz (dropdown)
- Mode:** WDS (dropdown)
- Network Name (SSID):** dlink (text input)
- SSID Visibility:** Enable (dropdown)
- Auto Channel Selection:** Disable (dropdown)
- Channel:** 11 (dropdown)
- Channel Width:** 20 MHz (dropdown)
- Captive Profile:** Disable (dropdown)
- WDS Section:**
 - Remote AP MAC Address:** Eight text input fields labeled 1 through 8.
 - Site Survey:** A table with columns CH, RSSI, BSSID, Security, and SSID. A 'Scan' button is located to the right of the table.
- Authentication:** Open System (dropdown)
- Key Settings:**
 - Encryption:** Disable (radio button selected), Enable (radio button)
 - Key Type:** HEX (dropdown)
 - Key Index(1~4):** 1 (dropdown)
 - Network Key:** Text input field
 - Confirm Key:** Text input field
 - Key Size:** 64 Bits (dropdown)

At the bottom of the key settings section, there is a legend: (0-9,a-z,A-Z,~!@#\$%^&*0_+`-=:;<?>)

Site Survey: Click on the **Scan** button to search for available wireless networks, then click on the available network that you want to connect with.

Authentication: Use the drop-down menu to choose **Open System**, **Shared Key**, or **WPA-Personal**.
Select **Open System** to communicate the key across the network.
Select **Shared Key** to limit communication to only those devices that share the same WEP settings.
Select **WPA-Personal** to secure your network using a password and dynamic key changes. No RADIUS server is required.

Wireless Client mode

Wireless Band:	Select 2.4GHz from the drop-down menu.
Mode:	Wireless Client is selected from the drop-down menu.
Network Name (SSID):	Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is dlink . The SSID can be easily changed to connect to an existing wireless network.
SSID Visibility:	This option is unavailable in Wireless Client mode.
Auto Channel Selection:	Enabling this feature automatically selects the channel that will provide the best wireless performance. This feature is not supported in Wireless Client mode.
Channel:	The channel used will be displayed, and matches the AP that the DAP-2360 is connected to when set to Wireless Client mode.
Channel Width:	Use the drop-down menu to choose 20 MHz or Auto 20/40 MHz .
Site Survey:	Click on the Scan button to search for available wireless networks, then click on the available network that you want to connect with. Use the drop-down menu to choose Open System or WPA-Personal .
Authentication:	Select Open System to communicate the key across the network. Select WPA-Personal to secure your network using a password and dynamic key changes. No RADIUS server is required.
Enable:	Check to enable clone MAC. This feature will allow you to change the MAC address of the access point to the MAC address of a client.
MAC Source:	Select the MAC source from the drop-down menu.
MAC Address:	Enter the MAC address that you would like to assign to the access point.

D-Link®

DAP-2360

Home

Maintenance

Configuration

System

Logout

Help

DAP-2360

Basic Settings

Wireless

LAN

IPv6

Advanced Settings

Status

Wireless Settings

Wireless Band

2.4GHz

Mode

Wireless Client

Network Name (SSID)

dlink

SSID Visibility

Enable

Auto Channel Selection

Enable

Channel

11

Channel Width

Auto 20/40 MHz

Captive Profile

Disable

Site Survey

Scan

CH	RSSI	BSSID	Security	SSID

Authentication

Open System

Key Settings

Encryption

Disable

Enable

Key Type

HEX

Key Size

64 Bits

Key Index(1~4)

1

Network Key

Confirm Key

(0-9,a-z,A-Z,~!@#\$\$%^&*0_+`- =0[];'":|.,/<>?)

Wireless MAC Clone

Enable

MAC Source

Auto

MAC Address

Scan

MAC Address

Save

Open System/Shared Key Authentication

- Encryption:** Use the radio button to disable or enable encryption.
- Key Type*:** Select **HEX** or **ASCII**.
- Key Size:** Select **64 Bits** or **128 Bits**.
- Key Index (1-4):** Select the 1st through the 4th key to be the active key.
- Key:** Input up to four keys for encryption. You will select one of these keys in the Key Index drop-down menu.

***Hexadecimal (HEX) digits consist of the numbers 0-9 and the letters A-F.*

**ASCII (American Standard Code for Information Interchange) is a code that represents English letters using numbers ranging from 0-127.*

WPA/WPA2-Personal Authentication

WPA Mode: When **WPA-Personal** is selected for Authentication type, you must also select a WPA mode from the drop-down menu: **AUTO (WPA or WPA2)**, **WPA2 Only**, or **WPA Only**. WPA and WPA2 use different algorithms. **AUTO (WPA or WPA2)** allows you to use both WPA and WPA2.

Cipher Type: When you select **WPA-Personal**, you must also select **AUTO**, **AES**, or **TKIP** from the drop-down menu.

Group Key Update: Select the interval during which the group key will be valid. The default value of **1800** is recommended. Select **Manual** to enter your key (PassPhrase).

Periodical Key Change: You can select **Periodical Key Change** to have the access point automatically change your PassPhrase. Enter the Activate From time and the time in hours to change the key.

PassPhrase: When you select **WPA-Personal**, please enter a PassPhrase in the corresponding field.

The screenshot shows the D-Link DAP-2360 configuration interface. The 'Wireless Settings' tab is active. The 'Authentication' dropdown is set to 'WPA-Personal'. Under 'PassPhrase Settings', 'WPA Mode' is set to 'AUTO (WPA or WPA2)'. 'Cipher Type' is set to 'Auto'. 'Group Key Update Interval' is set to '3600 (Seconds)'. The 'Manual' radio button is selected for 'Periodical Key Change'. 'Activated From' is set to 'Sun' at '00:00'. 'Time Interval' is set to '1 (1~168)hour(s)'. There are empty text boxes for 'PassPhrase' and 'Confirm PassPhrase'. A 'Save' button is at the bottom right.

D-Link DAP-2360

Home Maintenance Configuration System Logout Help

Wireless Settings

Wireless Band: 2.4GHz

Mode: Access Point

Network Name (SSID): dlink

SSID Visibility: Enable

Auto Channel Selection: Enable

Channel: 11

Channel Width: 20 MHz

Captive Profile: Disable

Authentication: WPA-Personal

PassPhrase Settings

WPA Mode: AUTO (WPA or WPA2)

Cipher Type: Auto

Group Key Update Interval: 3600 (Seconds)

☒ Manual ☐ Periodical Key Change

Activated From: Sun : 00 : 00

Time Interval: 1 (1~168)hour(s)

PassPhrase:

Confirm PassPhrase:

notice: 8~63 in ASCII or 64 in Hex.
(0-9,a-z,A-Z,~!@#\$%^&*0_+`-={[];'"/<>?)

Save

WPA/WPA2-Enterprise Authentication

WPA Mode: When **WPA-Enterprise** is selected, you must also select a WPA mode from the drop-down menu: **AUTO (WPA or WPA2)**, **WPA2 Only**, or **WPA Only**. WPA and WPA2 use different algorithms. **AUTO (WPA or WPA2)** allows you to use both WPA and WPA2.

Cipher Type: When WPA-Enterprise is selected, you must also select a cipher type from the drop-down menu: **Auto**, **AES**, or **TKIP**.

Group Key Update Interval: Select the interval during which the group key will be valid. The recommended value is **1800**. A lower interval may reduce data transfer rates.

Network Access Protection: Enable or disable Microsoft Network Access Protection.

RADIUS Server: Enter the IP address of the RADIUS server.

RADIUS Port: Enter the RADIUS port.

RADIUS Secret: Enter the RADIUS secret.

The screenshot shows the D-Link DAP-2360 configuration interface. The left sidebar contains a tree view with 'Basic Settings', 'Wireless', 'LAN', 'IPv6', 'Advanced Settings', and 'Status'. The 'Wireless' section is selected, and the 'Wireless Settings' page is displayed. The 'Authentication' dropdown is set to 'WPA-Enterprise'. Below this, the 'RADIUS Server Settings' section is expanded, showing 'WPA Mode' set to 'AUTO (WPA or WPA2)', 'Cipher Type' set to 'Auto', and 'Group Key Update Interval' set to '3600' seconds. The 'Network Access Protection' section has 'Disable' selected. The 'RADIUS Server Mode' section has 'External' selected. The 'Primary RADIUS Server Setting' section shows fields for 'RADIUS Server' (IP address), 'RADIUS Port' (1812), and 'RADIUS Secret' (password). The 'Backup RADIUS Server Setting (Optional)' section shows similar fields. The 'Primary Accounting Server Setting' section shows 'Accounting Mode' set to 'Disable', 'Accounting Server' (IP address), 'Accounting Port' (1813), and 'Accounting Secret' (password). The 'Backup Accounting Server Setting (Optional)' section shows similar fields. A 'Save' button is at the bottom right.

802.1x Authentication

Key Update Interval: Select the interval during which the group key will be valid (**300** is the recommended value). A lower interval may reduce data transfer rates.

RADIUS Server: Enter the IP address of the RADIUS server.

RADIUS Port: Enter the RADIUS port.

RADIUS Secret: Enter the RADIUS secret.

D-Link DAP-2360

Home Maintenance Configuration System Logout Help

Wireless Settings

Wireless Band: 2.4GHz
 Mode: Access Point
 Network Name (SSID): dlink
 SSID Visibility: Enable
 Auto Channel Selection: Enable
 Channel: 11
 Channel Width: 20 MHz
 Captive Profile: Disable
 Authentication: 802.1X

RADIUS Server Settings
 Key Update Interval: 300 (Seconds)

RADIUS Server Mode
 RADIUS Server: ☒ External ☐ Internal

Primary RADIUS Server Setting
 RADIUS Server: RADIUS Port: 1812
 RADIUS Secret:
 (0-9,a-z,A-Z,~!@#%&*0_+`-:=0[];'"/<>?)

Backup RADIUS Server Setting (Optional)
 RADIUS Server: RADIUS Port: 1812
 RADIUS Secret:
 (0-9,a-z,A-Z,~!@#%&*0_+`-:=0[];'"/<>?)

Primary Accounting Server Setting
 Accounting Mode: Disable
 Accounting Server: Accounting Port: 1813
 Accounting Secret:
 (0-9,a-z,A-Z,~!@#%&*0_+`-:=0[];'"/<>?)

Backup Accounting Server Setting (Optional)
 Accounting Server: Accounting Port: 1813
 Accounting Secret:
 (0-9,a-z,A-Z,~!@#%&*0_+`-:=0[];'"/<>?)

Save

LAN

LAN is short for Local Area Network. This is considered your internal network. These are the IP settings of the LAN interface for the DAP-2360. These settings may be referred to as private settings. You may change the LAN IP address if needed. The LAN IP address is private to your internal network and cannot be seen on the Internet.

Get IP From: **Static IP (Manual)** is chosen here. Choose this option if you do not have a DHCP server in your network, or if you wish to assign a static IP address to the DAP-2360. When **Dynamic IP (DHCP)** is selected, the other fields here will be grayed out. Please allow about two minutes for the DHCP client to be functional once this selection is made.

IP Address: The default IP address is 192.168.0.50. Assign a static IP address that is within the IP address range of your network.

Subnet Mask: Enter the subnet mask. All devices in the network must share the same subnet mask.

Default Gateway: Enter the IP address of the gateway in your network. If there is a gateway in your network, please enter an IP address within the range of your network.

DNS: Enter the DNS IP address used here.

The screenshot shows the D-Link DAP-2360 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with Basic Settings (Wireless, LAN, IPv6), Advanced Settings, and Status. The main content area is titled 'LAN Settings'. It features a 'Get IP From' dropdown menu set to 'Static IP (Manual)'. Below this are four input fields: 'IP Address' (192.168.0.50), 'Subnet Mask' (255.255.255.0), 'Default Gateway', and 'DNS'. A 'Save' button is located at the bottom right of the form.

IPv6

Enable IPv6: Check to enable the IPv6

Get IP From: Auto is chosen here. Choose this option the DAP-2360 can get IPv6 address automatically or use Static to set IPv6 address manually. When Auto is selected, the other fields here will be grayed out.

IP Address: Enter the LAN IPv6 address used here.

Prefix: Enter the LAN subnet prefix length value used here.

Default Gateway: Enter the LAN default gateway IPv6 address used here.

The screenshot displays the D-Link DAP-2360 web management interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with categories: Basic Settings (Wireless, LAN, IPv6), Advanced Settings, and Status. The main content area is titled 'IPv6 Settings' and contains the following configuration options:

- ☐ Enable IPv6
- Get IP From: Auto (dropdown menu)
- IP Address: [text input field]
- Prefix: [text input field]
- Default Gateway: [text input field]
- [Save button]

Advanced Settings

Performance

Wireless: Use the drop-down menu to turn the wireless function **On** or **Off**.

Wireless Mode: The different combination of clients that can be supported include **Mixed 802.11n, 802.11g and 802.11b, Mixed 802.11g and 802.11b and 802.11n Only**. Please note that when backwards compatibility is enabled for legacy (802.11g/b) clients, degradation of 802.11n wireless performance is expected.

Data Rate*: Indicate the base transfer rate of wireless adapters on the wireless LAN. The AP will adjust the base transfer rate depending on the base rate of the connected device. If there are obstacles or interference, the AP will step down the rate. This option is enabled in **Mixed 802.11g and 802.11b** mode. The choices available are **Best (Up to 54), 54, 48, 36, 24, 18, 12, 9, 6, 11, 5.5, 2** or **1**.

D-Link DAP-2360

Home Maintenance Configuration System Logout Help

Performance Settings

Wireless band	2.4GHz
Wireless	On
Wireless Mode	Mixed 802.11n, 802.11g and 802.11b
Data Rate	Best(Up to 300) (Mbps)
Beacon Interval (40-500)	100
DTIM Interval (1-15)	1
Transmit Power	100%
WMM (Wi-Fi Multimedia)	Enable
Ack Time Out (2.4GHz, 48~200)	48 (μs)
Short GI	Enable
IGMP Snooping	Disable
Multicast Rate	Disable (Mbps)
Multicast Bandwidth Control	Disable
Maximum Multicast Bandwidth	100 kbps
HT20/40 Coexistence	Enable

Save

*Maximum wireless signal rate derived from IEEE Standard 802.11n and 802.11g specifications. Actual data throughput may vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead can lower actual data throughput rate.

Beacon Interval (25-500):	Beacons are packets sent by an access point to synchronize a wireless network. Specify a value in milliseconds. The default (100) is recommended. Setting a higher beacon interval can help to save the power of wireless clients, while setting a lower one can help a wireless client connect to an access point faster.
DTM Interval (1-15):	Select a Delivery Traffic Indication Message setting between 1 and 15 . The default value is 1 . DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.
Transmit Power:	This setting determines the power level of the wireless transmission. Transmitting power can be adjusted to eliminate overlapping of wireless area coverage between two access points where interference is a major concern. For example, if wireless coverage is intended for half of the area, then select 50% as the option. Use the drop-down menu to select 100% , 50% , 25% , or 12.5% .
WMM (Wi-Fi Multimedia):	WMM stands for Wi-Fi Multimedia. Enabling this feature will improve the user experience for audio and video applications over a Wi-Fi network.
Ack Time Out (2.4 GHZ, 64~200):	To effectively optimize throughput over long distance links, enter a value for Acknowledgement Time Out from 64 to 200 microseconds in the 2.4 GHz in the field provided.
Short GI:	Select Enable or Disable . Enabling a short guard interval can increase throughput. However, be aware that it can also increase the error rate in some installations due to increased sensitivity to radio-frequency installations.
IGMP Snooping:	Select Enable or Disable . Internet Group Management Protocol allows the AP to recognize IGMP queries and reports sent between routers and an IGMP host (wireless STA). When IGMP snooping is enabled, the AP will forward multicast packets to an IGMP host based on IGMP messages passing through the AP.
Connection Limit:	Select Enable or Disable . This is an option for load balancing. This determines whether to limit the number of users accessing this device. The exact number is entered in the User Limit field below. This feature allows the user to share the wireless network traffic and the client using multiple APs. If this function is enabled, when the number of users exceeds this value, the DAP-2360 will not allow clients to associate with the AP.
User Limit (0-64):	Set the maximum amount of users that are allowed access (0-64 users). To use this feature, the Connection Limit above must be enabled. For most users, a limit of 10 is recommended. The default setting is 20 .
Multicast Rate for 2.4G Band	Select the multicast rate for 2.4G band. The choices available are 130,117,78,65,58.5,54, 52,48, 39,36, 26,24, 19.5,18, 13,12, 9, 6.5,6, 11, 5.5, 2 or 1.

Wireless Resource

The Wireless Resource Control window is used to configure the wireless connection settings so that the device can detect the better wireless connection in your environment.


- Wireless band:

Select **2.4GHz**.
- Connection Limit:

Select **Enable** or **Disable**. This is an option for load balancing. This determines whether to limit the number of users accessing this device. The exact number is entered in the User Limit field below. This feature allows the user to share the wireless network traffic and the client using multiple APs. If this function is enabled and when the number of users exceeds this value, or the network utilization of this AP exceeds the percentage that has been specified, the DAP-2360 will not allow clients to associate with the AP.
- User Limit:

Set the maximum amount of users that are allowed access (zero to 64 users) to the device using the specified wireless band. The default setting is 20.
- 11n Preferred:

Use the drop-down menu to **Enable** the 11n Preferred function. The wireless clients with 802.11n protocol will have higher priority to connect to the device.

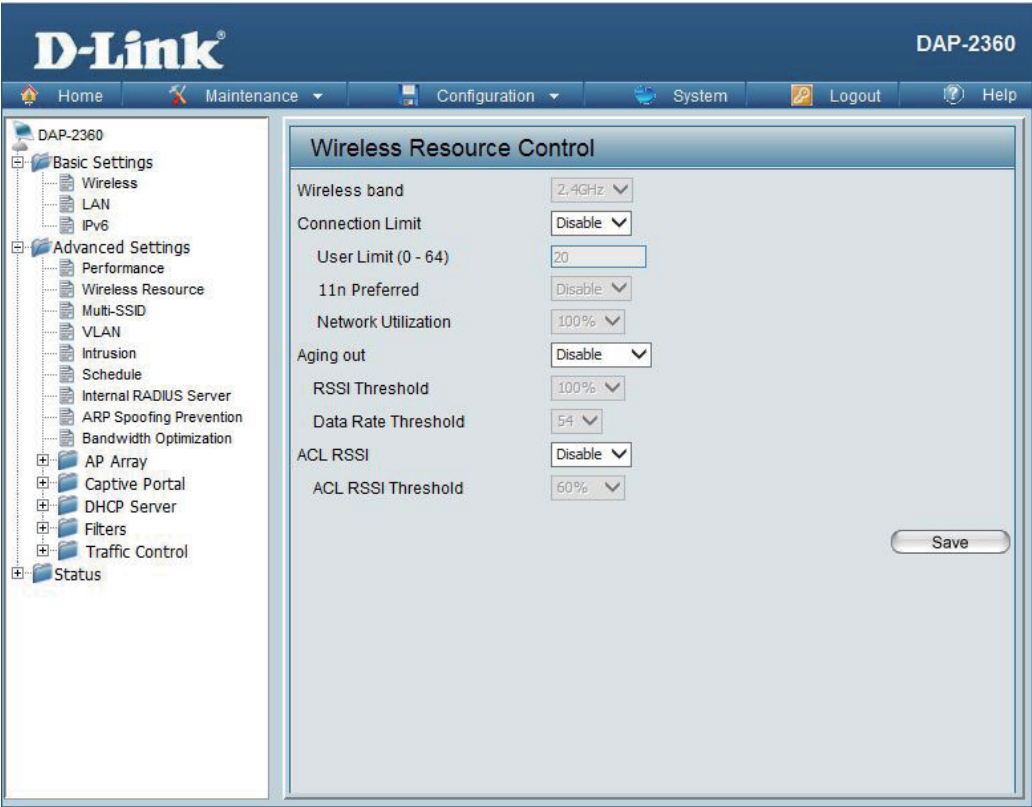

Network Utilization:	Set the maximum utilization of this access point for service. The DAP-2360 will not allow any new clients to associate with the AP if the utilization exceeds the value the user specifies. Select a utilization percentage between 100%, 80%, 60%, 40%, 20%, or 0%. When this network utilization threshold is reached, the device will pause one minute to allow network congestion to dissipate.
Aging out:	Use the drop-down menu to select the criteria of disconnecting the wireless clients. Available options are RSSI and Data Rate .
RSSI Threshold:	When RSSI is selected in the Aging out drop-down menu, select the percentage of RSSI here. When the RSSI of wireless clients is lower than the specified percentage, the device disconnects the wireless clients.
Data Rate Threshold:	When Data Rate is selected in the Aging out drop-down menu, select the threshold of data rate here. When the data rate of wireless clients is lower than the specified number, the device disconnects the wireless clients.
ACL RSSI:	Use the drop-down menu to Enable the function. When enabled, the device denies the connection request from the wireless clients with the RSSI lower than the specified threshold below.
ACL RSSI Threshold:	Set the ACL RSSI Threshold.

Multi-SSID

The device supports up to four multiple Service Set Identifiers. In the **Basic > Wireless** section, you can set the Primary SSID. The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

Enable Multi-SSID: Check to enable support for multiple SSIDs.

Band: This read-only value is the current band setting.

Index: You can select up to three multi-SSIDs. With the Primary SSID, you have a total of four multi-SSIDs.

SSID: Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

SSID Visibility: **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.

Security: The Multi-SSID security can be **Open System**, **WPA-Personal**, **WPA-Enterprise**, or **802.1x**. For a detailed description of the Open System parameters, please go to page 25. For a detailed description of the WPA-Personal parameters, please go to page 26. For a detailed description of the WPA-Enterprise parameters, please go to page 27. For a detailed description of the 802.1x parameters, please go to page 28.



Priority:	Check the Enable Priority box at the top of this window to enable. Select the priority from the drop-down menu.
WMM (Wi-Fi Multimedia):	Select Enable or Disable .
Captive Profile:	Disable or select a Captive Portal profile for M-SSID.
Encryption:	When you select Open System , toggle between Enable and Disable . If Enable is selected, the Key Type, Key Size, Key Index (1~4), Key, and Confirm Keys must also be configured.
Key Type:	Select HEX or ASCII .
Key Size:	Select 64 Bits or 128 Bits .
Key Index (1-4):	Select from the 1st to 4th key to be set as the active key.
Key:	Input up to four keys for encryption. You will select one of these keys in the Key Index drop-down menu.
WPA Mode:	When you select either WPA-Personal or WPA-Enterprise , you must also choose a WPA mode from the drop-down menu: AUTO (WPA or WPA2) , WPA2 Only , or WPA Only . WPA and WPA2 use different algorithms. AUTO (WPA or WPA2) allows you to use both WPA and WPA2. In addition, you must configure Cipher Type and Group Key Update Interval.
Cipher Type:	Select Auto , AES , or TKIP from the drop-down menu.
Group Key Update Interval:	Select the interval during which the group key will be valid. The default value of 1800 seconds is recommended.
PassPhrase:	When you select WPA-Personal , please enter a PassPhrase in the corresponding field.
Confirm PassPhrase:	When you select WPA-Personal , please re-enter the PassPhrase entered in the previous item in the corresponding field.
RADIUS Server:	When you select WPA-Enterprise , enter the IP address of the RADIUS server. In addition, you must configure RADIUS Port and RADIUS Secret.
RADIUS Port:	Enter the RADIUS port.
RADIUS Secret:	Enter the RADIUS secret.


VLAN

VLAN List

The DAP-2360 supports VLANs. VLANs can be created with a Name and VID. Mgmt (TCP stack), LAN, Primary/Multiple SSID, and WDS connection can be assigned to VLANs as they are physical ports. Any packet which enters the DAP-2360 without a VLAN tag will have a VLAN tag inserted with a PVID.

The VLAN List tab displays the current VLANs.

VLAN Status: Use the radio button to toggle between **Enable** or **Disable**. Next, go to the **Add/Edit VLAN** tab to add or modify an item on the **VLAN List** tab.

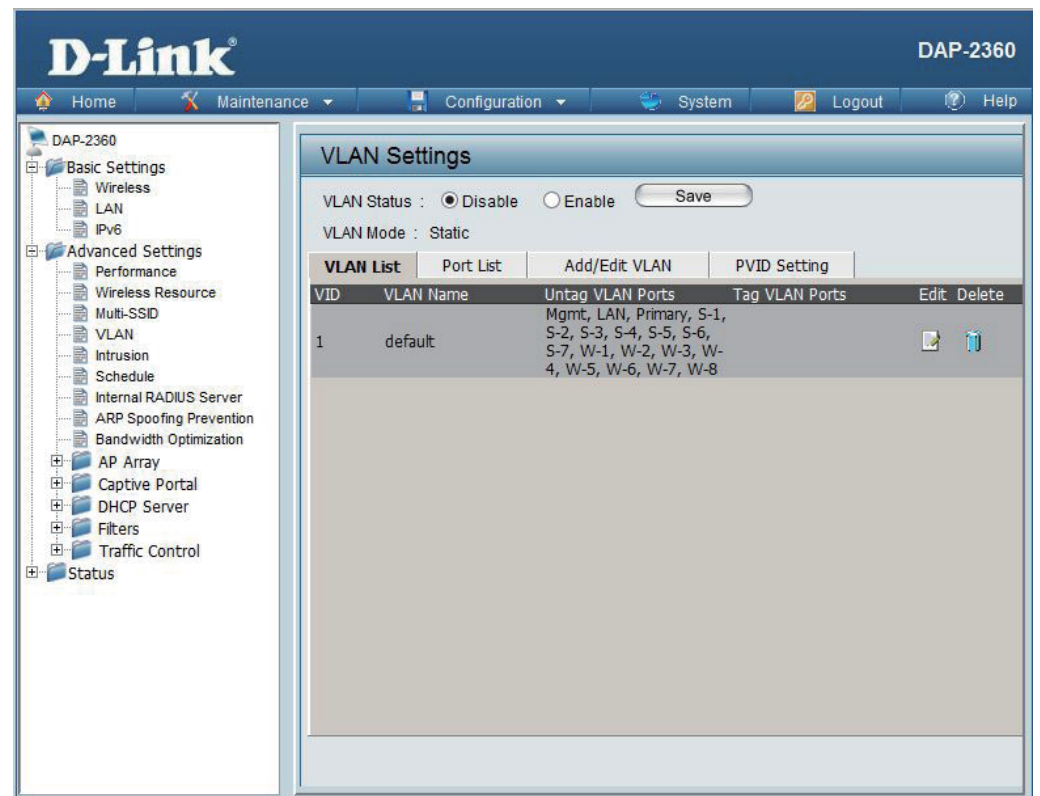

Port List

The Port List tab displays the current ports. If you want to configure the guest and internal networks on a Virtual LAN (VLAN), the switch and DHCP server you are using must also support VLANs. As a prerequisite step, configure a port on the switch for handling VLAN tagged packets as described in the IEEE 802.1Q standard.


VLAN Status: Use the radio button to toggle to Enable. Next, go to the **Add/Edit VLAN** tab to add or modify an item on the **VLAN List** tab.

Port Name: The name of the port is displayed in this column.

Tag VID: The Tagged VID is displayed in this column.

Untag VID: The Untagged VID is displayed in this column.

PVID: The Port VLAN Identifier is displayed in this column.

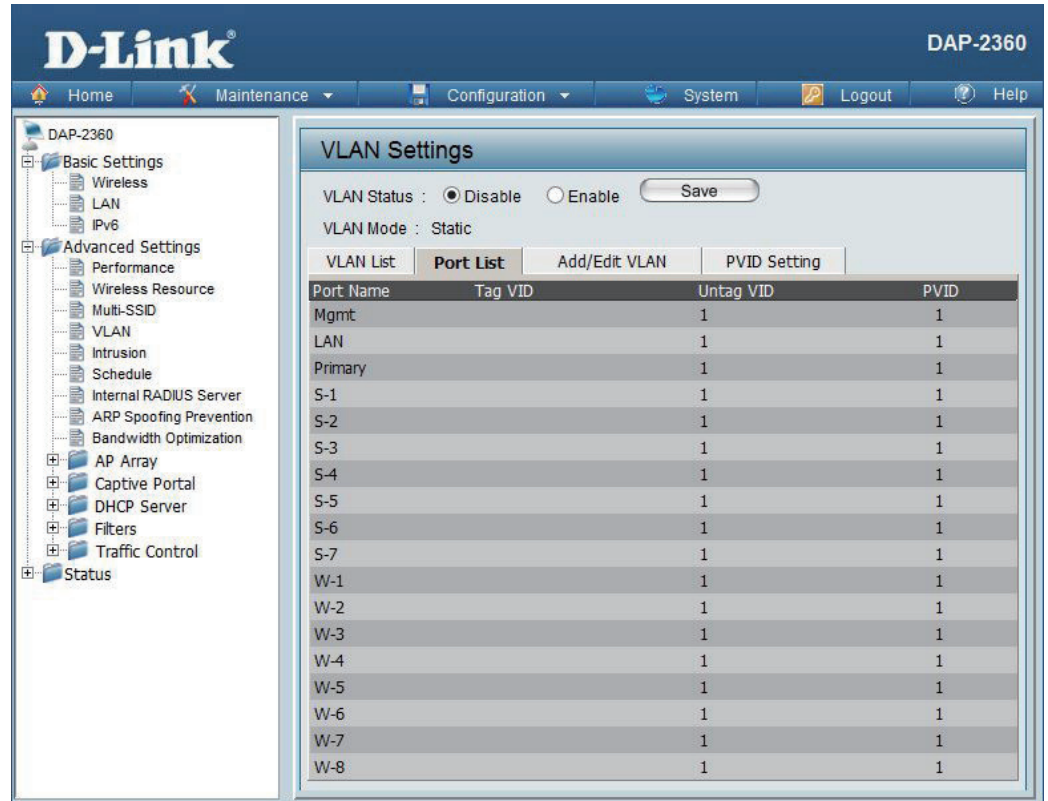

The screenshot shows the D-Link DAP-2360 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of configuration options: Basic Settings (Wireless, LAN, IPv6), Advanced Settings (Performance, Wireless Resource, Multi-SSID, VLAN, Intrusion, Schedule, Internal RADIUS Server, ARP Spoofing Prevention, Bandwidth Optimization), AP Array, Captive Portal, DHCP Server, Filters, Traffic Control, and Status. The main content area is titled 'VLAN Settings' and includes a 'VLAN Status' section with 'Disable' selected and an 'Enable' radio button, and a 'VLAN Mode' section with 'Static' selected. Below this is a tabbed interface with 'VLAN List', 'Port List' (selected), 'Add/Edit VLAN', and 'PVID Setting'. The 'Port List' tab displays a table with the following data:

Port Name	Tag VID	Untag VID	PVID
Mgmt		1	1
LAN		1	1
Primary		1	1
S-1		1	1
S-2		1	1
S-3		1	1
S-4		1	1
S-5		1	1
S-6		1	1
S-7		1	1
W-1		1	1
W-2		1	1
W-3		1	1
W-4		1	1
W-5		1	1
W-6		1	1
W-7		1	1
W-8		1	1

Add/Edit VLAN


The **Add/Edit VLAN** tab is used to configure VLANs. Once you have made the desired changes, click the **Save** button to let your changes take effect.

- VLAN Status:

Use the radio button to toggle to Enable.
- VLAN ID:

Provide a number between 1 and 4094 for the Internal VLAN.
- VLAN Name:

Enter the VLAN to add or modify.

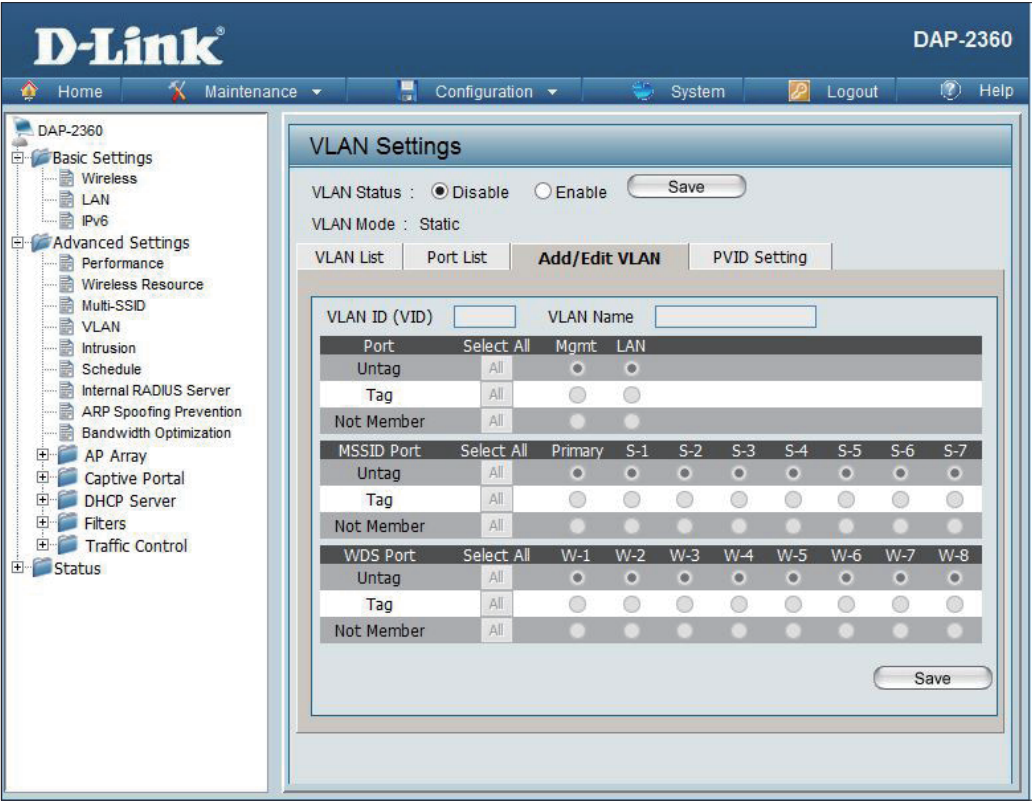

PVID Setting

The **PVID Setting** tab is used to enable/disable the Port VLAN Identifier Auto Assign Status as well as to configure various types of PVID settings. Click the **Save** button to let your changes take effect.

VLAN Status: Use the radio button to toggle between **Enable** and **Disable**.

PVID Auto Assign Status: Use the radio button to toggle PVID auto assign status to **Enable**.

The screenshot shows the D-Link DAP-2360 web interface. The left sidebar contains a tree view with categories: Basic Settings (Wireless, LAN, IPv6), Advanced Settings (Performance, Wireless Resource, Multi-SSID, VLAN, Intrusion, Schedule, Internal RADIUS Server, ARP Spoofing Prevention, Bandwidth Optimization, AP Array, Captive Portal, DHCP Server, Filters, Traffic Control), and Status. The main content area is titled 'VLAN Settings' and includes tabs for VLAN List, Port List, Add/Edit VLAN, and PVID Setting (which is active). The PVID Setting tab contains the following configuration options:

- VLAN Status:** Radio buttons for ☒ Disable and ☐ Enable, with a **Save** button.
- VLAN Mode:** Static
- PVID Auto Assign Status:** Radio buttons for ☒ Disable and ☐ Enable.
- Port Configuration Tables:**

Port	Mgmt	LAN
PVID	1	1

MSSID Port	Primary	S-1	S-2	S-3	S-4	S-5	S-6	S-7
PVID	1	1	1	1	1	1	1	1

WDS Port	W-1	W-2	W-3	W-4	W-5	W-6	W-7	W-8
PVID	1	1	1	1	1	1	1	1


A **Save** button is located at the bottom right of the PVID Setting tab.

Intrusion

The Wireless Intrusion Protection window is used to set APs as **All**, **Valid**, **Neighborhood**, **Rogue**, and **New**. Click the **Save** button to let your changes take effect.

AP List: The choices include **All**, **Valid**, **Neighbor**, **Rogue**, and **New**.

Detect: Click this button to initiate a scan of the network.

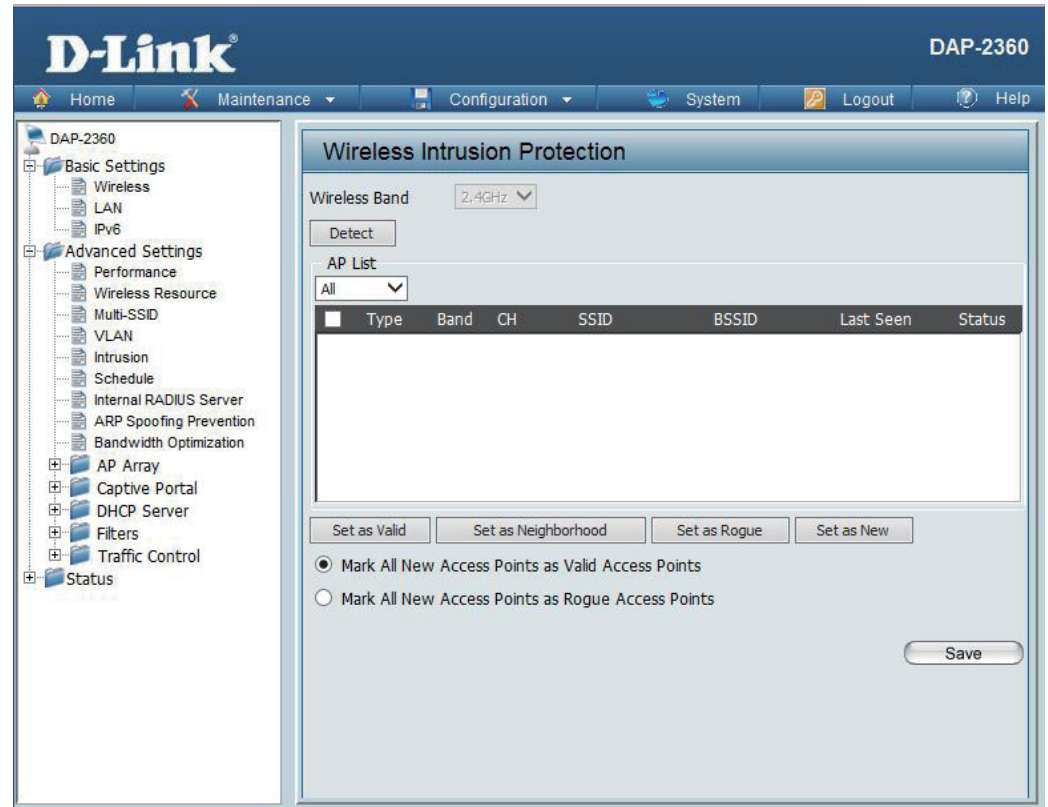

Schedule

The Wireless Schedule Settings window is used to add and modify scheduling rules on the device. Click the **Save** button to let your changes take effect.

Wireless Schedule:	Use the drop-down menu to enable the device's scheduling feature.
Name:	Enter a name for the new scheduling rule in the field provided.
Index:	Select the index from the drop-down menu.
SSID:	Enter the name of your wireless network (SSID).
Day(s):	Toggle the radio button between All Week and Select Day(s) . If the second option is selected, check the specific days you want the rule to be effective on.
All Day(s):	Check this box to have your settings apply 24 hours a day.
Start Time:	Enter the start time for your rule. If you selected All Day , this option will be greyed out.
End Time:	Enter the end time for your rule.
Add:	Click to add the rule to the list.
Schedule Rule List:	This section will display the list of created schedules.
Save:	Click the Save button to save your created rules.

D-Link DAP-2360

Home Maintenance Configuration System Logout Help

Wireless Schedule Settings

Wireless Schedule: **Disable**

Add Schedule Rule

Name:

Index: **Primary SSID**

SSID: **dlink**

Day(s): ☐ All Week ☒ Select Day(s)

☐ Sun ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat

All Day(s): ☐

Start Time: : (hour:minute, 24 hour time)

End Time: : (hour:minute, 24 hour time) ☐ Overnight

Schedule Rule List

Name	SSID Index	SSID	Day(s)	Time Frame	Wireless	Edit	DEL

+: To the end time of the next day overnight.

Internal RADIUS Server

The DAP-2360 features a built-in RADIUS server. Once you have finished adding a RADIUS account, click the Save button to let your changes take effect. The newly-created account will appear in this RADIUS Account List. The radio buttons allow the user to enable or disable the RADIUS account. Click the icon in the delete column to remove the RADIUS account. We suggest you limit the number of accounts below 30.

User Name:	Enter a name to authenticate user access to the internal RADIUS server.
Password:	Enter a password to authenticate user access to the internal RADIUS server. The length of your password should be 8~64.
Status:	Toggle the drop-down menu between Enable and Disable.
RADIUS Account List:	Displays the list of users.

The screenshot displays the D-Link DAP-2360 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of configuration options, with 'Internal RADIUS Server' selected under 'Advanced Settings'. The main content area is titled 'Internal RADIUS Server' and contains two sections: 'Add RADIUS Account' and 'RADIUS Account list'. The 'Add RADIUS Account' section has input fields for 'User Name' and 'Password', and a 'Status' dropdown menu set to 'Enable'. The 'RADIUS Account list' section is a table with columns for 'User Name', 'Enable', 'Disable', and 'Delete', currently showing no accounts. A 'Save' button is located at the bottom right of the configuration area.

ARP Spoofing Prevention

The ARP Spoofing Prevention feature allows users to add IP/MAC address mapping to prevent arp spoofing attack.

- ARP Spoofing Prevention:** This check box allows you to enable the arp spoofing prevention function.
- Gateway IP Address:** Enter a gateway IP address.
- Gateway MAC Address:** Enter a gateway MAC address.



Bandwidth Optimization

The Bandwidth Optimization window allows the user to manage the bandwidth of the device and arrange the bandwidth for various wireless clients. When the Bandwidth Optimization rule is finished, click the Add button. To discard the Add Bandwidth Optimization Rule settings, click the Clear button. Click the Save button to let your changes take effect.

Enable Bandwidth Optimization:

Use the drop-down menu to Enable the Bandwidth Optimization function.

Downlink Bandwidth:

Enter the downlink bandwidth of the device in Mbits per second.

Uplink Bandwidth:

Enter the uplink bandwidth of the device in Mbits per second.

Rule Type:

Use the drop-down menu to select the type that is applied to the rule. Available options are: Allocate average BW for each station, Allocate maximum BW for each station, Allocate different BW for b/g/n stations, and Allocate specific BW for SSID.

Allocate average BW for each station:

AP will distribute average bandwidth for each client.

Allocate maximum BW for each station:

Specify the maximum bandwidth for each connected client. Reserve certain bandwidth for future clients.

Allocate different BW for a/b/g/n stations:

The weight of 11b/g/n client is 10%/20%/70% ; 20%/80%. AP will distribute different bandwidth for b/g/n clients.

D-Link DAP-2360

Home Maintenance Configuration System Logout Help

Bandwidth Optimization

Enable Bandwidth Optimization: Disable

Downlink Bandwidth: 80 Mbits/sec

Uplink Bandwidth: 80 Mbits/sec

Add Bandwidth Optimization Rule

Rule Type: Allocate average BW for each station

Band: 2.4 GHz

SSID Index: Primary SSID

Downlink Speed: Kbits/sec

Uplink Speed: Kbits/sec

Add Clear

Bandwidth Optimization Rules

Band	Type	SSID Index	Downlink Speed	Uplink Speed	Edit	Del

Save

Allocate specific BW for SSID:	All clients share the total bandwidth.
Band:	Use the drop-down menu to toggle the wireless band between 2.4GHz.
SSID Index:	Use the drop-down menu to select the SSID for the specified wireless band.
Downlink Speed:	Enter the limitation of the downloading speed in either Kbits/sec or Mbits/sec for the rule.
Uplink Speed:	Enter the limitation of the uploading speed in either Kbits/sec or Mbits/sec for the rule.

The screenshot displays the D-Link DAP-2360 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of configuration options: Basic Settings (Wireless, LAN, IPv6), Advanced Settings (Performance, Wireless Resource, Multi-SSID, VLAN, Intrusion, Schedule, Internal RADIUS Server, ARP Spoofing Prevention, Bandwidth Optimization, AP Array, AP Array Scan, Configuration Settings, Auto-RF, Load Balance), Captive Portal, DHCP Server, Filters, Traffic Control, and Status. The main content area is titled 'Bandwidth Optimization'. It features a section for 'Enable Bandwidth Optimization' with a 'Disable' dropdown. Below this are input fields for 'Downlink Bandwidth' and 'Uplink Bandwidth', both set to 80 Mbits/sec. A section titled 'Add Bandwidth Optimization Rule' contains dropdowns for 'Rule Type' (set to 'Allocate average BW for each station'), 'Band' (set to '2.4 GHz'), and 'SSID Index' (set to 'Primary SSID'). It also has input fields for 'Downlink Speed' and 'Uplink Speed' with unit dropdowns (set to 'Kbits/sec'). 'Add' and 'Clear' buttons are present. Below this is a table titled 'Bandwidth Optimization Rules' with columns: Band, Type, SSID Index, Downlink Speed, Uplink Speed, Edit, and Del. The table is currently empty. A 'Save' button is located at the bottom right of the configuration area.

AP Arrey

AP Array Scan

The AP Array window is used to create up to 32 APs on a local network to be organized into a single group in order to increase ease of management. Click the Save button to let your changes take effect. Central WiFiManager and AP Array are mutually exclusive functions.

Enable AP Array:

Select the check box to enable the AP array function. The three modes that are available are Master, Backup Master, and Slave. APs in the same array will use the same configuration. The configuration will sync the Master AP to the Slave AP and the Backup Master AP when a Slave AP and a Backup Master AP join the AP array.

AP Array Name:

Enter an AP array name for the group here.

AP Array Password:

Enter an AP array password for the group here. This password must be the same on all the APs in the group.

Scan AP Array List:

Click this button to initiate a scan of all the available APs currently on the network.

Connection Status:

Display the AP array connection status.

AP Array List:

This table displays the current AP array status for the following parameters: Array Name, Master IP, MAC, Master, Backup Master, Slave, and Total.

Current Members:

This table displays all the current array members. The DAP-2360 AP array feature supports up to eight AP array members.

D-Link DAP-2360

Home Maintenance Configuration System Logout Help

AP Array Scan Version:2.0

☐ Enable AP Array

☐ Master ☐ Backup Master ☒ Slave

AP Array Name:

AP Array Password:

Scan AP Array List:

Connection Status: Disconnect

AP Array List

Array Name	Master IP	MAC	Master	Backup Master	Slave	Total


Current Members

Index	Role	IP Address	MAC Address	Location

Configuration Settings

In the AP array configuration settings windows, users can specify which settings all the APs in the group will inherit from the master AP. Make the required selection in this window and click the Save button to accept the changes made.

Enable AP Array Configuration:	Select to Enable or Disable the AP array configure feature here.
Wireless Basic Settings:	Select this option to specify the basic wireless settings that the APs in the group will inherit.
Wireless Advanced Settings:	Select this option to specify the advanced wireless settings that the APs in the group will inherit.
Multiple SSID & VLAN:	Select this option to specify the multiple SSIDs and VLAN settings that the APs in the group will inherit.
Advanced Functions:	Select this option to specify the other advanced settings that the APs in the group will inherit.
Administration Settings:	Select this option to specify the administrative settings that the APs in the group will inherit.

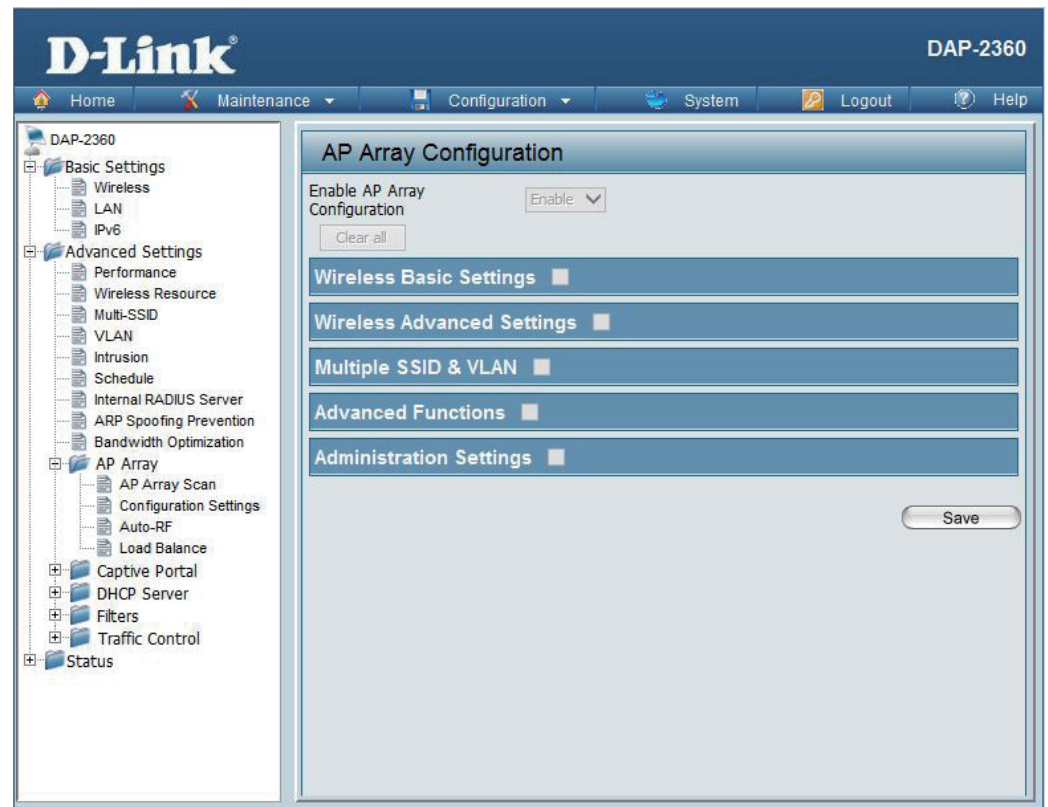

Auto-RF

In this windows, users can view and configure the automatic radio frequency settings as well as configure the the auto-initiate period and threshold values. Click the Save button to accept the changes made.

Enable: Auto-RF: Select to Enable or Disable the auto-RF feature here.

Initiate Auto-RF: Click the Auto-RF Optimize button to initiate the auto-RF optimization feature.

Auto-Initiate: Select the Enable or Disable the auto-initiate feature here.

Auto-Initiate Period: After enabling the auto-initiate option, the auto-initiate period value can be entered here. This value must be between 1 and 24 hours.

RSSI Threshold: Select the RSSI threshold value here. This value is listed in the drop-down menu in increments of 10% from 10% to 100%.

RF Report Frequency: Enter the RF report frequency value here.

The screenshot shows the D-Link DAP-2360 configuration web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar displays a tree view of configuration categories: Basic Settings (Wireless, LAN, IPv6), Advanced Settings (Performance, Wireless Resource, Multi-SSID, VLAN, Intrusion, Schedule, Internal RADIUS Server, ARP Spoofing Prevention, Bandwidth Optimization), AP Array (AP Array Scan, Configuration Settings, Auto-RF, Load Balance), Captive Portal, DHCP Server, Filters, Traffic Control, and Status. The main content area is titled 'Auto-RF' and contains the following settings:

- Enable Auto-RF:** A dropdown menu currently set to 'Disable'.
- Initiate Auto-RF:** A button labeled 'Auto-RF Optimize'.
- Auto-Initiate:** A dropdown menu currently set to 'Disable'.
- Auto-Initiate Period:** A text input field containing '24' followed by '(hours)'.
- RSSI Threshold:** A dropdown menu currently set to '40%'.
- RF Report Frequency:** A text input field containing '10' followed by '(Seconds)'.

A 'Save' button is located at the bottom right of the configuration area.

Load Balance

In this window, users can view and configure the AP array's load balancing settings. Click the Save button to accept the changes made.

Enable Load Balance: Select to Enable or Disable the load balance feature here.

Active Threshold: Enter the active threshold value here.

The screenshot displays the D-Link DAP-2360 web management interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of configuration options, with 'Load Balance' selected under the 'AP Array' section. The main content area is titled 'Load Balance' and contains two settings: 'Enable Load Balance' set to 'Disable' and 'Active Threshold' set to '5'. A 'Save' button is located in the bottom right corner of the configuration area.

Load Balance	
Enable Load Balance	Disable
Active Threshold	5
<button>Save</button>	

Captive Portal

Authentication Settings - Passcode

The Captive Portal is a built-in web authentication server. When a station connects to an AP, the web browser will be redirected to a web authentication page. In this windows, user can view and configure the Captive Portal settings. Click the Add button to add a new entry. Click the Delete or Delete All button to remove a specific entry or all the entries configured.

Encryption Type: Select the captive portal encryption type here. Options to choose from are Passcode, Username/Password, Remote RADIUS, LDAP and POP3. In this section we'll discuss the Passcode option.

Passcode Quantity: Enter the number of Passcode that will be used here.

Duration: Enter the duration value, in hours, for this Passcode.

Last Active Day: Select the last active date for this Passcode here. Year, Month and Day selections can be made.

User Limit: Enter the maximum amount of users that can use this Passcode at the same time.

The screenshot displays the D-Link DAP-2360 web management interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of configuration options, with 'Captive Portal' expanded under 'Advanced Settings'. The main content area is titled 'Captive Portal Authentication' and shows the 'Passcode' encryption type selected. Below this, there are input fields for 'Passcode Quantity', 'Duration' (in hours), 'Last Active Day' (with Year, Month, and Day dropdowns), and 'User Limit'. There are 'Add' and 'Clear' buttons. Below these fields is a table with columns: Passcode, Duration, Last Active Day, User Limit, and Delete. The table is currently empty. At the bottom of the table area is an 'Add' button. Below the table is a section for 'Captive Profile' with 'Edit' and 'Delete' buttons.

Authentication Settings - Username/Password

Encryption Type: Select the captive portal encryption type here. Options to choose from are Passcode, Username/Password, Remote RADIUS, LDAP and POP3. In this section we'll discuss the User/Password option.

Restricted Subnets: Enter the restricted subnets here. Access to these subnets will be denied to guest accounts. Up to four restricted subnet entries can be defined.

Username: Enter the username for the new account here.

Password: Enter the password for the new account here.

Group: Select the group for the new account here. Options to choose from are Manager and Guest. Guest accounts will have limited access.

The screenshot displays the D-Link DAP-2360 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of configuration options, with 'Captive Portal' expanded under 'Advanced Settings'. The main content area is titled 'Captive Portal Authentication' and contains the following sections:

- Encryption Type:** A dropdown menu set to 'Username/Password'.
- Username/Password Settings:**
 - IP Filter Settings:**
 - Restricted Subnets (example: 192.168.0.0/16): Four input fields labeled 1, 2, 3, and 4.
 - Username/Password Rule Settings:**
 - Username: An input field.
 - Password: An input field.
 - Group: A dropdown menu set to 'Manager'.
 - Buttons: 'Add' and 'Clear'.
- Table:** A table with columns 'Username', 'Group', 'Edit', and 'Delete'. It is currently empty.
- Buttons:** An 'Add' button.
- Table:** A table with columns 'Captive Profile', 'Edit', and 'Delete'. It is currently empty.

Authentication Settings - Remote RADIUS

- Encryption Type:** Select the captive portal encryption type here. Options to choose from are Passcode, Username/Password, Remote RADIUS, LDAP and POP3. In this section we'll discuss the Remote Radius option.
- Remote Radius Type:** Select the remote RADIUS server type here. Currently, only SPAP will be used.
- Radius Server:** Enter the RADIUS server's IP address here.
- Radius Port:** Enter the RADIUS server's port number here.
- Radius Secret:** Enter the RADIUS server's shared secret here.
- Accounting Mode:** Select to Enable or Disable the accounting mode here.
- Accounting Server:** Enter the accounting server's IP address here.
- Accounting Port:** Enter the accounting server's port number here.
- Accounting Secret:** Enter the accounting server's shared secret here.

The screenshot shows the D-Link DAP-2360 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of the configuration menu, with 'Captive Portal' expanded under 'Advanced Settings'. The main content area is titled 'Captive Portal Authentication' and contains the following settings:

- Encryption Type:** Remote RADIUS (selected)
- Remote RADIUS Settings:** Remote RADIUS Type: SPAP (selected)
- Radius Server Settings:**
 - Radius Server: [Empty text box]
 - Radius Port: 1812
 - Radius Secret: [Empty text box]
- Accounting Server Settings:**
 - Accounting Mode: Disable (selected)
 - Accounting Server: [Empty text box]
 - Accounting Port: 1813
 - Accounting Secret: [Empty text box]

At the bottom right of the settings area is an 'Add' button. Below the settings is a table with columns 'Captive Profile', 'Edit', and 'Delete', which is currently empty.

Authentication Settings - LDAP

- Encryption Type:** Select the captive portal encryption type here. Options to choose from are Passcode, Username/Password, Remote RADIUS, LDAP and POP3. In this section we'll discuss the LDAP option.
- Server:** Enter the LDAP server's IP address or domain name here.
- Port:** Enter the LDAP server's port number here.
- Authenticate Mode:** Select the authentication mode here. Options to choose from are Simple and TLS.
- Username:** Enter the LDAP server account's username here.
- Password:** Enter the LDAP server account's password here.
- Base DN:** Enter the administrator's domain name here.
- Account Attribute:** Enter the LDAP account attribute string here. This string will be used to search for clients.
- Identity:** Enter the identity's full path string here. Alternatively, select the Auto Copy checkbox to automatically add the generic full path of the web page in the identity field.

D-Link DAP-2360

Home Maintenance Configuration System Logout Help

Captive Portal Authentication

Encryption Type:

LDAP Settings

Server:

Port:

Authenticate Mode:

Username:

Password:

Base DN:

Account Attribute:

Identity: ☐ Auto Copy

Add

Captive Profile	Edit	Delete

Authentication Settings - POP3

Encryption Type: Select the captive portal encryption type here. Options to choose from are Passcode, Username/Password, Remote RADIUS, LDAP and POP3. In this section we'll discuss the Ticket option.

Server: Enter the POP3 server's IP address or domain name here.

Port: Enter the POP server's port number here.

Connection Type: Select the connection type here. Options to choose from are None and SSL/TLS.

The screenshot displays the D-Link DAP-2360 web management interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of configuration options, with 'Captive Portal' expanded under 'Advanced Settings'. The main content area is titled 'Captive Portal Authentication' and contains the following settings:

- Encryption Type:** A dropdown menu set to 'POP3'.
- POP3 Settings:**
 - Server:** A text input field.
 - Port:** A text input field containing '110'.
 - Connection Type:** A dropdown menu set to 'None'.
- Add:** A button to add a new captive profile.
- Captive Profile Table:** A table with columns for 'Captive Profile', 'Edit', and 'Delete'. The table is currently empty.

Login Page Upload

In this window, users can upload a custom login page picture that will be used by the captive portal feature. Click the Browse button to navigate to the image file, located on the managing computer and then click the Upload button to initiate the upload.

Upload picture from file:

In this field the path to the image file, that will be uploaded, will be displayed. Alternatively, the path can be manually entered here.

D-Link DAP-2360

Home Maintenance Configuration System Logout Help

Captive Portal Authentication

Encryption Type: Username/Password

Username/Password Settings

IP Filter Settings

Restricted Subnets (example:192.168.0.0/16)

1. 2. 3. 4.

Username/Password Rule Settings

Username: Password: Group: Manager

Add Clear

Username	Group	Edit	Delete
----------	-------	------	--------

Add

Captive Profile	Edit	Delete
-----------------	------	--------

Web Redirection

In this window, users can view and configure the Web redirection settings for the captive portal hosted by this access point. Wireless clients will be redirected to this web site prior and after authentication. Click the Save button to accept the changes made.

Web Redirection: Select this checkbox to enable the Web redirection feature.

Web Site: Enter the destination web site's address here.

The screenshot shows the D-Link DAP-2360 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar lists various configuration categories: Basic Settings, Advanced Settings (with sub-items like Performance, Wireless Resource, Multi-SSID, VLAN, Intrusion, Schedule, Internal RADIUS Server, ARP Spoofing Prevention, and Bandwidth Optimization), AP Array, Captive Portal (with sub-items like Authentication Settings, Login Page Upload, and WEB Redirection), DHCP Server, Filters, Traffic Control, and Status. The main content area is titled 'Web Redirection' and contains two settings: 'Web Redirection' with an unchecked checkbox, and 'Web Site' with an empty text input field. A 'Save' button is located at the bottom right of the configuration area.

DHCP Server

Dynamic Pool Settings

The DHCP address pool defines the range of the IP address that can be assigned to stations in the network. A Dynamic Pool allows wireless stations to receive an available IP with lease time control. If needed or required in the network, the DAP-2360 is capable of acting as a DHCP server.

Function Enable/Disable:

Dynamic Host Configuration Protocol (DHCP) assigns dynamic IP addresses to devices on the network. This protocol simplifies network management and allows new wireless devices to receive IP addresses automatically without the need to manually assign new IP addresses. Select **Enable** to allow the DAP-2360 to function as a DHCP server.

IP Assigned From:

Input the first IP address available for assignment on your network.

The Range of Pool (1-254):

Enter the number of IP addresses available for assignment. IP addresses are increments of the IP address specified in the "IP Assigned From" field.

Subnet Mask:

All devices in the network must have the same subnet mask to communicate. Enter the submask for the network here.

Gateway:

Enter the IP address of the gateway on the network.

WINS:

Specify the Windows Internet Naming Service (WINS) server address for the wireless network. WINS is a system that determines the IP address of a network computer that has a dynamically assigned IP address.

The screenshot shows the D-Link DAP-2360 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of settings: Basic Settings (Wireless, LAN, IPv6), Advanced Settings (Performance, Wireless Resource, Multi-SSID, VLAN, Intrusion, Schedule, Internal RADIUS Server, ARP Spoofing Prevention, Bandwidth Optimization, AP Array, Captive Portal, Authentication Settings, Login Page Upload, WEB Redirection), DHCP Server (Dynamic Pool Settings, Static Pool Settings, Current IP Mapping List), Filters, Traffic Control, and Status. The main content area is titled "Dynamic Pool Settings". Under "DHCP Server Control", the "Function Enable/Disable" dropdown is set to "Disable". Under "Dynamic Pool Settings", the following fields are visible: "IP Assigned From" (192.168.0.20), "The Range of Pool (1-254)" (235), "Subnet Mask" (255.255.255.0), "Gateway" (empty), "WINS" (empty), "DNS" (empty), "Domain Name" (dlink-ap), and "Lease Time (60 - 31536000 sec)" (604800). A "Save" button is located at the bottom right of the settings area.

DNS:	Enter the IP address of the Domain Name System (DNS) server. The DNS server translates domain names such as www.dlink.com into IP addresses.
Domain Name:	Enter the domain name of the network, if applicable. (An example of a domain name is: www.dlink.com.)
Lease Time (60-31536000 sec):	The lease time is the period of time before the DHCP server will assign new IP addresses.

Static Pool Setting


The DHCP address pool defines the range of IP addresses that can be assigned to stations on the network. A static pool allows specific wireless stations to receive a fixed IP without time control.

Function Enable/Disable: Dynamic Host Configuration Protocol (DHCP) assigns IP addresses to wireless devices on the network. This protocol simplifies network management and allows new wireless devices to receive IP addresses automatically without the need to manually assign IP addresses. Select **Enable** to allow the DAP-2360 to function as a DHCP server.

Assigned IP: Use the Static Pool Settings to assign the same IP address to a device every time you start up. The IP addresses assigned in the Static Pool list must NOT be in the same IP range as the Dynamic Pool. After you have assigned a static IP address to a device via its MAC address, click **Save**; the device will appear in the Assigned Static Pool at the bottom of the screen. You can edit or delete the device in this list.

Assigned MAC Address: Enter the MAC address of the device requesting association here.

Subnet Mask: Define the submask of the IP address specified in the "IP Assigned From" field.

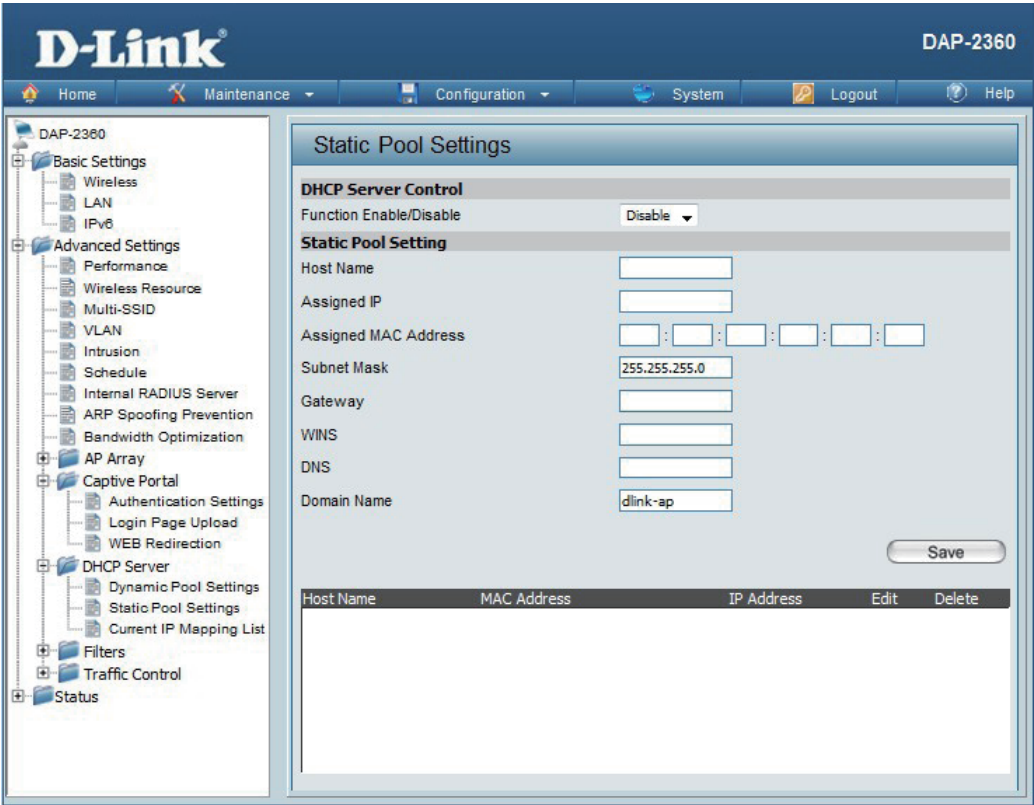

Gateway:	Specify the Gateway address for the wireless network.
WINS:	Specify the Windows Internet Naming Service (WINS) server address for the wireless network. WINS is a system that determines the IP address of a network computer with a dynamically assigned IP address, if applicable.
DNS:	Enter the Domain Name System (DNS) server address for the wireless network. The DNS server translates domain names such as www.dlink.com into IP addresses.
Domain Name:	Specify the domain name for the network.

Current IP Mapping List

This window displays information about the current assigned DHCP dynamic and static IP address pools. This information is available when you enable DHCP server on the AP and assign dynamic and static IP address pools.

Current DHCP Dynamic Profile: These are IP address pools the DHCP server has assigned using the dynamic pool setting.

Host Name: The host name of a device on the network that is assigned an IP address from the DHCP dynamic pool.

Binding MAC Address: The MAC address of a device on the network that is assigned an IP address from the DHCP dynamic pool.

Assigned IP Address: The current corresponding DHCP-assigned IP address of the device.


Lease Time: The length of time that the dynamic IP address will be valid.

Current DHCP Static Pools: These are the IP address pools of the DHCP server assigned through the static pool settings.

Host Name: The host name of a device on the network that is assigned an IP address from the DHCP dynamic pool.

Binding MAC Address: The MAC address of a device on the network that is within the DHCP static IP address pool.

Assigned IP Address: The current corresponding DHCP-assigned static IP address of the device.

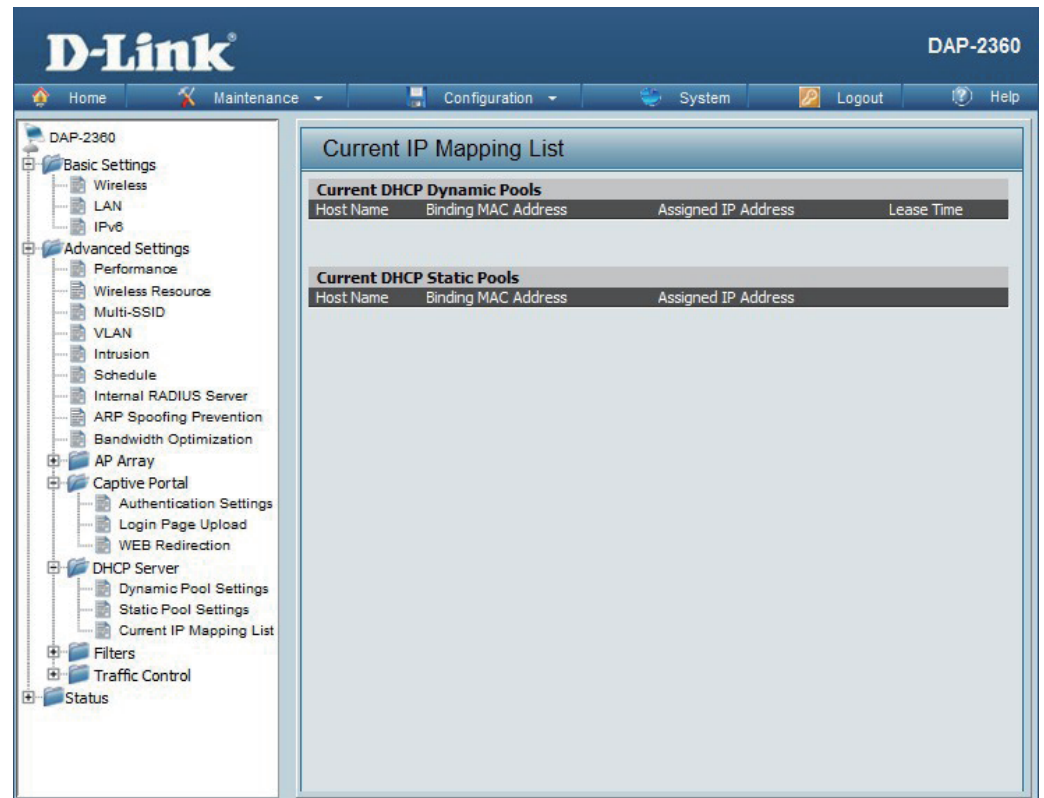

Filters

Wireless MAC ACL

- Wireless Band:** Displays the current wireless band rate.
- Access Control List:** Select **Disable** to disable the filters function.
- Select **Accept** to accept only those devices with MAC addresses in the Access Control List. All other devices not on the list will be rejected.
- Select **Reject** to reject the devices with MAC addresses on the Access Control List. All other devices not on the list will be accepted.
- MAC Address:** Enter each MAC address that you wish to include in your filter list, and click **Add**.
- MAC Address List:** When you enter a MAC address, it appears in this list. Highlight a MAC address and click **Delete** to remove it from this list.
- Upload ACL File:** You may create an ACL list and upload it to the access point instead of manually entering the information. Once created, click the **Browse** button and locate your file. Select it and then click **Upload**.
- Download ACL File:** Click **Download** to export the ACL to a file on your computer.

D-Link DAP-2360

Home Maintenance Configuration System Logout Help

Wireless MAC ACL Settings

Wireless Band: 2.4GHz

Access Control List: Disable

MAC Address: [] : [] : [] : [] : [] : [] **Add**

ID	MAC Address	Delete

Current Client Information

MAC Address	SSID	Band	Authentication	Signal	Add

Upload ACL File

Upload File: [] **Browse** **Upload**

Download ACL File

Load ACL File to Local Hard Driver: **Download**

Save


WLAN Partition

Wireless Band: Displays the current wireless band rate.

Link Integrity: Select **Enable** or **Disable**.

Ethernet to WLAN Access: The default is **Enable**. When disabled, all data from the Ethernet to associated wireless devices will be blocked. Wireless devices can still send data to the Ethernet.

Internal Station Connection: The default value is **Enable**, which allows stations to inter-communicate by connecting to a target AP. When disabled, wireless stations cannot exchange data through the AP.

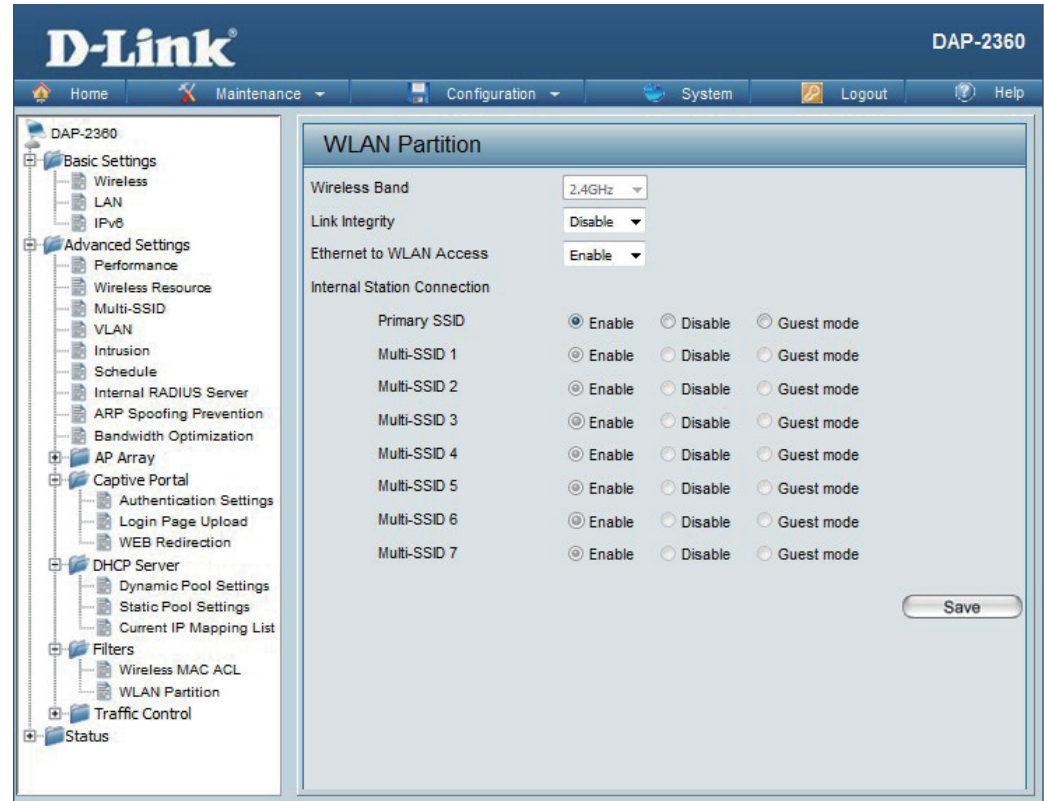

Traffic Control

Uplink/Downlink Settings

The uplink/downlink setting allows users to customize the downlink and uplink interfaces including specifying downlink/uplink bandwidth rates in Mbits per second. These values are also used in the QoS and Traffic Manager windows. Once the desired uplink and downlink settings are finished, click the Save button to let your changes take effect.

Downlink Bandwidth: The downlink bandwidth in Mbits per second.

Uplink Bandwidth: Uplink Bandwidth: The uplink bandwidth in Mbits per second.

D-Link DAP-2360

Home Maintenance Configuration System Logout Help

Uplink and Downlink Setting

Ethernet ☐ Downlink ☐ Uplink

Downlink Interface

☐ Primary-ssid ☐ Multi-ssid1 ☐ Multi-ssid2 ☐ Multi-ssid3
☐ Multi-ssid4 ☐ Multi-ssid5 ☐ Multi-ssid6 ☐ Multi-ssid7
☐ WDS1 ☐ WDS2 ☐ WDS3 ☐ WDS4
☐ WDS5 ☐ WDS6 ☐ WDS7 ☐ WDS8

Uplink Interface

☐ Primary-ssid ☐ Multi-ssid1 ☐ Multi-ssid2 ☐ Multi-ssid3
☐ Multi-ssid4 ☐ Multi-ssid5 ☐ Multi-ssid6 ☐ Multi-ssid7
☐ WDS1 ☐ WDS2 ☐ WDS3 ☐ WDS4
☐ WDS5 ☐ WDS6 ☐ WDS7 ☐ WDS8

Downlink Bandwidth(1~300) Mbits/sec
Uplink Bandwidth(1~300) Mbits/sec

Save

QoS

Quality of Service (QoS) enhances the experience of using a network by prioritizing the traffic of different applications. A QoS Rule identifies a specific message flow and assigns a priority to that flow. For most applications, the priority classifiers ensure the right priorities and specific QoS Rules are not required. QoS supports overlaps between rules. If more than one rule matches a specific message flow, the rule with the highest priority will be used.

QoS (Quality of Service):

Enable this option if you want to allow QoS to prioritize your traffic Priority Classifiers.

HTTP:

Allows the access point to recognize HTTP transfers for many common audio and video streams and prioritize them above other traffic. Such streams are frequently used by digital media players.

Automatic:

When enabled, this option causes the access point to automatically attempt to prioritize traffic streams that it does not otherwise recognize, based on the behavior that the streams exhibit. This acts to de-prioritize streams that exhibit bulk transfer characteristics, such as file transfers, while leaving interactive traffic, such as gaming or VoIP, running at a normal priority.

D-Link DAP-2360

Home Maintenance Configuration System Logout Help

QoS

Enable QoS ☐

Advanced QoS

Downlink Bandwidth	100	Mbits/sec
Uplink Bandwidth	100	Mbits/sec
ACK/DHCP/ICMP/DNS Priority	Highest Priority	Limit 100 % Port 53,67,68,545,547
Web Traffic Priority	Third Priority	Limit 100 % Port 80,443,3128,8080
Mail Traffic Priority	Second Priority	Limit 100 % Port 25,110,465,995
Ftp Traffic Priority	Low Priority	Limit 100 % Port 20,21
User Defined-1 Priority	Highest Priority	Limit 100 % Port 0 - 0
User Defined-2 Priority	Second Priority	Limit 100 % Port 0 - 0
User Defined-3 Priority	Third Priority	Limit 100 % Port 0 - 0
User Defined-4 Priority	Low Priority	Limit 100 % Port 0 - 0
Other Traffic Priority	Low Priority	Limit 100 %

Save

Traffic Manager

The traffic manager feature allows users to create traffic management rules that specify how to deal with listed client traffic and specify downlink/ uplink speed for new traffic manager rules. Click the Save button to let your changes take effect.

Traffic Manager: Use the drop-down menu to Enable the traffic manager feature.

Unlisted Client Traffic: Select Deny or Forward to determine how to deal with unlisted client traffic.

Downlink Bandwidth: The downlink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

Uplink Bandwidth: Uplink Bandwidth: The uplink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

D-Link DAP-2360

Home Maintenance Configuration System Logout Help

Traffic Manager

Traffic Manager

Unlisted Clients Traffic ☐ Deny ☒ Forward

Downlink Bandwidth Mbits/sec

Uplink Bandwidth Mbits/sec

Add Traffic Manager Rule

Name

Client IP(optional)

Client MAC(optional)

Downlink Speed Mbits/sec

Uplink Speed Mbits/sec

Traffic Manager Rules

Name	Client IP	Client MAC	Downlink Speed	Uplink Speed	Edit	Del
Save						

Status

Device Information

Device Information: This read-only window displays the configuration settings of the DAP-2360, including the firmware version and the device's MAC address.



The screenshot shows the D-Link DAP-2360 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar displays a tree view of configuration options, with 'Status' selected. The main content area is titled 'Device Information' and displays the following settings:


Firmware Version: 2.00	
Ethernet MAC Address:	c4:a8:1d:90:5d:18
Wireless MAC Address:	Primary: c4:a8:1d:90:5d:18 SSID 1~7: c4:a8:1d:90:5d:19 ~ c4:a8:1d:90:5d:1f
Ethernet	
IP Address	192.168.0.50
Subnet Mask	255.255.255.0
Gateway	N/A
DNS	
Wireless (2.4GHz)	
Network Name (SSID)	dlink
Channel	11
Data Rate	Auto
Security	None
AP Array	
AP Array	d-link
Role	Slave
Location	
Device Status	
CPU Utilization	1%
Memory Utilization	52%
Central WiFiManager	
Connection Status	Disconnect
Server IP	
Service Port	
Live Port	
Group ID	

Client Information

Client Information: This window displays the wireless client information for clients currently connected to the DAP-2360.

The following information is available for each client communicating with the DAP-2360.

- SSID:** Displays the SSID of the client.
- MAC:** Displays the MAC address of the client.
- Band:** Displays the wireless band that the client is connected to.
- Authentication:** Displays the type of authentication being used.
- Signal:** Displays the client's signal strength.
- Power Saving Mode:** Displays the status of the power saving feature.

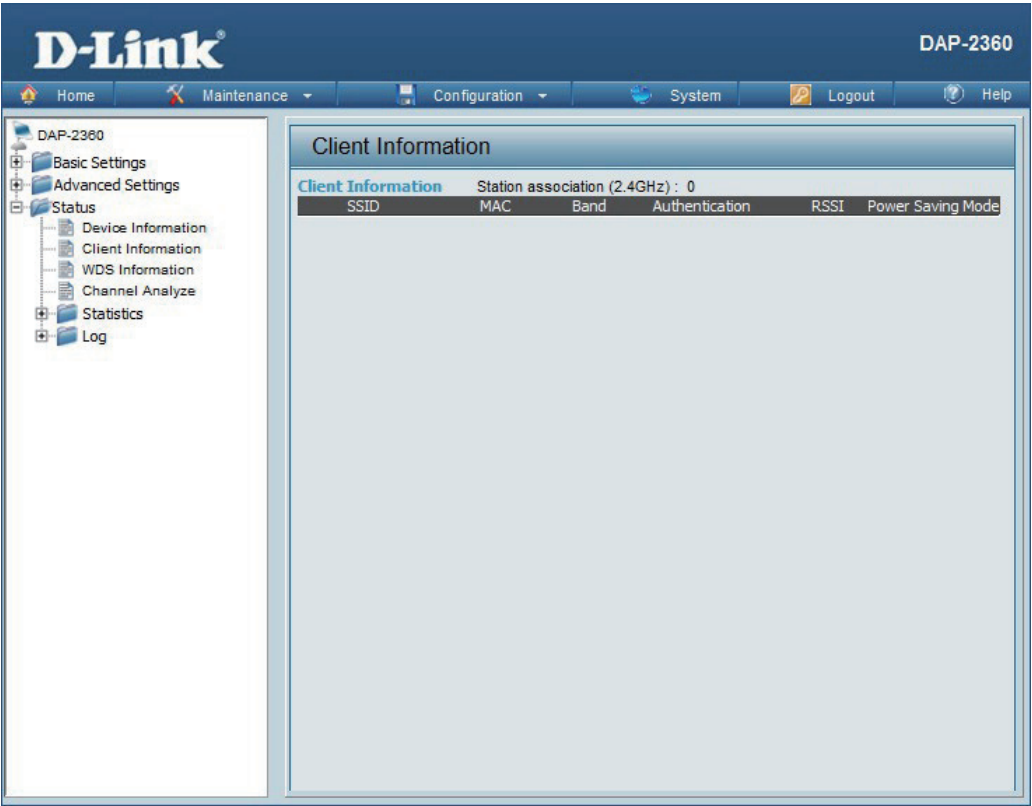


Channel Analyze

- Wireless Band :

Select 2.4GHz in default.
- Detect :


Click the Detect button to scan.
- AP List :

This will list the transmitting channels and quality.

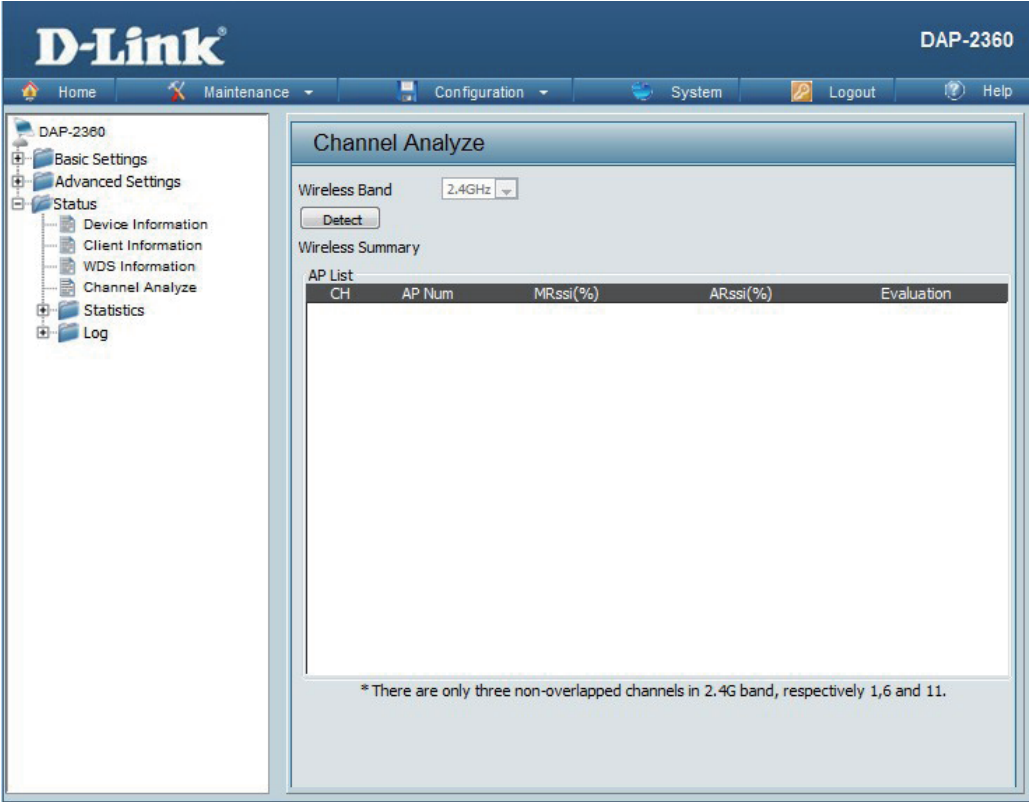

WDS Information


- Wireless Band:** Select 2.4GHz in default.
- Detect:** Click the Detect button to scan.
- AP List:** This will list the transmitting channels and quality.

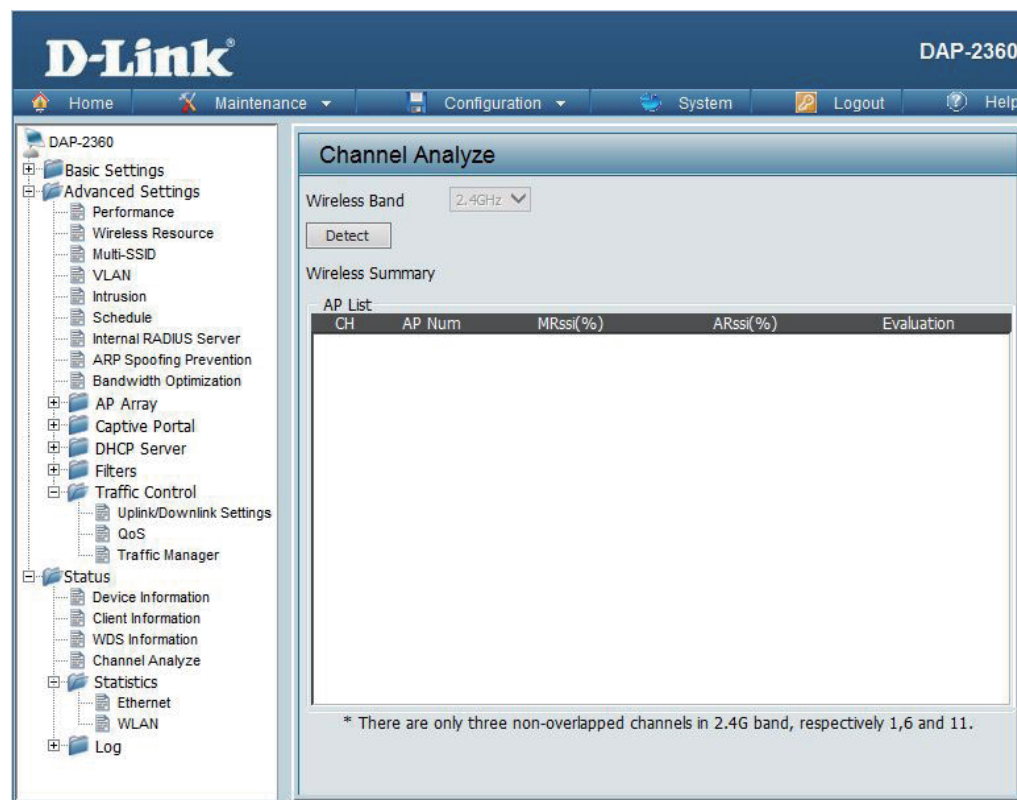

Stats Ethernet

**Ethernet Traffic
Statistics:**


This page displays transmitted and received count statistics for packets and bytes.

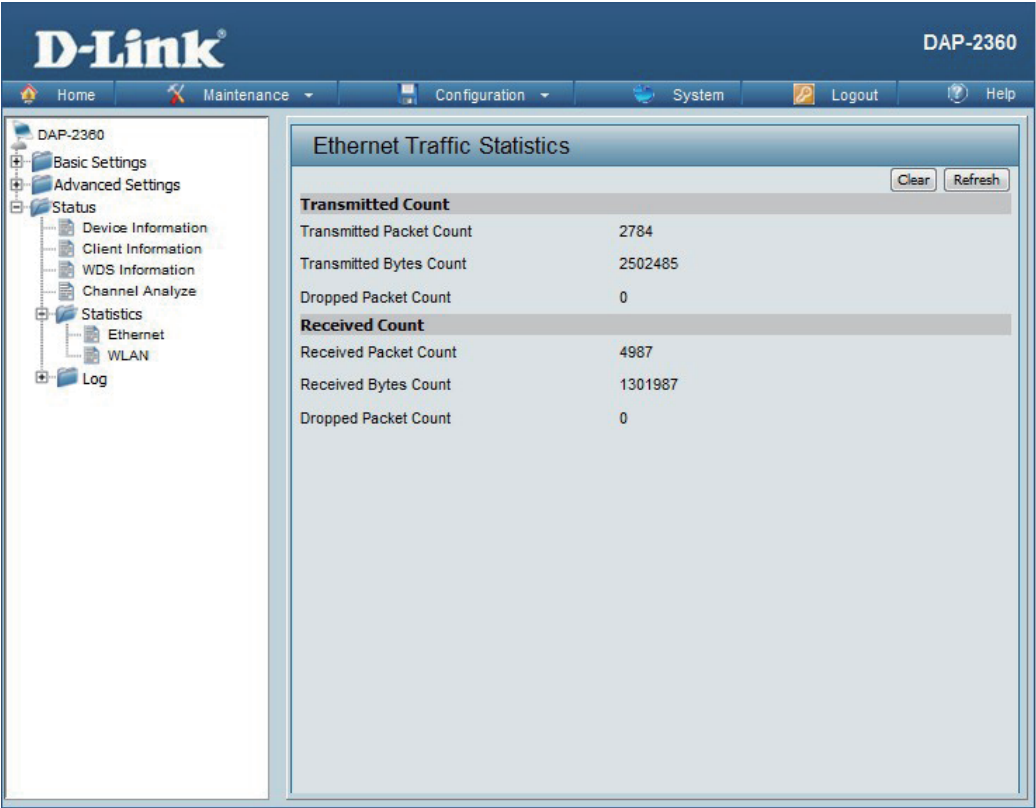

WLAN Traffic

WLAN Traffic Statistics:


This page displays wireless network statistics for data throughput, transmitted and received frames, and frame errors.

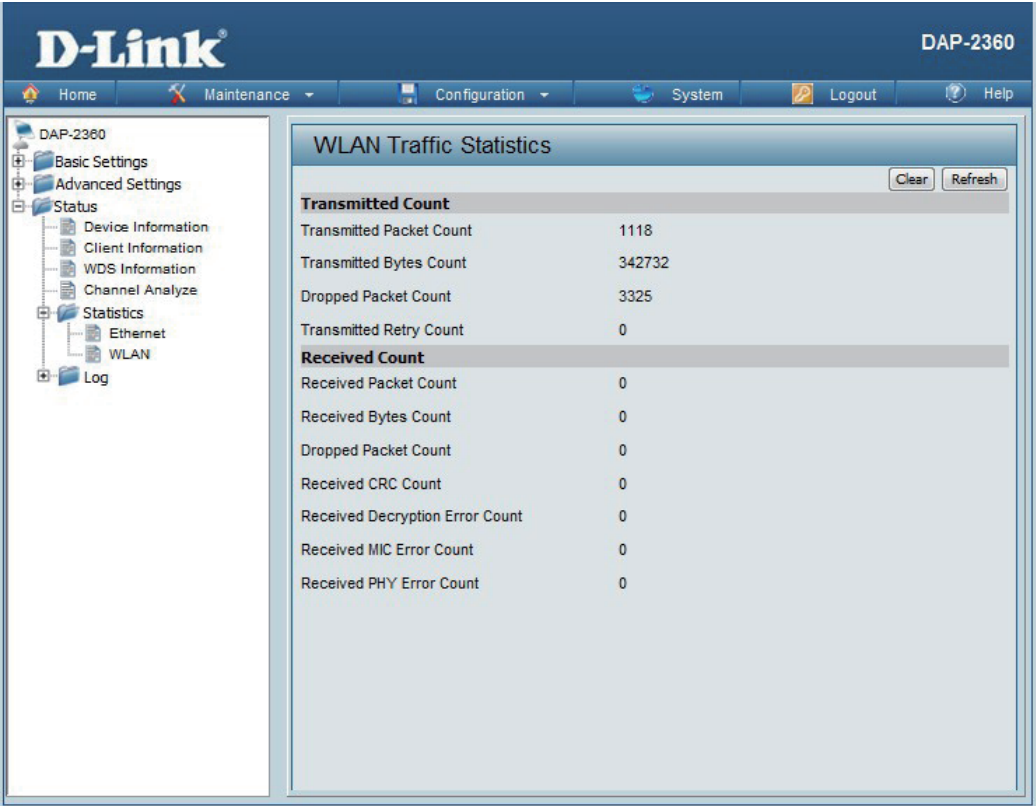

Log

View Log

View Log: The AP's embedded memory displays system and network messages including a time stamp and message type. The log information includes but is not limited to the following items: cold start AP, upgrading firmware, client associate and disassociate with AP, and web login. The web page holds up to 500 logs.

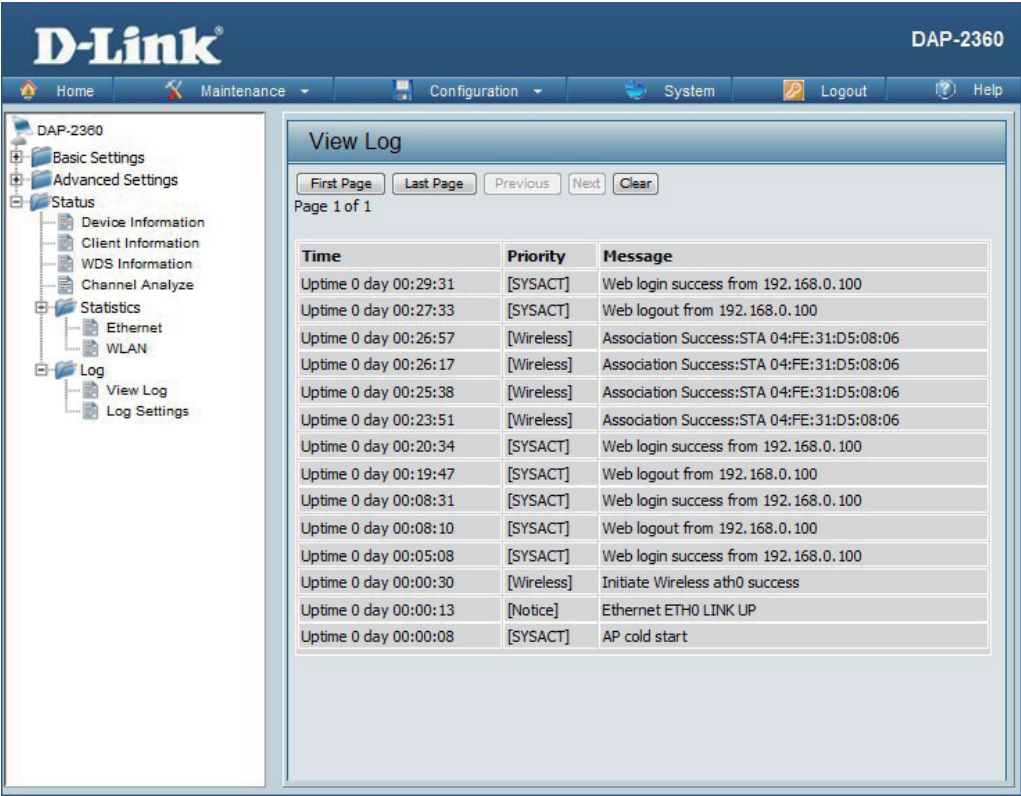

Log Settings

Log Server/IP Address: Enter the IP address of the server you would like to send the DAP-2360 log to.

Log Type: Check the box for the type of activity you want to log. There are three types: System Activity, Wireless Activity, and Notice.

Email Notification: Check to enable Email notification.

Outgoing Mail Server (SMTP): Select the SMTP server from the drop-down menu.

Authentication: Check to enable authentication.

SSL / TLS: Check to enable SSL/TLS authentication.

From Email Address: Enter the "From" email address.

To Email Address: Enter the destination email address.

Email Server Address: Enter the Email Server Address.

SMTP Port: Enter the SMTP port.

Username: Enter your email username.

Password: Enter your email password.

Confirm Password: Enter your email password again.

Schedule: Select when to send the log to your email (in hours). You will receive an email when the log is full too.

D-Link DAP-2360

Home Maintenance Configuration System Logout Help

Log Settings

Log Settings

Log Server / IP Address

Log Type ☒ System Activity ☒ Wireless Activity ☒ Notice

Email Notification

Email Notification ☐ Enable

Outgoing mail server (SMTP)

Authentication ☐ Enable

SSL/TLS ☐ Enable

From Email Address

To Email Address

Email Server Address

SMTP Port

User Name

Password

Confirm Password

Email Log Schedule


Schedule hours or when Log is full

Save

Maintenance

Administration Settings

Check one or more of the five main categories to display the various hidden administrator parameters and settings displayed on the next five pages.

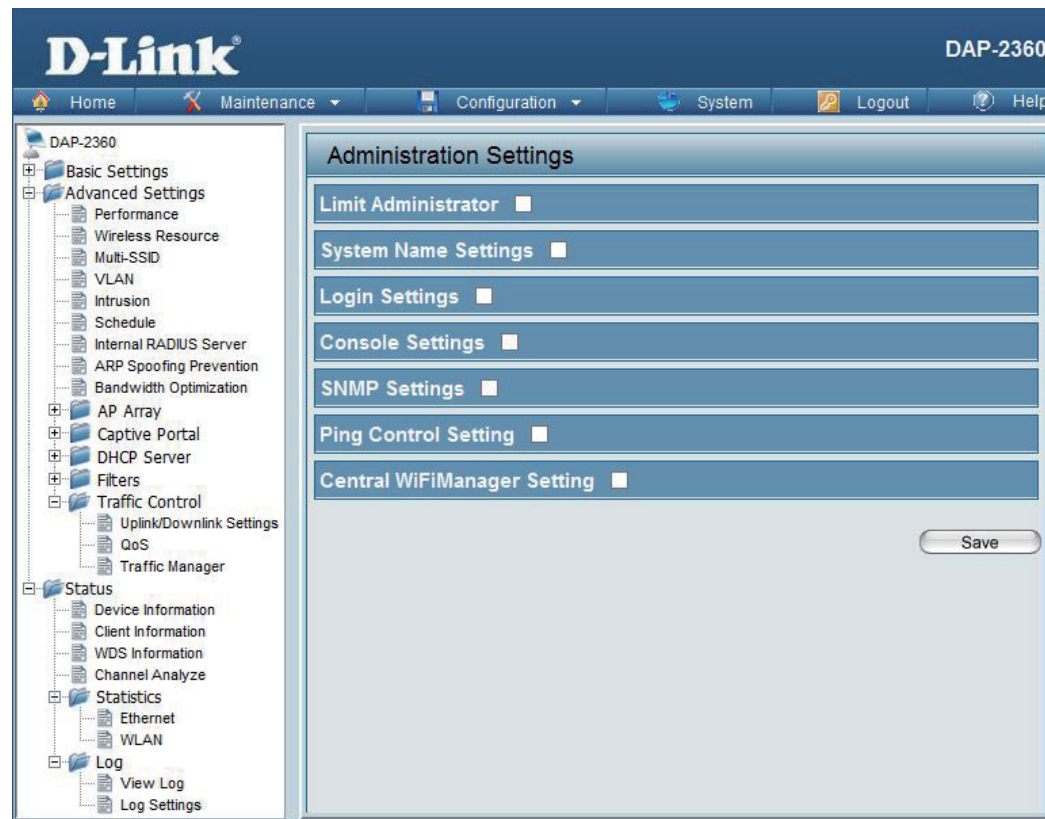

Limit Administrator

Each of the five main categories display various hidden administrator parameters and settings.

Limit Administrator VLAN ID:

Check the box provided and then enter the specific VLAN ID that the administrator will be allowed to log in from.

Limit Administrator IP:

Check to enable the Limit Administrator IP address.

IP Range:

Enter the IP address range that the administrator will be allowed to log in from and then click the **Add** button.

The screenshot shows the D-Link DAP-2360 web interface. The left sidebar contains a tree view with categories: Basic Settings, Advanced Settings (expanded), Performance, Wireless Resource, Multi-SSID, VLAN, Intrusion, Schedule, Internal RADIUS Server, ARP Spoofing Prevention, Bandwidth Optimization, AP Array, Captive Portal, DHCP Server, Filters, Traffic Control, Uplink/Downlink Settings, QoS, and Traffic Manager. The main content area is titled 'Administration Settings' and includes the following sections:

- Limit Administrator** (checked):
 - Limit Administrator VLAN ID: ☐ Enable
 - Limit Administrator IP: ☐ Enable
 - IP Range: From: To:
 - Table with columns: Item, From, To, Delete.
- System Name Settings** ☐
- Login Settings** ☐
- Console Settings** ☐
- SNMP Settings** ☐
- Ping Control Setting** ☐
- Central WiFiManager Setting** ☐


A **Save** button is located at the bottom right of the main content area.

System Name Settings

Each of the five main categories display various hidden administrator parameters and settings.

System Name: The name of the device. The default name is **D-Link DAP-2360**.

Location: The physical location of the device, e.g. 72nd Floor, D-Link HQ.

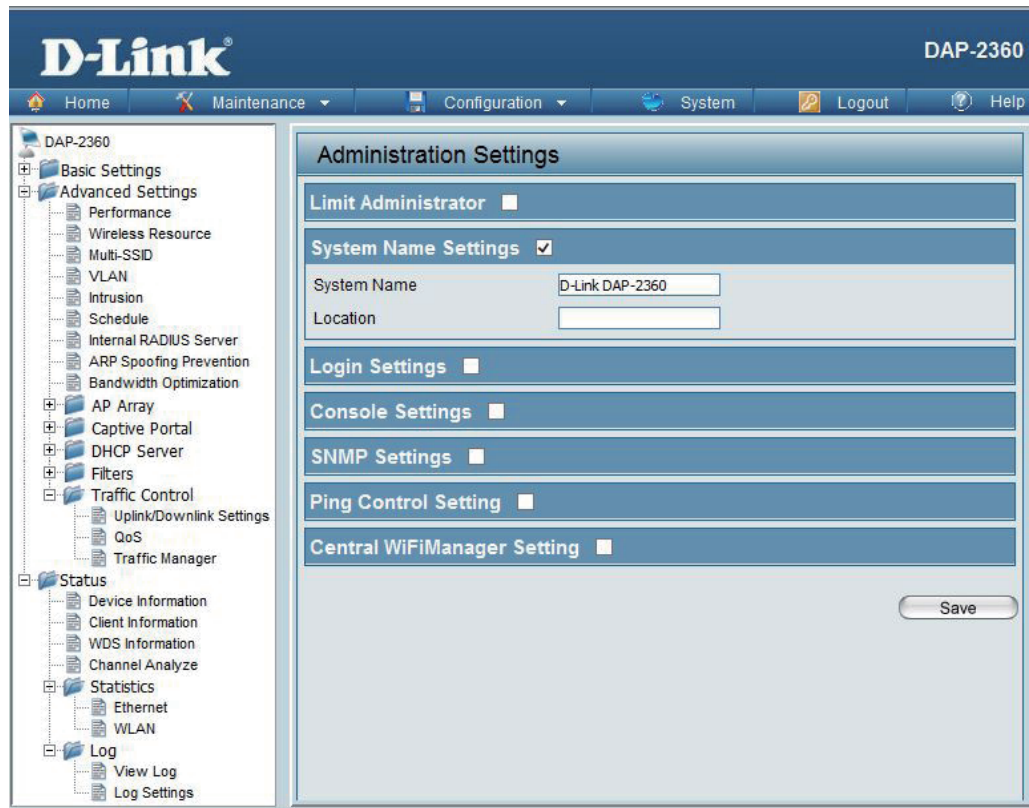

Login Settings

Each of the five main categories display various hidden administrator parameters and settings.


- Login Name:** Enter a user name. The default is **admin**.
- Old Password:** When changing your password, enter the old password here.
- New Password:** When changing your password, enter the new password here. The password is case-sensitive. "A" is a different character than "a." The length should be between 0 and 12 characters.
- Confirm Password:** Enter the new password a second time for confirmation purposes.

The screenshot shows the D-Link DAP-2360 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with 'DAP-2360' expanded, containing 'Basic Settings', 'Advanced Settings', and 'Status'. The main content area is titled 'Administration Settings' and contains several sections: 'Limit Administrator', 'System Name Settings', 'Login Settings' (which is selected and expanded), 'Console Settings', 'SNMP Settings', 'Ping Control Setting', and 'Central WiFiManager Setting'. The 'Login Settings' section includes three input fields: 'Login Name' (containing 'admin'), 'New Password', and 'Confirm Password'. There is also a checkbox labeled 'Apply New Password'. A 'Save' button is located at the bottom right of the settings area.

Console Settings

Each of the five main categories display various hidden administrator parameters and settings.

- Status:** Status is enabled by default. Uncheck the box to disable the console.
- Console Protocol:** Select the type of protocol you would like to use, **Telnet** or **SSH**.
- Timeout:** Set to **1 Min**, **3 Mins**, **5 Mins**, **10 Mins**, **15 Mins** or **Never**.

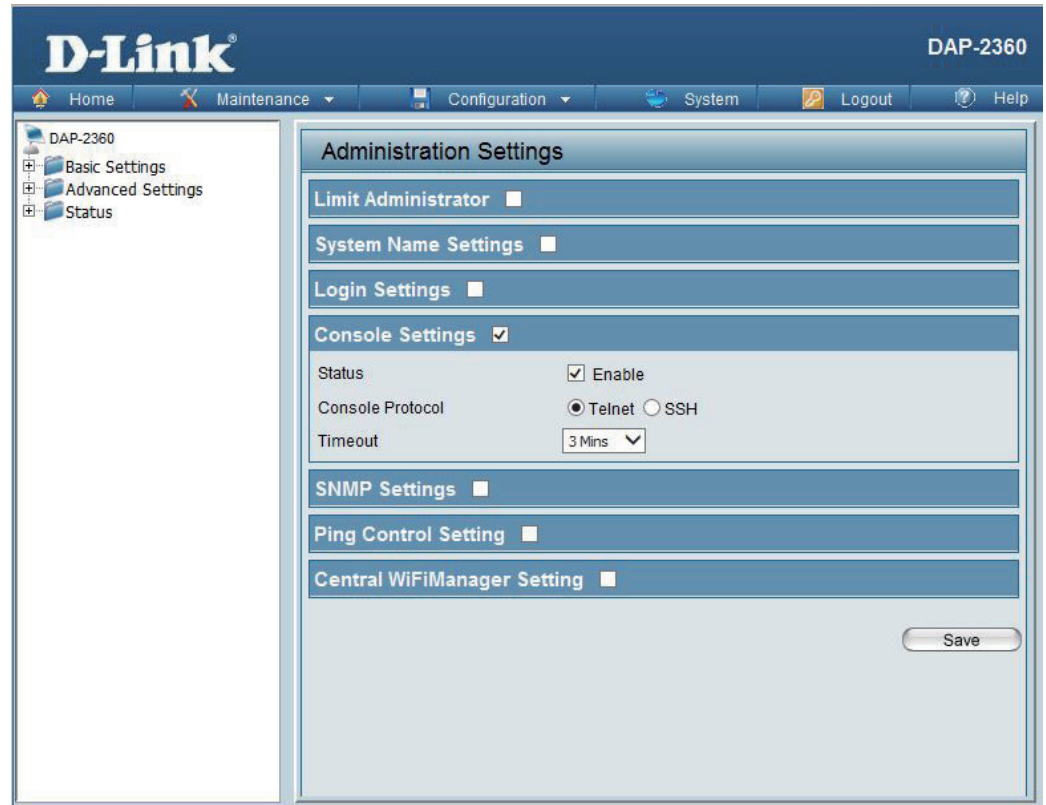

SNMP Settings

Each of the five main categories display various hidden administrator parameters and settings.

Status: Check the box to enable the SNMP functions. This option is disabled by default.

Public Community String: Enter the public SNMP community string.

Private Community String: Enter the private SNMP community string.

Trap Status: Check the box to enable Trap Status.

Trap Server IP: Enter the Trap Server IP address.


The screenshot displays the D-Link DAP-2360 web management interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. A left sidebar shows a tree view with 'DAP-2360' expanded, containing 'Basic Settings', 'Advanced Settings', and 'Status'. The main content area is titled 'Administration Settings' and contains several sub-sections: 'Limit Administrator', 'System Name Settings', 'Login Settings', 'Console Settings', 'SNMP Settings' (which is selected and has a checkmark), 'Ping Control Setting', and 'Central WiFiManager Setting'. The 'SNMP Settings' section includes the following fields: 'Status' (checkbox, disabled), 'Public Community String' (text box with 'public'), 'Private Community String' (text box with 'private'), 'Trap Status' (checkbox, disabled), and 'Trap Server IP' (text box). A 'Save' button is located at the bottom right of the page.

Central WiFiManager Settings

The Central WiFiManager section is used to configure and manage a set of APs on the Internet into a single group in order to increase ease of management. Central WiFiManager and AP Array are mutually exclusive functions.

Enable Central WiFiManager:

Select to enable or disable the Central WiFiManager.

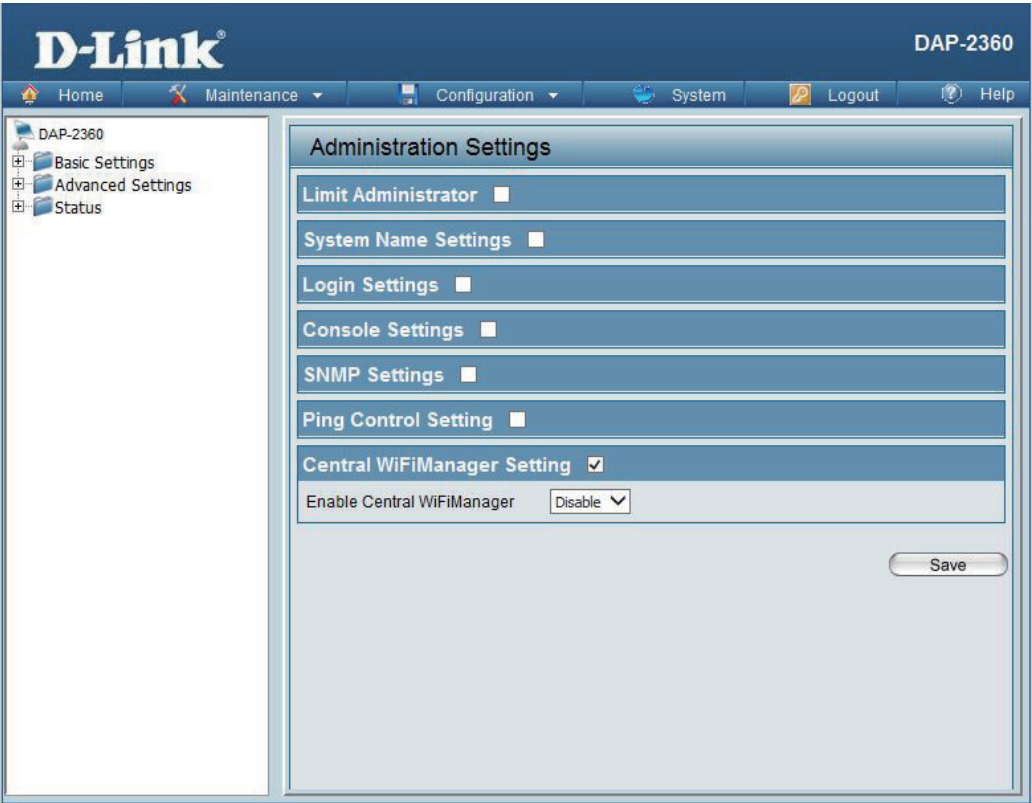

Firmware and SSL Certification Upload

This page allows the user to perform a firmware upgrade. A Firmware upgrade is a function that upgrade the running software used by the access point. This is a useful feature that prevents future bugs and allows for new features to be added to this product. Please go to your local D-Link website to see if there is a newer version firmware available.

Upload Firmware From Local Hard Drive:

The current firmware version is displayed above the file location field. After downloading the most recent version of firmware for the DAP-2360 from <http://support.dlink.com> to your local computer, use the **Browse** button to locate the firmware file on your computer. Click **Upload** to update the firmware version. Please don't turn the power off while upgrading.

Language Pack Upgrade:

You may load a language pack to display the utility in another language. Click **Browse** to locate the language pack file on your local computer. After selecting and opening the file, click **Upload** to upload the file to the DAP-2360.

Upload SSL Certification From Local Hard Drive:

Click **Browse** to locate the SSL Certification file on your local computer. After selecting and opening the file, click **Upload** to upload the file to the DAP-2360.


The screenshot displays the D-Link DAP-2360 web management interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. A sidebar on the left lists navigation options: DAP-2360, Basic Settings, Advanced Settings, and Status. The main content area is titled "Firmware and SSL Certification Upload". It features three distinct sections for uploading files from the local hard drive:

- Update Firmware From Local Hard Drive:** Shows the current "Firmware Version 2.00". Below this, there is a text input field for the file path, a "浏览..." (Browse) button, and an "Upload" button.
- Update SSL Certification From Local Hard Drive:** Contains a text input field, a "浏览..." button, and an "Upload" button.
- Upload Key From File:** Contains a text input field, a "浏览..." button, and an "Upload" button.

Configuration File Upload

Upload File: Click the **Browse** button to locate a previously saved configuration file on your local computer. After selecting the file, click **Upload** to apply the configuration settings to the DAP-2360.

Download Configuration File: Click **Download** to save the current DAP-2360 configuration to your local computer. Note that if you save one configuration with the administrator's password now, after resetting your DAP-2360, and then updating to this saved configuration file, the password will be gone.

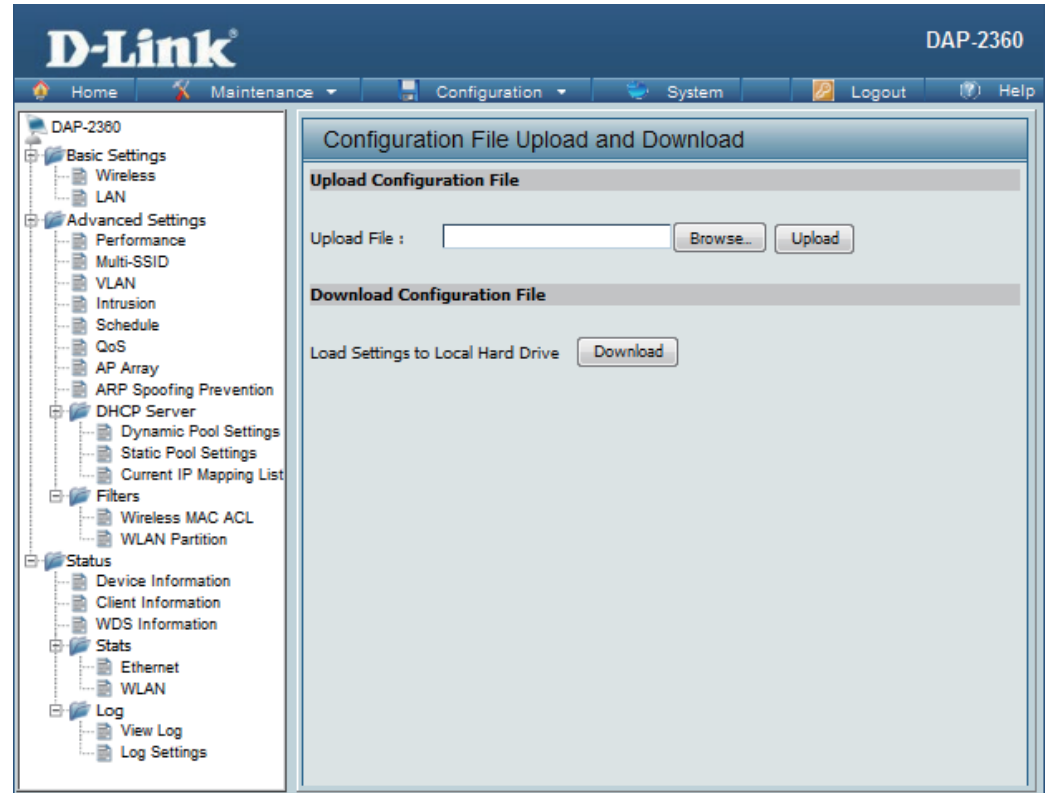

Time and Date

- Current Time:** Displays the current time and date settings.
- Enable NTP Server:** Check to enable the AP to get system time from an NTP server.
- NTP Server:** Enter the NTP server URL or IP address.
- Time Zone:** Use the drop-down menu to select your correct Time Zone.
- Enable Daylight Saving:** Check the box to Enable Daylight Saving Time.
- Daylight Saving Dates:** Use the drop-down menu to select the correct Daylight Saving offset.
- Set the Date and Time Manually:** You can either manually set the time for your AP here, or you can click the **Copy Your Computer's Time Settings** button to copy the time from the computer you are using (Make sure that the computer's time is set correctly).

The screenshot shows the D-Link DAP-2360 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with Basic Settings (Wireless, LAN, IPv6), Advanced Settings, and Status. The main content area is titled 'Time and Date Settings' and contains the following sections:


- Time Configuration:** Displays the 'Current Time' as 01/01/1970 00:04:33.
- Automatic Time Configuration:**
 - Enable NTP Server:** A checkbox that is currently unchecked.
 - NTP Server:** A text field containing 'ntp1.dlink.com'.
 - Time Zone:** A dropdown menu showing '(GMT-08:00) Pacific Time (US & Canada); Tijuana'.
 - Enable Daylight Saving:** A checkbox that is currently unchecked.
 - Daylight Saving Dates:** A table with columns for DST Start, DST End, Month, Week, Day of Week, and Current Time.

	DST Start	DST End	Month	Week	Day of Week	Current Time
			Jan	1st	Sun	12 am
- Set the Date and Time Manually:**
 - Date And Time:** Fields for Year (2012), Month (Jul), Day (26), Hour (18), Minute (40), and Second (10).
 - Copy Your Computer's Time Settings:** A button to copy the time from the user's computer.

A 'Save' button is located at the bottom right of the configuration area.

Configuration and System

These options are the remaining option to choose from in the top menu. Configuration allows the user to save and activate or discard the configurations done. System allows the user to restart the unit, perform a factory reset. Logout allows the user to safely log out from the access point's web configuration. Help allows the user to read more about the given options to configure without the need to consult the manual. The following pages will explain settings found in the configuration and system section in more detail.

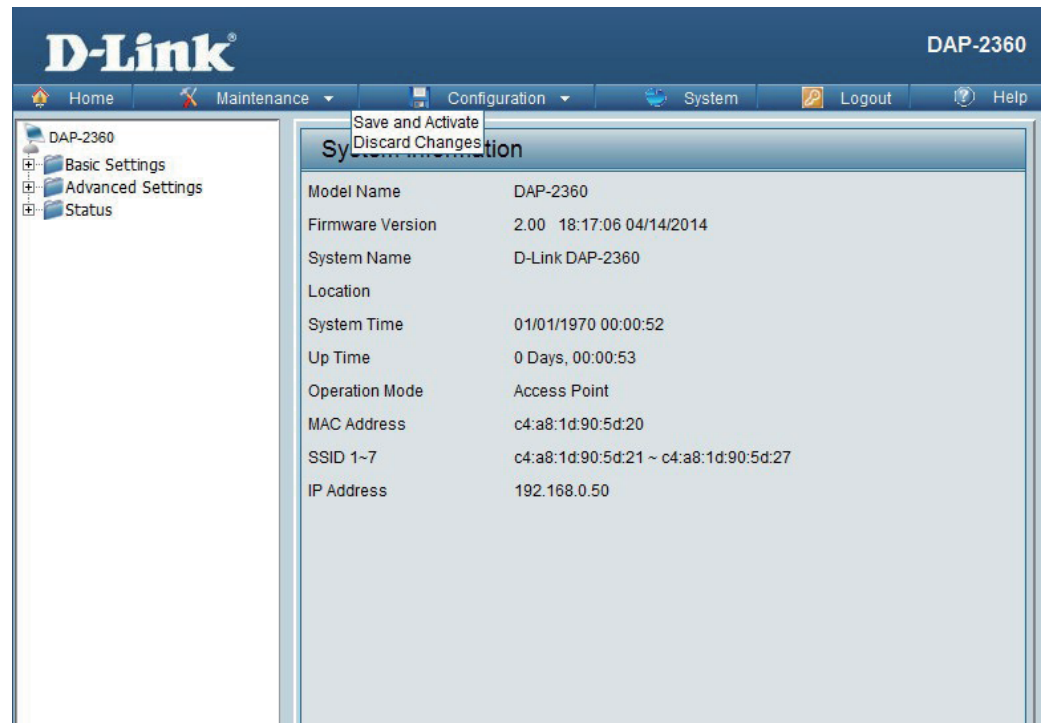


System System Settings

- Restart the Device:**

Click **Restart** to restart the DAP-2360.
- Restore to Factory Default Settings:**

Click **Restore** to restore the DAP-2360 back to factory default settings.

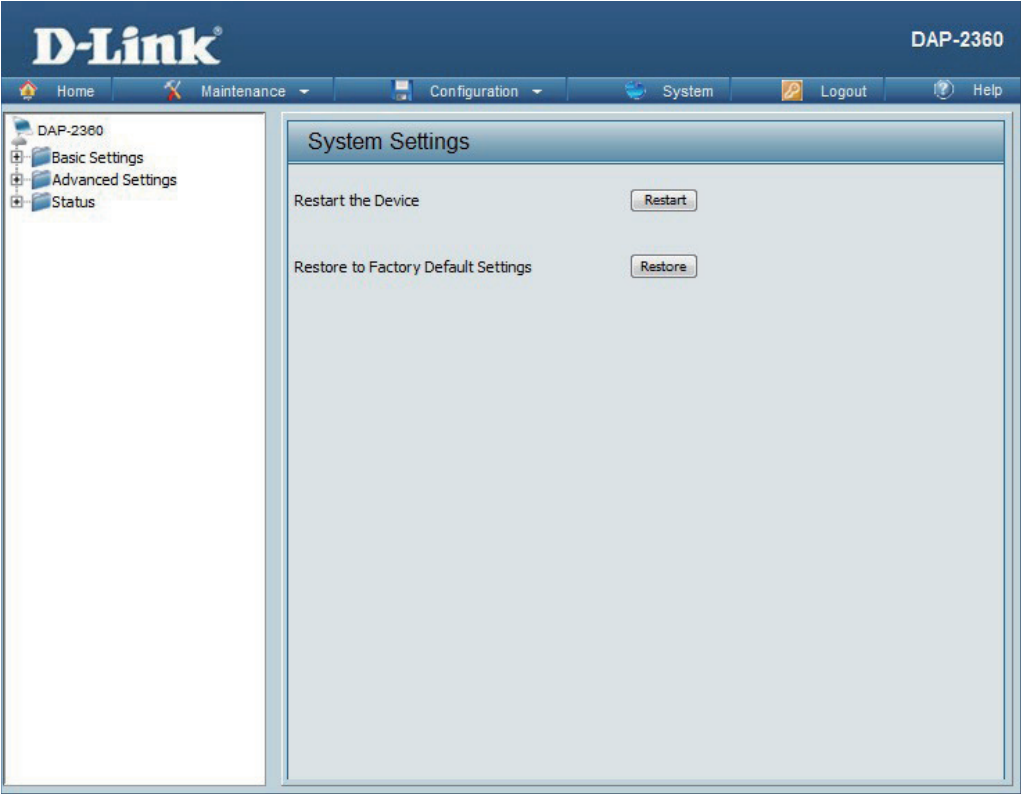

Help

Help: Scroll down the Help page for topics and explanations.

Basic Settings

Wireless Settings

Allow you to change the wireless settings to fit an existing wireless network or to customize your wireless network.

Wireless Band
Operating frequency band. Choose 2.4GHz for visibility to legacy devices and for longer range.

Mode
Select a function mode to configure your wireless network. Function modes include Access Point, WDS (Wireless Distribution System) with AP, WDS, Wireless Client. Function modes are designed to support various wireless network topology and applications.

Network Name (SSID)
Also known as the Service Set Identifier, this is the name designated for a specific wireless local area network (WLAN). The factory default setting is "dlink". The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

SSID Visibility
Indicate whether or not the SSID of your wireless network will be broadcasted. The default value of SSID Visibility is set to "Enable," which allow wireless clients to detect the wireless network. By changing this setting to "Disable," wireless clients can no longer detect the wireless network and can only connect if they have the correct SSID entered.

Auto Channel Selection
If you check Auto Channel Scan, everytime when AP is booting up, the AP will automatically find the best channel to use. This is enabled by default.

Channel
Indicate the channel setting for the DAP-2360. By default, the AP is set to Auto Channel Scan. The Channel can be changed to fit the channel setting for an existing wireless network or to customize the wireless network.

Channel Width
Allows selection of the channel width you would like to operate in.20 MHz and Auto 20/40MHz allow both 802.11n and non-802.11n wireless devices on your network when the wireless mode is Mixed 802.11 b/g/n in 2.4G.802.11n wireless devices are allowed to transmit data using 40 MHz when the channel width is Auto 20/40 MHz

Authentication
For added security on a wireless network, data encryption can be enabled. There are several available Authentications type can be selected. The default value for Authentication is set to "Open System".

Open System
For Open System authentication, only the wireless clients with the same WEP key will be able to communicate on the wireless network. The Access Point will remain visible to all devices on the network.

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DAP-2360. Read the following descriptions if you are having problems. (The examples below are illustrated in Windows® XP. If you have a different operating system, the screenshots on your computer will look similar to the following examples.)

1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link access point (192.168.0.50 for example), you are not connecting to a website on the Internet nor do you have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
 - Microsoft Internet Explorer® 7.0 and higher
 - Mozilla Firefox 3.5 and higher
 - Google™ Chrome 20 and higher
 - Apple Safari 5.0 and higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.
- Disable any internet security software running on the computer. Software firewalls such as Zone Alarm, Black Ice, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:

- Go to **Start > Settings > Control Panel**. Double-click the **Internet Options** icon. From the **Security** tab, click the button to restore the settings to their defaults.
 - Click the **Connection** tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click **OK**.
 - Go to the **Advanced** tab and click the button to restore these settings to their defaults. Click **OK** three times.
 - Close your web browser (if open) and open it.
- Access the web management. Open your web browser and enter the IP address of your D-Link access point in the address bar. This should open the login page for your the web management.
 - If you still cannot access the configuration, unplug the power to the access point for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

2. What can I do if I forgot my password?

If you forgot your password, you must reset your access point. Unfortunately, this process will change all your settings back to the factory defaults.

To reset the access point, locate the reset button (hole) on the rear panel of the unit. With the access point powered on, use a paperclip to hold the button down for 10 seconds. Release the button and the access point will go through its reboot process. Wait about 30 seconds to access the access point. The default IP address is 192.168.0.50. When logging in, the username is **admin** and leave the password box empty.

Networking Basics

Check your IP address

After you install your network adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.


Click on **Start > Run**. In the run box type *cmd* and click **OK**.

At the prompt, type *ipconfig* and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

If you are connecting to a wireless network at a hotspot (e.g. hotel, coffee shop, airport), please contact an employee or administrator to verify their wireless network settings.

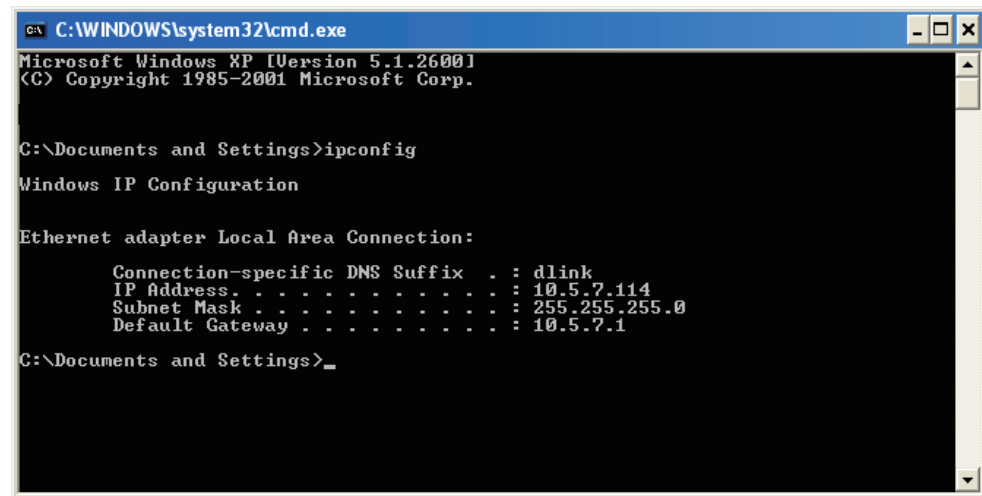

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address. . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>_
```

Statically Assign an IP address

If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

Step 1

Windows® 2000: Click on **Start > Settings > Control Panel > Network Connections**

Windows® XP: Click on **Start > Control Panel > Network Connections**

Windows Vista®: Click on **Start > Control Panel > Network and Internet > Network and Sharing Center > Manage network connections**

Step 2

Right-click on the **Local Area Connection** which represents your network adapter and select **Properties**.

Step 3

Highlight **Internet Protocol (TCP/IP)** and click **Properties**.

Step 4

Click **Use the following IP address** and enter an IP address that is on the same subnet as your network or the LAN IP address on your router.


Example: If the router's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your router (192.168.0.1).

Set Primary DNS the same as the LAN IP address of your router (192.168.0.1). The Secondary DNS is not needed or you may

enter a DNS server from your ISP.

Step 5

Click **OK** twice to save your settings.

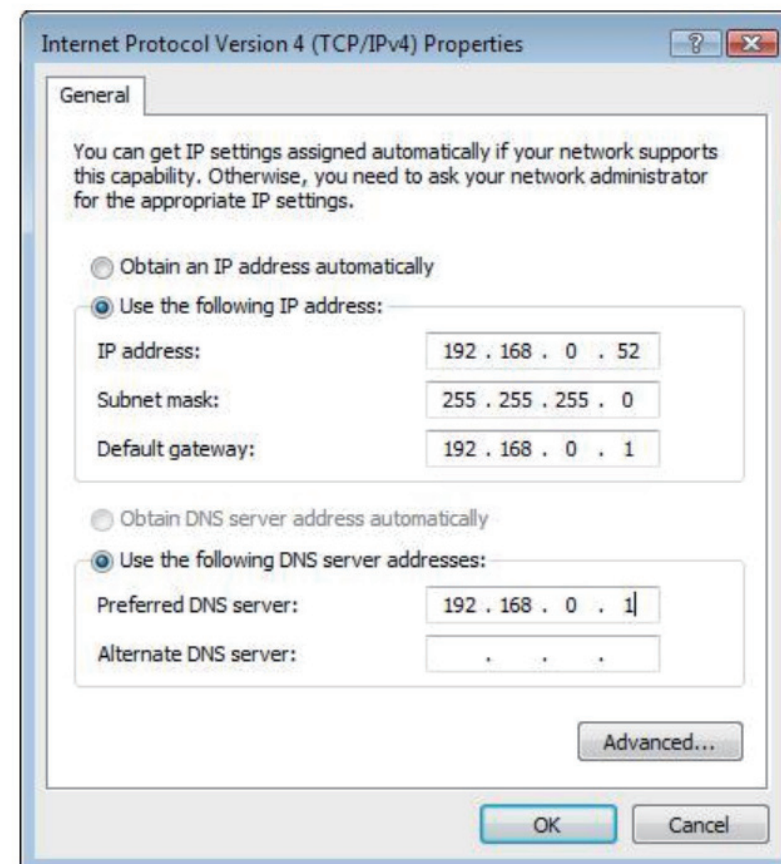

Technical Specifications

Standards

- IEEE 802.11b
- IEEE 802.11g
- IEEE 802.11n
- IEEE 802.3
- IEEE 802.3u
- IEEE 802.3af

Network Management

- Web Browser interface
HTTP
Secure HTTP (HTTPS)
- Central WiFiManager
- SNMP Support
Private MIB
- Command Line Interface
Telnet
Secure SSH Telnet

Data Rates*

- For 802.11b:
- 11, 5.5, 2, and 1 Mbps
- For 802.11g:
- 54, 48, 36, 24, 18, 12, 9, and 6 Mbps
- For 802.11n:
- HT20/HT40
- 144.4/300, 130/270, 117/243, 104/216, 78/162, 66/135, 58.5/121.5, 52/108, 39/81, 26/54, 19.5/40.5, 12/27, and 6.5/13.5 Mbps

Security

- WPA™ Personal/Enterprise
- WPA2™ Personal/Enterprise
- 802.1x
- WEP™ 64-/128-bit
- SSID Broadcast Disable
- MAC Address Access Control

Wireless Frequency Range

- 2.4 to 2.4835 GHz**

Operating Voltage

- 48V DC +/- 10% for PoE or 12V/1A

Radio and Modulation Type

- For 802.11g/n:
- BPSK, QPSK, 16QAM, and 64QAM with OFDM
- For 802.11b:
- DQPSK, DBPSK, DSSS, and CCK

Operating Frequency**

- For 802.11b/g:
- 2.4 ~ 2.4835 GHz
- For 802.11n:
- 2.4 GHz Band: 2.4 ~ 2.4835 GHz

* Maximum wireless signal rate derived from IEEE Standard 802.11g and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range.

Dipole Antenna

- 5dBi Gain @2.4 GHz

Transmit Output Power

- 26dBm @ 2.4GHz

Max Power Consumption

- Max. 8W with 12V/DC
- Max. 9W with PoE

LEDs

- Power
- LAN
- 2.4 GHz

Temperature

- Operating: 0°C to 40°C
- Storing: -20°C to 65°C

Humidity

- Operating: 10%~90% (non-condensing)
- Storing: 5%~95% (non-condensing)

Certifications

- FCC Class B
- IC
- UL
- WiFi

Dimensions

- L = 188 mm
- W = 166 mm
- H = 37 mm

**Please note that operating frequency ranges vary depending on the regulations of individual countries and jurisdictions.

Contacting Technical Support

U.S. and Canadian customers can contact D-Link technical support through our web site or by phone.

Before you contact technical support, please have the following ready:

- Model number of the product (e.g. DAP-2360)
- Hardware Revision (located on the label on the bottom of the access point (e.g. rev A1))
- Serial Number (s/n number located on the label on the bottom of the access point).

You can find software updates and user documentation on the D-Link website as well as frequently asked questions and answers to technical issues.

For customers within the United States:

Phone Support:
(877) 354-6555

Internet Support:
<http://support.dlink.com>

For customers within Canada:

Phone Support:
(877) 354-6560

Internet Support:
<http://support.dlink.ca>

Warranty

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited Warranty:

- Only to the person or entity that originally purchased the product from D-Link or its authorized reseller or distributor, and
- Only for products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, or addresses with an APO or FPO.

Limited Warranty:

D-Link warrants that the hardware portion of the D-Link product described below ("Hardware") will be free from material defects in workmanship and materials under normal use from the date of original retail purchase of the product, for the period set forth below ("Warranty Period"), except as otherwise stated herein.

- Hardware (excluding power supplies and fans): One (1) year
- Power supplies and fans: One (1) year
- Spare parts and spare kits: Ninety (90) days

The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund the actual purchase price paid. Any repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement hardware need not be new or have an identical make, model or part. D-Link may, at its option, replace the defective Hardware or any part thereof with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement hardware will be warranted for the remainder of the original Warranty Period or ninety (90) days, whichever is longer, and is subject to the same limitations and exclusions. If a material defect is incapable of correction, or if D-Link determines that it is not practical to repair or replace the defective Hardware, the actual price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware or part thereof that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty:

D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Software Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Software Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund the portion of the actual purchase price paid that is attributable to the Software. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Replacement Software will be warranted for the remainder of the original Warranty Period and is subject to the same limitations and exclusions. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty:

The Limited Warranty provided hereunder for Hardware and Software portions of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim:

The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same, along with proof of purchase of the product (such as a copy of the dated purchase invoice for the product) if the product is not registered.
- The customer must obtain a Case ID Number from D-Link Technical Support (USA 1-877-453-5465 or Canada 1-800-361-5265), who will attempt to assist the customer in resolving any suspected defects with the product. If the product is considered defective, the customer must obtain a Return Material Authorization ("RMA") number by completing the RMA form. Enter the assigned Case ID Number at <https://rma.dlink.com/> (USA only) or <https://rma.dlink.ca> (Canada only).

- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to D-Link Systems, Inc.
- **USA residents** send to 17595 Mt. Herrmann, Fountain Valley, CA 92708. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link. Return shipping charges shall be prepaid by D-Link if you use an address in the United States, otherwise we will ship the product to you freight collect. Expedited shipping is available upon request and provided shipping charges are prepaid by the customer. D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.
- **Canadian residents** send to D-Link Networks, Inc., 2525 Meadowvale Boulevard Mississauga, Ontario, L5N 5S2 Canada. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via Purolator Canada or any common carrier selected by D-Link. Return shipping charges shall be prepaid by D-Link if you use an address in Canada, otherwise we will ship the product to you freight collect. Expedited shipping is available upon request and provided shipping charges are prepaid by the customer. D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming. RMA phone number: 1-800-361-5265 Hours of Operation: Monday-Friday, 9:00AM – 9:00PM EST

What Is Not Covered:

The Limited Warranty provided herein by D-Link does not cover:

Products that, in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; and Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product.

While necessary maintenance or repairs on your Product can be performed by any company, we recommend that you use only an Authorized D-Link Service Office. Improper or incorrectly performed maintenance or repair voids this Limited Warranty.

Disclaimer of Other Warranties:

EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED “AS-IS” WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.

IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO THE DURATION OF THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability:

TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK’S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NONCONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

Governing Law:

This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This Limited Warranty provides specific legal rights and you may also have other rights which vary from state to state.

Trademarks:

D-Link is a registered trademark of D-Link Corporation/D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

Copyright Statement:

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any

derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice.

Copyright ©2011 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning:

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

802.11g operation of this product in the U.S.A. is firmware-limited to channels 1 through 11.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.

This device and its antennas(s) must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures.

Industry Canada Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device

This device has been designed to operate with an antenna having a maximum gain of 2dBi.

Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50ohms.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the EIRP is not more than required for successful communication.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Caution:

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

Pour les produits disponibles aux États-Unis / Canada du marché, seul le canal 1 à 11 peuvent être exploités. Sélection d'autres canaux n'est pas possible.

This device and its antennas(s) must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with IC multi-transmitter product procedures.

Cet appareil et son antenne (s) ne doit pas être co-localisés ou fonctionnement en association avec une autre antenne ou transmetteur.

IMPORTANT NOTE:

IC Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Registration

Register your product online at registration.dlink.com



Product registration is entirely voluntary and failure to complete or return this form will not diminish your warranty rights.

Version 2.00
May 15, 2014