

DAP-2360
Version 2.02

**AirPremier N
PoE Access Point**

Quick Install Guide

Business Class Networking

Package Contents

- DAP-2360 *AirPremier*® N Plenum-Rated Gigabit PoE Access Point
- Power Adapter
- Mounting Plate
- Ethernet Cable
- Manual and Software on CD-ROM
- Quick Install Guide

Note: Using a power supply with a different voltage than the one included with the DAP-2360 will cause damage and void the warranty for this product. If any of the above items are missing, please contact your reseller.

Minimum System Requirements

- CD-ROM Drive
- Computers with Windows®, Macintosh®, or Linux-based operating systems
- Installed Ethernet Adapter
- Internet Explorer 11, Safari 7, Firefox 28, or Google Chrome 33 or later versions of these browsers

Safety Notice:

Installation and servicing should be done by certified technicians so as to conform to all local codes and prevent voiding your warranty.

Hardware Overview

LEDs




LAN - Solid light when the Ethernet port is connected to a working Ethernet device, such as a router or switch. The light will blink when there is traffic through LAN port.

2.4 GHz - When lit, the wireless function of the access point is working properly. This light will blink when there is wireless traffic.


POWER - The light will blink during boot up. Once solid, the access point is ready.

Installing the Hardware

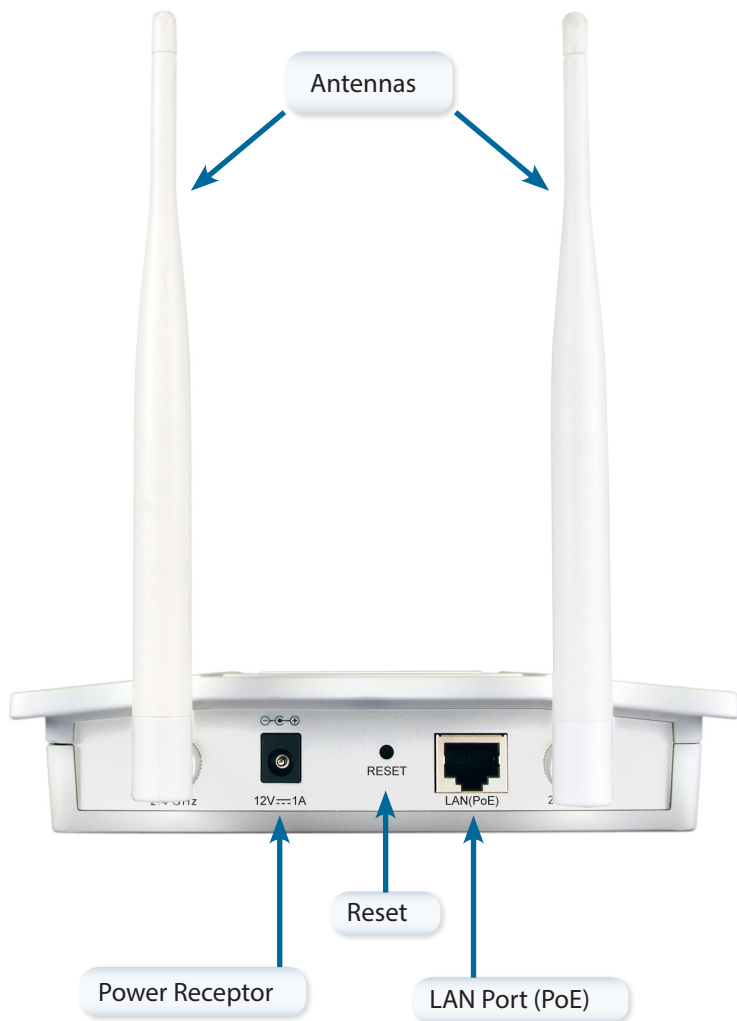


Method 1 - PoE with PoE Switch or Router

1. Connect one end of your Ethernet cable to the LAN (PoE) port on the access point.
2. Connect the other end into one port on a PoE switch or router.

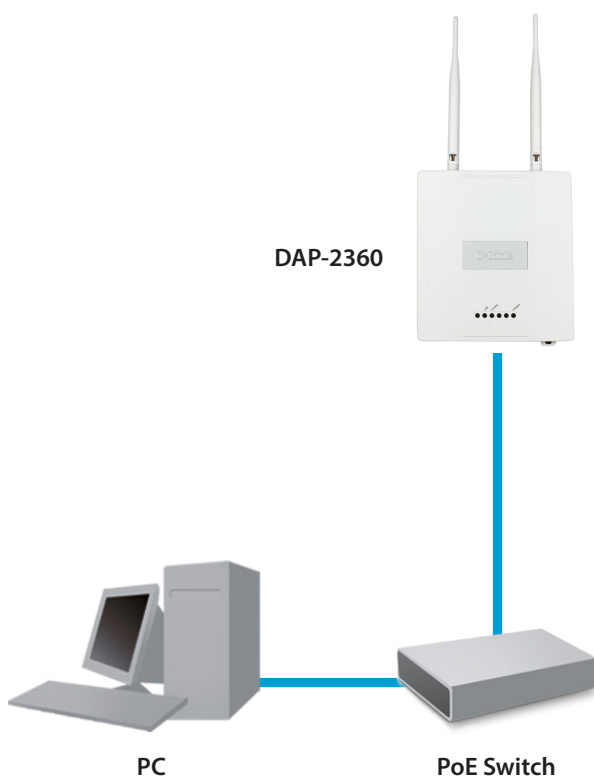


Method 2 - PoE without PoE Switch or Router

1. Connect one end of an Ethernet cable into the Data In port on the PoE base unit and the other end into one port on your switch, router, or computer.
2. Connect one end of an Ethernet cable into the P+Data Out port on the PoE base unit and the other end into the LAN (PoE) port on the Access Point.
3. Use the supplied power adapter. Connect the power adapter to the Power In receptor on the PoE adapter.
4. Connect the power cable to the power adapter and then connect the other end into a power outlet.

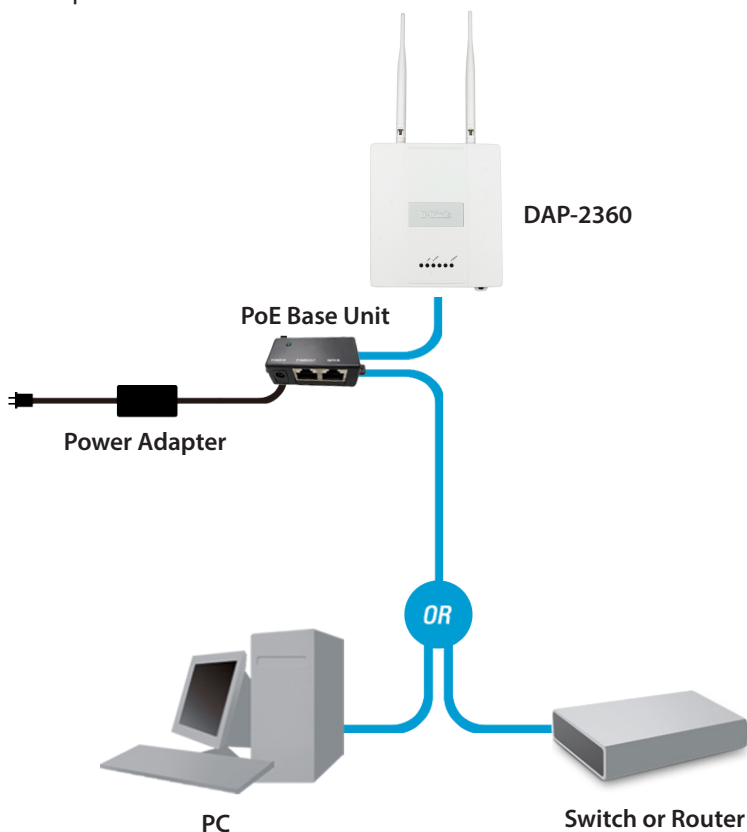

Method 3 - No PoE

1. Connect one end of your Ethernet cable into the LAN (PoE) port and then connect the other end to a switch, router, or computer.
2. Use the supplied power adapter. Connect the power adapter to the Power receptor on the Access Point.
3. Connect the power cable to the power adapter and then connect the other end into a power outlet.

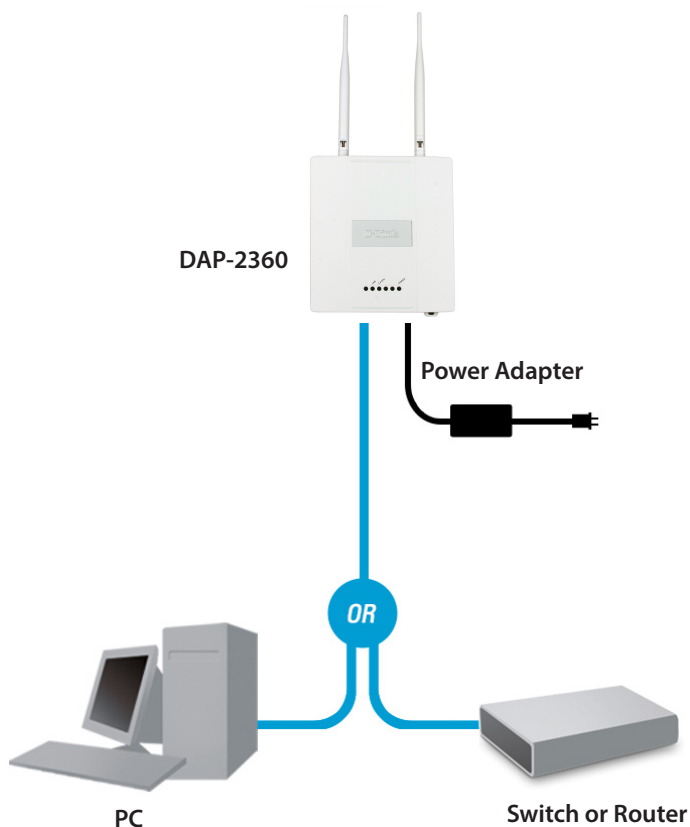

Installation

Power on the access point

To power on the DAP-2360, you can use ONE of the following methods:

1. Connect the supplied power adapter, OR
2. Plug one end of your Ethernet cable into the LAN port of the DAP-2360, and the other end into a port on a PoE switch.

Configure the access point

To set up and manage the DAP-2360, use one of the following methods:

1. Connect the access point and your computer directly via a straight-through Ethernet cable. Manage the access point from the computer.

Ensure your computer is configured with a static IP address in 192.168.0.0/24 subnet.

Launch a web browser, type the default IP address of the access point (<http://192.168.0.50> or <https://192.168.0.50>) and then press Enter.

Log in to the Administration Web pages. The default login information is:

Username: admin

Password: (Leave the password field blank)



2. Connect the access point and your computer to the same switch. Manage the access point from the computer.

Enter 192.168.0.50 in the address field of your browser, which is the default IP address of the access point.

Log in to the Administration Web pages. The default login information is:

Username: admin

Password: (Leave the password field blank)

Configuration


To setup and manage the DAP-2360 from a computer, use one of the following methods:

1. Connect a straight through Ethernet cable between the access point and your computer.
2. Connect the access point to a switch or router and use a computer that is also connected to that switch or router.
3. Please start your web browser program, type the IP address of the device (**http://192.168.0.50** or **https://192.168.0.50**) and press **Enter**. Make sure that the IP addresses of the device and your computer are in the same subnet.




Mounting Plate Assembly


Step 1: Insert provided wall anchors in the wall where the mounting plate will be attached.

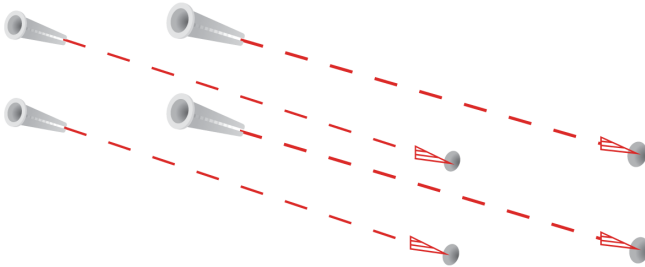

Step 2: Use the provided screws to secure the mounting plate on the wall.

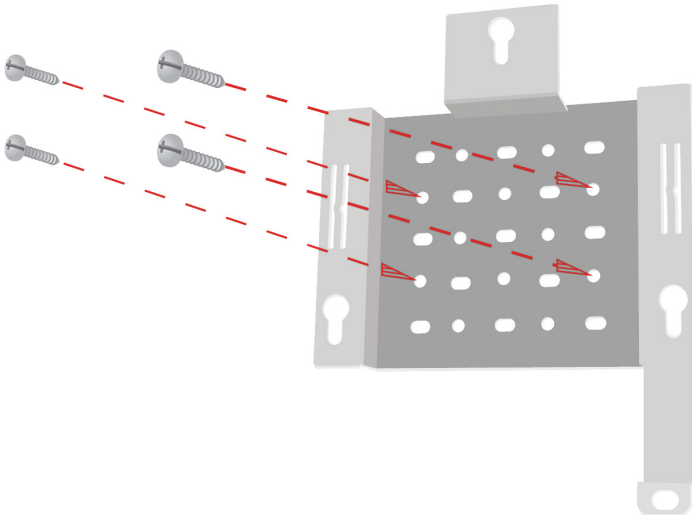


Step 3: Attach the remaining screws securely to the back of the DAP-2360.

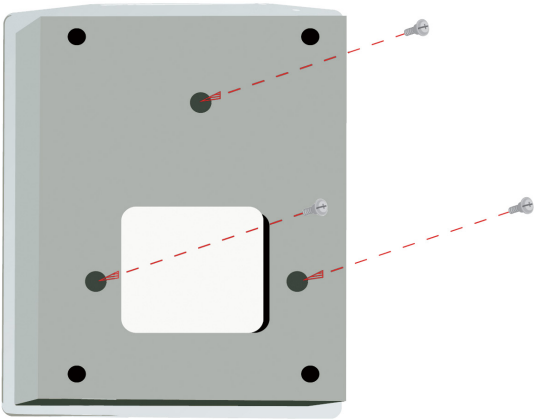

Step 4: Attach the DAP-2360 to the mounting plate.




Step 5: Slide the DAP-2360 down into the grooves on the mounting plate to secure it to the plate.

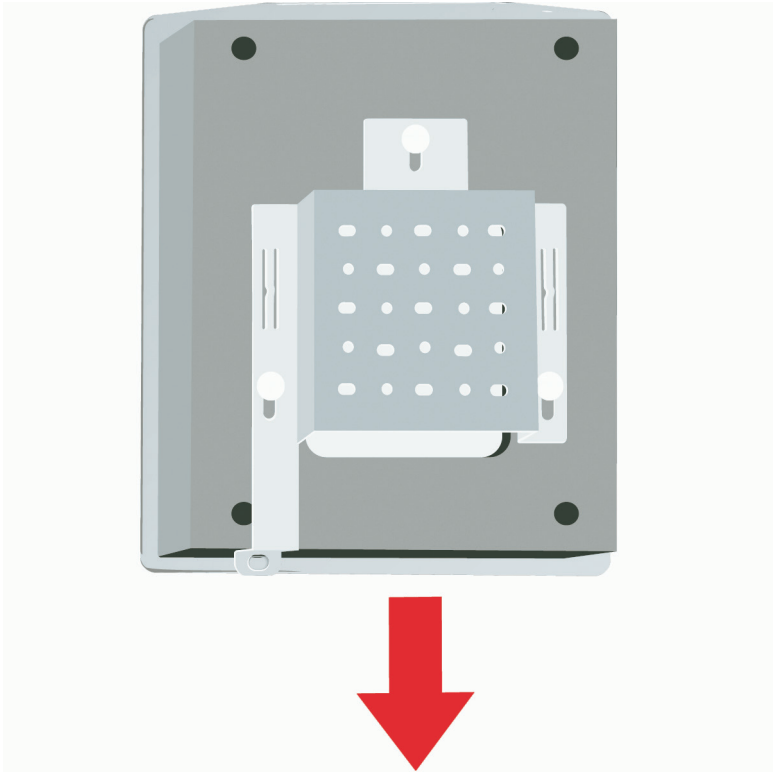

Your Setup is Complete

When you have completed the steps in this Installation Guide and configured your DAP-2360 for your network, your network should look similar to this:

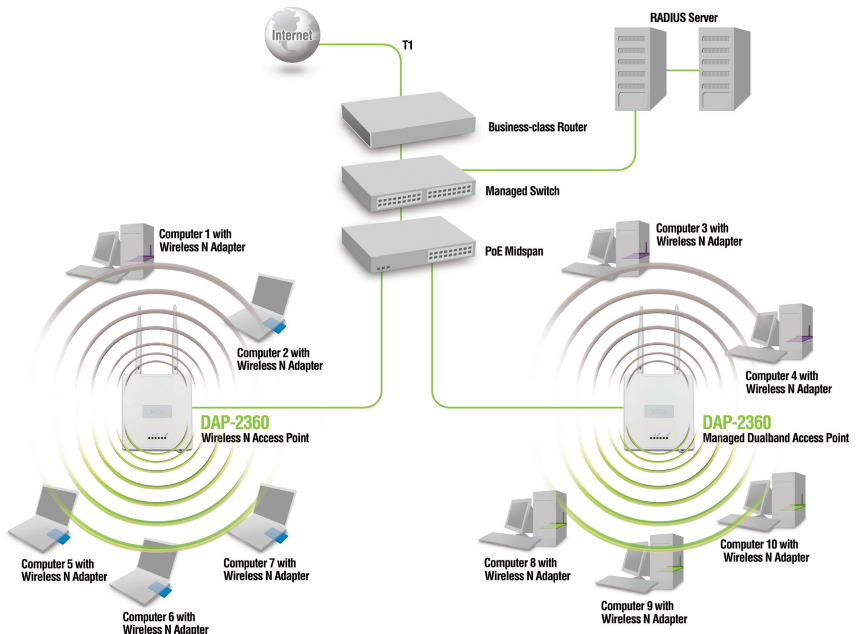

* Maximum Wireless signal rate derived from IEEE 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead lower actual data throughput rate.

Notes

Notes

Technical Support

D-Link's website contains the latest user documentation and software updates for D-Link products. U.S. and Canadian customers can contact D-Link Technical Support through our website or by phone.

United States

Telephone

(877) 354-6555

World Wide Web

<http://support.dlink.com>

Canada

Telephone

(877) 354-6560

World Wide Web

<http://support.dlink.ca>

D-Link®

Version 2.02(US)_130x183

September 5, 2016

6AP2360BQ.03G

Copyright ©2016 D-Link Corporation/D-Link Systems, Inc. All rights reserved. D-Link, the D-Link logo, and AirPremier® are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States and other countries. Other trademarks are the property of their respective owners. All references to speed are for comparison purposes only. Product specifications, size, and shape are subject to change without notice, and actual product appearance may differ from that depicted herein. Visit www.dlink.com for more details.