



Firmware Version: V1.00
Prom Code Version: N/A
Published Date: 2021/02/26

Content:

Upgrading Instructions: 2

New Features:..... 2

Problems Fixed: 2

Known Issues: 2

Related Documentation: 2

Revision History and System Requirement:

Firmware Version	Date	Model	Hardware Version
V1.00	2021/02/26	DCS-4614EK	A1

Upgrading Instructions:

Check and upgrade firmware by FOTA function

1. Assure to connect camera with Internet.
2. Assure the time and date setting is correct.
3. Log-in camera web UI and entry **Setup/Advanced Setup/Camera Configuration/Firmware Upgrade**.
 - (1) Click [Check for Latest Version] and execute [Update Now] to upgrade firmware manually.
 - (2) Enable [Auto Check for Latest Version] or [Auto Update] and set the schedule to check/upgrade firmware automatically.

Upgrade firmware manually

1. Download the firmware from D-Link website.
2. Log-in camera web UI and enter **Setup/Advanced Setup/Camera Configuration/Firmware Upgrade**
3. Click [Browse] and specify the firmware file.
4. Click [Upload] to upgrade the firmware.

The camera will reboot automatically when the upgrade completes.

New Features:

Fireware Version	New Features
V1.00	Initial released

Problems Fixed:

Firmware Version	Problems Fixed

Known Issues:

Firmware Version	Known Issues
V1.00	Not support TOSHIBA 256G SD card (Product no. M203).

Related Documentation:

N/A