




## Quick Install Guide

### Full HD Mini Pan & Tilt Dome Network Camera

This document will guide you through the basic installation process for your new D-Link Network Camera.

**DCS-5615**

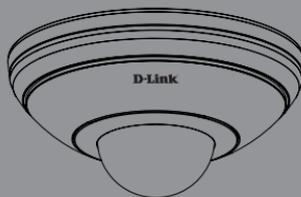

Quick Installation Guide  
Installationsanleitung  
Guide d'installation  
Guía de instalación  
Guida di Installazione  
Краткое руководство по установке  
Guia de Instalação Rápida  
快速安裝指南  
Petunjuk Pemasangan Cepat

Documentation also available  
on CD and via the D-Link  
Website

---

# DCS-5615

## Quick Install Guide

This install guide provides basic instructions for installing the DCS-5615 Network Camera. For additional information about how to use the camera, please see the User Manual, which is available on the CD included in this package or from the D-Link Support website.

### Installation Steps


1. Verify the package contents against the list below.
2. Hardware Overview
3. Hardware Installation
4. Configuration with Wizard
5. Adjusting the Viewing Angle
6. Attaching the Enclosure

### 1. Package Contents


- DCS-5615 Network Camera
- User Manual and Software on CD-ROM
- Quick Install Guide
- Mounting Kit
- Ethernet Extension
- Power Adapter
- CAT5 Ethernet Cable
- Alignment Sticker

If any of the above items are missing, please contact your reseller.

## 2. Hardware Overview

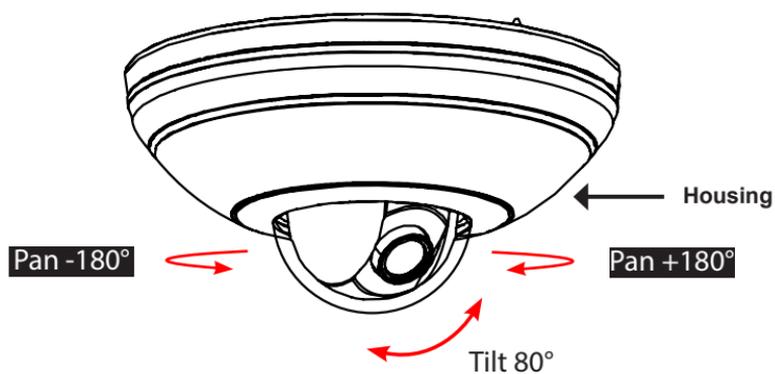

## 2. Hardware Overview

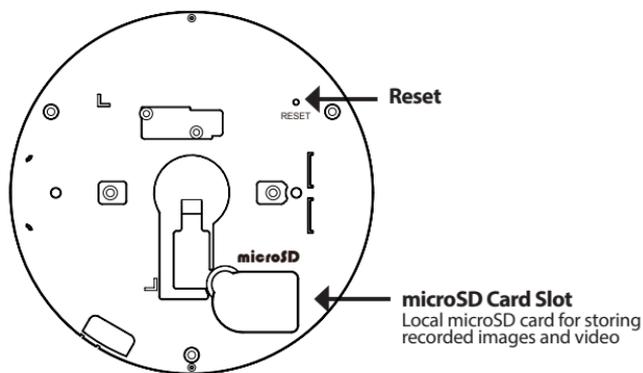

### DC Power


Connects to the 12 V DC power adapter to power the camera

### DI connector

DI connectors provide a physical interface to receive digital signals from a variety of external devices


### Ethernet Jack

RJ-45 connector is for Ethernet, and can also be used to power the camera using Power over Ethernet

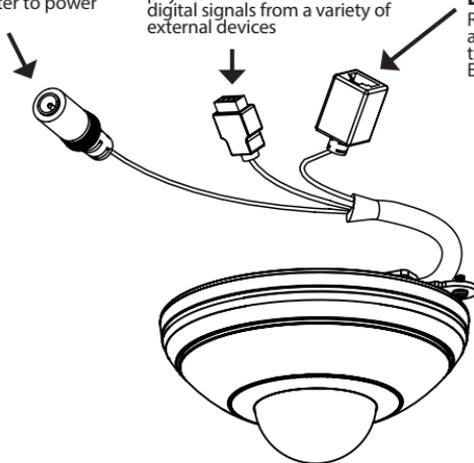


### 3. Hardware Installation


Open the microSD card plastic cover at the bottom.

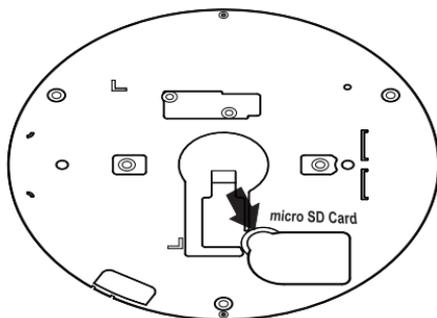

Slip the card socket forward and up.

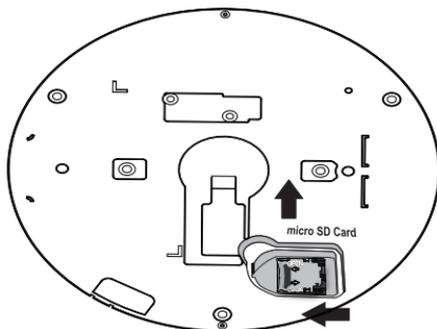



Insert a microSD card, close the the cover, and push it back to secure the installation. Install the plastic cover by pressing it back to its original position.

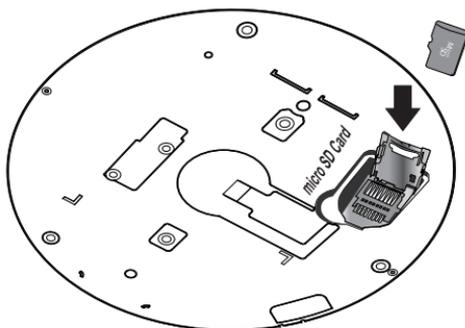

### 3. Hardware Installation


1. Locate an area on the ceiling or wall which is capable of supporting the weight of the camera.
2. Attach the alignment sticker to the intended location on the ceiling or wall.
3. Drill three pilot holes where the holes of the alignment sticker are located.
4. Insert the supplied plastic anchors into the drilled holes, and install "Plate A" with three screws.
5. Attach "Plate B" to the bottom of the camera and secure it with two screws.
6. Slide the Camera into "Plate A"
7. Secure the camera to the "Plate A" with screw.

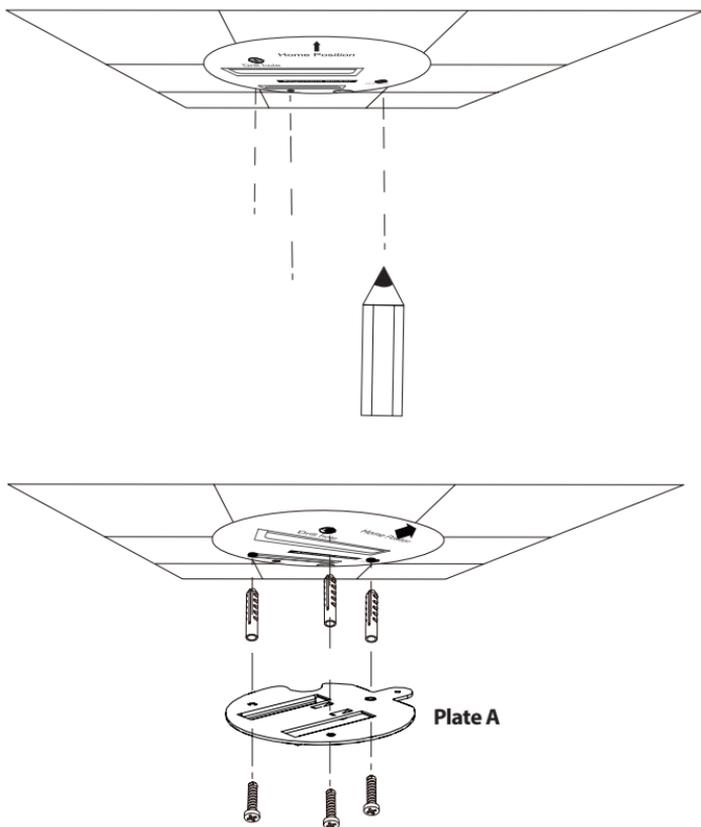

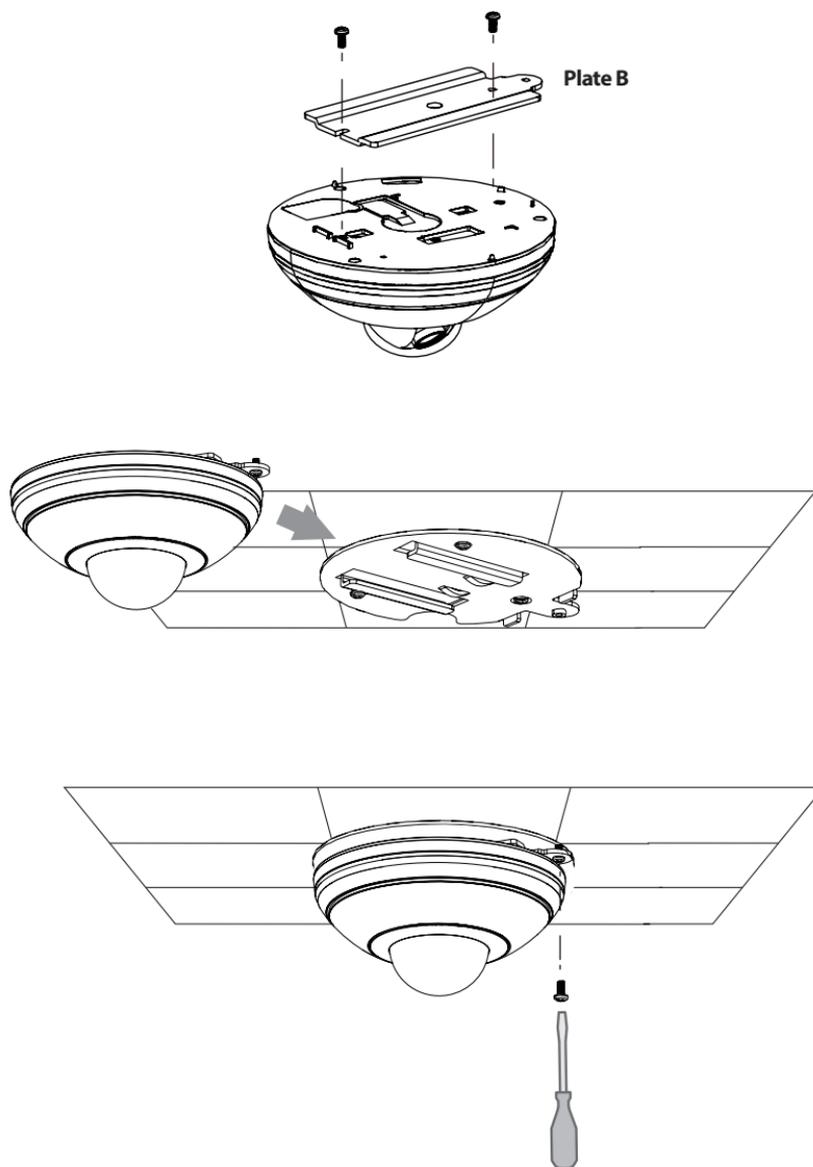


### General Connection (without PoE)

Connect the network camera to a switch or router via an Ethernet cable.  
Connect the supplied power adapter from the camera to a power outlet.

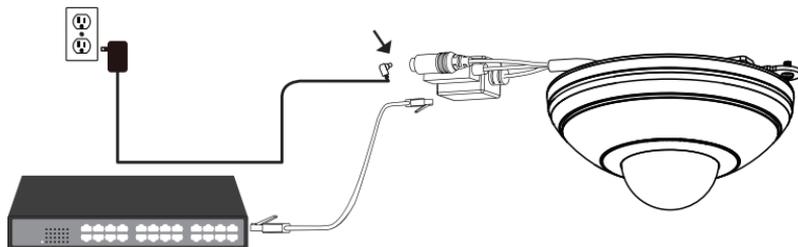

### Connection with a PoE Switch

If using a PoE switch, connect the network camera to the switch via an Ethernet cable, which will enable the transmission of both power and data over a single cable.

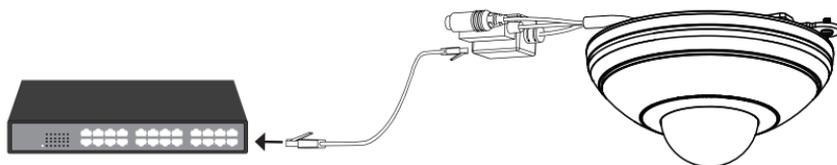

## 4. Configuration with Wizard

Insert the DCS-5615 CD into your computer's CD-ROM drive to begin the installation. If the Autorun function on your computer is disabled, or if the D-Link Launcher fails to start automatically, click **Start > Run**. Type **D:\autorun.exe**, where **D:** represents the drive letter of your CD-ROM drive.

Click **Setup Wizard** to begin the installation.



The *InstallShield Wizard* window will open.


Click **Next** to continue.




Click **Yes** to accept the License Agreement.



To start the installation process, click **Next**.

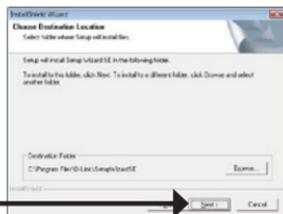


**Note:** The installation may take several minutes to finish.

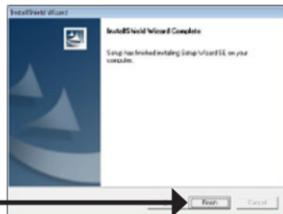

Click **Finish** to complete the installation.

Click on the **D-Link Setup Wizard SE** icon that was created in your *Windows Start* menu.

**Start > D-Link > Setup Wizard SE**

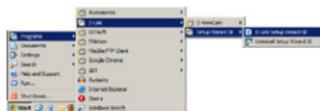


The *Setup Wizard* will appear and display the *MAC Address* and *IP Address* of your camera(s). If you have a DHCP server on your network, a valid *IP Address* will be displayed. If your network does not use a DHCP server, the network camera's default static IP **192.168.0.20** will be displayed.

Click the **Wizard** button to continue.



Enter the **Admin ID** and **Password**. When logging in for the first time, the default **Admin ID** is **admin** with the **Password** left blank.

Click **Next**, to proceed to the next page.

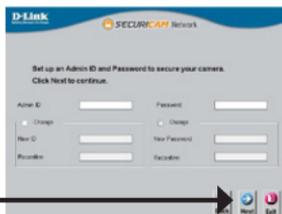

Select **DHCP** if your camera obtains an IP address automatically when it boots up from your router or DHCP server. Select **Static IP** if you want to manually assign IP settings to your camera.

Click **Next**, to proceed to the next page.



Take a moment to confirm your settings and click **Restart**.



## Viewing Camera via Web Browser

Click on the **D-Link Setup Wizard SE** icon that was created in your *Windows Start* menu.

**Start > D-Link > Setup Wizard SE**



Select the camera and click the **Link** button to access the web configuration.

The *Setup Wizard* will automatically open your web browser to the IP address of the camera.



Enter **admin** as the default **username** and leave the **Password** blank. Click **OK** to continue.



This section shows your camera's *Live Video*. You can select your video profile and view or operate the camera. For additional information about web configuration, please refer to the User Manual included on the CD-ROM or the D-Link Support website.



## Additional Information

Additional help is available through our offices listed at the back of the User's Guide or online. To know more about D-Link products or marketing information, please visit the website <http://www.dlink.com>.

## Warranty Information

Please visit <http://warranty.dlink.com/> for warranty information for your region.