

D-Link®

HIGH SPEED DOME NETWORK CAMERA



Quick Installation Guide+

NETWORK CAMERA

Quick Installation Guide

DCS-6815/6817/6818

HIGH SPEED DOME NETWORK CAMERA

Package Contents

If any of the items are missing, please contact your reseller.



Dome Network Camera



Optical Cover



Software CD




Data Cable for Video, Alarm, and Power (AC 24V)



Waterproof Collar



Lubricant

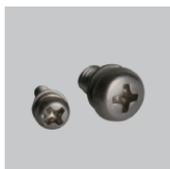

Screws



Power Cable



Power Adapter



Mini Pendant

System Requirements

- CPU: Pentium 4 1.4GHz or above
- Hard Disk: 40GB or above
- Memory: 256MB or above
- Browser: Internet Explorer 6.0 or above
- Video Resolution: SVGA or XGA (1024x768 or above)

Hardware Overview

Mounting Point: This part of the cap is used to mount the dome camera enclosure.

Cap: This cap covers the Connection Panel.

Optical Cover: This clear dome protects the camera apparatus from.




Dome Camera

Hardware Overview

Reset Button:The button can be used to reset the system or restore the factory default settings. To reset, simply press and hold the button for 5 seconds.

Data Socket:This 22 pin socket accepts the power/data cable.

PIN Block:Pin 5 can be used to perform a mechanical reset.

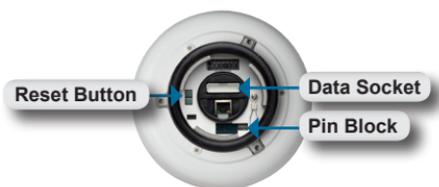

Connections Panel

Hardware Installation

STEP 1

Unpack the DCS-6815/6817/6818 and remove the dome camera unit.



STEP 2

Rotate the cap and remove it from the camera body.



STEP 3

Remove the protective cover and PE sheet.



STEP 4

Apply some lubricant on the cover's waterproof seal to make the installation process smoother. Attach the optical cover to the camera body.

The small protrusions on the cover must align with the four holes on the camera body.



STEP 5

Gently press down the dome cover with two hands on the side of it.

Warning: DO NOT press down on the optical cover. This might cause damage to the camera.



STEP 6

Screw the dome cover and body together.

Hardware Installation

STEP 7

Insert the data cable into the opening on the cap.



STEP 8

Connect the 22-pin connector to the slot on the camera enclosure. The connector will lock into place.



STEP 9

Connect the power cable to the power adapter.



STEP 10

Connect the power adapter's 3-pin connector to the camera's 3-pin power connector.



STEP 11

Connect one end of the CAT 5 Ethernet cable to the RJ-45 connector of the camera enclosure, and the other end of the cable to your network.



STEP 12

Plug the power cable into a wall outlet.


Software Installation

Insert the DCS-6815/6817/6818 CD into the CD-ROM drive. If the CD Autorun function does not automatically start on your computer, click Windows® Start > Run. In the Run command box type "**D:lautorun.exe**", where D: represents the drive letter of your CDROM. If it does start, proceed to the next screen.


Click **Setup Wizard**



Click **Next** to continue.

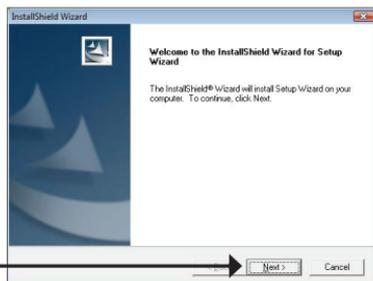

Click **Yes** to accept the License Agreement.

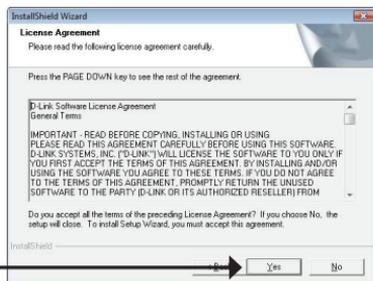


To start the installation click **Next**.

Note: The installation may take several minutes to complete.



Click **Finish** to complete the installation.

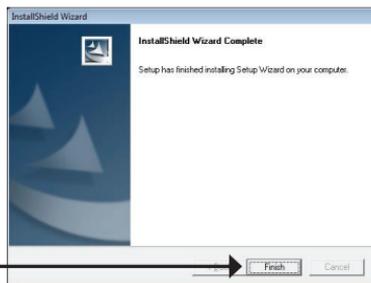

Click **Finish**

Configuring Your Camera with the Installation Wizard

Click on the **D-Link Setup Wizard SE** icon that was created in your Windows Start menu.

The Setup Wizard will appear and show the MAC address of the DCS-6815/6817/6818 and an IP Address (which may or may not be correct depending on what you have your DCS-6815/6817/6818 connected to). If you have a DHCP server on your network, there will be a valid IP Address displayed here.

Note: A DHCP server is a device that supplies IP addresses to your network devices automatically.

Your camera's IP Address will be displayed here along with its corresponding MAC Address.

Click the **Wizard** button



Enter the admin ID and password.

Note: The default Admin ID is admin with the password left blank.

Click **Next**



Select DHCP if you want to obtain a new IP address every time the camera boots up, or select static IP to use the same IP address at each boot up.

D-Link
SECURICAM Network

Set IP Address

DHCP
 Static IP

IP Address: 192.168.1.169
Subnet Mask: 255.255.255.0
Default Gateway: 192.168.1.1
Primary DNS: 0.0.0.0
Secondary DNS: 0.0.0.0

Back Next Exit

Click Next

Viewing Your Internet Camera

Click the button labeled **Link** to access the web configuration. The Setup Wizard will automatically open your web browser to the IP address of the DCS-6815/6817/6818, in this example it is: <http://192.198.0.20>. Your camera may have a different IP Address.

D-Link
SECURICAM Network

Wizard
Search
Link
About
Exit

MAC Address	Current IP Address	Device Name
00:8:11:11:86:88	192.168.0.20	DCS-6815

Click Link

Enter **admin** as the default username and leave the password blank. Click **OK** to continue.

Connect to 192.168.1.169

The server 192.168.0.102 at DCS-6815 requires a username and password.

Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection).


User name: admin
Password:
 Remember my password

OK Cancel

Click OK

This section shows your camera's live video. You can control your settings using the buttons below. For more information on using the web configuration, please refer to the user manual.

Install the **ActiveX** control to view live video.

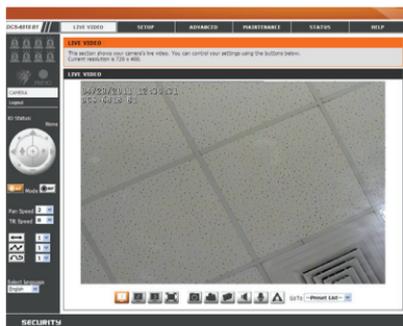

TECHNICAL SUPPORT

United States: Website: <http://support.dlink.com> Phone: (877) 354-6555

Canada: Website: <http://support.dlink.ca> Phone: (877) 354-6560

D-Link[®]



Ver. 1.20(US)
2011/09/23