



DIR-880L



**Wireless AC1900
Dual Band Gigabit Cloud Router
Quick Install Guide**

D-Link®

Package Contents



DIR-880L Dual Band Gigabit Cloud Router with External Antennas



Power Adapter



Ethernet Cable



Wi-Fi Configuration Card



Quick Install Guide

If any of the above items are missing, please contact your reseller.

Minimum Requirements

Network Requirements:

- An Ethernet-based broadband modem

Web-based Configuration Requirements

Computer with the following:

- Windows® or Mac OS® X operating system
- An installed Ethernet adapter or wireless adapter

Supported Browsers:

- Internet Explorer® 7 or higher, Safari® 5 or higher*, Firefox® or Chrome™

 
Make sure you have the latest version of Java installed. Visit **www.java.com** to download the latest version.

***Note:** We recommend Internet Explorer® 11 and Safari® 7 for best performance.

mydlink Requirements

- For mydlink and mydlink app requirements refer to:
<http://www.mydlink.com>

Hardware Overview

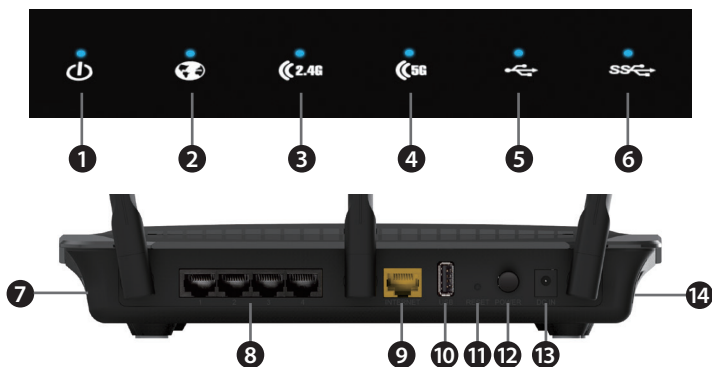


1	Power LED	A solid blue light indicates a proper connection to the power supply. The light will be solid orange during boot-up.
2	Internet LED	A solid blue light indicates a connection to the Internet port. If the LED is orange, the connection is good but the router cannot connect to the Internet.
3	2.4G LED	A solid blue light indicates the 2.4GHz wireless function is working properly. During the WPS process, this light will blink quickly. When used in Bridge mode, the light will blink slowly when successfully connected to a wireless device.
4	5G LED	A solid blue light indicates the 5GHz wireless function is working properly. During the WPS process, this light will blink quickly. When used in Bridge mode, the light will blink slowly when successfully connected to a wireless device.
5	USB LED	A solid blue light indicates a USB 2.0 device is connected.
6	SS USB LED	A solid blue light indicates a USB 3.0 device is connected.
7	WPS Button	Press to start the WPS process. The 2.4G or 5G LED will blink fast, depending on which band the device is connecting with.
8	LAN Ports (1-4)	Connect Ethernet devices such as computers, switches, and game consoles.
9	Internet Port	Connect a broadband modem to this port using an Ethernet cable.
10	USB 2.0 Port	Connect a USB flash drive to share content throughout your network. Port supports USB 2.0 devices.
11	Reset Button	Press and hold the reset button with a paper clip for six seconds to reset the router to the factory default settings.
12	Power Button	Press to power the router on and off.
13	Power Port	Connect the supplied power adapter.
14	USB 3.0 Port	Connect a USB flash drive to share content throughout your network. Port supports USB 3.0 devices.

Before you Start


- **Users with DSL providers** - If you are using a PPPoE connection, you will need your PPPoE user name and password. If you do not have this information, contact your Internet provider. Do not proceed until you have this information.
- **Users with Cable providers** - Make sure you unplug the power to your modem. In some cases, you may need to turn it off for up to 5 minutes.
- **Advanced Users** - If your ISP provided you with a modem/router combo, you will need to set it to "bridge" mode so the DIR-880L router can work properly. Please contact your ISP or refer to the user manual for your modem/router device.

Connect your Router

 - 1 Unplug the power to your DSL or Cable modem.

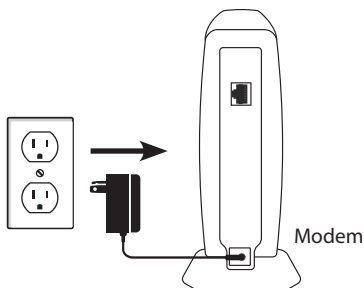


 - 2 Connect an Ethernet cable from the Internet port of the router to the Ethernet port on your DSL or Cable modem.

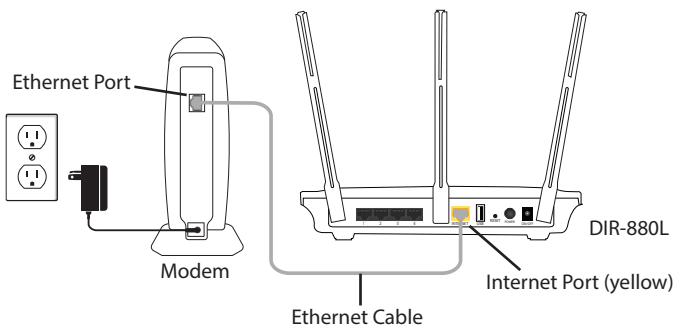


3

 Connect another Ethernet cable from the Ethernet port on your computer to one of the LAN ports on the router.

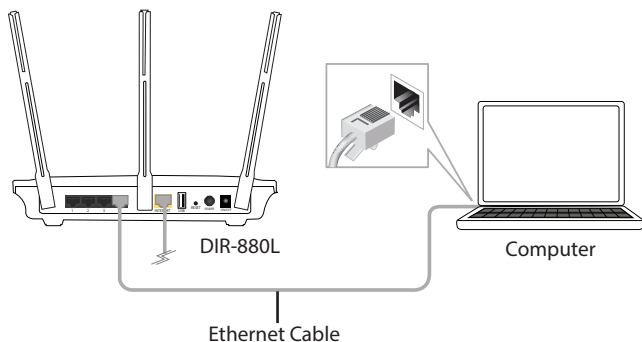


4

 Plug the power back into your DSL or cable modem. Please wait about one minute before continuing.

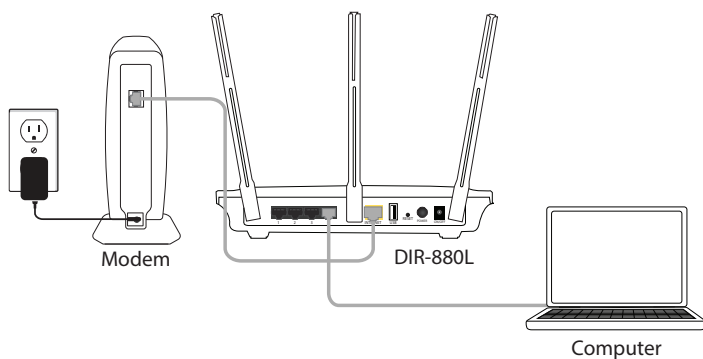

 - 5 Plug the power adapter into your router and connect to an available power outlet or surge protector. If the Power LED does not light up, press the Power button on the back of the router.

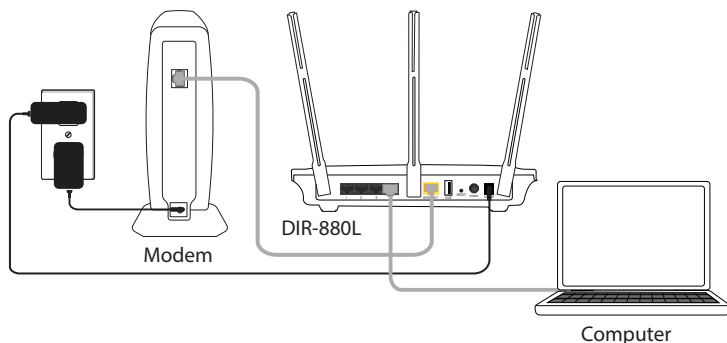

- 6 After the router has powered up, verify that the Power (blue) and Internet (blue or orange) LEDs are both lit. Proceed with router configuration.

 
Configuration

There are two ways to configure your router:


- A. **Web Browser** - Use a web browser from your computer.
- B. **QRS Mobile app** - Use a mobile device with the D-Link QRS Mobile app. Refer to the *QRS Mobile Setup* section for more information.

A. Web Browser Configuration


- 1 Open a web browser (e.g., Internet Explorer, Chrome, Firefox, or Safari) and enter **[http://dlinkrouter.local./](http://dlinkrouter.local/)** or the IP address of the router (**<http://192.168.0.1>**).

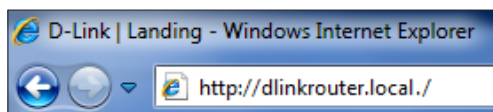

 
- 2 When the Welcome screen appears, click **Next** to continue.

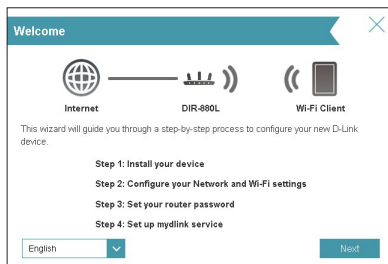

 - 3 The router will automatically detect your Internet connection type. If not, then select your Internet connection and click **Next** to continue.

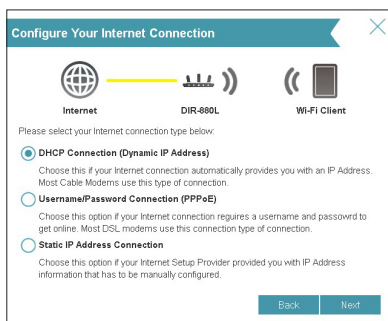

 - 4 DSL (PPPoE) users enter your PPPoE user name and password supplied by your ISP. Click **Next** to continue.

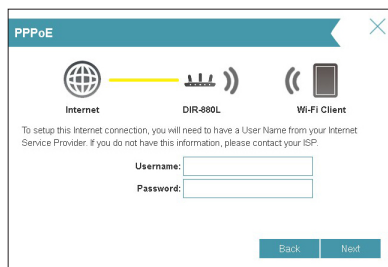

- 5 For both the 2.4GHz and 5GHz bands, create a name for your Wi-Fi Network and a password. Your wireless devices (i.e., tablets, smartphones, and laptops) will need to have this information entered to be able to connect to your wireless network. Click **Next** to continue.

The image shows a 'Wi-Fi Settings' window with a blue header and a close button in the top right. Below the header is a diagram showing 'Internet' (globe icon) connected to 'DIR-880L' (router icon), which is then connected to a 'Wi-Fi Client' (smartphone icon). Below the diagram, text states: 'To setup a Wi-Fi network you will need to give your Wi-Fi network a name (SSID) and password.' There are two input fields: '2.4GHz Wi-Fi Network Name:' with the value 'dlink-3880' and '5GHz Wi-Fi Network Name:' with the value 'dlink-3880-5GHz'. Below these, text states: 'The Wi-Fi Network Name is up to 32 characters. You will need to join your Wi-Fi network using this Network Name (SSID).' There are two more input fields: '2.4GHz Wi-Fi Password:' with the value '1234567890' and '5GHz Wi-Fi Password:' with the value '1234567890'. Below these, text states: 'The password must contain at least 8 characters. You will need to join your Wi-Fi network using this password.' At the bottom right are 'Back' and 'Next' buttons.

- 6 Continue with the Setup Wizard to finish configuring your DIR-880L router. Once completed, the Internet LED will turn blue indicating that your router is connected to the Internet.

Note: Setting up “mydlink” is optional and not required for the router to function.

Congratulations! You have completed the router installation.

B. QRS Mobile Setup

- 1 Scan the code below or search “QRS Mobile” (App Store or Google Play) to download the QRS Mobile App to your iPhone, iPad, or Android device.



iOS



Android



QRS Mobile App

- 2 Once your app is installed, you may now configure your router. Connect to the router wirelessly by going to your wireless utility on your device. Scan for the wireless network name as listed on the supplied Wi-Fi Configuration card/sticker. Select the network and then enter the Wi-Fi Password.



D-Link Wi-Fi Configuration Card	
Default Configuration	
Wi-Fi Name(SSID) 2.4Ghz:	<input type="text"/>
Wi-Fi Password:	<input type="password"/>
Wi-Fi Name(SSID) 5Ghz:	<input type="text"/>
Wi-Fi Password *:	<input type="password"/>
To configure your router, go to: http://dlinkrouter.local Or http://192.168.0.1 Username: "Admin" Password: "" (leave the field blank)	
Your configuration Username: "Admin" Password: <input type="password"/>	
*For applicable models	

- 3 Once connected, click on the **QRS Mobile** icon from your mobile device, then click **Start** to continue. Please follow the on-screen instructions to complete the setup.

- 4 Once the *Setup Complete* screen appears, click **Save** and write down the new Wi-Fi Network name and password on your companion card for future reference.

Note: To reconnect to your router, launch your wireless utility, select the new Wi-Fi Network you created, and then enter your new Wi-Fi password.

Troubleshooting

How do I connect my wireless devices to the DIR-880L router?

1. Open your wireless network utility that displays available wireless networks.
2. Select the Wi-Fi Network name you assigned in the wizard and connect.

Note: If you did not run the setup wizard or you reset the router to its default settings, refer to the Wi-Fi Configuration Card included for the default Wi-Fi Network Name and Wi-Fi Password.

You can also connect wireless devices to the DIR-880L router using WPS:

1. Press the WPS button on the DIR-880L for three seconds.
2. Within one minute press the WPS button on your wireless device.
3. Allow up to two minutes to connect.

Note: Some devices may require you to log in to a utility to start the WPS process. Refer to the user manual of the device you want to connect to the router if you do not know how to start the WPS process.

How do I connect the DIR-880L to my wireless router when it is in bridge mode?

1. Press the WPS button on your wireless router.
2. Within one minute, press the WPS button on the DIR-880L.
3. Allow up to two minutes to connect to the router.

Note: If the WPS method fails, use the manual configuration method. Refer to the DIR-880L User Manual.*

How do I change the wireless settings on the DIR-880L router?

1. Open a web browser (e.g., Internet Explorer, Chrome, Firefox, or Safari) and enter **<http://dlinkrouter.local/>**. You can also enter the IP address of the router (**<http://192.168.0.1>**).
2. At the login screen, enter the router password you created in the wizard (no password by default).
3. Go to **Setup > Wireless Settings > Manual Wireless Network Setup** to create a new Wi-Fi network name (SSID) and Wi-Fi password.

*Documentation available at <http://www.dlink.com/DIR-880L>.

GPL Code Statement

This D-Link product includes software code developed by third parties, including software code subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL"). As applicable, the terms of the GPL and LGPL, and information on obtaining access to the GPL code and LGPL code used in this product, are available to you at:

<http://tsd.dlink.com.tw/GPL.asp>

The GPL code and LGPL code used in this product is distributed WITHOUT ANY WARRANTY and is subject to the copyrights of one or more authors. For details, see the GPL code and the LGPL code for this product and the terms of the GPL and LGPL.

Written Offer for GPL and LGPL Source Code

Where such specific license terms entitle you to the source code of such software, D-Link will provide upon written request via email and/or traditional paper mail the applicable GPL and LGPL source code files via CD-ROM for a nominal cost to cover shipping and media charges as allowed under the GPL and LGPL.

Please direct all inquiries to:

Email:

GPLCODE@dlink.com

Snail Mail:

Attn: GPLSOURCE REQUEST
D-Link Systems, Inc.
17595 Mt. Herrmann Street
Fountain Valley, CA 92708

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

View the full GPL Code Statement at **<http://www.gnu.org/licenses/gpl.html>**

Technical Support

Having trouble installing your new product? D-Link's website contains the latest user documentation and software updates for D-Link products. U.S. and Canadian customers can contact D-Link Technical Support through our website.

United States

Internet: <http://support.dlink.com>

Canada

Internet: <http://support.dlink.ca>



Version 1.1
April 9, 2014

©2014 D-Link Corporation/D-Link Systems, Inc. All rights reserved. D-Link and the D-Link logo are registered trademarks of D-Link Corporation or its subsidiaries in the United States and other countries. iPhone, iPad, and iPod touch are registered trademarks of Apple Inc. Android is a trademark of Google, Inc. Other trademarks are the property of their respective owners. Maximum wireless signal rate derived from IEEE Standard 802.11ac, 802.11g, and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range. Product specifications, size and shape are subject to change without notice, and actual product appearance may differ from that depicted on the packaging. Visit www.dlink.com for more details.