



***DSL-300***  
***ADSL Ethernet Modem***  
***Quick Install Guide***

*\* Please refer to the Manual on the CD-ROM for more detailed information.*

# 1

## Connecting the DSL-300

To setup the DSL-300 begin by connecting it to a power source.



Once the unit power is on, insert one end of the included **Ethernet cable** into the DSL-300's Ethernet port, and the other end into the Ethernet port on the NIC installed in your PC.



*If the cable connection is good, a green LED on the front of the DSL-300 labeled Ethernet/Link will glow steadily.*

# 1

## Connecting the DSL-300 *continued*

Now connect the phoneline cable from the DSL-300 to your phone jack. *If the ADSL Link LED does not glow green within one minute of its being connected, check all of your cable connections to make sure that they are correct and securely installed.*

*When you have completed all the connections, your DSL-300 will look like this:*



### **Power Cord**

(Plug the other end of the power cord into the power outlet.)

### **Phone line cable**

(Plug the other end of the phone line cable into the phone jack.)

### **Ethernet Cable**

(Plug the other end of the Ethernet cable into the Ethernet port on the NIC, which is installed in your computer.)

# 2

## Installing the Software Drivers


**Step 1** - Turn on your PC and wait until Windows Operating System has been fully installed.

**Step 2** - Insert the DSL-300 Configuration Utility CD into the CD drive.


**Step 3** - Select **START>RUN>**

Type in the letter for the **CD-ROM** drive. If the CD-ROM drive is “D”, then type “D:\Setup.exe” in the open field.


**Click OK**

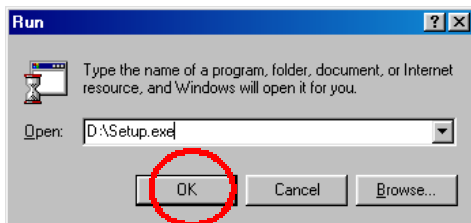

**Click Next**

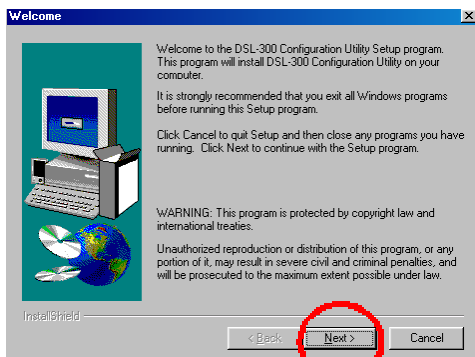

**Click Next**

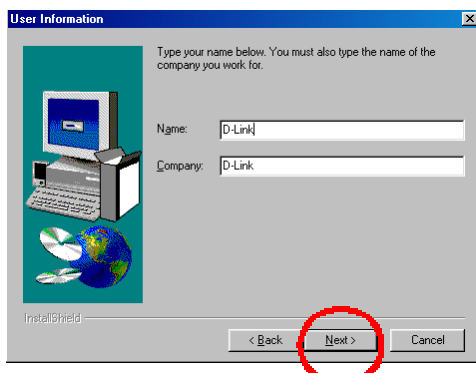





# 2

## Installing the Software Drivers *continued*


Click Next

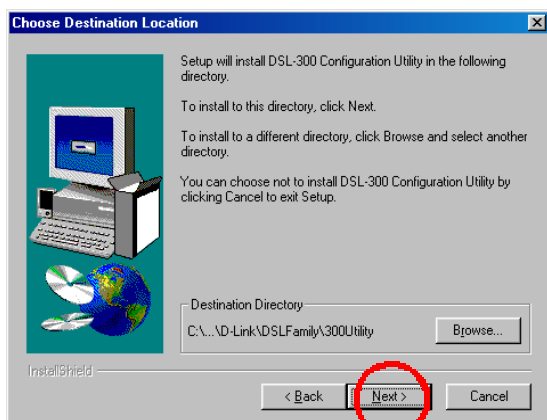

Click Next

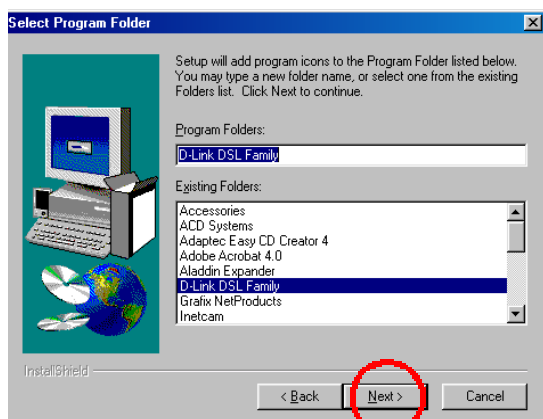


Click Next

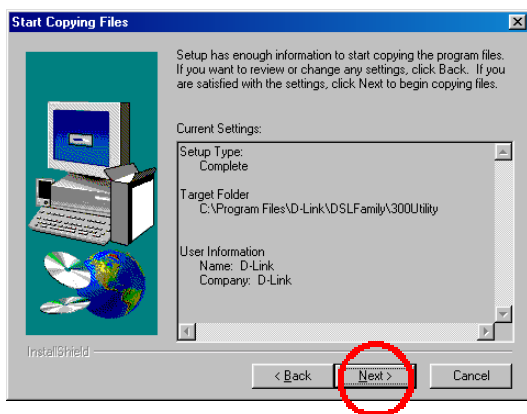

## 2

## Installing the Software Drivers *continued*


After files have been loaded, **select “Yes, Launch the program file.”**

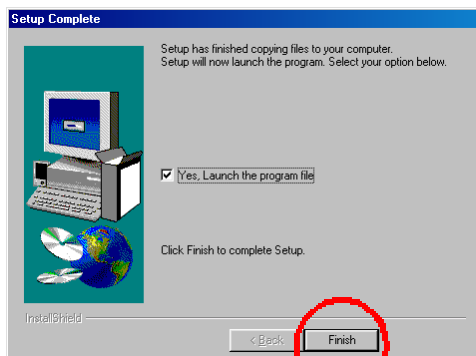


## 3

## Using the Configuration Utility

**Click Discover**

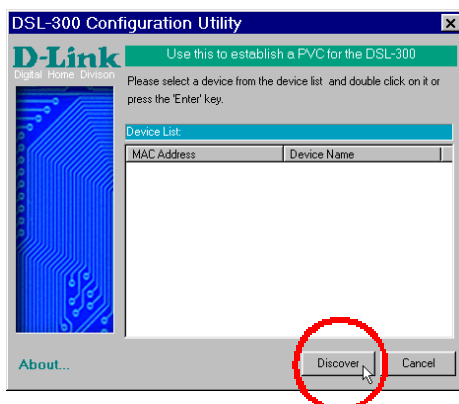


**Double click on the MAC address of the DSL-300.**

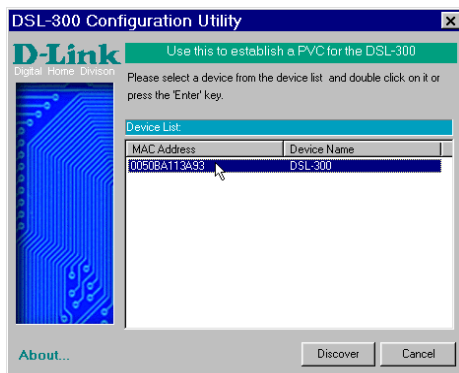

# 3

## Using the Configuration Utility *continued*

Type “**Admin**” for the default password.

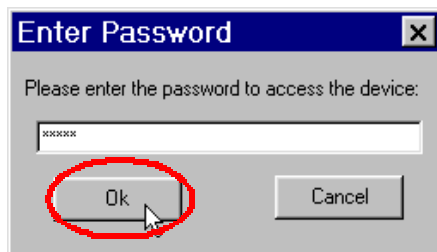

**Click OK**


Click on the “**General ADSL Information**” tab and input the proper VPI settings provided by your DSL provider.

The DSL-300 comes with a default **VPI** of “**0**” and a **VCI** of “**35**.”

To change these settings, simply highlight the number you wish to change, and type in a new value in the box.

***NOTE: VPI: “0” and VCI: “35” settings are most common among DSL providers. This will not work for others who have different VPI and VCI settings. Please contact your service provider for the correct VPI and VCI settings.***


**Click OK** after you have input the correct ADSL settings as described above.

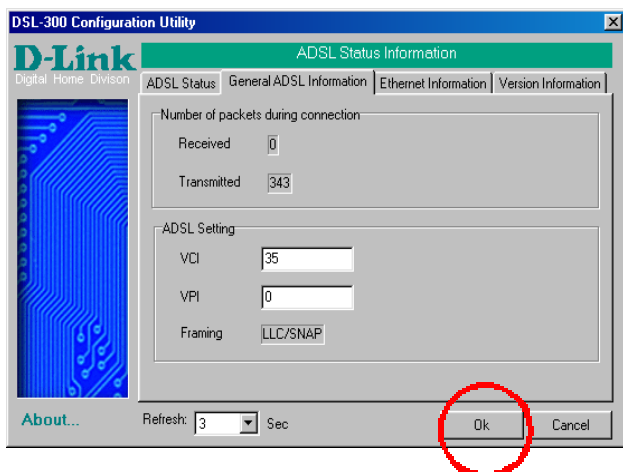


# 3

## Using the Configuration Utility *continued*

Click Yes

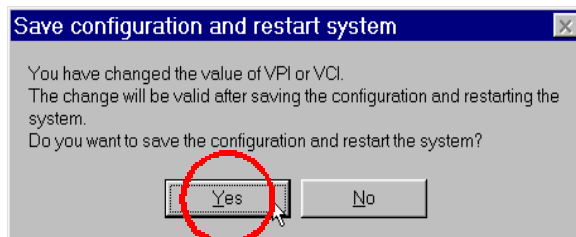

Click Yes

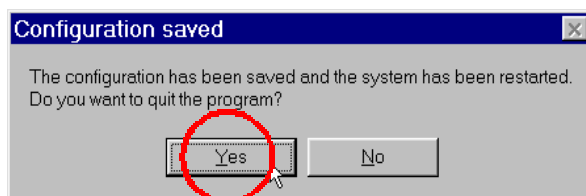

*Note: Do not manually restart the modem. It will automatically restart by itself. When the DSL-300 has been fully restarted, then it will be ready for use.*