


Remote Control Quick Reference

Functions by Button

Button	Activity	Function
	On Any Screen	The POWER button will turn the device on or off.
	On Any Screen	The HOME button will take you back to the Home Screen.
	On Most Screens	The MENU button will bring up the Actions menu, which reveals other features and options for your media experience.
	List View & Thumbnail View	The Number Keys double as letter keys to help you hop alphabetically through your list of files.
	Watching Video	The Number Keys let you leap through the timeline of your video, 1/10 th at a time
	On Any Screen	The BACK button takes you to previous screens.
	Watching Video	The BACK button will stop the video and take you to the previous menu.
	Thumbnail View	The directional Arrows are used for highlighting items.
	List View	Up and Down let you highlight items, while Left functions like BACK and Right functions like ENTER .
	Watching Video	Left and Right can be used as Rewind and Fast Forward. Up will skip forward 30 seconds, and Down will skip backward 10 seconds. The ENTER key acts as Play when you are Rewinding or Fast Forwarding.
	Slideshow	Left and Right let you skip photos, while Up and Down let you modify transition time between photos.
	List View & Thumbnail View	The ENTER key is how you make your selections.
	Watching Video	The ENTER key acts as Play when you are Rewinding or Fast Forwarding.
	On Any Screen	The SETUP button will take you to the device menu, where you can select a server and modify network and display settings.
	On Any Screen	The Programmable Button (PB) can be assigned to your favorite service or plug-in by hitting the MENU button while over a plug-in or service.

Basic Remote Control Features

To Do This...	Do This with the Remote Control
Highlight a selection	Press Arrow (right, left, up or down)
Select an option	Press Enter
Go to the previous menu	Press Back
Go to the main menu	Press Home
Display the overlay menu	Press Menu
Display the next page	Press next Page
Display the previous page	Press previous Page
Setup the device	Press Setup
Repeat or shuffle media	Press Repeat or Shuffle buttons

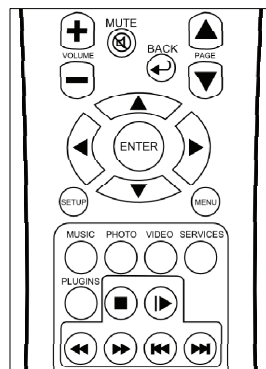


Remote Control Quick Reference



Video Controls

To Do This...	Do This with the Remote Control
Play a video	Highlight the item and press Play/Pause
Display the playback menu	Highlight the item and press Enter
Stop the video	Press Back or Stop
Change the language	Press Language
Change the subtitle	Press Subtitle
Fast Forward or Rewind	Press Right or Left Arrow , or FF or Rev
Return to Play from FF or REV	Press Enter or Play/Pause
Skip forward 30 seconds	Press Up Arrow
Skip back 10 seconds	Press Down Arrow
Skip to next or previous chapter	Press Next or Prev
Skip to the next or previous video	Press next Page or previous Page
Select a chapter	Press numbers 0 through 9
Display video playback info	Press Info

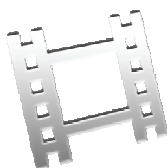

Music Controls

To Do This...	Do This with the Remote Control
Pause or play song	Highlight the item and press Play/Pause
Display the playback menu	Highlight the item and press Enter
Fast Forward or Rewind	Press FF or Rev
Return to Play from FF or REV	Press Play/Pause
Skip to next or previous song	Press Next or Prev
Stop the song	Press Stop



Note: Music controls are also available during slideshows and file selection screens.

Photo Controls

To Do This...	Do This with the Remote Control
Display a photo	Highlight the item and press Enter
Advance to the next / previous photo	Press Right Arrow / Left Arrow
Start or resume a slideshow	Press Up Arrow
Increase / Decrease slideshow speed	Press Up Arrow / Down Arrow
Display slideshow menu	Press Menu
Zoom into a photo	Press 1 through 9 or next Page
Zoom out of a photo	Press 0 or previous Page

