






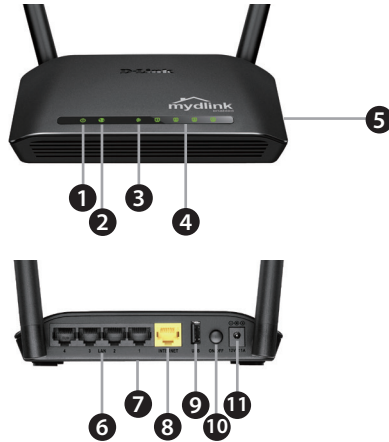 


Package Contents

-  DIR-816L Wireless AC750 Dual Band Cloud Router
-  Power Adapter
-  Ethernet Cable
-  Wi-Fi Configuration Card
-  Quick Install Guide

If any of the above items are missing, please contact your reseller.

Hardware Overview



1	Power LED	A solid green light indicates a proper connection to the power supply.
2	Internet LED	A solid green light indicates a proper connection to your broadband modem.
3	Wireless LED	A solid green light indicates that the wireless function is ready. The light will blink during data transmission.
4	LAN LEDs (1-4)	A solid green light indicates a connection to an Ethernet device. The LED will blink during data transmission.
5	WPS Button	Press to start the WPS process. The Wireless LED will blink.
6	LAN Ports (1-4)	Connect Ethernet devices such as computers, switches, storage (NAS) devices, and video game consoles.
7	Reset Button	Press and hold the reset button on the bottom of the router with a paper clip for six seconds to reset to factory default settings.
8	Internet Port	Connect your broadband modem to this port using an Ethernet cable.
9	USB Port	Connect a USB flash drive to share content throughout your network.
10	Power Button	Press the power button to power the router on and off.
11	Power Receptor	Receptor for the supplied power adapter.

Minimum Requirements

- Network Requirements:**
- An Ethernet-based broadband modem
- Web-based Configuration Requirements:**
- Computer with the following:
- Windows® or Mac OS® X operating system
 - An installed Ethernet adapter or wireless adapter
- Supported Browsers:**
- Internet Explorer 7 or higher
 - Safari 4 or higher
 - Chrome
 - Firefox
- Make sure you have the latest version of Java installed. Visit www.java.com to download the latest version.

mydlink Requirements:
For mydlink and mydlink app requirements refer to: <http://www.mydlink.com>

Before you Start

- **Users with DSL providers** - If you are using a PPPoE connection, you will need your PPPoE user name and password. If you do not have this information, contact your Internet provider. Do not proceed until you have this information.
- **Users with Cable providers** - Make sure you unplug the power to your modem. In some cases, you may need to turn it off for up to 5 minutes.
- **Advanced Users** - If your ISP provided you with a modem/router combo, you will need to set it to "bridge" mode so the DIR-816L router can work properly. Please contact your ISP or refer to the user manual for your modem/router device.

Connect your Router

- 1 Unplug the power to your DSL or Cable modem.
- 2 Connect an Ethernet cable from the Internet port of the router to the Ethernet port on your DSL or Cable modem.
- 3 Connect another Ethernet cable from the Ethernet port on your computer to one of the LAN ports on the router.

- 4 Plug the power back into your DSL or cable modem. Please wait about one minute before continuing.
- 5 Plug the power adapter into your router and connect to an available power outlet or surge protector. If the Power LED does not light up, press the Power button on the back of the router.
- 6 After the router has powered up, verify that the Power (green) and Internet (orange or green) LEDs are both lit then continue with the *Configuration* section on the other side.

 
Configuration

There are two ways to configure your router:


- A. **Web Browser** - Use a web browser from your computer.
- B. **QRS Mobile app** - Use a mobile device with the D-Link QRS Mobile app. Refer to the *QRS Mobile Setup* section for more information.

A. Web Browser Configuration


- 1 Open a web browser (e.g., Internet Explorer, Chrome, Firefox, or Safari) and enter **http://dlinkrouter.local.**/. You can also enter the IP address of the router (**http://192.168.0.1**). XP users should enter **http://dlinkrouter**.



 
- 2 When the Welcome screen appears, click **Next** to continue.

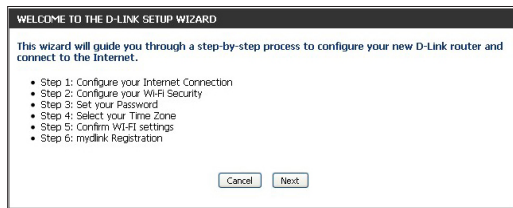

 - 3 If the router automatically detects your Internet connection type, skip to **step 5**. If not, then select your Internet connection and click **Next** to continue.

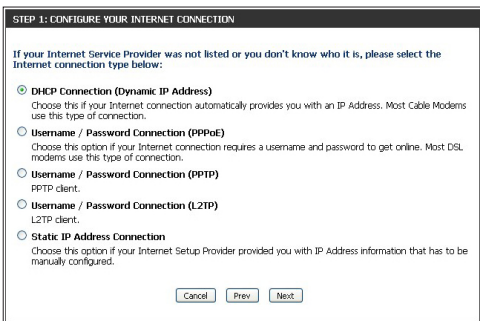


 - 4 DSL (PPPoE) users enter your PPOE **User Name** and **Password** supplied by your ISP (Internet Service Provider). Click **Next** to continue.

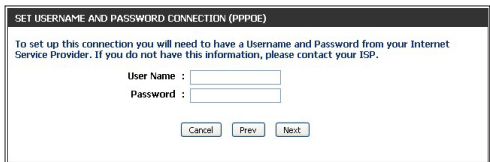

If you selected Static, PPTP, or L2TP, enter the information supplied by your ISP. Dynamic (DHCP) users will automatically be directed to **step 5**.

 - 5 Create a name for your Wi-Fi network and a password. Your wireless devices (i.e., tablets, smartphones, and laptops) will need to have this information entered to be able to connect to your wireless network.

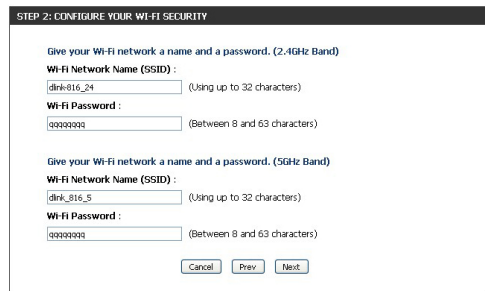

- 6 Continue with the Setup Wizard to finish configuring your DIR-816L router. Once completed, the Internet LED will turn green indicating that your router is connected to the Internet.

Note: Setting up “mydlink” is optional and not required for the router to function. Go to www.mydlink.com for more information about free services available upon registration.

Congratulations! You have completed the router installation.

B. QRS Mobile Setup

- 1 Scan the code below or search *QRS Mobile* (App Store or Google Play) to download the QRS Mobile App to your iPhone, iPad, or Android device.



iOS

 


Android



QRS Mobile App

- 2 Once your app is installed, you may now configure your router. Connect to the router wirelessly by going to your wireless utility on your device. Scan for the wireless network name as listed on the supplied *Wi-Fi Configuration Card*/sticker. Select the network and then enter the Wi-Fi Password.

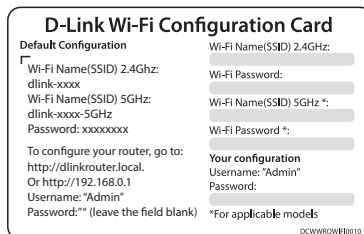

- 3 Once connected, click on the **QRS Mobile** icon from your mobile device, then click **Start** to continue. Please follow the on-screen instructions to complete the setup.

- 4 Once the *Setup Complete* screen appears, click **Save** and write down the new Wi-Fi Network name and password on your companion card for future reference.

Note: To reconnect to your router, launch your wireless utility, select the new *Wi-Fi Network* you created, and then enter your new *Wi-Fi password*.

Troubleshooting

How do I connect my wireless devices to the DIR-816L router?

1. Open your wireless network utility that displays available wireless networks.
2. Select the Wi-Fi Network name you assigned in the wizard and connect.

Note: If you did not run the setup wizard or you reset the router to its default settings, refer to the *Wi-Fi Configuration Card* included for the default *Wi-Fi Network Name* and *Wi-Fi Password*.

You can also connect using WPS:

1. Press the WPS button on the DIR-816L for three seconds.
2. Within one minute press the WPS button on your wireless device.
3. Allow up to two minutes to connect.

Note: Some devices may require you to log in to a utility to start the WPS process. Refer to the user manual of the device you want to connect to the router if you do not know how to start the WPS process.

How do I change the wireless settings on the DIR-816L router?

1. Open a web browser (e.g., Internet Explorer, Chrome, Firefox, or Safari) and enter **http://dlinkrouter.local./**. You can also enter the IP address of the router (**http://192.168.0.1**).
2. At the login screen, select **admin** from the user name drop-down and enter the router password you created in the wizard (no password by default).
3. Go to **Setup > Wireless Settings > Manual Wireless Network Setup** to create a new Wi-Fi network name (SSID) and Wi-Fi password.

Documentation available at <http://www.dlink.com/DIR-816L>.

Technical Support

Having trouble installing your new product? D-Link’s website contains the latest user documentation and software updates for D-Link products. U.S. and Canadian customers can contact D-Link Technical Support through our website.

United States

Internet: <http://support.dlink.com>

Canada

Internet: <http://support.dlink.ca>

Copyright ©2013 D-Link Corporation/D-Link Systems, Inc. All rights reserved. D-Link and the D-Link logo are registered trademarks of D-Link Corporation or its subsidiaries in the United States and other countries. iPhone, iPad, and iPod touch are registered trademarks of Apple Inc. Android is a trademark of Google, Inc. Other trademarks are the property of their respective owners. Maximum wireless signal rate derived from IEEE Standard 802.11ac (Draft), 802.11g, and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range. Product specifications, size and shape are subject to change without notice, and actual product appearance may differ from that depicted on the packaging. Visit www.dlink.com for more details.

GPL Code Statement

This D-Link product includes software code developed by third parties, including software code subject to the GNU General Public License (“GPL”) or GNU Lesser General Public License (“LGPL”). As applicable, the terms of the GPL and LGPL, and information on obtaining access to the GPL code and LGPL code used in this product, are available to you at:

<http://tsd.dlink.com.tw/GPL.asp>

The GPL code and LGPL code used in this product is distributed WITHOUT ANY WARRANTY and is subject to the copyrights of one or more authors. For details, see the GPL code and the LGPL code for this product and the terms of the GPL and LGPL.

Written Offer for GPL and LGPL Source Code

Where such specific license terms entitle you to the source code of such software, D-Link will provide upon written request via email and/or traditional paper mail the applicable GPL and LGPL source code files via CD-ROM for a nominal cost to cover shipping and media charges as allowed under the GPL and LGPL.

Please direct all inquiries to:

Email:

GPLCODE@dlink.com

Snail Mail:

Attn: GPLSOURCE REQUEST
D-Link Systems, Inc.
17595 Mt. Herrmann Street
Fountain Valley, CA 92708

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

View the full GPL Code Statement at <http://www.gnu.org/licenses/gpl.html>

Version 2.1 | November 5, 2013