D-Link®

EXO

AC2600 Smart Mesh
Wi-Fi Router

Simple **Setup** Guide

DIR-2660

DEVICE
SETUP

VOICE
CONTROL

Quick Install Card   D-Link

1

Download on the **App Store**

GET IT ON **Google Play**
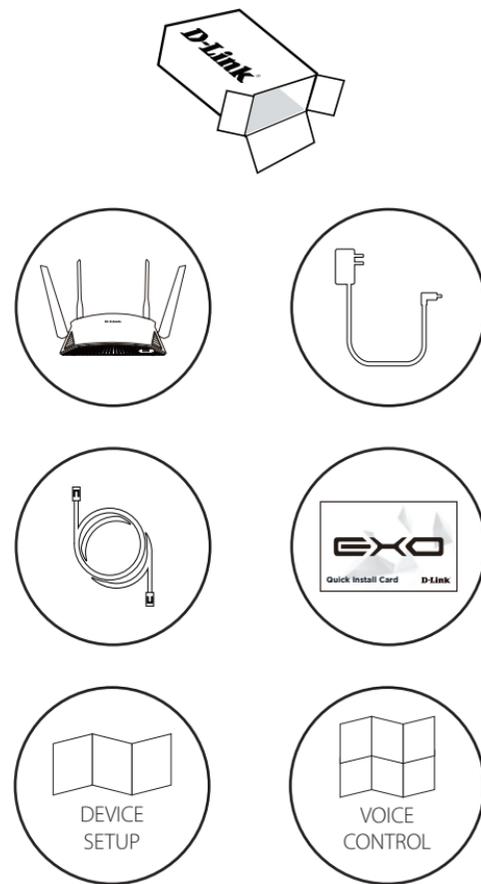
Scan the QR code above to download the D-Link Wi-Fi app for your compatible device.

2

Install New Device

Quick Install Card   **D-Link**
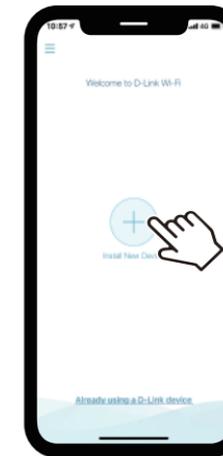
Tap **Install New Device**. Scan the QR code in the Quick Install Card. Follow the on-screen instructions to proceed with setup.

3
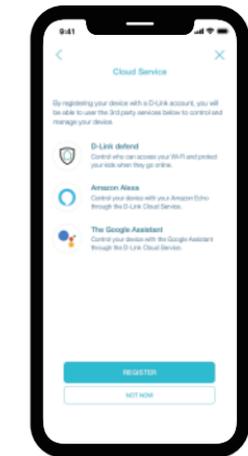
Tap **Register** to sign up for a D-Link Cloud Services account in order to utilize available third party services, or tap **Not Now** and proceed to step 5.

4
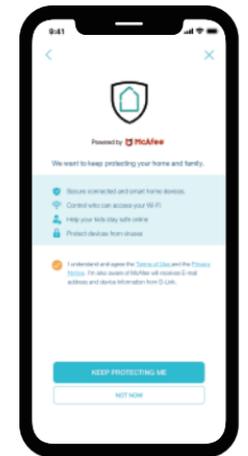
Agree to the Terms of Service and Privacy Notice and tap **Keep Protecting Me** to use D-Link defend, or tap **Not Now** to continue.

5
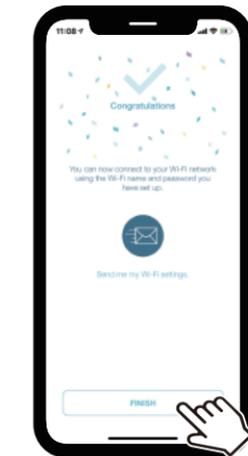
You can now connect to your Wi-Fi network using the Wi-Fi name and password created during the setup. Tap **Finish** to end setup.

D-Link

D-Link defend

Setup Guide

McAfee PROTECTED

1
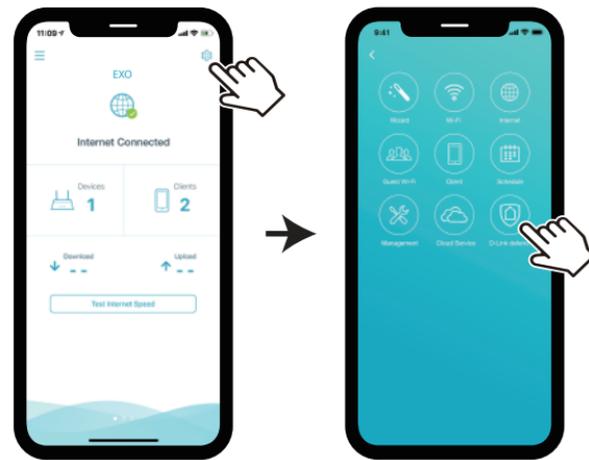
On the home screen tap ⚙ then tap on the D-Link defend icon.

2
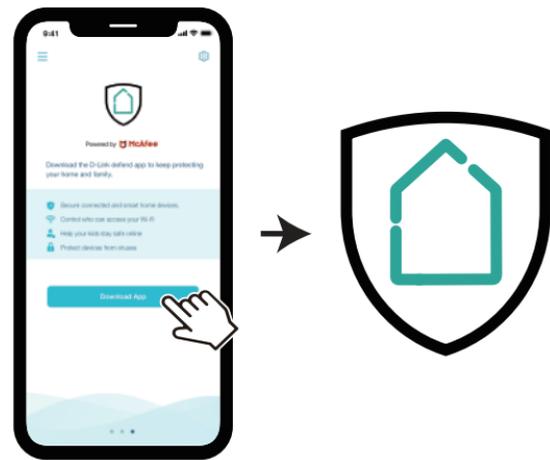
Tap **Download App**. After D-Link defend is installed, return to the D-Link Wi-Fi app. Repeat step 1 to launch D-Link defend.

3
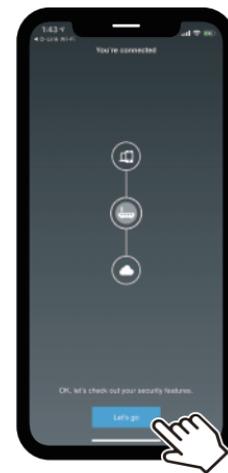
Tap **Let's Go** and follow the on-screen tips to make your Internet more secure.

4
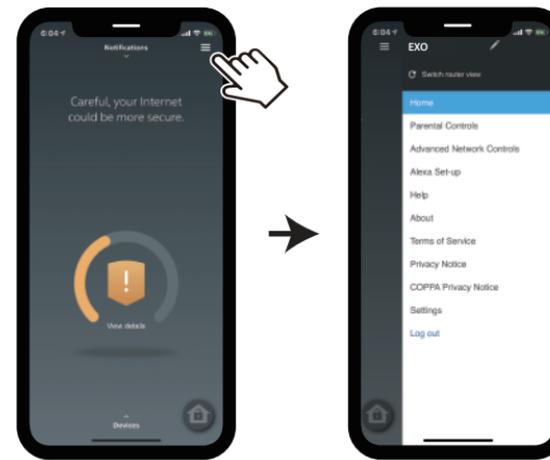
Tap ☰ on the home screen for more features such as Parental Controls and Alexa setup instructions.

Technical Support

Having trouble installing your new product? D-Link's website contains the latest user documentation and software updates for D-Link products. You can also contact D-Link Technical Support through our website, or phone number below.

United States
Internet: http://support.dlink.com
Phone: 877-453-5465