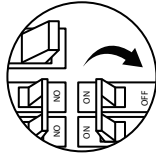## 1. Turn Off Circuit Breaker

Turn off the power to the light switch at the main circuit breaker or fuse box.
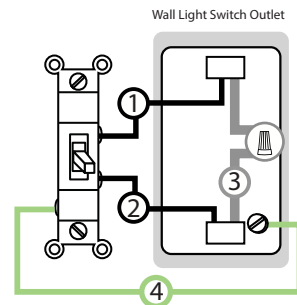
Important: Flip your light switch a few times to ensure the power is off.
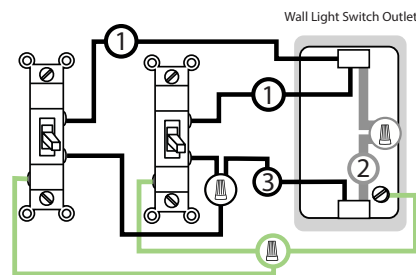
## 2. Remove Faceplate from Old Switch

📷 Take a picture for future reference



1- Gang

Wall Light Switch Outlet

① Load
Required. You need 1 load for 1-gang.

② Hot Wire (Live)
Required.

③ Neutral
Required, but not always present.
STOP if you do not have it.

④ Ground
Optional, and not always present.

2- Gang

Wall Light Switch Outlet

① Load
Required. You need 2 loads for 2-gang.

② Neutral
Required, but not always present.
STOP if you do not have it.

③ Hot Wire (Live)
Required.

④ Ground
Optional, and not always present.

## 3. Wire Labeling

Use the included wiring labels and attach the stickers to the corresponding wires. Green for "Ground", white for "Neutral", black for "Hot", red for "Upper Light" and brown for "Lower Light".
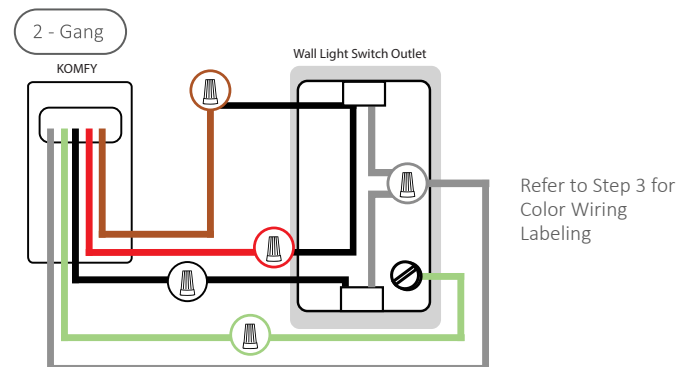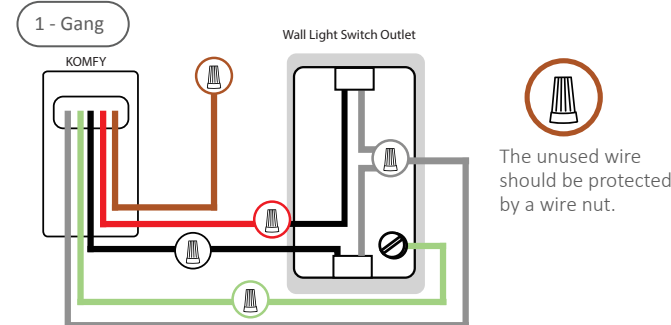
Wiring Labels

| G | N | H | UL | LL |
|---|---|---|----|----|
| G | N | H | UL | LL |
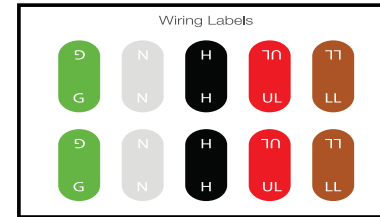
## 4. Remove Old Switch

Disconnect the old switch from the electrical box.

## 5. Wiring

Connect the wires from the Komfy Switch to the old switch wires.

1 - Gang

KOMFY

Wall Light Switch Outlet

The unused wire should be protected by a wire nut.

2 - Gang

KOMFY

Wall Light Switch Outlet

Refer to Step 3 for Color Wiring Labeling

## 6. Attach Komfy Switch

Screw the Komfy Switch into the electrical box and then slide the power selector to 1 or 2. 1-gang and 2-gang have different screws patterns as shown below:

1 0 2
POWER
Slide power selector to "1".
1 - Gang:
2 middle screws
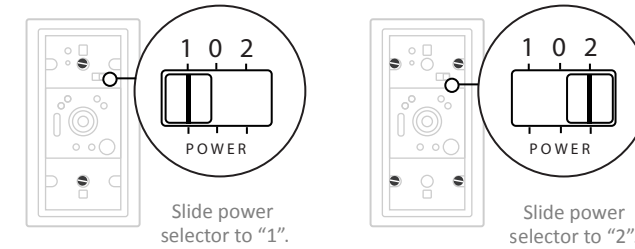
1 0 2
POWER
Slide power selector to "2".
2 - Gang:
4 side screws

## 7. Turn On The Circuit Breaker

Turn the power back on at the circuit breaker or fuse box.

## 8. Press and Hold Setup Button for 5 Seconds

When the Wi-Fi LED lights up, press and hold the setup button for 5 seconds until the Wi-Fi LED starts blinking. When the Wi-Fi LED stops blinking, the Komfy Switch is ready to be configured.

SETUP
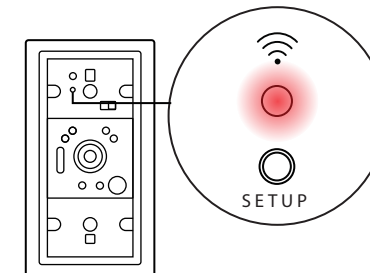
## 9. Attach Accessories
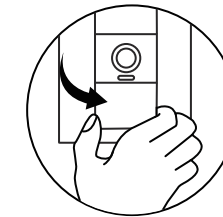
Attach the included faceplate to the Komfy Switch and then put the Komfy Switch cover with click pads over the faceplate.
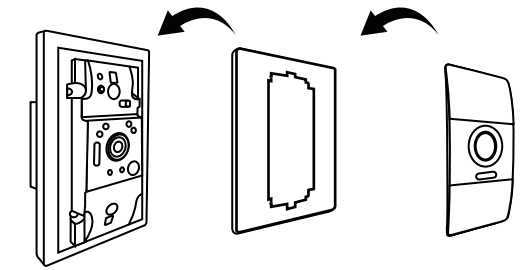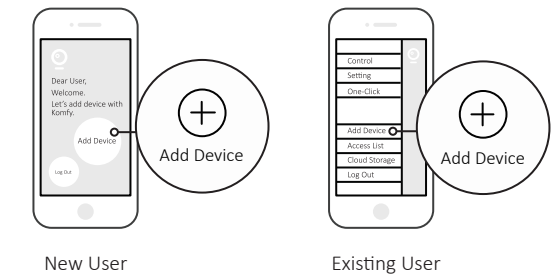
Komfy Switch          Faceplate          Komfy Switch Cover With Click Pads

If you want to remove the the switch cover, pull out at the corners either at the top or bottom to remove it.
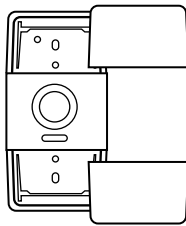
## 10. Configure Komfy Switch

Download the Komfy App and sign up for a Komfy account. Tap the "Add Device" button to complete the configuration.
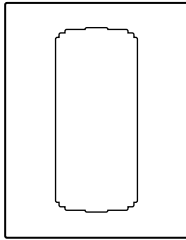
Dear User,
Welcome.
Let's add device with Komfy.
Add Device
Log Out

Add Device

Control
Setting
One-Click
Add Device
Access List
Cloud Storage
Log Out

Add Device
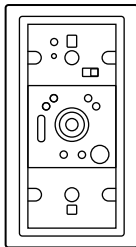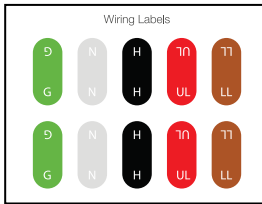
New User          Existing User
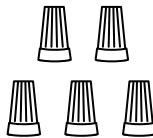
## Contents

Komfy Switch Cover with 2 Click Pads

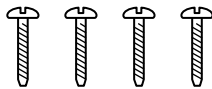Faceplate

Komfy Switch

Wiring Labels

5 Wire Nuts

4 Screws

# Komfy by D-Link

# Komfy by D-Link

## Quick Installation Guide
## Komfy Switch

## WARNING! Potential Shock Hazard

Please read all the instructions before you begin installation. The Komfy Switch is designed for installation in standard electrical boxes and to be installed in accordance with National Fire Protection Association (NFPA 70). If you are not sure about any part of the instructions, consult a qualified electrician to perform the installation.

## Verify Switch Compatibility

1. Not compatible with 3-way (multi-location control) switches.
2. Requires neutral wire (refer to Step 2).

## Verify Wi-Fi Signal Strength

Hold your iPhone close to the switch you are replacing. Make sure you have a good Wi-Fi signal there.