

Simple Setup Guide

D-Link | **COVR**

COVR-1300E ADD-ON SEAMLESS WI-FI EXTENDER


IMPORTANT: Prior to setting up your new Covr Add-On Seamless Wi-Fi Extender, update your existing Covr Router and Extender to the latest firmware version.

1




Plug the Covr Add-On Seamless Wi-Fi Extender into a power outlet near the Covr Router (COVR-2600R) and wait for the Power and Downlink LEDs to light up. If the Power LED does not light up, press the Power button on the back of the Extender.

2

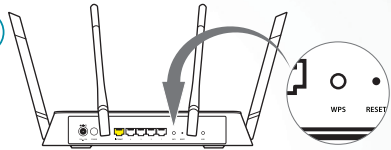

Press the WPS button on the back of the Covr Router (COVR-2600R) for at least **7 seconds**.

3

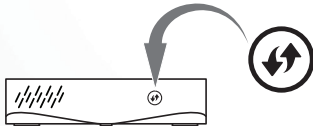

Press the WPS button on the side of the Covr Add-On Seamless Wi-Fi Extender for 1 seconds.

4



It will take up to 5 minutes for the Router and Extender to connect. Once all the LEDs are lit on the Covr Add-On Seamless Wi-Fi Extender, you can move the Covr Add-On Seamless Wi-Fi Extender to a location between the Router and the area of your home where you need the additional coverage.

Note: Don't place your new COVR-1300E right in a Wi-Fi deadzone. The COVR Add-On Seamless Wi-Fi Extender only works well if it has a strong connection to your existing COVR Router or Seamless Extender. Therefore, proper placement of your new COVR-1300E is important in achieving desired results. When placing the COVR-1300E, ensure that the two Uplink LEDs are green. If not, move the new Extender closer to your COVR router or existing COVR extender.

support.dlink.ca (Canada) | **support.dlink.com** (USA)

2017/10/05 Ver.1.01(CA)_130x130 6CVR1300E_D2G

Guide d'installation simple

D-Link ^{USBC} | **COVR**

PROLONGATEUR WI-FI TRANSPARENT
SUPPLÉMENTAIRE **COVR-1300E**


IMPORTANT: Avant de configurer votre nouveau prolongateur Wi-Fi transparent supplémentaire COVR, mettez à jour votre routeur et prolongateur Covr existant à la dernière version du micrologiciel.

1




Branchez le prolongateur Wi-Fi transparent supplémentaire Covr dans une prise électrique près du routeur Covr (COVR-2600R) et attendez que les voyants d'alimentation et de liaison descendante s'allument. Si le voyant d'alimentation ne s'allume pas, appuyez sur le bouton d'alimentation situé à l'arrière du prolongateur.

2

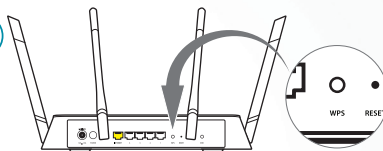

Appuyez sur le bouton WPS à l'arrière du routeur Covr (COVR-2600R) pendant 5 secondes.

3

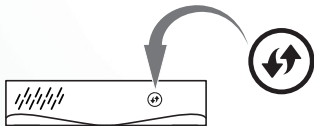

Appuyez sur le bouton WPS sur le côté de le prolongateur Wi-Fi transparent supplémentaire pendant 1 secondes.

4



Cela prendra jusqu'à 5 minutes pour que le routeur et le prolongateur se connectent. Une fois que toutes les voyants sont allumées sur le prolongateur Wi-Fi transparent supplémentaire Covr, vous pouvez déplacer le prolongateur à un emplacement entre le routeur et la zone de votre maison où vous avez besoin de la couverture supplémentaire.

Remarque: Ne placez pas votre nouveau COVR-1300E dans une zone morte sans fil. Le prolongateur Wi-Fi transparent supplémentaire ne fonctionne correctement que s'il dispose d'une connexion forte à votre routeur ou prolongateur existant. Par conséquent, le placement correct de votre nouveau COVR-1300E est important pour atteindre les résultats souhaités. Lorsque vous placez le COVR-1300E, assurez-vous que les deux DEL montantes sont vertes. Si ce n'est pas le cas, rapprochez le nouveau prolongateur de votre routeur COVR ou de votre extension COVR existante.

support.dlink.ca (Canada) | **support.dlink.com** (États-Unis)

2017/10/05 Ver_1.01(CA)_130x130 6CV1300E_D2G