

# **D-Link *AirPremier* DWL-1000AP+**

Enterprise 2.4GHz Wireless Access Point

## **Manual**

**D-Link**

Building Networks for People

# Contents

Package Contents .....	3
Introduction.....	4
LEDs.....	6
Wireless Basics .....	7
Getting Started .....	11
Using the Configuration Menu .....	12
Troubleshooting.....	26
Technical Specifications .....	35
Contacting Technical Support.....	37
Warranty and Registration.....	38

# Package Contents



## Contents of Package:

- **D-Link AirPremier DWL-1000AP+**  
Enterprise 2.4 GHz Wireless Access Point
- Manual and Warranty on CD
- Quick Installation Guide
- Power Supply - 5V DC, 2.0A
- Ethernet Cable (DWL-1000AP+ Ethernet port is Auto-MDIX)

*Note: Using a power supply with a different voltage rating than the one included with the DWL-1000AP+ will cause damage and void the warranty for this product.*

If any of the above items are missing, please contact your reseller.

## System Requirements for Configuration:

- A computer with Windows, Macintosh, or Linux-based operating system with an installed Ethernet adapter
- Internet Explorer or Netscape Navigator version 6.0 or above, with JavaScript enabled

# Introduction

The D-Link *AirPremier* DWL-1000AP+ Wireless Access Point is an 802.11g high-performance wireless access point. With a second level of security that is not offered with other conventional 802.11 standards-compatible Access Points, the DWL-1000AP+ ensures a more secure wireless network than ever before. In addition to **WEP** encryption, the DWL-1000AP+ offers an **Authentication** capability when used with 802.11g compatible devices. This extra layer of protection will ensure a safer and more secure wireless network than has previously been available.

Outstanding features of the DWL-1000AP+ include **Backup AP Function, Load-Balancing, and Dynamic Channel Selection Function**. Please see the *Features and Benefits* section in this manual for further details on these special features.

Speed is another unique feature of the DWL-1000AP+. Unlike most access points, the DWL-1000AP+ is capable of data transfer speeds of up to 22 Mbps\* (compared to the standard 11 Mbps) when used with D-Link *AirPlus* products such as the DWL-520+ Wireless PCI Adapter and DWL-650+ Wireless Cardbus Adapter.

After completing the steps outlined in the *Quick Installation Guide* (included in your package) you will have the ability to share information and resources, such as files and printers, and enjoy the freedom that wireless networking delivers.

The DWL-1000AP+ is compatible with most popular operating systems, including Macintosh, Linux and Windows, and in conjunction with a radius server, can be integrated into a large enterprise network. This Manual is designed to help you connect the Access Point and D-Link Adapters into a network in Infrastructure mode. *Please take a look at the **Getting Started** section in this manual to see an example of an Infrastructure network using the DWL-1000AP+.*

This manual provides a quick introduction to wireless technology and its application as it relates to networking.

\*Maximum wireless signal rate derived from IEEE Standard 802.11g specifications. Actual data throughput will vary Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead lower actual data throughput rate.

## Features and Benefits

- Supports **802.1x** for wireless user authentication into the network, resulting in a more secure wireless network than was previously possible.
- **Backup AP** Function ensures continued operation of the AP in the event of any operation failure of the primary AP
- **Load Balancing** Function allows for automatic connection by the client to the AP with the least traffic and the least number of clients, when several APs are deployed in one wireless network
- **5 operating modes** available: Access Point, AP Client and Bridge (Point-to-Point; Point-to-Multi-point), Wireless Client; Wireless Repeater


Operation Mode (Only supports 1 mode at a time)	Function
Access Point (AP)	Create a Wireless LAN
AP - to - AP Bridging	Wirelessly Connect 2 Networks
Point - to - Multipoint Bridging	Wirelessly Connect Multi Networks
Wireless Client	Wirelessly Connect Ethernet Devices
Repeating Mode	Extend Range of Wireless Network

- **Dynamic data rate scaling** at 1, 2, 5.5, 11Mbps and 22Mbps
- Supports **wireless data encryption** with 64-bit, 128-bit WEP security (and 256-bit WEP security with D-Link *AirPlus* Adapters.)
- Two **detachable antennas** for diversity functionality as well as adjustable transmit power to adjust the wireless range
- **DHCP** server capability
- **Dynamic Channel Selection** Function automatically selects the fastest and least populated channel available for the DWL-1000AP+ when it is a part of a Load Balancing Group of 4 or more Access Points, where the 3 non-overlapping channels have already been selected.

*802.1x Authentication requires EAP (Extensible Authentication Protocol). 802.1x supported EAP is available through the Windows XP Operating System. You will need to use the same type of EAP protocol on all the devices in your network when using the 802.1x feature.*

# LEDs

After the initial post sequence, upon startup, the LEDs will read as follows:

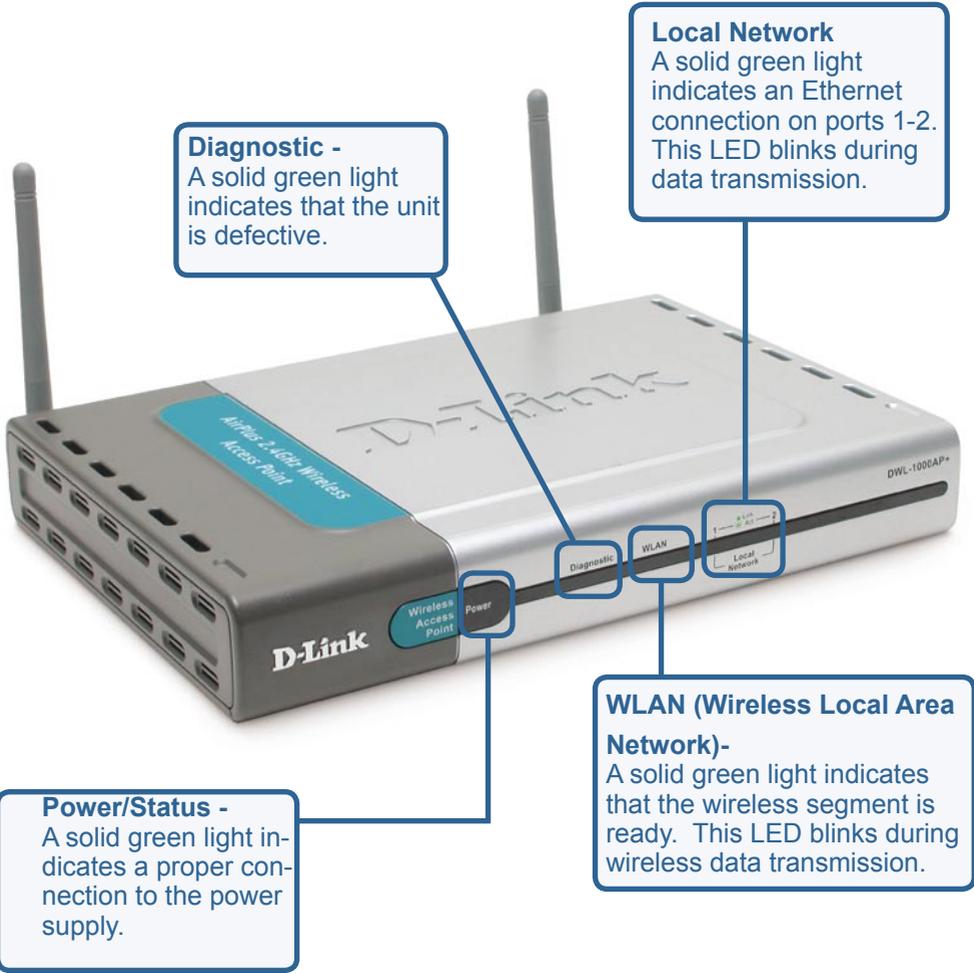

# Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link wireless family of products will allow you to securely access the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A Wireless Router is a device used to provide this link.

## Wireless Basics (*continued*)

*People use wireless LAN technology for many different purposes:*

**Mobility** - Productivity increases when people have access to data in any location within the operating range of the WLAN. Management decisions based on real-time information can significantly improve worker efficiency.

**Low Implementation Costs** – WLANs (Wireless Local Area Networks) are easy to set up, manage, change and relocate. Networks that frequently change, both physically and logically, can benefit from WLANs ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

**Installation Speed and Simplicity** - Installing a wireless LAN system can be fast and easy and can eliminate the need to pull cable through walls and ceilings.

**Network Expansion** - Wireless technology allows the network to go where wires cannot.

**Scalability** – Wireless Local Area Networks (WLANs) can be configured in a variety of topologies to meet the needs of specific applications or existing infrastructures. Configurations are easily changed and range from peer-to-peer networks suitable for a small number of users to larger infrastructure networks to accommodate hundreds or thousands of users, depending on the number of wireless devices deployed.

## Wireless Basics (*continued*)

The DWL-1000AP+ is compatible with the following **D-Link AirPro** dual-band wireless network adapters:

- 2.4GHz multimode Wireless Cardbus Adapter used with laptop computers (*DWL-AB650*)
- 2.4GHz Wireless PCI card used with desktop computers (*DWL-AB520*)

The DWL-1000AP+ is also compatible with the following **D-Link AirPlus** wireless network adapters:

- 2.4GHz Wireless PCI card used with desktop computers (*DWL-520+*)
- 2.4GHz Wireless Cardbus Adapter used with laptop computers (*DWL-650+*)

## Standards-Based Technology

The versatile DWL-1000AP+ Wireless Access Point is 802.1x compatible.

The 802.1x standard solves the problem of ensuring the safety of wireless networks by allowing for an additional layer of security. With two levels of security, **Authentication** and **Data Encryption**, the 802.1x enhanced wireless network is more inaccessible to intruders than has previously been possible.

The **Authentication** protocol in 802.1x provides the frontline of defense against network intrusion. **EAP** (Extensible Authentication Protocol) is the protocol used for authentication. Windows XP currently supports EAP. All the clients, access points, and servers must share the same type of EAP in order to communicate and ensure that the network is secure.

You can also purchase EAP software to install 802.1x support for the wireless clients in your network.

The second level of security for the wireless network is **WEP data encryption**. Depending on the radius server deployed in your network, you can distribute the certificate automatically and change Encryption keys in the wireless network. This network feature will greatly reduce the amount of time needed to ensure wireless security by automatically changing WEP keys periodically, thus relieving administrators of the onerous task of manually changing keys on a multitude of workstations.


## Wireless Basics *(continued)*

### Installation Considerations

Keep in mind that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the DWL-1000AP+ and other network devices to a minimum - each wall or ceiling can reduce your D-Link Wireless product's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Try to make sure that devices are positioned so that the signal will travel straight through a wall or ceiling for better reception.
3. Building Materials make a difference - a solid metal door or aluminum studs may have a negative effect on range. Try to position wireless devices and computers with wireless adapters so that the signal passes through drywall or open doorways and not other materials.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.

# Getting Started

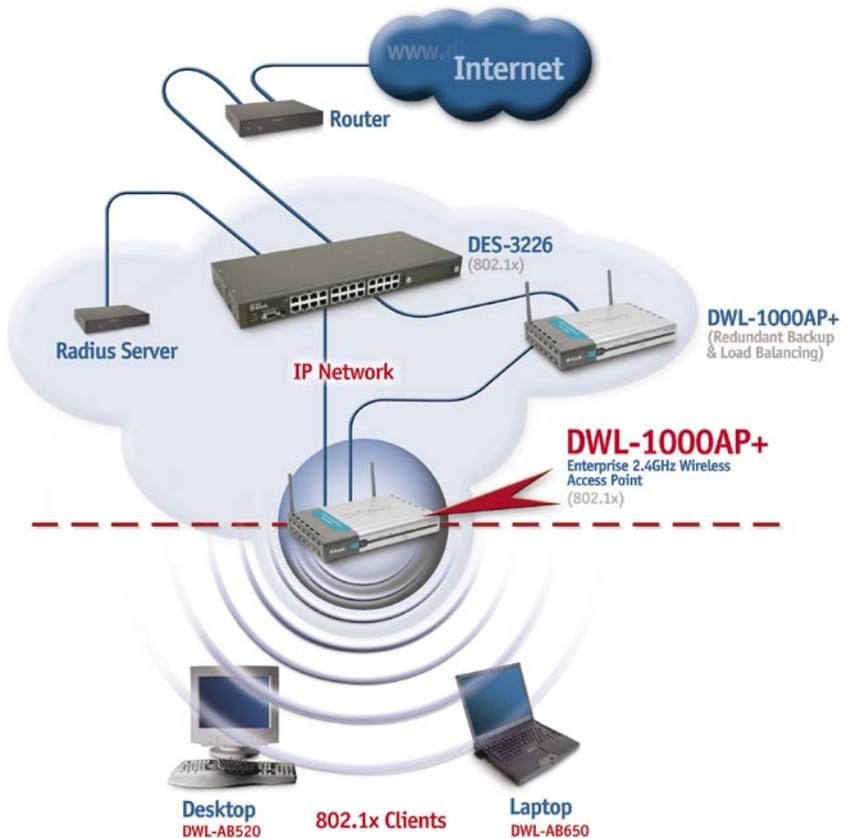

Here is a sample of a network setup using the 802.1x compliant DWL-1000AP+ access point. Your network may look different. For successful communication, you will need 802.1x compliant devices, including 802.1x compliant wireless network adapters. If you are using two or more access points in conjunction for **load-balancing** or **backup**, please remember that IAPP (Inter Access Point Protocol) is passed through the Ethernet connection.


Please read through the configuration section of this manual to learn about the settings you will need for your devices to achieve a faster, safer and more effective wireless network than you have previously experienced.

# Using the Configuration Menu

There are several methods of managing your network with the DWL-1000AP+. You can use the web-based configuration that is illustrated in this section. To access the configuration menu, input the IP Address (192.168.0.50) of the DWL-1000AP+ into the address field in your web browser. Or if you have a network with a group of Access Points, you can use the AP Manager to configure the Access Points. Lastly, you can use SNMP to manage your network.

If you choose to use the web-based configuration menu, please configure the DWL-1000AP+ from a computer with an ethernet connection to the DWL-1000AP+.

## [Home > Wizard](#)

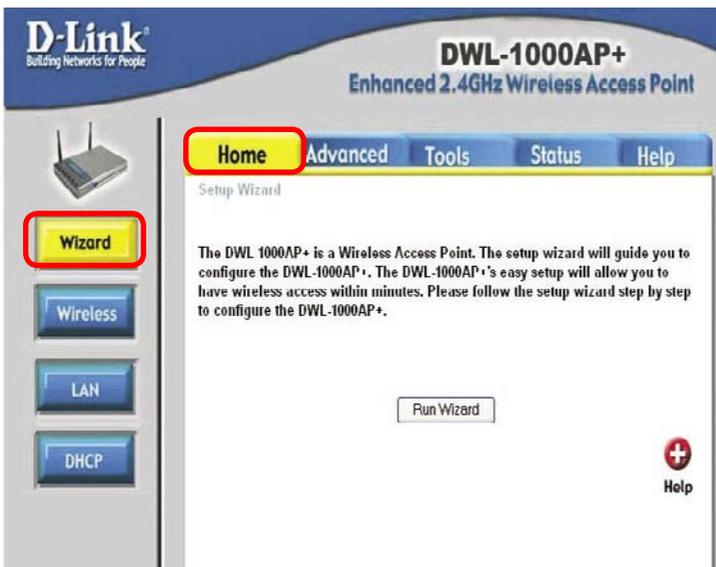

**Apply**

Clicking **Apply** will save changes made to the page



**Cancel**

Clicking **Cancel** will clear changes made to the page



**Help**

Clicking **Help** will bring up helpful information regarding the page




**Restart**

Clicking **Restart** will restart the router. (Necessary for some chang-

# Using the Configuration Menu

## Home > Wireless

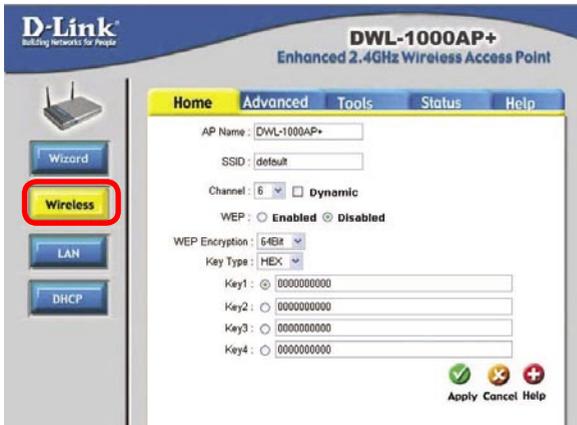

**AP Name:** You may choose to rename your Access Point, especially if you have more than one Access Point on your network.

**SSID: (Service Set Identifier) default** is the default setting. The SSID is a unique name that identifies a network. All devices on a network must share the same SSID name in order to communicate on the network. If you choose to change the SSID from the default setting, input your new SSID name in this field. The SSID can be up to 32 characters in length.

**Channel:** Channel **6** is the default channel. Input a new number if you want to change the default setting. All devices on the network must be set to the same channel to communicate on the network. *(However, if are employing the Load Balancing function of the AP, you will need to set each AP to a different non-overlapping channel: 1, 6 or 11. Clients in a “load balancing” network should set their channel to “auto.”)*


**Dynamic Channel Selection Function:** automatically selects the fastest and least populated channel available for the DWL-1000AP+ when it is a part of a Load Balancing Group of 4 or more Access Points, when the 3 non-overlapping channels have already been selected.

**WEP Encryption:** Select **Enable Encryption** to use **WEP (Wired Equivalent Privacy)** on the network. All devices on the network, and the Access Point, must share the same WEP selection – either **Enable** or **Disable**, and they must share the same WEP key. The WEP key is generated from **ASCII** or **Hexadecimal** entries that are either 64, 128, or 256 bit in length. When enabling encryption, select the **Key Type** (ASCII or Hexadecimal) and then input the appropriate digits or letters. You can create up to 4 keys. Select the key you wish to use.

**Hexadecimal** digits consist of the numbers 0-9 and the letters A-F  
**ASCII** (American Standard Code for Information Interchange) is a code for representing English letters as numbers from 0-127

# Using the Configuration Menu

## Home > LAN

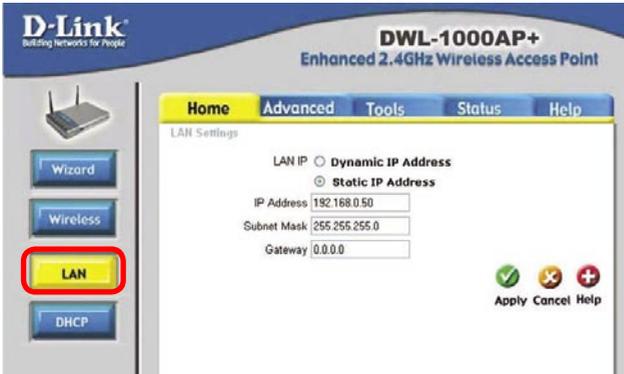

**Dynamic IP Address:** Select this option if you would like to have an IP Address automatically assigned to the DWL-1000AP+ by a DHCP server in your network.

**DHCP** stands for Dynamic Host Configuration Protocol. It is a protocol for assigning dynamic IP addresses “automatically.” With a DHCP Server there is no need to manually assign an IP address.

**Static IP Address:** Select this option if you are manually assigning an IP Address.

**IP Address:** 192.168.0.50 is the default IP Address of the Access Point. If you are using several DWL-1000AP+'s in your network (for Load Balancing or Backup), you will need to assign a different Static IP Address to each Access Point.

**Subnet Mask:** 255.255.255.0 is the default Subnet Mask. All devices on the network must have the same subnet mask to communicate on the network

**Gateway:** Enter the IP Address of the gateway in your network

### IP Address

If you need to assign Static IP Addresses to the devices in your network, please remember that the IP Address for each computer or device must be in the same IP Address range as all the devices in the network. Each device must also have the same Subnet Mask. *For example: Assign the first computer an IP Address of 192.168.0.2 and a Subnet Mask of 255.255.255.0, the second device an IP Address of 192.168.0.3 and a Subnet Mask of 255.255.255.0, and so on. Devices that are assigned the same IP Address may not be visible on the network.*

# Using the Configuration Menu

## Home > DHCP

The screenshot shows the configuration page for a D-Link DWL-1000AP+ Enhanced 2.4GHz Wireless Access Point. The interface has a blue header with the D-Link logo and the product name. Below the header is a navigation menu with tabs for Home, Advanced, Tools, Status, and Help. On the left side, there is a sidebar with buttons for Wizard, Wireless, LAN, and DHCP (which is highlighted with a red border). The main content area is titled 'DHCP Server' and contains the following information:

The DWL-1000AP+ can be setup as a DHCP server to distribute IP addresses to the LAN network.

DHCP Server  Enabled  Disabled

Starting IP Address 192 . 168 . 0 . 100

Ending IP Address 192 . 168 . 0 . 199

Lease Time 1 Hour

At the bottom right of the DHCP Server section are three buttons: Apply (with a green checkmark), Cancel (with a red X), and Help (with a red plus sign).

Below the DHCP Server section is a 'DHCP Client Table' with the following columns: Host Name, IP Address, MAC Address, and Expired Time.

**DHCP Server:** Select **Enabled** or **Disabled**. Disabled is the default setting. If you want to use the Access Point as a DHCP server to automatically assign Dynamic IP Addresses on the network, you will select Enabled.

**Starting IP Address:** If you have enabled the DHCP server function, enter the starting point of the IP Address range for your network

**Ending IP Address:** Enter the ending IP Address of your IP Address range, if you have enabled the DHCP function of the Access Point

**Lease Time:** Choose the length of time at which the DHCP function of the DWL-1000AP+ automatically regenerates the IP Addresses to the devices in your network

**DHCP Client Table:** Lists the devices on your network that are receiving dynamic IP Addresses from the Access Point

# Using the Configuration Menu

## Advanced > Mode



**Access Point:** The Access Point is selected as the default setting. This must be selected to use **Load Balancing Mode** and **Backup Mode**.

**Load Balancing:** Allow several DWL-1000AP+'s with the same group name to share the wireless network traffic. We recommend an optimal number of three DWL-1000AP+'s in close proximity because there are 3 non-overlapping channels (as specified by the 802.11b standard.) After selecting this option, you will be prompted to enter a **Group Name**. All the APs that share Load Balancing must have the same **Group Name** and the same **SSID**. Assign each Access Point a different **non-overlapping channel** (e.g., 1, 6, 11).

**Backup AP:** Connect 2 DWL-1000AP+s with an Ethernet cable. One of the APs will be the Primary AP, the other AP will backup the primary AP in the event of a primary AP failure. Enter the **Primary AP's MAC Address** into the secondary AP's configuration window. To use the **Keep Alive Connection**, enter the IP address of a radius server or router on your network. The Keep Alive Connection will monitor the connection to the Ethernet network and send a notification to the administrator of any connectivity problems with the LAN (Local Area Network) connection.

**Wireless Client:** Make this selection to use the DWL-1000AP+ as a wireless client instead of as an Access Point; you will enter the MAC address of the remote AP to which the DWL-1000AP+ will be a client.

**Site Survey:** Click Site Survey to see available APs on the wireless network and their MAC addresses when the DWL-1000AP+ is in client mode.

**Wireless Bridge:** To use the DWL-1000AP+ as a wireless bridge you will enter the MAC address of the remote bridge to which the AP will associate.

**Multi-point Bridge:** Select this option to use the DWL-1000AP+ as a multi-point bridge. In this mode it will associate with remote bridges.

**Repeater:** To extend the range of the wireless network select this option and enter the MAC address of the remote AP within your network that will have its range extended. Please note that the DWL-1000AP+ is able to repeat the wireless signal from another DWL-1000AP+, DWL-900AP+, DI-614+, DI-764, and DI-754 with a DWL-650+.

# Using the Configuration Menu

## Advanced > Performance

The default Performance settings are shown here.

**Beacon Interval:** Beacons are packets sent by an Access Point to synchronize a wireless network. Specify a Beacon interval value. Default (100) is recommended.

**RTS Threshold:** This value should remain at its default setting of 2,432. If you encounter inconsistent data flow, only minor modifications to the value range between 256 and 2,432 are recommended.

**Fragmentation:** This value should remain at its default setting of 2,346. If you experience a high packet error rate, you may slightly increase your Fragmentation Threshold within the value range of 256 to 2,346. Setting the Fragmentation Threshold too low may result in poor performance.

**DTIM Interval (Beacon Rate):** (Delivery Traffic Indication Message) Enter a value between 1 and 255 (default is 3) for the Delivery Traffic Indication Message (DTIM.) A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.

**Basic Rates:** Default is 1-2Mbps. We recommend that you keep the setting at default. If you lose connection at the TX rate, you will regain connection at the basic rate. A lower Basic Rate will make reconnection easier. (If you are running a wireless network consisting of all D-Link AirPlus and Air Premier products, you may set a higher basic rate.)

**TX Rates:** Select the transmission rate for the network. The default rate is 1-2-5.5-11-22Mbps.

**Preamble: Long Preamble** is the default setting. (High traffic networks should use the shorter preamble type.) The preamble defines the length of the CRC block (Cyclic Redundancy Check is a common technique for detecting data transmission errors) used in communication between the Access Point and the roaming wireless Network adapters.

### **Authentication:**

**Open System** - communicates the key across the network

**Shared Key** - devices must have identical WEP settings to communicate

**Auto** - automatically adjusts to the Authentication mode of the wireless client



**SSID Broadcast:** (Service Set Identifier) Enable or Disable (default) the broadcast of the SSID name across the network. SSID is a name that identifies a wireless network. All devices on a network must use the same SSID to establish communication.


**Client Security:** Disabled is the default setting. Enabling this setting ensures that the wireless clients will be secure and their files and folders will not be available to other wireless clients

**Antenna selection:** Choose Left, Right or Diversity. Diversity is the default selection. By choosing which antenna is active, you can more selectively configure your network.

**Antenna transmit power:** Default is the default setting. Select the range you desire for your AP transmission. If you do not want the signal to range too far, you can limit the distance with this tool. This may be helpful in securing your network.

## Using the Configuration Menu

### Advanced > Filters

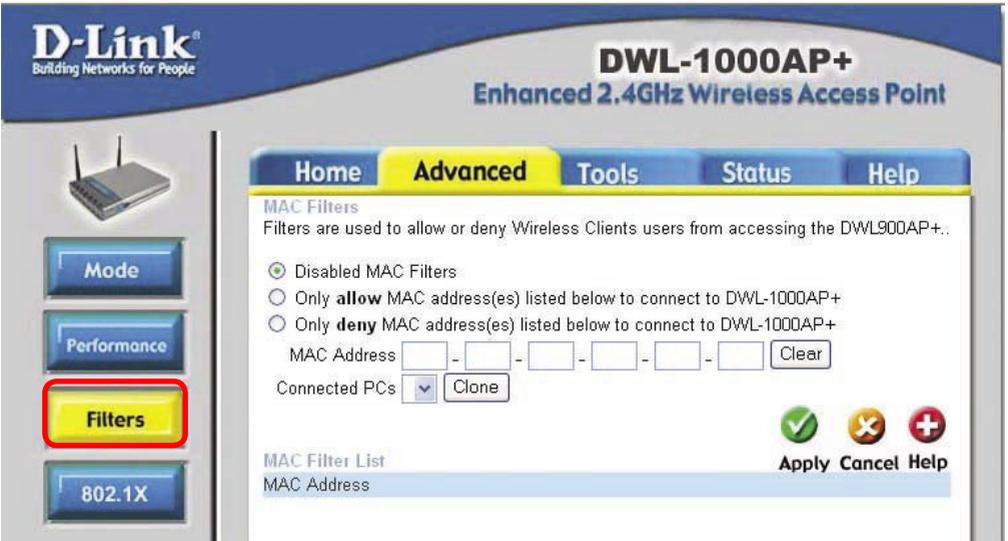

The screenshot shows the configuration interface for a D-Link DWL-1000AP+ Enhanced 2.4GHz Wireless Access Point. The interface is divided into several sections:


- Header:** D-Link logo with the tagline "Building Networks for People" and the product name "DWL-1000AP+ Enhanced 2.4GHz Wireless Access Point".
- Navigation:** A sidebar on the left contains buttons for "Mode", "Performance", "Filters" (highlighted with a red border), and "802.1X". The top of the main panel has tabs for "Home", "Advanced" (selected), "Tools", "Status", and "Help".
- MAC Filters Section:**
  - Text: "Filters are used to allow or deny Wireless Clients users from accessing the DWL900AP+.."
  - Radio buttons:  Disabled MAC Filters,  Only **allow** MAC address(es) listed below to connect to DWL-1000AP+,  Only **deny** MAC address(es) listed below to connect to DWL-1000AP+
  - Form: A "MAC Address" field with six input boxes separated by dashes, followed by a "Clear" button.
  - Form: A "Connected PCs" dropdown menu and a "Clone" button.
  - Buttons: "Apply", "Cancel", and "Help" (with a red plus icon).
- MAC Filter List Section:**
  - Text: "MAC Filter List"
  - Text: "MAC Address"

Use **MAC Filters** to allow or deny computers by their MAC addresses from accessing the DWL-1000AP+. You can either manually add a MAC address or select the MAC address from the list of clients that are currently connected to the Broadband Router. The default setting is **Disabled MAC Filters**.

**MAC Filter List:** This list will display the MAC addresses that are in the selected filter

# Using the Configuration Menu

## Advanced > 802.1x

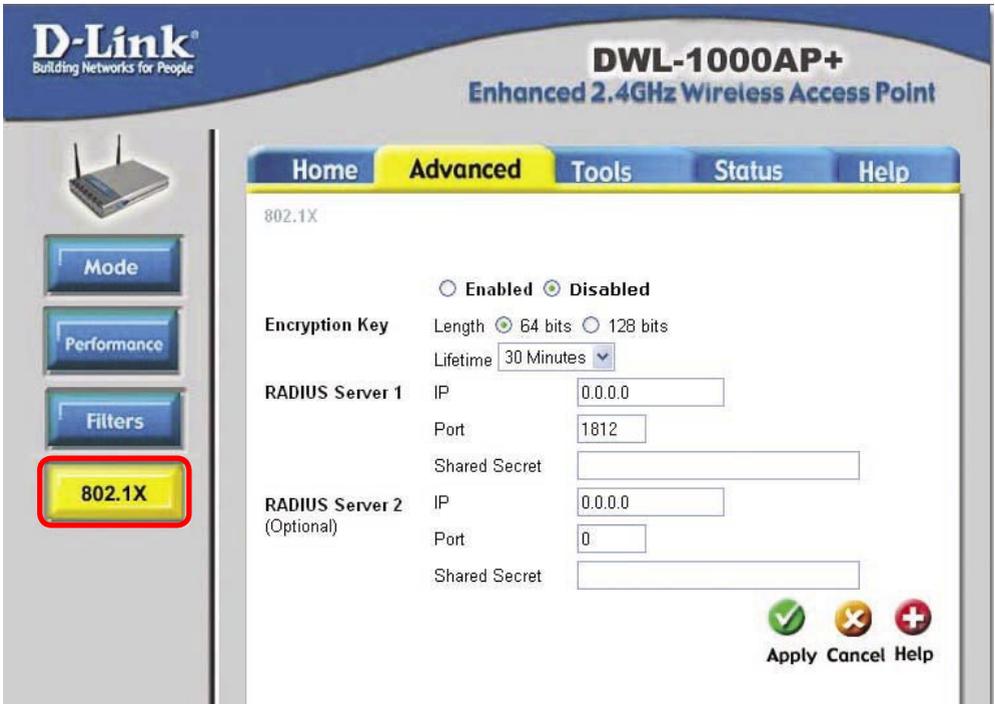

**Disabled** is the default selection for 802.1x protocol. Select **Enabled** to enable it.

**Encryption Key:** Select the key length, either 64 bits or 128 bits.

**Lifetime:** Select 5, 15, 30 minutes, or 1 or 8 hours, or 1 day for the authentication period. After this period expires, a new key will automatically be generated.

### **Radius Server 1**

**IP:** Enter the IP Address of the Radius Server

**Port:** Enter the port number that your Radius Server uses for Authentication. The default setting of 1812 is the port setting for many Radius Servers

**Shared Secret:** Enter the **Shared Secret**. The shared secret must be the same as the shared secret on your radius server.

**Radius Server 2:** Optional. If you have a second radius server, you will input the same information as shown above.

# Using the Configuration Menu

## Tools > Admin

The screenshot shows the configuration interface for a D-Link DWL-1000AP+ Enhanced 2.4GHz Wireless Access Point. The interface has a blue header with the D-Link logo and the device name. Below the header is a navigation menu with tabs for Home, Advanced, Tools (selected), Status, and Help. On the left side, there is a sidebar with icons for Admin (highlighted with a red box), System, and Firmware. The main content area is titled 'Administrator Settings' and contains the following fields:

- New Password: [password field]
- Confirm Password: [password field]
- SNMP:  Enabled  Disabled
- System Location: [text field]
- System Contact: [text field]
- Community: [text field]
- Trap Receiver 1: [text field with value 0.0.0.0]
- 2: [text field with value 0.0.0.0]
- 3: [text field with value 0.0.0.0]

At the bottom right of the form, there are three buttons: Apply (with a green checkmark icon), Cancel (with a red X icon), and Help (with a red plus icon).

**SNMP** (Simple Network Management Protocol) is a widely used network monitoring and control protocol. The DWL-1000AP+ supports SNMP V1. SNMP allows one computer on the network (the administrator) to monitor the devices on the network and to perform management functions.

**New Password:** Enter the new password

**Confirm Password:** Re-enter the password to confirm it

**Enabled** is the default selection. Select **Disabled** to disable it.

**System Location:** enter a name for information only (e.g., "Accounting")

**System Contact:** enter a name for information only (e.g., "John")

**Community:** If you enter a community "name" here, you must enter the same "name" on the SNMP tool before you can use the management functions

**Trap Receiver:**

**1:** enter IP address of the computer that will receive trouble alerts

**2:** enter IP address of the computer that will receive trouble alerts

**3:** enter IP address of the computer that will receive trouble alerts

# Using the Configuration Menu

## Tools > System

The screenshot shows the web-based configuration interface for a D-Link DWL-1000AP+ Enhanced 2.4GHz Wireless Access Point. The interface has a blue header with the D-Link logo and the product name. Below the header is a navigation bar with tabs for Home, Advanced, Tools (selected), Status, and Help. On the left side, there is a sidebar with three buttons: Admin (yellow), System (blue, highlighted with a red border), and Firmware (blue). The main content area is titled 'Administrator Settings' and contains two password fields: 'New Password' and 'Confirm Password', both with masked characters. Below this is the 'SNMP' section, which has a radio button for 'Enabled' (selected) and 'Disabled'. There are three text input fields for 'System Location', 'System Contact', and 'Community'. At the bottom of the SNMP section, there are three 'Trap Receiver' fields, each with the IP address '0.0.0.0'. In the bottom right corner, there are three icons: a green checkmark for 'Apply', a red X for 'Cancel', and a red plus sign for 'Help'.

**Save Settings:** The current system settings can be saved as a file onto the local hard drive.

**Load Settings:** The saved file or any other saved setting file can be loaded back on the Access Point. To reload a system settings file, click on **Browse** to browse the local hard drive and locate the system file to be used. Click **Load** when you have selected the file to be loaded back onto the Access Point.

**Restore:** You may also reset the Access Point back to factory settings by clicking on Restore. Make sure to save the unit's settings before clicking on **Restore**.

# Using the Configuration Menu

## Tools > Firmware

The screenshot shows the D-Link configuration interface for the DWL-1000AP+ Enhanced 2.4GHz Wireless Access Point. The top navigation bar includes Home, Advanced, Tools, Status, and Help. The 'Tools' tab is selected. On the left sidebar, the 'Firmware' button is highlighted with a red box. The main content area is titled 'Firmware Upgrade' and contains the following text: 'Click here to check for the latest firmware available for the D-Link AirPlus DWL-1000AP+ Wireless Access Point. To upgrade the firmware, locate the folder where the firmware was downloaded on the hard drive using the Firmware button. Once you have found the file to be used, click the Apply button below to start the firmware upgrade.' Below this text, it displays 'Current Firmware Version: 0.10' and 'Firmware Date: Thu, 07 Nov 2002'. There is an empty text input field followed by a 'Browse...' button. At the bottom right, there are three buttons: 'Apply' (with a green checkmark icon), 'Cancel' (with a red X icon), and 'Help' (with a red plus icon).

### Firmware Upgrade

You can upgrade the firmware of the Access Point at this page. Make sure the firmware you want to use is on the local hard drive of the computer. Click on Browse to browse the local hard drive and locate the firmware to be used for the update. Please check the D-Link support site for firmware updates at <http://support.dlink.com>. Once you have found the firmware to be used, click **Apply**.

## Status > Device Info

The screenshot shows the D-Link configuration interface for the DWL-1000AP+ Enhanced 2.4GHz Wireless Access Point. The top navigation bar includes Home, Advanced, Tools, Status, and Help. The 'Status' tab is selected. On the left sidebar, the 'Device Info' button is highlighted with a red box. The main content area is titled 'Device Information' and displays the following data: 'Firmware Version 0.10 , Thu, 07 Nov 2002'. Under the 'Ethernet' section, it lists: 'MAC Address 00-12-34-56-78-90', 'IP Address 192.168.0.50', 'Subnet Mask 255.255.255.0', and 'Gateway 0.0.0.0'. Under the 'Wireless' section, it lists: 'MAC Address 00-40-05-BF-0B-E3', 'SSID default', 'Encryption Function Disabled', 'Channel 6', and 'AP mode Access Point'. At the bottom right, there is a 'Help' button with a red plus icon.

This screen displays the current settings of the DWL-1000AP+.

# Using the Configuration Menu

## Status > Log

The screenshot shows the D-Link DWL-1000AP+ Enhanced 2.4GHz Wireless Access Point web interface. The navigation menu at the top includes Home, Advanced, Tools, Status, and Help. The Status menu is selected, and the View Log page is displayed. The View Log page shows a table of log entries with columns for Time and Message. The Log button in the left sidebar is highlighted with a red box.

Time	Message
Nov/12/2002 10:34:13	System started
Nov/12/2002 10:34:13	AP mode start. Channel=6 SSID:default

### View Log

The Access Point keeps a running log of events and activities occurring on the AP. If the device is rebooted, the logs are automatically cleared. You may save the log files under Log Setting.

**First Page** - The first page of the log.

**Last Page** - The last page of the log.

**Previous** - Moves back one log page.

**Next** - Moves forward one log page.

**Clear** - Clears the logs completely.

**Log Settings** - Brings up the page to configure the logs.

### Log Settings


Not only does the Access Point display the logs of activities and events, it can be setup to send these logs to another location. The logs can be sent via email to an email account.

**SMTP Server** - The address of the SMTP server that will be used to send the logs.

**Send to** - The email address the logs will be sent to. Click on Email Log Now to send the email.

# Using the Configuration Menu

## Status > Stats

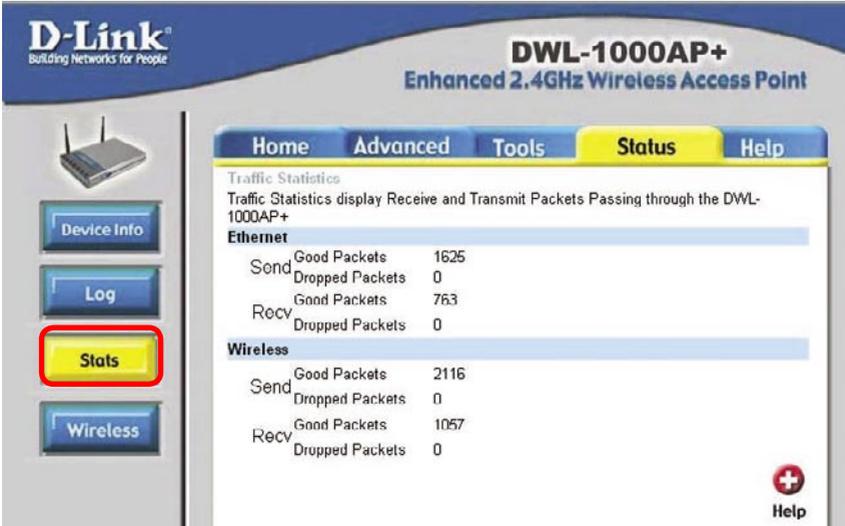

**D-Link**  
Building Networks for People

**DWL-1000AP+**  
Enhanced 2.4GHz Wireless Access Point

Home Advanced Tools **Status** Help

Traffic Statistics  
Traffic Statistics display Receive and Transmit Packets Passing through the DWL-1000AP+

**Ethernet**

Send	Good Packets	1625
	Dropped Packets	0
Recv	Good Packets	763
	Dropped Packets	0

**Wireless**

Send	Good Packets	2116
	Dropped Packets	0
Recv	Good Packets	1057
	Dropped Packets	0

Help

## Traffic Statistics

The Access Point keeps statistics of traffic that passes through it. You are able to view the amount of packets that passes through the Router on both the Ethernet portion of the network and the Wireless portion of the network. The traffic counter will reset if the device is rebooted.

## Status > Wireless



**D-Link**  
Building Networks for People

**DWL-1000AP+**  
Enhanced 2.4GHz Wireless Access Point

Home Advanced Tools **Status** Help

Connected Wireless PCs List

Connected Time	MAC Address
----------------	-------------


Help

## Connected Wireless PCs List

This list displays the MAC Addresses of connected PC's and the length of time that they have been connected.

# Using the Configuration Menu

## Help

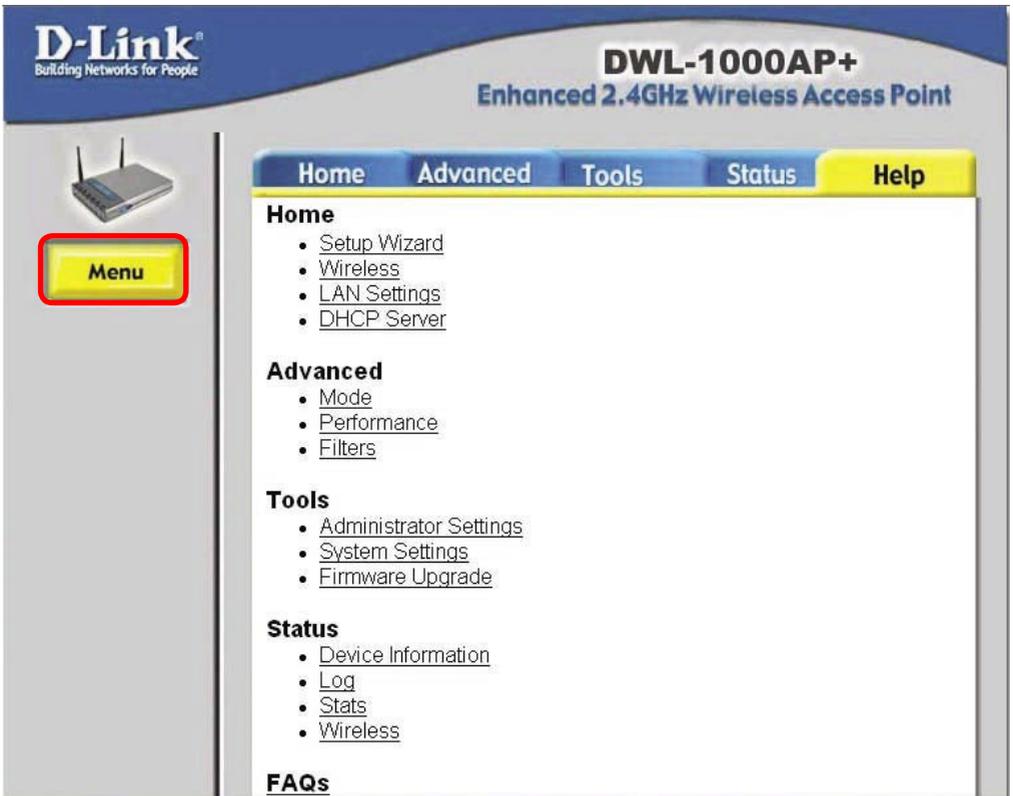

**D-Link**  
Building Networks for People

**DWL-1000AP+**  
Enhanced 2.4GHz Wireless Access Point

Home Advanced Tools Status **Help**

**Menu**

**Home**

- [Setup Wizard](#)
- [Wireless](#)
- [LAN Settings](#)
- [DHCP Server](#)

**Advanced**

- [Mode](#)
- [Performance](#)
- [Filters](#)

**Tools**

- [Administrator Settings](#)
- [System Settings](#)
- [Firmware Upgrade](#)

**Status**

- [Device Information](#)
- [Log](#)
- [Stats](#)
- [Wireless](#)

**FAQs**

Select from the menu above for extra help.

# Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DWL-1000AP+. We cover various aspects of the network including network adapters. *(The examples below are illustrated in Windows XP. If you have another operating system, these solutions will still apply although the appearance on your computer screen may differ.)*


**Note:** It is recommended that you use an Ethernet connection to configure the DWL-1000AP+ Access Point.

## 1. The computer used to configure the DWL-1000AP+ cannot access the Configuration menu.

- Check that the **Ethernet LED** on the DWL-1000AP+ is **ON**. If the **LED** is not **ON**, check that the cable for the Ethernet connection is securely inserted.
- Check that the Ethernet Adapter is working properly. Please see item 3 (**Check that the drivers for the network adapters are installed properly**) in this **Troubleshooting** section to check that the drivers are loaded properly.
- Check that the **IP Address** is in the same range and subnet as the DWL-1000AP+. Please see **Checking the IP Address in Windows XP** in the **Networking Basics** section of this

*Note: The IP Address of the DWL-1000AP+ is 192.168.0.50. All the computers on the network must have a unique IP Address in the same range, e.g., 192.168.0.x. Any computers that have identical IP Addresses will not be visible on the network. They must all have the same subnet mask, e.g., 255.255.255.0*

Do a **Ping test** to make sure that the DWL-1000AP+ is responding. Go to **Start>Run>Type Command>Type ping 192.168.0.50**. A successful ping will show four replies.

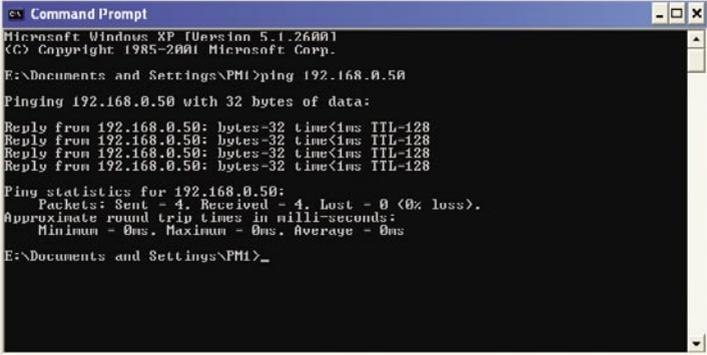

```
Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

F:\Documents and Settings\PMI>ping 192.168.0.50

Pinging 192.168.0.50 with 32 bytes of data:

Reply from 192.168.0.50: bytes=32 time<1ms TTL=128

Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

F:\Documents and Settings\PMI>
```

## Troubleshooting (continued)

### 2. The wireless client cannot access the Internet in the Infrastructure mode.

- Make sure the wireless client is associated and joined with the correct Access Point. To check this connection: **Right-click** on the **Local Area Connection icon** in the taskbar > select **View Available Wireless Networks**. The **Connect to Wireless Network** screen will appear. Please make sure you have selected the correct available network, as shown in the illustrations below.



- Check that the **IP Address** assigned to the wireless adapter is within the same **IP Address range** as the access point and gateway. *Since the DWL-1000AP+ has an IP Address of 192.168.0.50, wireless adapters must have an IP Address in the same range, e.g., 192.168.0.x. Each device must have a unique IP Address; no two devices may have the same IP Address. The subnet mask must be the same for all the computers on the network.)* To check the **IP Address** assigned to the wireless adapter, **double-click** on the **Local Area Connection icon** in the taskbar > select the **Support tab** and the **IP Address** will be displayed. (Please refer to **Checking the IP Address** in the **Networking Basics** section of this manual.)
- If it is necessary to assign a **Static IP Address** to the wireless adapter, please refer to the instructions on the following page.

## Troubleshooting (continued)


### Assigning a Static IP Address in Windows XP/2000

**Note: Residential Gateways/Broadband Routers will automatically assign IP Addresses to the computers on the network, using DHCP (Dynamic Host Configuration Protocol) technology. If you are using a DHCP-capable Gateway/Router you will not need to assign Static IP Addresses.**

If you are not using a DHCP capable Gateway/Router, or you need to assign a Static IP Address, please follow these instructions:

- Go to **Start**

- Double-click on **Control Panel**

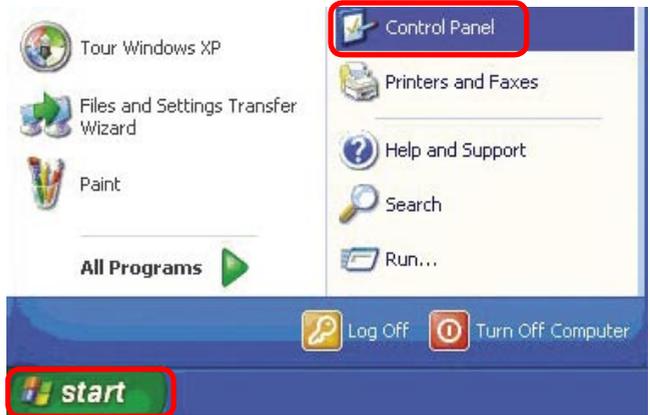


- Double-click on **Network Connections**



## Troubleshooting (continued)


### Assigning a Static IP Address in Windows XP/2000

- Right-click on **Local Area Connections**
- Double-click on **Properties**

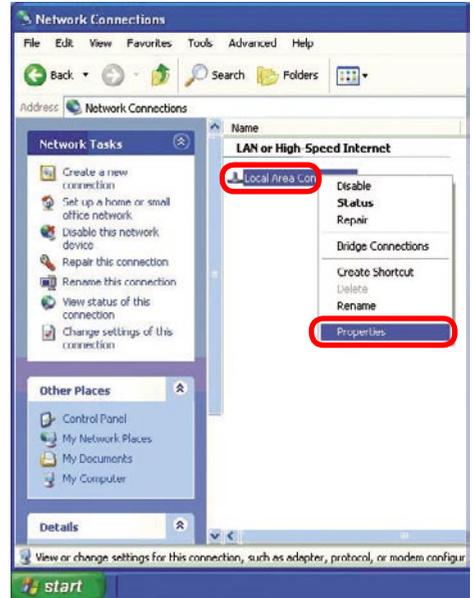

### Assigning a Static IP Address in Windows XP/2000

- Click on **Internet Protocol (TCP/IP)**
- Click **Properties**

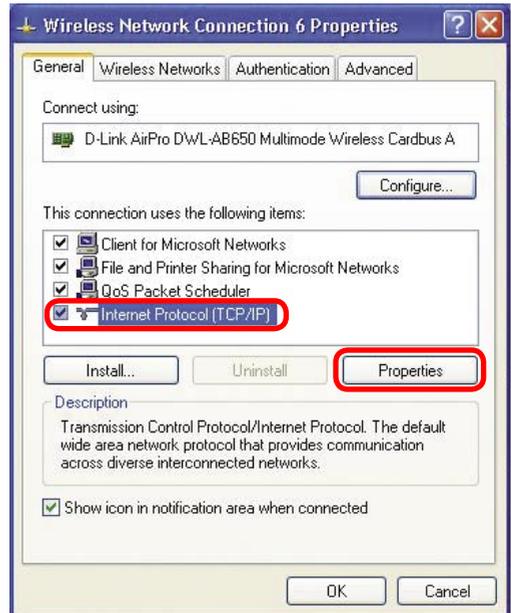

## Troubleshooting (continued)

### Assigning a Static IP Address in Windows XP/2000

- In the window below, select **Use the following IP address**. Input your **IP address and subnet mask**. (The IP Addresses on your network must be within the same range. For example, if one computer has an IP Address of 192.168.0.2, the other computers should have IP Addresses that are sequential, like 192.168.0.3 and 192.168.0.4. The subnet mask must be the same for all the computers on the network.)

#### IP Address:

e.g., 192.168.0.2

#### Subnet Mask:

255.255.255.0


#### Default Gateway:

Enter the IP address of the gateway.

#### Select **Use the following DNS server address**.

Enter the IP address of the DNS Server.

Click **OK**

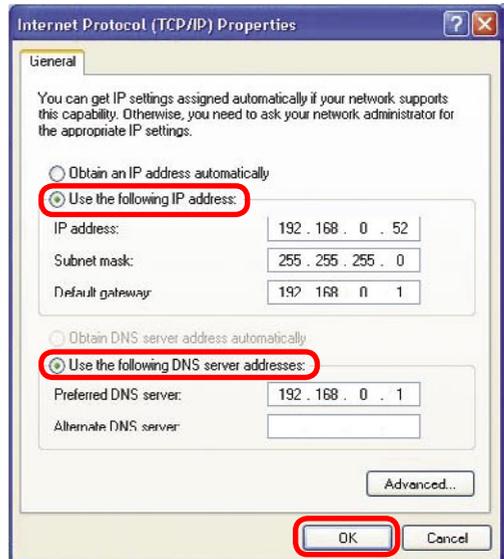


You have completed the assignment of a Static IP Address. (You do not need to assign a Static IP Address if you have a DHCP Server.)

## Troubleshooting (continued)


### 3. Check that the drivers for the network adapters are installed properly.

You may be using different network adapters than those illustrated here, but this procedure will remain the same, regardless of the type of network adapters you are using.

- Go to **Start** > Right-click on **My Computer** > Click **Properties**

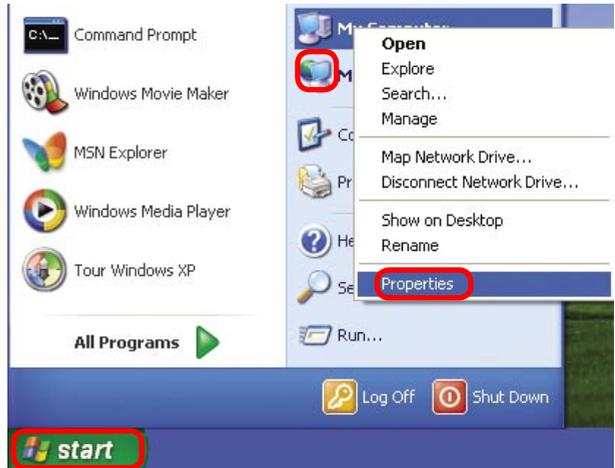


- Select the **Hardware** Tab

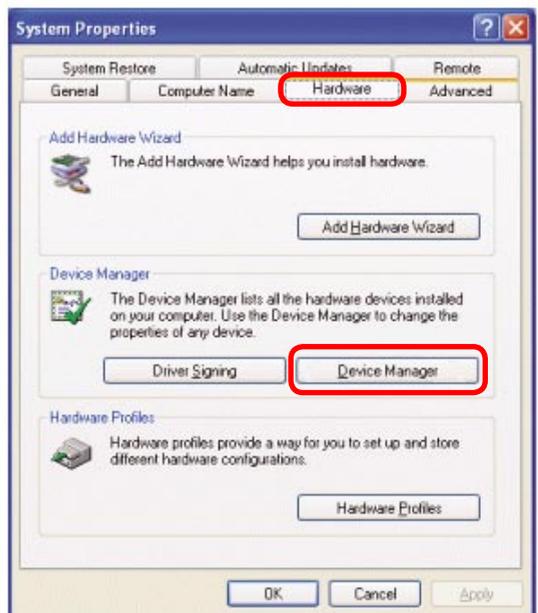

- Click **Device Manager**

## Troubleshooting (continued)

- Double-click on **Network Adapters**
- Right-click on **D-Link DFE-530TX+ Ethernet PCI Adapter**
- Select **Properties** to check that the drivers are installed properly

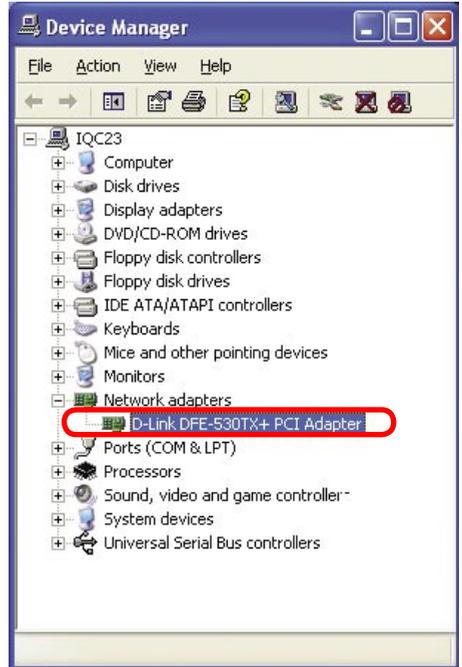

- Look under **Device Status** to check that the device is working properly



- Click **OK**

## Troubleshooting *(continued)*

### 4. What variables may cause my wireless products to lose reception?

D-Link products let you access your network from virtually anywhere you want. However, the positioning of the products within your environment will affect the wireless range. Please refer to **Installation Considerations** in the **Wireless Basics** section of this manual for further information about the most advantageous placement of your D-Link wireless products.

### 5. Why does my wireless connection keep dropping?

- Antenna Orientation- Try different antenna orientations for the DWL-1000AP+. Try to keep the antenna at least 6 inches away from the wall or other objects.
- If you are using 2.4GHz cordless phones, X-10 equipment or other home security systems, ceiling fans, and lights, your wireless connection will degrade dramatically or drop altogether. Try changing the Channel on your Router, Access Point and Wireless adapter to a different Channel to avoid interference.
- Keep your product away (at least 3-6 feet) from electrical devices that generate RF noise, like microwaves, Monitors, electric motors, etc.

### 6. Why can't I get a wireless connection?

If you have enabled Encryption on the DWL-1000AP+, you must also enable encryption on all wireless devices in the network in order to establish a wireless connection.

- The Encryption settings are: 64, 128, or 256 bit. Make sure that the encryption bit level is the same on the DWL-1000AP+ and all the devices on the network.
- Make sure that the SSID on the Router, the DWL-1000AP+ and all the devices on the network are exactly the same. If they are not, wireless connection will not be established.
- Check that the correct EAP type for 802.1x authentication is selected for the wireless client. If using certification, check that the correct certification is properly installed.

## Troubleshooting (continued)

### 7. Why is load balancing not working properly within a group of access points?

- Check that the access points are connected through the ethernet cable. Please keep in mind that the IAPP (Inter Access Point Protocol) is passed only through the ethernet connection.
- Check that the same **Group Name** is specified in the setting for each access point.

### 8. Why doesn't the back-up access point take over for the primary access point when the primary access point is not functioning?

- Check that both the primary and the backup access point are connected to each other as well as the ethernet backbone. (Also, please remember that IAPP-*Inter Access Point Protocol*-will not function unless the access points are connected with an ethernet cable.)
- Check that the backup access point is configured with the correct Ethernet MAC address of the primary access point.
- Check that the correct EAP type for 802.1x authentication is selected for the wireless client. If using certification, check that the correct certification is properly installed.

# Technical Specifications

## Standards

- IEEE 802.11b
- IEEE 802.1x
- IEEE 802.3
- IEEE 802.3u

## Diagnostic LED

- Power
- Diagnostic
- WLAN (Wireless Local Area Network)
- (2) Local Network (Ethernet)

## Temperature

- Operating: 0°C to 55°C (32°F to 131°F)
- Storing: -20°C to 75°C (-4°F to 167°F)

## Humidity:

- 95% maximum, non-condensing

## External Antenna Type:

- 2.0dB gain with reverse SMA connector

## Power Input:

- External Power Supply: DC5V, 2.0A

## Device Management:

- Web-based: Internet Explorer v. 6 or later; Netscape Navigator v 6x or later; or other Java-enabled browsers.

## Safety & Emissions:

- FCC
- UL

## Physical Dimensions:

- L = 9.25 inches (233 mm)
- W = 6.5 inches (165 mm)
- H = 1.38 inches (35 mm)

## Port:

- (2) 10/100 Mbps Fast Ethernet (Auto-MDIX)

## Technical Specifications

### Data Rates:\* (with Automatic Fallback)

- 1, 2, 5.5, 11Mbps (22Mbps in proprietary Turbo mode)

### Encryption:

- Supports 64-bit, 128-bit or 256-bit WEP encryption (RC4)

### Frequency Range:

- 2.4 – 2.4835 GHz

### Modulation Techniques:

- Barker (1Mbps/0db)
- Barker (2Mbps/3db)
- CCK (5.5Mbps/5.5db)
- PBCC (5.5Mbps/8.5db)
- CCK (11Mbps/8.5db)
- PBCC (11Mbps/4.5db)
- PBCC (22Mbps/8.5db)

### Modulation Technology:

- PBCC - Packet Binary Convolutional Coding
- Direct Sequence Spread Spectrum (DSSS)
- 11-chip Barker sequence

### Transmitter Output Power:

- 15dBm  $\pm$  2dB

### Weight:

- 2.0 lbs. (907g)

\*Maximum wireless signal rate derived from IEEE Standard 802.11b specifications. Actual data throughput will vary Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead lower actual data throughput rate.

# Contacting Technical Support

You can find the most recent software and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States for the duration of the warranty period on this product.

U.S. customers can contact D-Link technical support through our web site, or by phone.

## **D-Link Technical Support over the Telephone:**

(877) 453-5465

24 hours a day, seven days a week.

## **D-Link Technical Support over the Internet:**

<http://support.dlink.com>

*When contacting technical support, please provide the following information:*

- Serial number of the unit
- Model number or product name
- Software type and version number

# Warranty and Registration

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. (“D-Link”) provides this Limited warranty for its product only to the person or entity that originally purchased the product from:

- D-Link or its authorized reseller or distributor and
- Products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, addresses with an APO or FPO.

**Limited Warranty:** D-Link warrants that the hardware portion of the D-Link products described below will be free from material defects in workmanship and materials from the date of original retail purchase of the product, for the period set forth below applicable to the product type (“Warranty Period”), except as otherwise stated herein.

3-Year Limited Warranty for the Product(s) is defined as follows:

Hardware (excluding power supplies and fans)	Three (3) Years
Power Supplies and Fans, One-to-One Deal	Three (3) Years
Spare parts and spare kits	Ninety (90) days

D-Link’s sole obligation shall be to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund at D-Link’s sole discretion. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or have an identical make, model or part. D-Link may in its sole discretion replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement Hardware will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

**Limited Software Warranty:** D-Link warrants that the software portion of the product (“Software”) will substantially conform to D-Link’s then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days (“Warranty Period”), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link’s sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link’s functional specifications for the Software or to refund at D-Link’s sole discretion. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Software will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

**Non-Applicability of Warranty:** The Limited Warranty provided hereunder for hardware and software of D-Link’s products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold “As-Is” without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

**Submitting A Claim:** The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same.



- The original product owner must obtain a Return Material Authorization (“RMA”) number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided.
- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the Product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery (“COD”) is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to **D-Link Systems, Inc., 53 Discovery Drive, Irvine, CA 92618**. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link, with shipping charges prepaid. Expedited shipping is available if shipping charges are prepaid by the customer and upon request.

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link’s reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

**What Is Not Covered:** This limited warranty provided by D-Link does not cover: Products, if in D-Link’s judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. Repair by anyone other than D-Link or an Authorized D-Link Service Office will void this Warranty.

**Disclaimer of Other Warranties:** EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED “AS-IS” WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

**Limitation of Liability:** TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK’S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

**Governing Law:** This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state.

**Trademarks:** D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective manufacturers or owners.

**Copyright Statement:** No part of this publication or documentation accompanying this Product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976. Contents are subject to change without prior notice. Copyright© 2002 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

**CE Mark Warning:** This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

**FCC Statement:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received,

**IMPORTANT NOTE:**

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of about 8 inches (20cm) between

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

**Register your D-Link product online at <http://support.dlink.com/register/>**