


Quick Install Guide Full HD Mini Fixed-Dome Network Camera

This document will guide you through the basic installation process for your new D-Link Network Camera.

DCS-6210



Quick Installation Guide

DCS-6210 Quick Install Guide

This installation guide provides basic instructions for installing the DCS-6210 Full HD Mini Fixed-Dome Network Camera on your network. For additional information about how to use the camera, please see the User's Manual, which is available on the CD included in this package or on the D-Link support website.

Installation Steps


- 1. Verify the package contents against the list below.
- 2. Hardware Overview.
- 3. SD Card Installation.
- 4. Hardware Installation.
- 5. Configuration with Wizard.
- 6. Adjusting the 3-axis gimbal.

1. Package Contents

- Full HD Mini Fixed-Dome Network Camera
- Power Adaptor
- CAT5 Ethernet Cable
- Quick Install Guide
- Installation CD with D-ViewCam[™]
- Mounting Kit with Security Wrench

If any of the above items are missing, please contact your reseller.

Safety Notice: Installation and servicing should be done by certified technicians so as to conform to all local codes and prevent voiding your warranty.

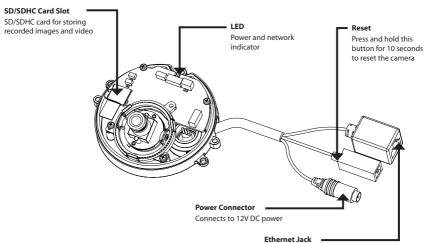

2. Hardware Overview

RJ-45 connector for Ethernet which can also be used to power the camera using Power over Ethernet (PoE)

3. SD Card Installation

Disassemble the Camera

Open the camera enclosure by loosening the 3 screws. Lift the dome off the base of the camera.

Install the SD Card


Push the SD card into the camera with the gold contacts oriented towards the base of the camera. To eject the SD card, push the SD card into the slot.

D-Link DCS-6210 Quick Install Guide

4. Hardware Installation


Mounting Installation

Please see the User Manual for detailed instructions regarding installation and mounting of the camera.

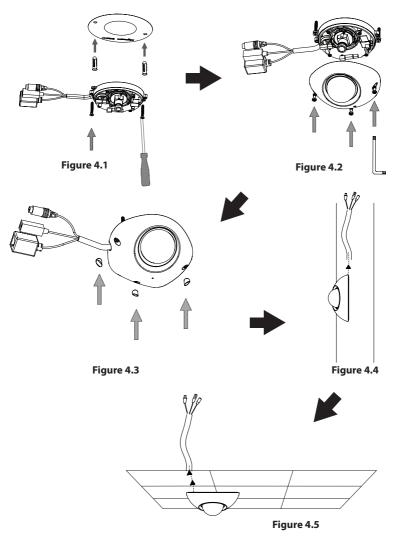

General Connection Using 12V DC Power Adapter

- 1. Connect the network camera to a switch via an Ethernet cable.
- 2. Connect the supplied power cable from the camera to a power outlet.

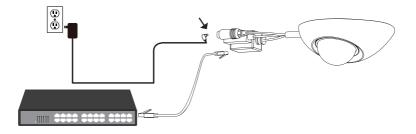

Connection with a PoE Switch

If you are using a PoE switch, connect the camera to the switch via an Ethernet cable, which will provide transmission of both power and data over a single cable.



5. Configuration with Wizard

Insert the DCS-6210 CD into your computer's CD-ROM drive to begin the installation. If the **Autorun** function on your computer is disabled, or if the **D-Link Launcher** fails to start automatically, click **Start > Run**. Type **D:\autorun.exe**, where *D*: represents the drive letter of your CD-ROM drive.



Click on the **D-Link Setup Wizard SE** icon that was created in your Windows Start menu.

The Setup Wizard will appear and display the MAC address

Start > Programs > D-Link > Setup Wizard SE



and IP address of your camera(s). If you have a DHCP server on your network, a valid IP address will be displayed. If your network does not use a DHCP server, the network camera's default static IP (192.168.0.20) will be displayed. D-Link SECURIC Click the Wizard button to continue. D-Link SECURI Enter the Admin ID and password. When logging in for the first time, the default Admin ID is **admin** with the password left blank. Click **Next** to proceed to the next page. D-Link Select **DHCP** if your camera obtains an IP address Set IP Add automatically when it boots up. Select Static IP if the camera will use the same IP address each time it is started. Click **Next** to proceed to the next page. D-Link SECUDI Take a moment to confirm your settings and click Restart.

Viewing Camera via Web Browser Click on the D-Link Setup Wizard SE icon that was created

in your Windows Start menu.

Start > Programs > D-Link > Setup Wizard SE

Select the camera and click the Link button to access the web configuration.

The Setup Wizard will automatically open your web browser to the IP address of the camera.

Enter **admin** as the default username and leave the password blank. Click **OK** to continue.

This section shows your camera's live video. You can select your video profile and view or operate the camera. For additional information about web configuration, please refer to the user manual included on the CD-ROM or the D-Link website.












6. Adjusting the 3-Axis Gimbal

Adjust the Viewing Angle of the 3-Axis Gimbal


Turn the lens module left and right until the desired position is achieved.

Turn the lens up and down until the desired position is achieved.

Turn the lens to adjust the camera's image until the desired orientation is achieved.





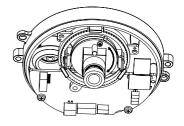

Notes

Notes

Technical Support

D-Link's website contains the latest user documentation and software updates for D-Link products.

U.S. and Canadian customers can contact D-Link Technical Support through our website or by phone.

United States

Telephone (877) 354-6555

World Wide Web

http://support.dlink.com

Canada

Telephone (877) 354-6560

World Wide Web

http://support.dlink.ca



Version 1.0 October 4, 2012 RMN0100932

Copyright ©2012 D-Link Corporation/D-Link Systems, Inc. All rights reserved. D-Link and the D-Link logo are registered trademarks of D-Link Corporation or its subsidiaries in the United States and other countries. Other trademarks are the property of their respective owners. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead lower actual data throughput rate. Product specifications, size and shape are subject to change without notice, and actual product appearance may differ from that depicted on the packaging. Visit www.dlink.com for more details.