Quick Installation Guide

This product can be set up using any current web browser, i.e., Internet Explorer 6 or Netscape Navigator 6.2.3.



DI-514
2.4GHz Wireless

Before You Begin

- If you purchased this router to share your high-speed Internet connection with other computers, you must have either an Ethernet-based Cable or DSL modem with an established Internet account from an Internet Service Provider (ISP).
- 2. It's best to use the same computer that is connected to your modem for configuring the DI-514 Wireless Router. The DI-514 acts as a DHCP server and will assign all the necessary IP address information on your network. See Appendix at the end of this Quick Installation Guide or the Manual on the CD-ROM for setting each network adapter to automatically obtain an IP address.

Check Your Package Contents



DI-514 2.4GHz Wireless Router



CD-ROM (containing Manual and Warranty)



Ethernet (Straight Through) Cable



5V DC Power Adapter


Using a power supply with a different voltage rating will damage this product and void the warranty

If any of the above items are missing, please contact your reseller.

1

Connecting The DI-514 Wireless Router To Your Network

- A. First, connect the power adapter to the receptor at the back panel of the DI-514 and then plug the other end of the power adapter to a wall outlet or power strip. The Power LED will turn ON to indicate proper operation.
- B. 1. Power off your Cable or DSL modem; some devices may not have a on/off switch and will require you to unplug the power adapter. Now, the DI-514 should be powered on and the Cable / DSL modem should be turned off.
 - 2. Cable / DSL modem (Power Off) DI-514 (Power On)
 Connect an Ethernet cable to the Ethernet jack located on the Cable / DSL modem.
 After the Ethernet cable is securely connected, power on the Cable / DSL modem by turning on the unit or plugging in the power adapter.
 - 3. Cable / DSL modem (Power On) DI-514 (Power On) Insert the other end of the Ethernet cable to the WAN PORT on the back panel of the DI-514. The WAN LED light will illuminate to indicate proper connection. If the WAN LED is not illuminated, please go back to step B1 and repeat the instructions.
- C. Insert an Ethernet cable to LAN port 1 on the back panel of the DI-514 and an available Ethernet port on the network adapter in the computer you will use to configure the DI-514. The LED light for LAN Port 1 will illuminate to indicate proper connection. (Note: The LAN Ports on the DI-514 are Auto-MDI/MDIX. Meaning you can use a straight-through or crossover-Ethernet cable to the LAN Ports.)
- D. Computers equipped with 802.11b wireless adapters will be able to connect to the DI-514. The DWL-650+ Air Wireless Cardbus Adapter and the DWL-520+ Air Wireless PCI Adapter will be able to connect out of the box with the router using their default wireless settings.

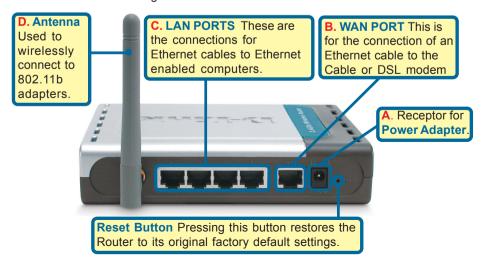




Restart Your Computer



Connecting Additional Computers To The DI-514

Using additional Ethernet (CAT5 UTP) cables, connect your Ethernet-equipped computers to the remaining Ethernet LAN ports on the back panel of the DI-514.

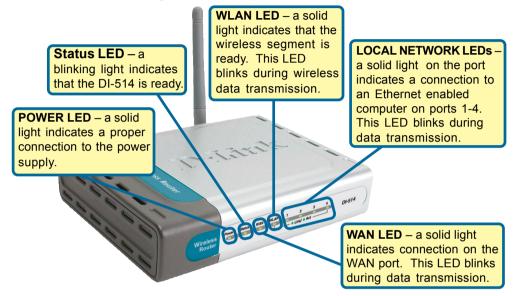

When you have completed the steps in this *Quick Installation Guide*, your connected network should look similar to this:







Using The Setup Wizard

Open your Web browser and type "http://192.168.0.1" into the URL address box. Then press the Enter or Return key.




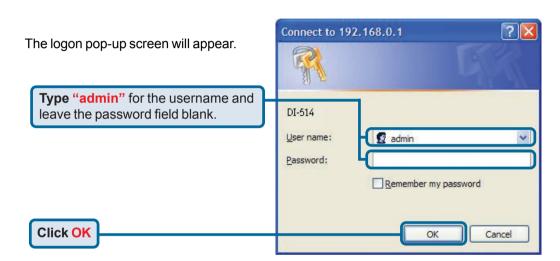

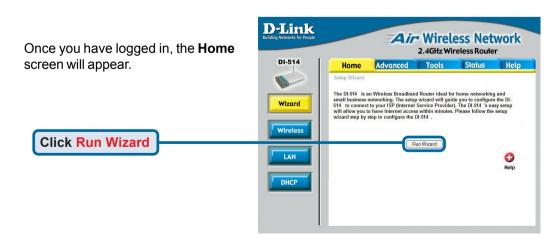



The Setup Wizard (continued)

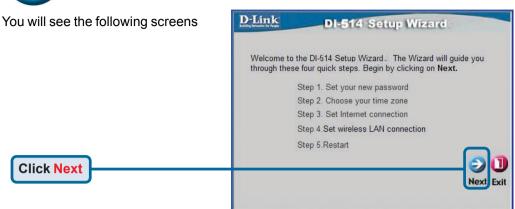


Set up your new password. You have the option to establish a password.



Click Next

Choose your time zone from the drop down list.

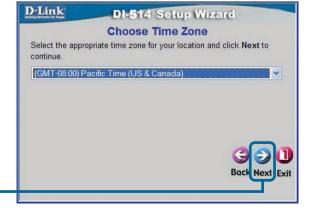

Click Next


4 Th

The Setup Wizard (continued)

A this point, the setup wizard will try to auto-detect your Internet connection type. If you have a Dynamic or PPPoE connection, you will be brought to their corresponding page.




Otherwise, you will see the following screen:

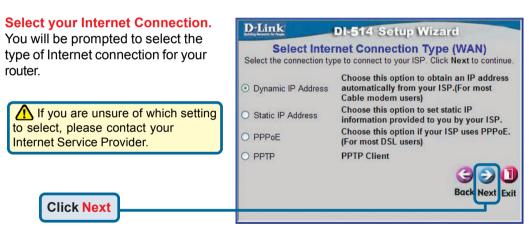

If you selected **Dynamic IP Address**, this screen will appear: (Used mainly for Cable Internet service.)

Click the "Clone MAC Address" button to automatically copy the MAC address of the network adapter in your computer. You can also manually type in the MAC address.

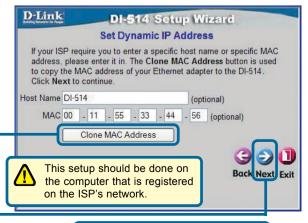

Click Next

Please continue to Wireless Setup.

If your ISP requires a **Static IP Address**, and this option is selected, then this screen will appear:

Enter the IP address information originally provided to you by your ISP. You will need to complete all the required fields.




Click Next

Please continue to Wireless Setup.

If your ISP uses **PPPoE** (Point-to-Point Protocol over Ethernet), and this option is selected, then this screen will appear: (Used mainly for DSL Internet service.)

Enter in the username and password provided to you by your ISP.

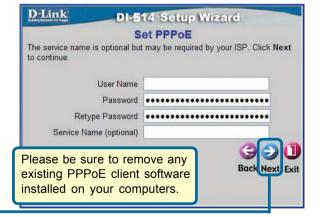

Click Next

Please continue to Wireless Setup.



The Setup Wizard (continued)

Wireless Setup

The default wireless settings for your 802.11b wireless network are:

SSID = default

Channel = 6

You can change these settings to match an existing wireless network.



Click Next


If you wish to use encryption for your 802.11b network, the DI-514 is capable of two levels of wireless encryption - 64-bit and 128-bit. By default the encryption is disabled. You can change the encryption settings for more secure wireless communication.



Click Next



Your Setup is Complete!

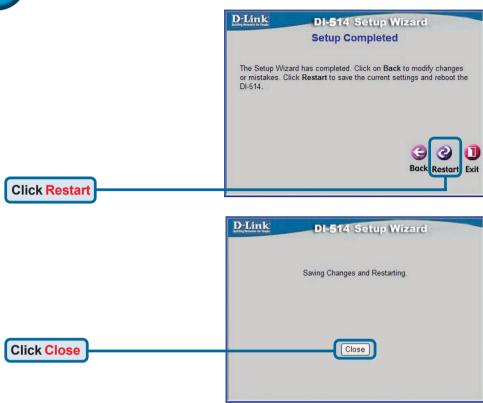


Test Internet Connection

You will be returned to the **Home** tab.

Click to Exit

Then **relaunch** your Web browser (i.e., *Internet Explorer* or *Netscape Navigator*), to link to your favorite Web site to test your Internet connection.

For additional settings or information, refer to the **Advanced**, **Tools**, or **Status** tabs on the webmanagement interface; or to the Manual located on the CD.

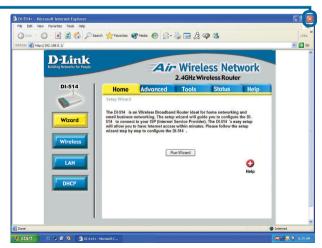


APPFNDIX


Click Properties


To connect to the network, make sure the network adapter in your computer is configured properly. Here's how to configure the network adapter to obtain an IP address automatically for the DI-514 Wireless Router.

For Microsoft Windows XP: Go to Start > right click on My Network Places > select Properties > Right click on the Network Connection associated with the Ethernet adapter and select Properties (i.e., D-Link DFE-530TX+). Click Internet Protocol (TCP/IP)

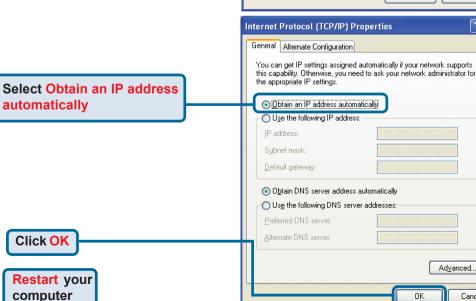



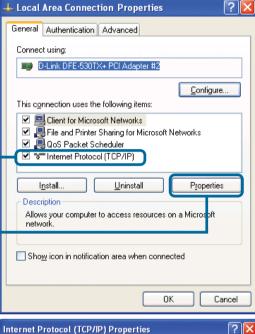

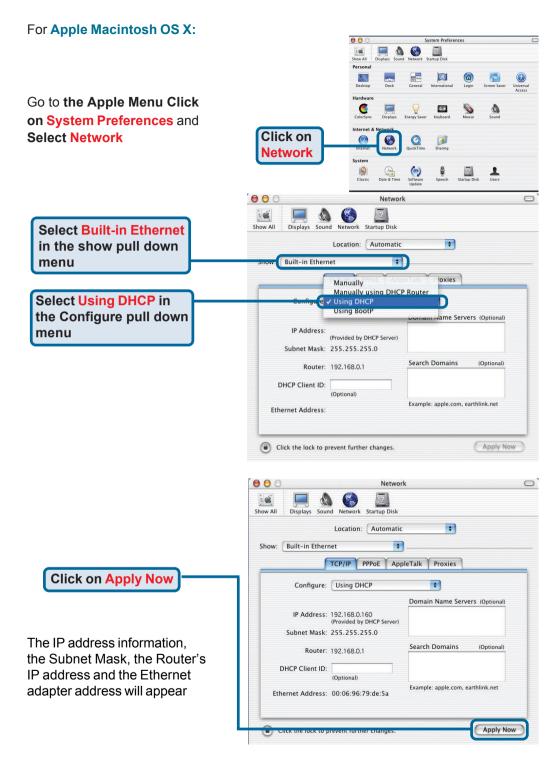

Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link technical support through our website, or by phone.

Tech Support for customers within the United States:

D-Link Technical Support over the Telephone:

(877) 453-5465

24 hours a day, seven days a week.

D-Link Technical Support over the Internet:

http://support.dlink.com email:support@dlink.com

Tech Support for customers within Canada:

D-Link Technical Support over the Telephone:

(800) 361-5265

Monday to Friday 8:30am to 9:00pm EST

D-Link Technical Support over the Internet:

http://support.dlink.ca email:support@dlink.ca

