

D-Link Quick Installation Guide

This product can be used with:
Windows XP, Me, 2000,
98 Second Edition



DSB-C110
D-Link VisualStream™
100K Pixel USB PC Camera

Before You Begin

You must have at least the following:

- Windows XP/Me/2000/98Second Edition
- One available USB Port
- CD-ROM Drive

Check Your Package Contents

These are the items included with your purchase:

If any of the below items are missing, please contact your reseller.



• DSB-C110 USB PC Camera



• CD-ROM
(containing Drivers, PDF Installation Guide,
PDF Manual, and Warranty)

1 Installing the Drivers



Run the Driver CD before you install the DSB-C110 PC Camera. The Driver CD contains an installation program that simplifies your installation process.

Turn on your computer and Insert the D-Link VisualStream™ DSB-C110 Driver CD in the CD-ROM drive.

Click **Install D-Link CIF Webcam**



If the Autorun screen does not automatically start, click on **Start > Run**, enter **"D:\Autorun.exe"** and click **OK**. "D" represents the letter of your CD-ROM drive. Replace it if your CD-ROM drive is a different letter.

Choose **Install D-Link CIF WebCam For Windows** for your Operating System




1 Installing the Drivers *(continued)*

You may see this screen during the installation. Please select the appropriate power frequency corresponding to your geographic area.



Click **Next**

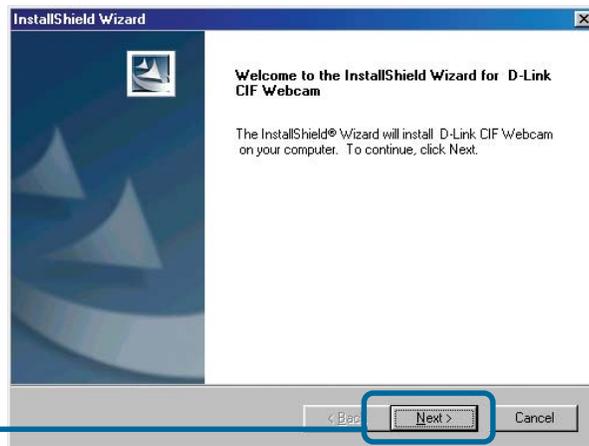

Click **Finish**



2 Connect the DSB-C110 To Your Windows-based Computer

With your computer ON, **Connect the PC Camera** to an available USB port on your USB host adapter or USB hub. (You may also use a USB extension cable for easy access)

3 Completing the Driver Installation


Windows XP Users

The image shows two screenshots from a Windows XP installation process. The first screenshot is the 'Found New Hardware Wizard' dialog box. It has a blue title bar and a dark blue background on the left. The text reads: 'Welcome to the Found New Hardware Wizard', 'This wizard helps you install software for: D-Link CIF Webcam', and 'If your hardware came with an installation CD or floppy disk, insert it now.' Below this, it asks 'What do you want the wizard to do?' with two radio button options: 'Install the software automatically (Recommended)' (which is selected) and 'Install from a list or specific location (Advanced)'. At the bottom, it says 'Click Next to continue.' and has 'Next >' and 'Cancel' buttons. A callout box on the left says 'Click Next' with a line pointing to the 'Next >' button.

The second screenshot is the 'Hardware Installation' dialog box. It has a yellow background and a blue title bar. It features a yellow warning triangle icon. The text reads: 'The software you are installing for this hardware: D-Link CIF Webcam', 'has not passed Windows Logo testing to verify its compatibility with Windows XP. [Tell me why this testing is important.]', and a bold warning: 'Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.' At the bottom, it has 'Continue Anyway' and 'STOP Installation' buttons. A callout box on the left says 'Click Continue Anyway' with a line pointing to the 'Continue Anyway' button.

3 Completing the Driver Installation (continued)

Windows XP Users

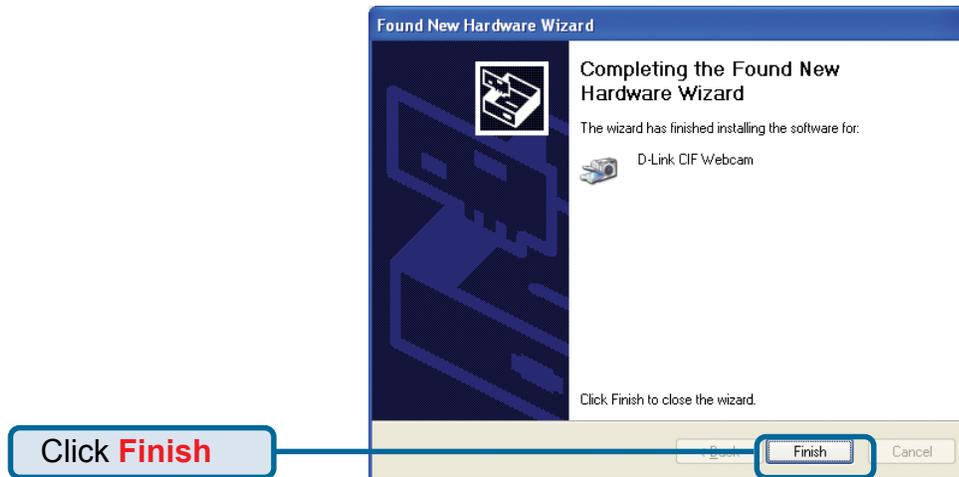

Windows 2000 & Me Users

The DSB-C110 driver installation will proceed automatically for Windows 2000 & Me users.


3 Completing the Driver Installation (continued)

Windows 98SE Users

Click **Next**



Click **Next**

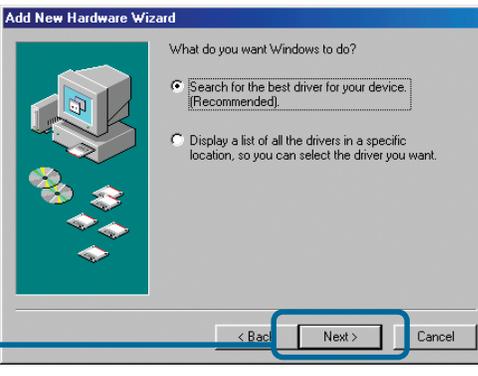

Click **Next**



3 Completing the Driver Installation (continued)

Windows 98SE Users


Click **Next**



Click **Finish**



You may see this screen during the installation. Please select the appropriate power frequency corresponding to your geographic area.

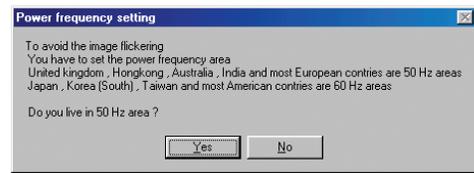

4 The Installation is Complete!

Once properly installed, you are ready to start immediately capturing images and creating video with the DSB-C110.

Please refer to the DSB-C110 Manual on the CD included with this product for information on how to install and use the ArcSoft VideoImpression and ArcSoft PhotoImpression software.

Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link technical support through our website, or by phone.

Tech Support for customers within the United States:

D-Link Technical Support over the Telephone:

(877) 453-5465

24 hours a day, seven days a week.

D-Link Technical Support over the Internet:

<http://support.dlink.com>

[email:support@dlink.com](mailto:support@dlink.com)

Tech Support for customers within Canada:

D-Link Technical Support over the Telephone:

(800) 361-5265

Monday to Friday 8:30am to 9:00pm EST

D-Link Technical Support over the Internet:

<http://support.dlink.ca>

[email:support@dlink.ca](mailto:support@dlink.ca)

