



DCS-8200LH

QUICK INSTALL GUIDE HD 180-DEGREE WI-FI CAMERA

Package Contents



DCS-8200LH HD 180-Degree Wi-Fi Camera



Power Adapter



Mounting Hardware



Quick Install Guide

If any of the above items are missing, please contact your reseller.

Minimum Requirements

Mobile Device (to use mydlink Home app)

• iPhone, iPad, or Android smartphone or tablet (Refer to the mobile app's store page to see if your device is compatible)

Network Device and Service


- A wireless router (802.11ac/n/g) with Internet service
- An e-mail account (required to create a mydlink® account)

For warranty and regulatory information, please visit: http://support.dlink.com/warranty.aspx

Product Overview Front



Back

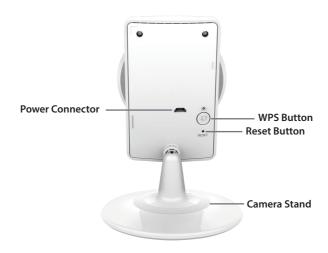

Mobile App Setup

The camera is compatible with the mydlink Home app, which allows your camera to work together with other mydlink Home compatible devices.

To install and configure your camera, follow the instructions from the Quick Install Card included with your camera.




Mount the Camera

Please refer to the steps below to assist you with mounting the camera.




 Turn the base plate on the bottom of the camera counterclockwise with a coin to remove it.

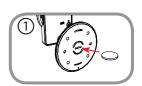


Place the base plate where you want to position the camera and use a pencil to mark the holes. Make sure the holes are lined up horizontally.




Depending on the material of the wall or ceiling, use proper tools to drill two holes 25mm deep with a 6mm drill bit where you marked. If the wall is made out of concrete, drill the holes first, then insert the plastic anchors to support the screws.

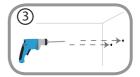


4. Place the base plate over the holes that are in the wall. Make sure to align the base plate holes with the holes in the wall. Use the supplied screws to attach the base plate to the surface of the wall. Do not overtighten screwheads as this may crack the mount.

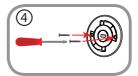

5. Place the camera over the base plate and turn the camera clockwise to lock it in place.

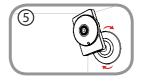

Adjust the angle of the camera as desired. When adjusting the camera, use one hand to hold down the camera base to prevent it from moving.

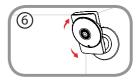

FAQs

1. What is a mydlink No.? What is it used for?

Each camera has a unique eight-digit mydlink No. which will be shown on the label on the back of your camera. This eight-digit number identifies your device, and is required to add your device to your mydlink account.

2. What can I do if my DCS-8200LH is not working correctly?

- Reset the camera (see next step) and run the setup steps starting on page 4 again.
- To make sure your hardware is installed correctly, make sure that:
 - the power LED is green
 - your Internet connection is working
 - your router's LAN & WAN connections are working
 - your router supports UPnP°
 - your camera is on the same network as your mobile device
 - both your mobile device and camera have a working Internet connection
- If your camera is still not working, check your router and make sure it has the latest firmware.

3. What can I do if I forget my password?

If you forget your password, you must reset the camera. Unfortunately, this process will change your settings back to factory default. To reset the camera, locate the reset button on the back of the camera. With the camera powered on, use an unfolded paper clip to hold the button down for 10 seconds. Run the setup procedure located on page 4 once the camera restarts.



4. Why is there a white haze when viewing in night vision mode?

When viewing in night vision mode, the IR lights on the camera may be reflecting off a nearby surface. Try repositioning the camera in order to avoid glare from IR LEDs.

Notes

Technical Support

This guide is only for initial configuration. Please refer to the user manual and FAQs at http://support.dlink.com/DCS-8200LH for more information. Also feel free to contact us. U.S. and Canadian customers can contact D-Link Technical Support through our website.

USA



Canada





Version 1.00(US)_90x130 January 19, 2016 290726008200A12 PMOCS960LEX103

Copyright ©2016 All rights reserved. D-Link and the D-Link logo are registered trademarks of D-Link Corporation or its subsidiaries. Other trademarks are the property of their respective owners. Maximum wireless signal rate derived from IEEE Standard 802.11ac and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range. Product specifications, size and shape are subject to change without notice, and actual product appearance may differ from that depicted on the packaging, Visit dlink.com (US) or clink.ca (Canada) for more details.