

D-Link Quick Installation Guide

This product can be set up using any current web browser, i.e., Internet Explorer 5x, Netscape Navigator 4x.



DP-101P+
D-Link Ethernet Pocket
Size Print Server

Before You Begin

You will need an Ethernet-enabled device, such as a laptop or desktop computer and a parallel-port printer that will connect to the DP-101P+.

Important: TURN OFF the power to the printer before installing the DP-101P+.

Check Your Package Contents

These are the items included with your DP-101P+ purchase:



DP-101P+ Pocket Size Print Server



CD-ROM (containing Manual and Warranty)



7.5V DC 1A Power Adapter

! Using a power supply with a different voltage rating will damage this product and void its warranty.

If any of the above items are missing, please contact your reseller.

1


Connecting The DP-101P+ To Your Network

First, insert one end of a CAT5 Ethernet RJ-45 cable into the “**Network Port**” (shown below.) Connect the other end of the cable to the LAN port of the gateway or switch.

Note: Do not connect the power cord to the DP-101P+ until you are advised to do so



Next, make sure that the Printer is turned **OFF**. Connect the DP-101P+ to the parallel port of the printer. Using the printer cable, connect one end of the cable to the printer port of the DP-101P+ (shown below) and the other end to the parallel port of the printer. Turn **ON** the printer.

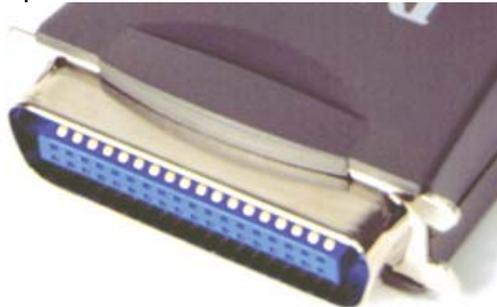

Then, plug one end of the power adapter into the DP-101P+ (in the DC Power Input port, shown in the illustration on the previous page) and the other end into your electric outlet. The DP-101P+ will turn on and begin a self-test.

2

Setting up your DP-101P+ for network printing in Windows XP

For additional Windows operating system setup or information on the web-management interface, refer to the manual located on the CD-ROM.

The factory default IP address of the DP-101P+ is 192.168.0.10. In order to print to the your printer through the DP-101P+, the DP-101P+ must have the same IP network settings as your network. If you would like to change the IP address of the DP-101P+ to conform to your network, please refer to the Manual for instructions to do so.

For Windows XP:
Go to **Start>Printers and Faxes>Add a Printer**

Double-click on the **“Add Printer”** icon




Click **Next**




2 Setting up your DP-101P+ for network printing in Windows XP (continued)

Select "Local Printer."

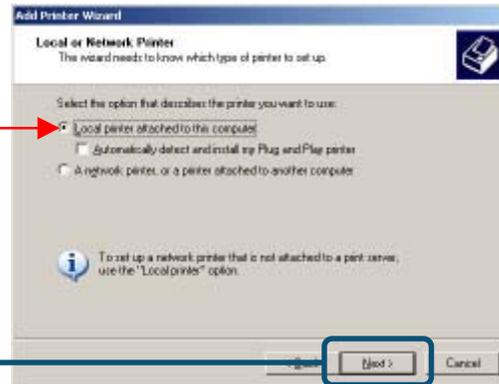

Click **Next**

Select "Create a new port."
At the pull-down menu, highlight
"Standard TCP/IP Port."

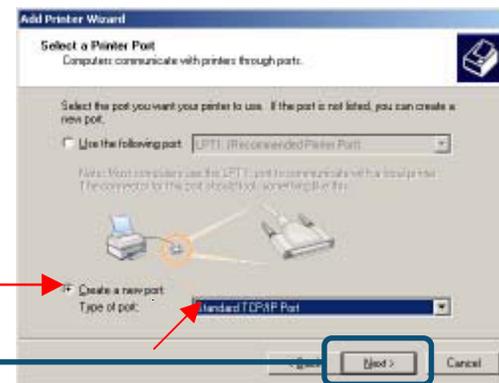

Click **Next**



Click **Next**

2 Setting up your DP-101P+ for network printing in Windows XP (continued)

Type in the IP address of the print server. (i.e. 192.168.0.10)
The port name will automatically be filled in.

Add Standard TCP/IP Printer Port Wizard

Add Port
For which device do you want to add a port?

Enter the Printer Name or IP address, and a port name for the desired device.

Printer Name or IP Address: 192.168.0.10
Port Name: IP_192.168.0.10

Next > Cancel

Click **Next**

Select **“Standard.”**
Make sure that **“Generic Network Card”** is highlighted.

Additional Port Information Required
The device could not be identified.

The device is not found on the network. Be sure that:

1. The device is turned on.
2. The network is connected.
3. The device is properly configured.
4. The address on the previous page is correct.

If you think the address is not correct, click Back to return to the previous page. Then correct the address and perform another search on the network. If you are sure the address is correct, select the device type below.

Device Type: Standard Generic Network Card
Custom Settings

Next > Cancel

Click **Next**

Completing the Add Standard TCP/IP Printer Port Wizard

You have selected a port with the following characteristics:

SNMP: No
Protocol: RAW, Port 9100
Device: 192.168.0.10
Port Name: IP_192.168.0.10
Adapter Type: Generic Network Card

To complete this wizard, click Finish.

Finish Cancel

Click **Finish**

2 Setting up your DP-101P+ for network printing in Windows XP (continued)

In this window, scroll down to find your printer. (If it is not listed, insert the driver CD or diskette that came with your printer.)

Click on **“Have Disk.”**


Then, scroll down and highlight the printer.

Click **Next**




At this screen, you can input a name for this printer.

Click **Next**

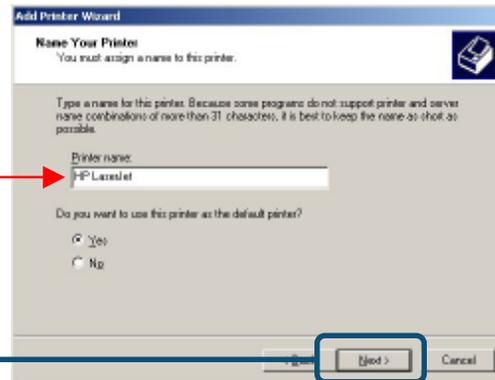

Select **“Yes”** to print a test page

Click **Next**

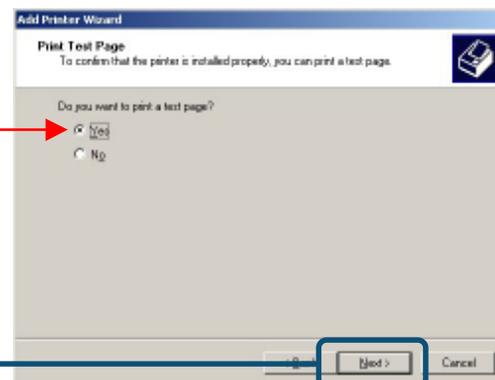

3 Your Setup is Complete!

The printer is now ready for printing with Windows XP, on your network.



 Note: MacOS printing is supported for Postscript printers only.

Technical Support

You can find the most recent software and user documentation on the **D-Link** website.

D-Link provides free technical support for customers within the United States for the duration of the warranty period on this product.

U.S. customers can contact **D-Link** technical support through our web site or by phone.

D-Link Technical Support over the Telephone:

(877) 453-5465

24 hours a day, seven days a week

D-Link Technical Support over the Internet:

<http://support.dlink.com>

email: support@dlink.com

D-Link[®]
Building Networks for People