



NETWORK SERVICES ROUTER USER MANUAL

DSR-500 / 500N / 1000 / 1000N

VER. 1.02



SMALL BUSINESS GATEWAY SOLUTION <http://www.dlink.com>

User Manual

Unified Services Router

D-Link Corporation

Copyright © 2011.

<http://www.dlink.com>

User Manual
DSR-500 / 500N / 1000 / 1000N
Unified Services Router
Version 1.02

Copyright © 2011

Copyright Notice

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaim any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

Limitations of Liability

UNDER NO CIRCUMSTANCES SHALL D-LINK OR ITS SUPPLIERS BE LIABLE FOR DAMAGES OF ANY CHARACTER (E.G. DAMAGES FOR LOSS OF PROFIT, SOFTWARE RESTORATION, WORK STOPPAGE, LOSS OF SAVED DATA OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES) RESULTING FROM THE APPLICATION OR IMPROPER USE OF THE D-LINK PRODUCT OR FAILURE OF THE PRODUCT, EVEN IF D-LINK IS INFORMED OF THE POSSIBILITY OF SUCH DAMAGES. FURTHERMORE, D-LINK WILL NOT BE LIABLE FOR THIRD-PARTY CLAIMS AGAINST CUSTOMER FOR LOSSES OR DAMAGES. D-LINK WILL IN NO EVENT BE LIABLE FOR ANY DAMAGES IN EXCESS OF THE AMOUNT D-LINK RECEIVED FROM THE END-USER FOR THE PRODUCT.

Table of Contents

Chapter 1. Introduction	9
1.1 About this User Manual.....	10
1.2 Typographical Conventions	10
Chapter 2. Configuring Your Network: LAN Setup	11
2.1 LAN Configuration.....	11
2.1.1 LAN Configuration in an IPv6 Network	14
2.1.2 Configuring IPv6 Router Advertisements	16
2.2 VLAN Configuration.....	19
2.2.1 Associating VLANs to ports	20
2.3 Configurable Port: DMZ Setup.....	22
2.4 Universal Plug and Play (UPnP).....	23
2.5 Captive Portal	25
Chapter 3. Connecting to the Internet: WAN Setup	26
3.1 Internet Setup Wizard.....	26
3.2 WAN Configuration	27
3.2.1 WAN Port IP address	28
3.2.2 WAN DNS Servers	28
3.2.3 DHCP WAN	28
3.2.4 PPPoE	29
3.2.5 Russia L2TP and PPTP WAN.....	32
3.2.6 WAN Configuration in an IPv6 Network.....	33
3.2.7 Checking WAN Status.....	35
3.3 Bandwidth Controls.....	37
3.4 Features with Multiple WAN Links.....	39
3.4.1 Auto Failover.....	39
3.4.2 Load Balancing.....	40
3.4.3 Protocol Bindings	41
3.5 Routing Configuration.....	42
3.5.1 Routing Mode	42
3.5.2 Dynamic Routing (RIP)	44
3.5.3 Static Routing	45
3.6 Configurable Port - WAN Option	47
3.7 WAN Port Settings.....	49
Chapter 4. Wireless Access Point Setup	51
4.1 Wireless Settings Wizard.....	51
4.1.1 Wireless Network Setup Wizard	52
4.1.2 Add Wireless Device with WPS	52
4.1.3 Manual Wireless Network Setup	53
4.2 Wireless Profiles	53
4.2.1 WEP Security	54
4.2.2 WPA or WPA2 with PSK.....	55
4.2.3 RADIUS Authentication.....	56
4.3 Creating and Using Access Points	57
4.3.1 Primary benefits of Virtual APs:	59

4.4	Tuning Radio Specific Settings	60
4.5	Advanced Wireless Settings.....	61
4.6	Wi-Fi Protected Setup (WPS)	61
Chapter 5.	Securing the Private Network	63
5.1	Firewall Rules	63
5.2	Defining Rule Schedules	64
5.3	Configuring Firewall Rules.....	65
5.3.1	Firewall Rule Configuration Examples.....	70
5.4	Security on Custom Services	74
5.5	ALG support.....	75
5.6	VPN Passthrough for Firewall.....	76
5.7	Application Rules	77
5.8	Web Content Filtering.....	78
5.8.1	Content Filtering.....	78
5.8.2	Approved URLs.....	79
5.8.3	Blocked Keywords	80
5.9	IP/MAC Binding	81
5.10	Intrusion Prevention (IPS).....	82
5.11	Protecting from Internet Attacks	83
Chapter 6.	IPsec / PPTP / L2TP VPN	85
6.1	VPN Wizard	86
6.2	Configuring IPsec Policies.....	89
6.2.1	Extended Authentication (XAUTH).....	92
6.2.2	Internet over IPsec tunnel	92
6.3	Configuring VPN clients	93
6.4	PPTP / L2TP Tunnels.....	93
6.4.1	PPTP Tunnel Support	93
6.4.2	L2TP Tunnel Support	94
Chapter 7.	SSL VPN.....	95
7.1	Users, Groups, and Domains.....	96
7.1.1	User Types and Passwords	98
7.2	Using SSL VPN Policies	100
7.2.1	Using Network Resources	103
7.3	Application Port Forwarding	104
7.4	SSL VPN Client Configuration	106
7.5	User Portal	108
7.5.1	Creating Portal Layouts	109
Chapter 8.	Advanced Configuration Tools.....	111
8.1	USB Device Setup	111
8.2	Authentication Certificates.....	112
8.3	Advanced Switch Configuration.....	114
Chapter 9.	Administration & Management.....	116

9.1	Configuration Access Control.....	116
9.1.1	Remote Management.....	116
9.1.2	CLI Access.....	117
9.2	SNMP Configuration.....	117
9.3	Configuring Time Zone and NTP.....	119
9.4	Log Configuration.....	120
9.4.1	Defining What to Log.....	120
9.4.2	Sending Logs to E-mail or Syslog.....	124
9.4.3	Event Log Viewer in GUI.....	126
9.5	Backing up and Restoring Configuration Settings.....	127
9.6	Upgrading Router Firmware.....	128
9.7	Dynamic DNS Setup.....	129
9.8	Using Diagnostic Tools.....	130
9.8.1	Ping.....	131
9.8.2	Trace Route.....	131
9.8.3	DNS Lookup.....	132
9.8.4	Router Options.....	132
Chapter 10.	Router Status and Statistics.....	133
10.1	System Overview.....	133
10.1.1	Device Status.....	133
10.1.2	Resource Utilization.....	135
10.2	Traffic Statistics.....	138
10.2.1	Wired Port Statistics.....	138
10.2.2	Wireless Statistics.....	139
10.3	Active Connections.....	140
10.3.1	Sessions through the Router.....	140
10.3.2	Wireless Clients.....	142
10.3.3	LAN Clients.....	142
10.3.4	Active VPN Tunnels.....	143
Chapter 11.	Trouble Shooting.....	145
11.1	Internet connection.....	145
11.2	Date and time.....	147
11.3	Pinging to Test LAN Connectivity.....	147
11.3.1	Testing the LAN path from your PC to your router.....	147
11.3.2	Testing the LAN path from your PC to a remote device.....	148
11.4	Restoring factory-default configuration settings.....	149
Chapter 12.	Credits.....	151
Appendix A.	Glossary.....	152
Appendix B.	Factory Default Settings.....	155
Appendix C.	Standard Services Available for Port Forwarding & Firewall Configuration.....	156
Appendix D.	Log Output Reference.....	157
Appendix E.	RJ-45 Pin-outs.....	211

List of Figures

Figure 1: Setup page for LAN TCP/IP settings	13
Figure 2: IPv6 LAN and DHCPv6 configuration	15
Figure 3: Configuring the Router Advertisement Daemon	18
Figure 4: IPv6 Advertisement Prefix settings	19
Figure 5: Adding VLAN memberships to the LAN	20
Figure 6: Port VLAN list	21
Figure 7: Configuring VLAN membership for a port	22
Figure 8: DMZ configuration	23
Figure 9: UPnP Configuration	24
Figure 10: Active Runtime sessions	25
Figure 11: Internet Connection Setup Wizard	26
Figure 12: Manual WAN configuration.....	29
Figure 13: PPPoE configuration for standard ISPs	30
Figure 14: WAN configuration for Japanese Multiple PPPoE (part 1)	31
Figure 15: WAN configuration for Multiple PPPoE (part 2)	32
Figure 16: Russia L2TP ISP configuration.....	33
Figure 17: IPv6 WAN Setup page	35
Figure 18: Connection Status information for both WAN ports.....	36
Figure 19: List of Configured Bandwidth Profiles.....	37
Figure 20: Bandwidth Profile Configuration page	38
Figure 21: Traffic Selector Configuration	39
Figure 22: Load Balancing is available when multiple WAN ports are configured and Protocol Bindings have been defined	41
Figure 23: Protocol binding setup to associate a service and/or LAN source to a WAN and/or destination network	42
Figure 24: Routing Mode is used to configure traffic routing between WAN and LAN, as well as Dynamic routing (RIP)	44
Figure 25: Static route configuration fields	47
Figure 26: WAN2 configuration for 3G internet (part 1)	48
Figure 27: WAN2 configuration for 3G internet (part 2)	49
Figure 28: Physical WAN port settings	50
Figure 29: Wireless Network Setup Wizards	52
Figure 30: List of Available Profiles shows the options available to secure the wireless link	54
Figure 31: Profile configuration to set network security	55
Figure 32: RADIUS server (External Authentication) configuration	57

Figure 33: Virtual AP configuration58

Figure 34: List of configured access points (Virtual APs) shows one enabled access point on the radio, broadcasting its SSID59

Figure 35: Radio card configuration options60

Figure 36: Advanced Wireless communication settings61

Figure 37: WPS configuration for an AP with WPA/WPA2 profile.....62

Figure 38: List of Available Firewall Rules64

Figure 39: List of Available Schedules to bind to a firewall rule65

Figure 40: Example where an outbound SNAT rule is used to map an external IP address (209.156.200.225) to a private DMZ IP address (10.30.30.30)68

Figure 41: The firewall rule configuration page allows you to define the To/From zone, service, action, schedules, and specify source/destination IP addresses as needed.....69

Figure 42: Schedule configuration for the above example.73

Figure 43: List of user defined services.75

Figure 44: Available ALG support on the router.....76

Figure 45: Passthrough options for VPN tunnels.....77

Figure 46: List of Available Application Rules showing 4 unique rules78

Figure 47: Content Filtering used to block access to proxy servers and prevent ActiveX controls from being downloaded.....79

Figure 48: Two trusted domains added to the Approved URLs List80

Figure 49: Two keywords added to the block list.....81

Figure 50: The following example binds a LAN host’s MAC Address to an IP address served by DSR. If there is an IP/MAC Binding violation, the violating packet will be dropped and logs will be captured82

Figure 51: Intrusion Prevention features on the router83

Figure 52: Protecting the router and LAN from internet attacks84

Figure 53: Example of Gateway-to-Gateway IPsec VPN tunnel using two DSR routers connected to the Internet.....85

Figure 54: Example of three IPsec client connections to the internal network through the DSR IPsec gateway86

Figure 55: VPN Wizard launch screen87

Figure 56: IPsec policy configuration.....90

Figure 57: IPsec policy configuration continued (Auto policy via IKE).....91

Figure 58: IPsec policy configuration continued (Auto / Manual Phase 2)92

Figure 59: PPTP tunnel configuration – PPTP Server94

Figure 60: L2TP tunnel configuration – L2TP Server.....94

Figure 61: Example of clientless SSL VPN connections to the DSR.....96

Figure 62: Available Users with login status and associated Group/Domain.....97

Figure 63: User configuration options.....100

Figure 64: List of SSL VPN polices (Global filter)101

Figure 65: SSL VPN policy configuration102

Figure 66: List of configured resources, which are available to assign to SSL VPN policies104

Figure 67: List of Available Applications for SSL Port Forwarding.....106

Figure 68: SSL VPN client adapter and access configuration107

Figure 69: Configured client routes only apply in split tunnel mode108

Figure 70: List of configured SSL VPN portals. The configured portal can then be associated with an authentication domain.....109

Figure 71: SSL VPN Portal configuration.....110

Figure 72: USB Device Detection112

Figure 73: Certificate summary for IPsec and HTTPS management.....114

Figure 74: Advanced Switch Settings.....115

Figure 75: User Login policy configuration116

Figure 76: Remote Management from the WAN117

Figure 77: SNMP Users, Traps, and Access Control.....118

Figure 78: SNMP system information for this router119

Figure 79: Date, Time, and NTP server setup.....120

Figure 80: Facility settings for Logging.....122

Figure 81: Log configuration options for traffic through router.....124

Figure 82: E-mail configuration as a Remote Logging option.....125

Figure 83: Syslog server configuration for Remote Logging (continued).....126

Figure 84: VPN logs displayed in GUI event viewer.....127

Figure 85: Restoring configuration from a saved file will result in the current configuration being overwritten and a reboot128

Figure 86: Firmware version information and upgrade option129

Figure 87: Dynamic DNS configuration130

Figure 88: Router diagnostics tools available in the GUI.....131

Figure 89: Sample traceroute output132

Figure 90: Device Status display.....134

Figure 91: Device Status display (continued).....135

Figure 92: Resource Utilization statistics136

Figure 93: Resource Utilization data (continued).....137

Figure 94: Resource Utilization data (continued).....138

Figure 95: Physical port statistics.....139

Figure 96: AP specific statistics.....140

Figure 97: List of current Active Firewall Sessions.....141

Figure 98: List of connected 802.11 clients per AP142

Figure 99: List of LAN hosts.....143

Figure 100: List of current Active VPN Sessions144

Chapter 1. Introduction

D-Link Unified Services Routers offer a secure, high performance networking solution to address the growing needs of small and medium businesses. Integrated high-speed IEEE 802.11n and 3G wireless technologies offer comparable performance to traditional wired networks, but with fewer limitations. Optimal network security is provided via features such as virtual private network (VPN) tunnels, IP Security (IPsec), Point-to-Point Tunneling Protocol (PPTP), Layer 2 Tunneling Protocol (L2TP), and Secure Sockets Layer (SSL). Empower your road warriors with clientless remote access anywhere and anytime using SSL VPN tunnels.

With the D-Link Unified Services Router you are able to experience a diverse set of benefits:

- **Comprehensive Management Capabilities**

The DSR-500N and DSR-1000N include dual-WAN Gigabit Ethernet which provides policy-based service management ensuring maximum productivity for your business operations. The failover feature maintains data traffic without disconnecting when a landline connection is lost. The Outbound Load Balancing feature adjusts outgoing traffic across two WAN interfaces and optimizes the system performance resulting in high availability. The second WAN port can be configured as a DMZ port allowing you to isolate servers from your LAN.

- **Superior Wireless Performance**

Designed to deliver superior wireless performance, the DSR-500N and DSR-1000N include 802.11 a/b/g/n, allowing for operation on either the 2.4 GHz or 5 GHz radio bands. Multiple In Multiple Out (MIMO) technology allows the DSR-500N and DSR-1000N to provide high data rates with minimal “dead spots” throughout the wireless coverage area.

- **Flexible Deployment Options**


The DSR-1000 / 1000N supports Third Generation (3G) Networks via an extendable USB 3G dongle. This 3G network capability offers an additional secure data connection for networks that provide critical services. The DSR-1000N can be configured to automatically switch to a 3G network whenever a physical link is lost.

- **Robust VPN features**

A fully featured virtual private network (VPN) provides your mobile workers and branch offices with a secure link to your network. The DSR-500, DSR-500N, DSR-1000 and DSR-1000N are capable of simultaneously managing 10 or 20 Secure Sockets Layer (SSL) VPN tunnels respectively, empowering your mobile users by providing remote access to a central corporate database. Site-to-site VPN tunnels use IP Security (IPsec) Protocol, Point-to-Point Tunneling Protocol (PPTP), or Layer 2 Tunneling Protocol (L2TP) to facilitate branch office connectivity through encrypted virtual links. The DSR-500 / 500N supports up to 35 simultaneous VPN tunnels, and the DSR-1000 / 1000N up to 70 VPN tunnels.

- **Efficient D-Link Green Technology**

As a concerned member of the global community, D-Link is devoted to providing eco-friendly products. D-Link Green WiFi and D-Link Green Ethernet save power and prevent waste. The D-Link Green WLAN scheduler reduces wireless power automatically during off-peak hours. Likewise the D-Link Green Ethernet program adjusts power usage based on the detected cable length and link status. In addition, compliance with RoHS (Restriction of Hazardous Substances) and WEEE (Waste Electrical and Electronic Equipment) directives make D-Link Green certified devices the environmentally responsible choice.


 Support for the 3G wireless WAN USB dongle is only available for DSR-1000 and DSR-1000N.

1.1 About this User Manual

This document is a high level manual to allow new D-Link Unified Services Router users to configure connectivity, setup VPN tunnels, establish firewall rules and perform general administrative tasks. Typical deployment and use case scenarios are described in each section. For more detailed setup instructions and explanations of each configuration parameter, refer to the online help that can be accessed from each page in the router GUI.

1.2 Typographical Conventions


The following is a list of the various terms, followed by an example of how that term is represented in this document:

- Product Name – D-Link Unified Services Router.
 - Model numbers DSR-500/500N/1000/1000N
- GUI Menu Path/GUI Navigation – *Monitoring > Router Status*
- Important note – 

Chapter 2. Configuring Your Network: LAN Setup

It is assumed that the user has a machine for management connected to the LAN to the router. The LAN connection may be through the wired Ethernet ports available on the router, or once the initial setup is complete, the DSR may also be managed through its wireless interface as it is bridged with the LAN. Access the router's graphical user interface (GUI) for management by using any web browser, such as Microsoft Internet Explorer or Mozilla Firefox:

- Go to **http://192.168.10.1** (default IP address) to display the router's management login screen.
- Default login credentials for the management GUI:
 - Username: **admin**
 - Password: **admin**

 If the router's LAN IP address was changed, use that IP address in the navigation bar of the browser to access the router's management UI.

2.1 LAN Configuration

Setup > Network Settings > LAN Configuration

By default, the router functions as a Dynamic Host Configuration Protocol (DHCP) server to the hosts on the WLAN or LAN network. With DHCP, PCs and other LAN devices can be assigned IP addresses as well as addresses for DNS servers, Windows Internet Name Service (WINS) servers, and the default gateway. With the DHCP server enabled the router's IP address serves as the gateway address for LAN and WLAN clients. The PCs in the LAN are assigned IP addresses from a pool of addresses specified in this procedure. Each pool address is tested before it is assigned to avoid duplicate addresses on the LAN.

For most applications the default DHCP and TCP/IP settings are satisfactory. If you want another PC on your network to be the DHCP server or if you are manually configuring the network settings of all of your PCs, set the DHCP mode to 'none'. DHCP relay can be used to forward DHCP lease information from another LAN device that is the network's DHCP server; this is particularly useful for wireless clients.


Instead of using a DNS server, you can use a Windows Internet Naming Service (WINS) server. A WINS server is the equivalent of a DNS server but uses the NetBIOS protocol to resolve hostnames. The router includes the WINS server IP address in the DHCP configuration when acknowledging a DHCP request from a DHCP client.

You can also enable DNS proxy for the LAN. When this is enabled the router then as a proxy for all DNS requests and communicates with the ISP's DNS servers. When disabled all DHCP clients receive the DNS IP addresses of the ISP.

To configure LAN Connectivity, please follow the steps below:

1. In the LAN Setup page, enter the following information for your router:

- IP address (factory default: 192.168.10.1).

 If you change the IP address and click Save Settings, the GUI will not respond. Open a new connection to the new IP address and log in again. Be sure the LAN host (the machine used to manage the router) has obtained IP address from newly assigned pool (or has a static IP address in the router's LAN subnet) before accessing the router via changed IP address.

- Subnet mask (factory default: 255.255.255.0).

2. In the DHCP section, select the DHCP mode:

- None: the router's DHCP server is disabled for the LAN
- DHCP Server. With this option the router assigns an IP address within the specified range plus additional specified information to any LAN device that requests DHCP served addresses.
- DHCP Relay: With this option enabled, DHCP clients on the LAN can receive IP address leases and corresponding information from a DHCP server on a different subnet. Specify the Relay Gateway, and when LAN clients make a DHCP request it will be passed along to the server accessible via the Relay Gateway IP address.
- If DHCP is being enabled, enter the following DHCP server parameters:
- Starting and Ending IP Addresses: Enter the first and last continuous addresses in the IP address pool. Any new DHCP client joining the LAN is assigned an IP address in this range. The default starting address is 192.168.10.2. The default ending address is 192.168.10.100. These addresses should be in the same IP address subnet as the router's LAN IP address. You may wish to save part of the subnet range for devices with statically assigned IP addresses in the LAN.
- Primary and Secondary DNS servers: If configured domain name system (DNS) servers are available on the LAN enter their IP addresses here.
- WINS Server (optional): Enter the IP address for the WINS server or, if present in your network, the Windows NetBios server.

- Lease Time: Enter the time, in hours, for which IP addresses are leased to clients.
 - Enable DNS Proxy: To enable the router to act as a proxy for all DNS requests and communicate with the ISP’s DNS servers, click the checkbox.
3. Click Save Settings to apply all changes.


Figure 1: Setup page for LAN TCP/IP settings

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard ▶	<div style="background-color: #0070c0; color: white; padding: 5px; display: flex; justify-content: space-between;"> LAN SETUP LOGOUT </div> <p>The LAN Configuration page allows you to configure the LAN interface of the router. In most cases, the default settings should be sufficient.</p> <div style="display: flex; justify-content: center; gap: 20px;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div>			
Internet Settings ▶				
Wireless Settings ▶				
Network Settings ▶				
DMZ Setup ▶				
VPN Settings ▶				
USB Settings				
VLAN Settings ▶				
LAN TCP/IP Setup				
IP Address: <input style="width: 100px;" type="text" value="176.16.2.40"/>				
Subnet Mask: <input style="width: 100px;" type="text" value="255.255.255.0"/>				
DHCP				
DHCP Mode: <input style="width: 50px;" type="text" value="None"/>				
Starting IP Address: <input style="width: 100px;" type="text" value="176.16.2.200"/>				
Ending IP Address: <input style="width: 100px;" type="text" value="176.16.2.254"/>				
Primary DNS Server: <input style="width: 100px;" type="text"/>				
Secondary DNS Server: <input style="width: 100px;" type="text"/>				
WINS Server: <input style="width: 100px;" type="text"/>				
Lease Time: <input style="width: 50px;" type="text" value="24"/>				
Relay Gateway: <input style="width: 100px;" type="text"/>				
LAN Proxy				
Enable DNS Proxy: <input checked="" type="checkbox"/>				
Run-Time User Authentication				
Enable Run-Time User Authentication: <input type="checkbox"/>				

2.1.1 LAN Configuration in an IPv6 Network

Advanced > IPv6 > IPv6 LAN > IPv6 LAN Config

In IPv6 mode, the LAN DHCP server is enabled by default (similar to IPv4 mode). The DHCPv6 server will serve IPv6 addresses from configured address pools with the IPv6 Prefix Length assigned to the LAN.

 IPv4 / IPv6 mode must be enabled in the *Advanced > IPv6 > IP mode* to enable IPv6 configuration options.

LAN Settings

The default IPv6 LAN address for the router is **fec0::1**. You can change this 128 bit IPv6 address based on your network requirements. The other field that defines the LAN settings for the router is the prefix length. The IPv6 network (subnet) is identified by the initial bits of the address called the prefix. By default this is **64** bits long. All hosts in the network have common initial bits for their IPv6 address; the number of common initial bits in the network's addresses is set by the prefix length field.

Figure 2: IPv6 LAN and DHCPv6 configuration

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS						
Application Rules	Please Set IP Mode to IPv4/IPv6 in Routing Mode Page to configure this page.									
Website Filter	<div style="background-color: #0056b3; color: white; padding: 2px;">IPv6 LAN CONFIG LOGOUT</div>									
Firewall Settings	This page allow user to IPv6 related LAN configurations. <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div>									
Wireless Settings	<div style="background-color: #333; color: white; padding: 2px;">LAN TCP/IP Setup</div>									
Advanced Network	IPv6 Address: <input type="text" value="fec0::1"/>									
Routing	IPv6 Prefix Length: <input type="text" value="64"/>									
Certificates	<div style="background-color: #333; color: white; padding: 2px;">DHCPv6</div>									
Users	DHCP Status: <input type="button" value="Disable DHCPv6 Server"/>									
IP/MAC Binding	DHCP Mode: <input type="button" value="Stateless"/>									
IPv6	Domain Name: <input type="text" value="dlink.com"/>									
Radius Settings	Server Preference: <input type="text" value="255"/>									
Power Saving	DNS Servers: <input type="button" value="Use DNS Proxy"/>									
	Primary DNS Server: <input type="text"/>									
	Secondary DNS Server: <input type="text"/>									
	Lease/Rebind Time: <input type="text" value="86400"/> (Seconds)									
	<div style="background-color: #333; color: white; padding: 2px;">List of IPv6 Address Pools</div>									
	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 30px;"><input type="checkbox"/></th> <th style="width: 30%;">Start Address</th> <th style="width: 30%;">End Address</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;"> <input type="button" value="Edit"/> <input type="button" value="Delete"/> <input type="button" value="Add"/> </td> <td></td> <td></td> </tr> </tbody> </table>				<input type="checkbox"/>	Start Address	End Address	<input type="button" value="Edit"/> <input type="button" value="Delete"/> <input type="button" value="Add"/>		
<input type="checkbox"/>	Start Address	End Address								
<input type="button" value="Edit"/> <input type="button" value="Delete"/> <input type="button" value="Add"/>										

✎ If you change the IP address and click Save Settings, the GUI will not respond. Open a new connection to the new IP address and log in again. Be sure the LAN host (the machine used to manage the router) has obtained IP address from newly assigned pool (or has a static IP address in the router's LAN subnet) before accessing the router via changed IP address.

As with an IPv4 LAN network, the router has a DHCPv6 server. If enabled, the router assigns an IP address within the specified range plus additional specified information to any LAN PC that requests DHCP served addresses.

The following settings are used to configure the DHCPv6 server:

- **DHCP Mode:** The IPv6 DHCP server is either stateless or stateful. If stateless is selected an external IPv6 DHCP server is not required as the IPv6 LAN hosts are auto-configured by this router. In this case the router advertisement daemon (RADVD) must be configured on this device and ICMPv6 router discovery messages are used by the host for auto-configuration. There are no managed addresses to serve the LAN nodes. If stateful is selected the IPv6 LAN host will rely on an external DHCPv6 server to provide required configuration settings
- The domain name of the DHCPv6 server is an optional setting
- Server Preference is used to indicate the preference level of this DHCP server. DHCP advertise messages with the highest server preference value to a LAN host are preferred over other DHCP server advertise messages. The default is 255.
- The DNS server details can be manually entered here (primary/secondary options). An alternative is to allow the LAN DHCP client to receive the DNS server details from the ISP directly. By selecting Use DNS proxy, this router acts as a proxy for all DNS requests and communicates with the ISP's DNS servers (a WAN configuration parameter).
- Primary and Secondary DNS servers: If there are configured domain name system (DNS) servers available on the LAN enter the IP addresses here.
- Lease/Rebind time sets the duration of the DHCPv6 lease from this router to the LAN client.

IPv6 Address Pools

This feature allows you to define the IPv6 delegation prefix for a range of IP addresses to be served by the gateway's DHCPv6 server. Using a delegation prefix you can automate the process of informing other networking equipment on the LAN of DHCP information specific for the assigned prefix.

2.1.2 Configuring IPv6 Router Advertisements

Router Advertisements are analogous to IPv4 DHCP assignments for LAN clients, in that the router will assign an IP address and supporting network information to devices that are configured to accept such details. Router Advertisement is required in an IPv6 network is required for stateless auto configuration of the IPv6 LAN. By configuring the Router Advertisement Daemon on this router, the DSR will listen on the LAN for router solicitations and respond to these LAN hosts with router advisements.


RADVD

Advanced > IPv6 > IPv6 LAN > Router Advertisement

To support stateless IPv6 auto configuration on the LAN, set the RADVD status to Enable. The following settings are used to configure RADVD:

- **Advertise Mode:** Select Unsolicited Multicast to send router advertisements (RA's) to all interfaces in the multicast group. To restrict RA's to well known IPv6 addresses on the LAN, and thereby reduce overall network traffic, select Unicast only.
- **Advertise Interval:** When advertisements are unsolicited multicast packets, this interval sets the maximum time between advertisements from the interface. The actual duration between advertisements is a random value between one third of this field and this field. The default is 30 seconds.
- **RA Flags:** The router advertisements (RA's) can be sent with one or both of these flags. Chose Managed to use the administered /stateful protocol for address auto configuration. If the Other flag is selected the host uses administered/stateful protocol for non-address auto configuration.
- **Router Preference:** this low/medium/high parameter determines the preference associated with the RADVD process of the router. This is useful if there are other RADVD enabled devices on the LAN as it helps avoid conflicts for IPv6 clients.
- **MTU:** The router advertisement will set this maximum transmission unit (MTU) value for all nodes in the LAN that are autoconfigured by the router. The default is 1500.
- **Router Lifetime:** This value is present in RA's and indicates the usefulness of this router as a default router for the interface. The default is 3600 seconds. Upon expiration of this value, a new RADVD exchange must take place between the host and this router.

Figure 3: Configuring the Router Advertisement Daemon

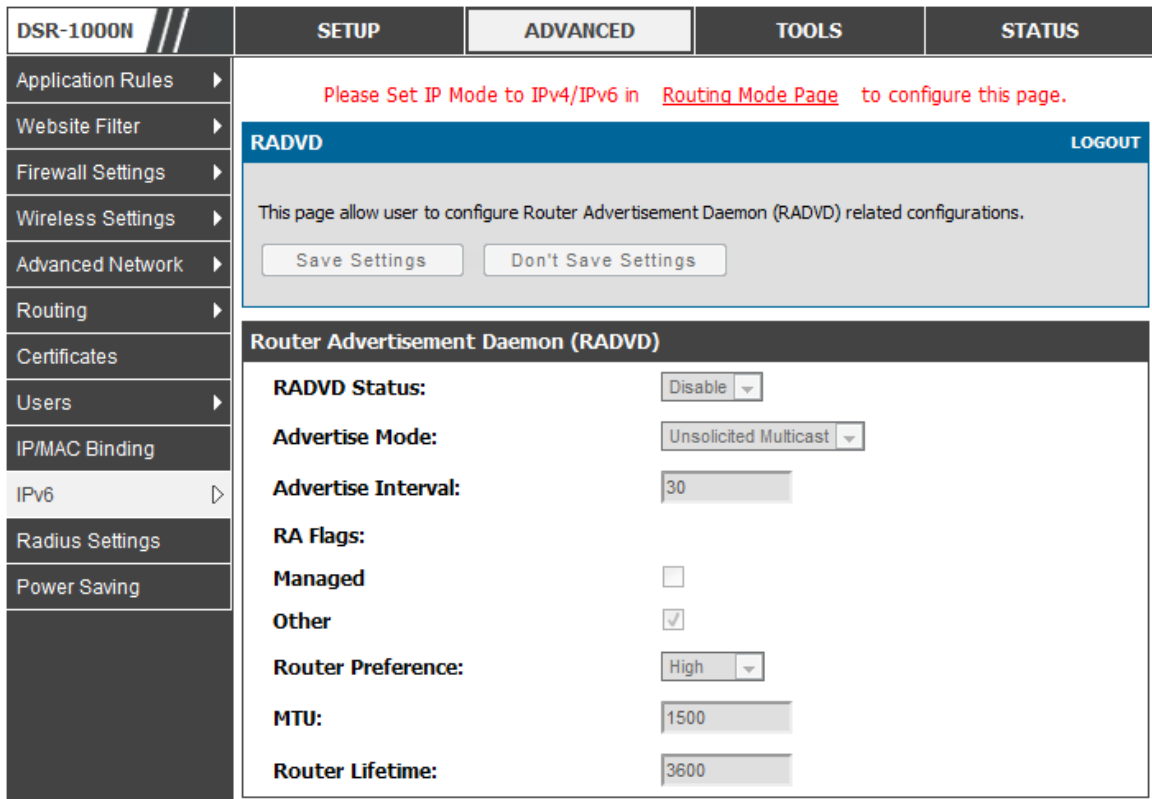

Advertisement Prefixes

Advanced > IPv6 > IPv6 LAN > Advertisement Prefixes


The router advertisements configured with advertisement prefixes allow this router to inform hosts how to perform stateless address auto configuration. Router advertisements contain a list of subnet prefixes that allow the router to determine neighbors and whether the host is on the same link as the router.

The following prefix options are available for the router advertisements:

- IPv6 Prefix Type: To ensure hosts support IPv6 to IPv4 tunnel select the 6to4 prefix type. Selecting Global/Local/ISATAP will allow the nodes to support all other IPv6 routing options
- SLA ID: The SLA ID (Site-Level Aggregation Identifier) is available when 6to4 Prefixes are selected. This should be the interface ID of the router’s LAN interface used for router advertisements.
- IPv6 Prefix: When using Global/Local/ISATAP prefixes, this field is used to define the IPv6 network advertised by this router.

- IPv6 Prefix Length: This value indicates the number contiguous, higher order bits of the IPv6 address that define up the network portion of the address. Typically this is 64.
- Prefix Lifetime: This defines the duration (in seconds) that the requesting node is allowed to use the advertised prefix. It is analogous to DHCP lease time in an IPv4 network.

Figure 4: IPv6 Advertisement Prefix settings

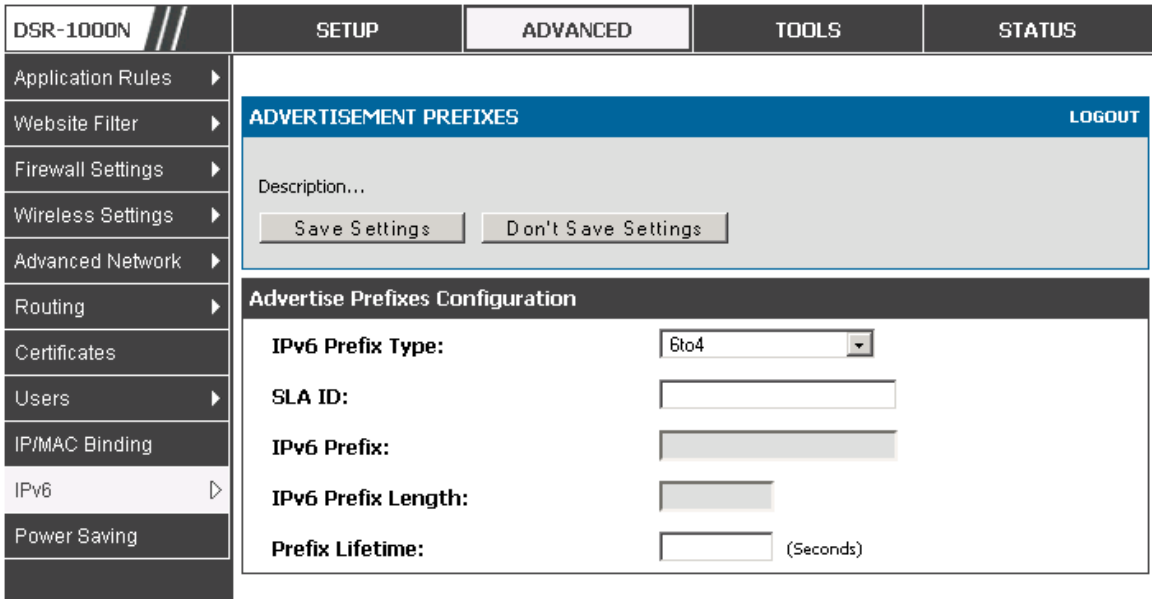

2.2 VLAN Configuration

The router supports virtual network isolation on the LAN with the use of VLANs. LAN devices can be configured to communicate in a subnetwork defined by VLAN identifiers. LAN ports can be assigned unique VLAN IDs so that traffic to and from that physical port can be isolated from the general LAN. VLAN filtering is particularly useful to limit broadcast packets of a device in a large network

VLAN support is disabled by default in the router. In the VLAN Configuration page, enable VLAN support on the router and then proceed to the next section to define the virtual network.

Setup > VLAN Settings > Available VLAN

The Available VLAN page shows a list of configured VLANs by name and VLAN ID. A VLAN membership can be created by clicking the Add button below the List of Available VLANs.

A VLAN membership entry consists of a VLAN identifier and the numerical VLAN ID which is assigned to the VLAN membership. The VLAN ID value can be any number from 2 to 4091. VLAN ID 1 is reserved for the default VLAN, which is used for untagged frames received on the interface. By enabling Inter VLAN Routing, you

will allow traffic from LAN hosts belonging to this VLAN ID to pass through to other configured VLAN IDs that have Inter VLAN Routing enabled.

Figure 5: Adding VLAN memberships to the LAN

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS			
Wizard	<div style="border: 1px solid #ccc; padding: 5px;"> <div style="background-color: #0070c0; color: white; padding: 2px;">AVAILABLE VLANS LOGOUT</div> <p style="text-align: center; font-size: small;">This page allows user to enable/disable VLAN support on the LAN.</p> <div style="text-align: center; margin-top: 5px;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div>						
Internet Settings							
Wireless Settings							
Network Settings							
DMZ Setup							
VPN Settings							
USB Settings							
VLAN Settings							
<div style="background-color: #333; color: white; padding: 2px;">VLAN Configuration</div>							
<p>Name: <input style="width: 100px;" type="text"/></p> <p>Id: <input style="width: 100px;" type="text"/></p> <p>Inter VLAN Routing Enable: <input checked="" type="checkbox"/></p>							

2.2.1 Associating VLANs to ports

In order to tag all traffic through a specific LAN port with a VLAN ID, you can associate a VLAN to a physical port.

Setup > VLAN Settings > Port VLAN

VLAN membership properties for the LAN and wireless LAN are listed on this page. The VLAN Port table displays the port identifier, the mode setting for that port and VLAN membership information. The configuration page is accessed by selecting one of the four physical ports or a configured access point and clicking Edit.

The edit page offers the following configuration options:

- **Mode:** The mode of this VLAN can be General, Access, or Trunk. The default is access.
- In General mode the port is a member of a user selectable set of VLANs. The port sends and receives data that is tagged or untagged with a VLAN ID. If the data into the port is untagged, it is assigned the defined PVID. In the configuration from Figure 4, Port 3 is a General port with PVID 3, so untagged data into Port 3 will be assigned PVID 3. All tagged data sent out of the port with the same PVID will be untagged. This is mode is typically used with IP Phones that have dual Ethernet ports. Data coming from phone to the switch port on the router will be tagged. Data passing through the phone from a connected device will be untagged.

Figure 6: Port VLAN list

PORT VLANS LOGOUT

This page allows user to configure the port VLANs. A user can choose ports and can add them into a VLAN.

Port VLANs				
	Port Name	Mode	PVID	VLAN Membership
<input type="checkbox"/>	Port 1	Access	1	1
<input type="checkbox"/>	Port 2	Access	1	1
<input type="checkbox"/>	Port 3	Access	1	1
<input type="checkbox"/>	Port 4	Access	1	1

[E dit](#)

Wireless VLANs				
	SSID	Mode	PVID	VLAN Membership
<input type="checkbox"/>	DSR-1000N_1	Access	1	1

[E dit](#)

- In Access mode the port is a member of a single VLAN (and only one). All data going into and out of the port is untagged. Traffic through a port in access mode looks like any other Ethernet frame.
- In Trunk mode the port is a member of a user selectable set of VLANs. All data going into and out of the port is tagged. Untagged coming into the port is not forwarded, except for the default VLAN with PVID=1, which is untagged. Trunk ports multiplex traffic for multiple VLANs over the same physical link.
- Select PVID for the port when the General mode is selected.
- Configured VLAN memberships will be displayed on the VLAN Membership Configuration for the port. By selecting one more VLAN membership options for a General or Trunk port, traffic can be routed between the selected VLAN membership IDs

Figure 7: Configuring VLAN membership for a port

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard	<div style="background-color: #0056b3; color: white; padding: 2px;">VLAN CONFIGURATION LOGOUT</div> <div style="background-color: #e0e0e0; padding: 5px; margin-top: 5px;">This page allows user to configure the port VLAN.</div> <div style="background-color: #333; color: white; padding: 2px; margin-top: 5px;">VLAN Configuration</div> <div style="padding: 5px; margin-top: 5px;"> <p>Port Name: Port 4</p> <p>Mode: <input type="text" value="Access"/></p> <p>PVID: <input type="text" value="1"/></p> <p style="text-align: right;"><input type="button" value="Apply"/> <input type="button" value="Cancel"/></p> </div> <div style="background-color: #333; color: white; padding: 2px; margin-top: 5px;">VLAN Membership Configuration</div> <div style="padding: 5px; margin-top: 5px;"> <p>VLAN Membership: 1 <input checked="" type="checkbox"/></p> <p style="text-align: right;"><input type="button" value="Apply"/> <input type="button" value="Cancel"/></p> </div>			
Internet Settings				
Wireless Settings				
Network Settings				
DMZ Setup				
VPN Settings				
USB Settings				
VLAN Settings				

2.3 Configurable Port: DMZ Setup

This router supports one of the physical ports to be configured as a secondary WAN Ethernet port or a dedicated DMZ port. A DMZ is a subnetwork that is open to the public but behind the firewall. The DMZ adds an additional layer of security to the LAN, as specific services/ports that are exposed to the internet on the DMZ do not have to be exposed on the LAN. It is recommended that hosts that must be exposed to the internet (such as web or email servers) be placed in the DMZ network. Firewall rules can be allowed to permit access specific services/ports to the DMZ from both the LAN or WAN. In the event of an attack to any of the DMZ nodes, the LAN is not necessarily vulnerable as well.

Setup > DMZ Setup > DMZ Setup Configuration

DMZ configuration is identical to the LAN configuration. There are no restrictions on the IP address or subnet assigned to the DMZ port, other than the fact that it cannot be identical to the IP address given to the LAN interface of this gateway.

Figure 8: DMZ configuration

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard				
Internet Settings	DMZ SETUP LOGOUT			
Wireless Settings	<p>The De-Militarized Zone (DMZ) is a network which, when compared to the LAN, has fewer firewall restrictions, by default. This zone can be used to host servers and give public access to them.</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p>			
Network Settings				
DMZ Setup				
VPN Settings	DMZ Port Setup			
USB Settings	<p>IP Address: <input type="text" value="176.16.2.1"/></p> <p>Subnet Mask: <input type="text" value="255.255.255.0"/></p>			
VLAN Settings	DHCP for DMZ Connected Computers			
<p>DHCP Mode: <input type="text" value="DHCP Server"/></p> <p>Starting IP Address: <input type="text" value="176.16.2.100"/></p> <p>Ending IP Address: <input type="text" value="176.16.2.254"/></p> <p>Primary DNS Server: <input type="text"/></p> <p>Secondary DNS Server: <input type="text"/></p> <p>WINS Server: <input type="text"/></p> <p>Lease Time: <input type="text" value="24"/></p> <p>Relay Gateway: <input type="text"/></p>				
DMZ Proxy				
<p>Enable DNS Proxy: <input checked="" type="checkbox"/></p>				

In order to configure a DMZ port, the router’s configurable port must be set to DMZ in the *Setup > Internet Settings > Configurable Port* page.

2.4 Universal Plug and Play (UPnP)

Advanced > Advanced Network > UPnP

Universal Plug and Play (UPnP) is a feature that allows the router to discovery devices on the network that can communicate with the router and allow for auto configuration. If a network device is detected by UPnP, the router can open internal or external ports for the traffic protocol required by that network device.

Once UPnP is enabled, you can configure the router to detect UPnP-supporting devices on the LAN (or a configured VLAN). If disabled, the router will not allow for automatic device configuration.

Configure the following settings to use UPnP:

- Advertisement Period: This is the frequency that the router broadcasts UPnP information over the network. A large value will minimize network traffic but cause delays in identifying new UPnP devices to the network.
- Advertisement Time to Live: This is expressed in hops for each UPnP packet. This is the number of steps a packet is allowed to propagate before being discarded. Small values will limit the UPnP broadcast range. A default of 4 is typical for networks with few switches.

Figure 9: UPnP Configuration

UPnP Port map Table

The UPnP Port map Table has the details of UPnP devices that respond to the router’s advertisements. The following information is displayed for each detected device:

- Active: A yes/no indicating whether the port of the UPnP device that established a connection is currently active
- Protocol: The network protocol (i.e. HTTP, FTP, etc.) used by the DSR
- Int. Port (Internal Port): The internal ports opened by UPnP (if any)
- Ext. Port (External Port): The external ports opened by UPnP (if any)
- IP Address: The IP address of the UPnP device detected by this router

Click Refresh to refresh the portmap table and search for any new UPnP devices.

2.5 Captive Portal


LAN users can gain internet access via web portal authentication with the DSR. Also referred to as aRun-Time Authentication, a Captive Portal is ideal for a web café scenario where users initiate HTTP connection requests for web access but are not interested in accessing any LAN services. Firewall policies underneath will define which users require authentication for HTTP access, and when a matching user request is made the DSR will intercept the request and prompt for a username / password. The login credentials are compared against the RunTimeAuth users in user database prior to granting HTTP access.

 Captive Portal is available for LAN users only and not for DMZ hosts.

Status > Active RunTime Sessions

The Active Runtime internet sessions through the router’s firewall are listed in the below table. These users are present in the local or external user database and have had their login credentials approved for internet access. A ‘Disconnect’ button allows the DSR admin to selectively drop an authenticated user.

Figure 10: Active Runtime sessions

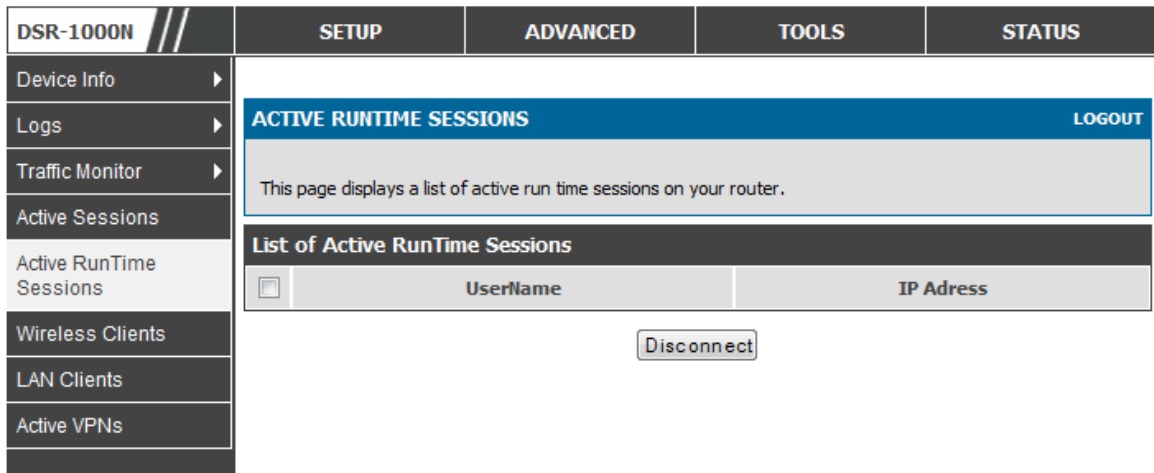

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS						
Device Info	<p>ACTIVE RUNTIME SESSIONS LOGOUT</p> <p>This page displays a list of active run time sessions on your router.</p> <p>List of Active RunTime Sessions</p> <table border="1"> <thead> <tr> <th><input type="checkbox"/></th> <th>UserName</th> <th>IP Adress</th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td></td> </tr> </tbody> </table> <p style="text-align: center;"><input type="button" value="Disconnect"/></p>				<input type="checkbox"/>	UserName	IP Adress			
<input type="checkbox"/>					UserName	IP Adress				
Logs										
Traffic Monitor										
Active Sessions										
Active RunTime Sessions										
Wireless Clients										
LAN Clients										
Active VPNs										

Chapter 3. Connecting to the Internet: WAN Setup

This router has two WAN ports that can be used to establish a connection to the internet. The following ISP connection types are supported: DHCP, Static, PPPoE, PPTP, L2TP, 3G Internet (via USB modem).


It is assumed that you have arranged for internet service with your Internet Service Provider (ISP). Please contact your ISP or network administrator for the configuration information that will be required to setup the router.

3.1 Internet Setup Wizard


Setup > Wizard > Internet

The Internet Connection Setup Wizard is available for users new to networking. By going through a few straightforward configuration pages you can take the information provided by your ISP to get your WAN connection up and enable internet access for your network.

Figure 11: Internet Connection Setup Wizard

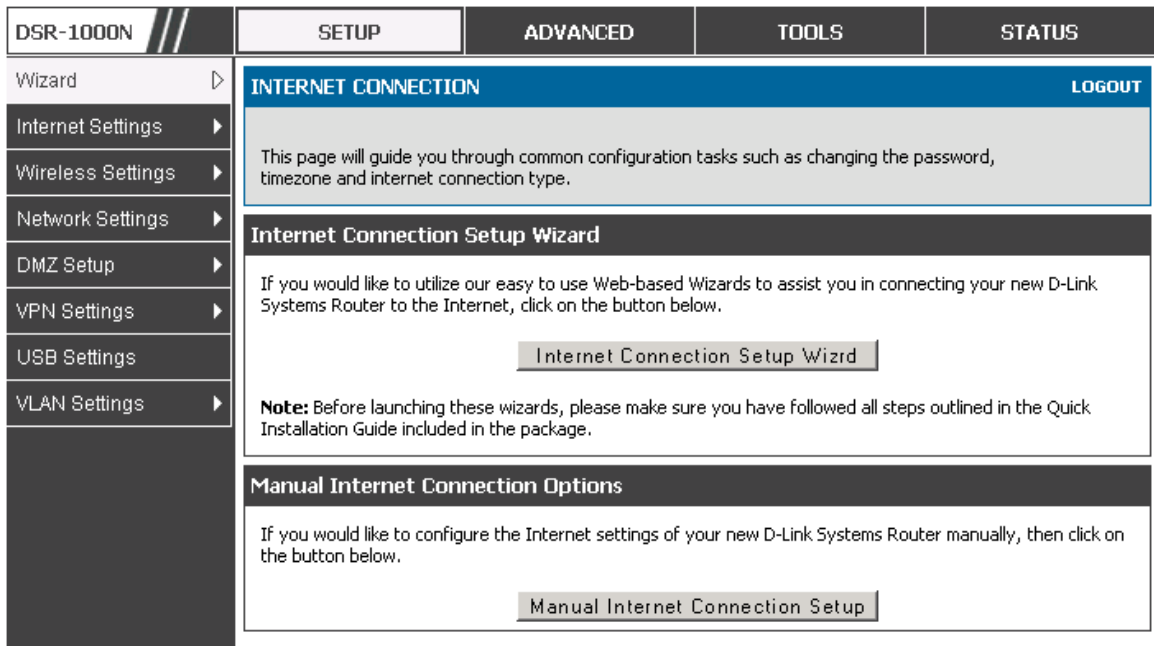

You can start using the Wizard by logging in with the administrator password for the router. Once authenticated set the time zone that you are located in, and then choose the type of ISP connection type: DHCP, Static, PPPoE, PPTP, L2TP. Depending on the connection type a username/password may be required to register this router with the ISP. In most cases the default settings can be used if the ISP did not specify that parameter. The last step in the Wizard is to click the Connect button, which confirms the settings by establishing a link with the ISP. Once connected, you can move on and configure other features in this router.


 3G Internet access with a USB modem is supported on the secondary WAN port (WAN2). The Internet Connection Setup Wizard assists with the primary WAN port (WAN1) configuration only.

3.2 WAN Configuration

Setup > Internet Settings > WAN1 Setup

You must either allow the router to detect WAN connection type automatically or configure manually the following basic settings to enable Internet connectivity:

- **ISP Connection type:** Based on the ISP you have selected for the primary WAN link for this router, choose Static IP address, DHCP client, Point-to-Point Tunneling Protocol (PPTP), Point-to-Point Protocol over Ethernet (PPPoE), Layer 2 Tunneling Protocol (L2TP). Required fields for the selected ISP type become highlighted. Enter the following information as needed and as provided by your ISP:
 - PPPoE Profile Name. This menu lists configured PPPoE profiles, particularly useful when configuring multiple PPPoE connections (i.e. for Japan ISPs that have multiple PPPoE support).
 - ISP login information. This is required for PPTP and L2TP ISPs.
 - User Name
 - Password
 - Secret (required for L2TP only)
 - MPPE Encryption: For PPTP links, your ISP may require you to enable Microsoft Point-to-Point Encryption (MPPE).
 - Split Tunnel (supported for PPTP and L2TP connection). This setting allows your LAN hosts to access internet sites over this WAN link while still permitting VPN traffic to be directed to a VPN configured on this WAN port.

 If split tunnel is enabled, DSR won't expect a default route from the ISP server. In such case, user has to take care of routing manually by configuring the routing from Static Routing page.

- **Connectivity Type:** To keep the connection always on, click Keep Connected. To log out after the connection is idle for a period of time (useful if your ISP costs are based on logon times), click Idle Timeout and enter the time, in minutes, to wait before disconnecting in the Idle Time field.

- My IP Address: Enter the IP address assigned to you by the ISP.
- Server IP Address: Enter the IP address of the PPTP or L2TP server.

3.2.1 WAN Port IP address

Your ISP assigns you an IP address that is either dynamic (newly generated each time you log in) or static (permanent). The IP Address Source option allows you to define whether the address is statically provided by the ISP or should be received dynamically at each login. If static, enter your IP address, IPv4 subnet mask, and the ISP gateway's IP address. PPTP and L2TP ISPs also can provide a static IP address and subnet to configure, however the default is to receive that information dynamically from the ISP.

3.2.2 WAN DNS Servers

The IP Addresses of WAN Domain Name Servers (DNS) are typically provided dynamically from the ISP but in some cases you can define the static IP addresses of the DNS servers. DNS servers map Internet domain names (example: www.google.com) to IP addresses. Click to indicate whether to get DNS server addresses automatically from your ISP or to use ISP-specified addresses. If its latter, enter addresses for the primary and secondary DNS servers. To avoid connectivity problems, ensure that you enter the addresses correctly.

3.2.3 DHCP WAN

For DHCP client connections, you can choose the MAC address of the router to register with the ISP. In some cases you may need to clone the LAN host's MAC address if the ISP is registered with that LAN host.

Figure 12: Manual WAN configuration

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard	WAN1 SETUP LOGOUT			
Internet Settings	<p>This page allows you to set up your Internet connection. Ensure that you have the Internet connection information such as the IP Addresses, Account Information etc. This information is usually provided by your ISP or network administrator.</p> <p> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p>			
Wireless Settings	ISP Connection Type			
Network Settings	<p>ISP Connection Type: <input type="text" value="Dynamic IP (DHCP)"/></p> <p>Host Name: <input type="text"/></p>			
DMZ Setup	Domain Name System (DNS) Servers			
VPN Settings	<p>DNS Server Source: <input type="text" value="Get Dynamically from ISP"/></p> <p>Primary DNS Server: <input type="text" value="0.0.0.0"/></p> <p>Secondary DNS Server: <input type="text" value="0.0.0.0"/></p>			
USB Settings	MAC Address			
VLAN Settings	<p>MAC Address Source: <input type="text" value="Use Default Address"/></p> <p>MAC Address: <input type="text" value="00:00:00:00:00:00"/></p>			

3.2.4 PPPoE

Setup > Internet Settings

The PPPoE ISP settings are defined on the WAN Configuration page. There are two types of PPPoE ISP's supported by the DSR: the standard username/password PPPoE and Japan Multiple PPPoE.

Figure 13: PPPoE configuration for standard ISPs

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Internet Settings	WAN1 SETUP LOGOUT			
Wireless Settings	<p>This page allows you to set up your Internet connection. Ensure that you have the Internet connection information such as the IP Addresses, Account Information etc. This information is usually provided by your ISP or network administrator.</p> <p> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p>			
Network Settings	PPPoE Profile Configuration			
DMZ Setup	<p>ISP Connection Type: <input type="text" value="PPPoE (Username/Password)"/></p> <p>Address Mode: <input checked="" type="radio"/> Dynamic IP <input type="radio"/> Static IP</p> <p>IP Address: <input type="text" value="0.0.0.0"/></p> <p>IP Subnet Mask: <input type="text" value="0.0.0.0"/></p> <p>User Name: <input type="text" value="dlink"/></p> <p>Password: <input type="password" value="....."/></p> <p>Service: <input type="text"/> (Optional)</p> <p>Authentication Type: <input type="text" value="Auto-negotiate"/></p> <p>Reconnect Mode: <input checked="" type="radio"/> Always On <input type="radio"/> On Demand</p> <p>Maximum Idle Time: <input type="text" value="5"/></p>			
VPN Settings	Domain Name System (DNS) Servers			
USB Settings	DNS Server Source: <input type="text" value="Get Dynamically from ISP"/>			
VLAN Settings				

Most PPPoE ISP’s use a single control and data connection, and require username / password credentials to login and authenticate the DSR with the ISP. The ISP connection type for this case is “PPPoE (Username/Password)”. The GUI will prompt you for authentication, service, and connection settings in order to establish the PPPoE link.

For some ISP’s, most popular in Japan, the use of “Japanese Multiple PPPoE” is required in order to establish concurrent primary and secondary PPPoE connections between the DSR and the ISP. The Primary connection is used for the bulk of data and internet traffic and the Secondary PPPoE connection carries ISP specific (i.e. control) traffic between the DSR and the ISP.

Figure 14: WAN configuration for Japanese Multiple PPPoE (part 1)

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
-----------	-------	----------	-------	--------

Wizard

Internet Settings

Wireless Settings

Network Settings

DMZ Setup

VPN Settings

USB Settings

VLAN Settings

LOGOUT

WAN1 SETUP

This page allows you to set up your Internet connection. Ensure that you have the Internet connection information such as the IP Addresses, Account Information etc. This information is usually provided by your ISP or network administrator.

Primary PPPoE Profile Configuration

ISP Connection Type: Japanese multiple PPPoE

Address Mode: Dynamic IP Static IP

IP Address: 0.0.0.0

IP Subnet Mask: 0.0.0.0

User Name: dlink

Password: ****

Service: (Optional)

Authentication Type: Auto-negotiate

Reconnect Mode: Always On On Demand

Maximum Idle Time: 5

Primary PPPoE Domain Name System (DNS) Servers

DNS Server Source: Get Dynamically from ISP

Primary DNS Server: 0.0.0.0

Secondary DNS Server: 0.0.0.0

There are a few key elements of a multiple PPPoE connection:

- Primary and secondary connections are concurrent
- Each session has a DNS server source for domain name lookup, this can be assigned by the ISP or configured through the GUI
- The DSR acts as a DNS proxy for LAN users
- Only HTTP requests that specifically identify the secondary connection’s domain name (for example *.flets) will use the secondary profile to access the content available through this secondary PPPoE terminal. All other HTTP / HTTPS requests go through the primary PPPoE connection.

When Japanese multiple PPPoE is configured and secondary connection is up, some predefined routes are added on that interface. These routes are needed to access the internal domain of the ISP where he hosts various services. These routes can even be configured through the static routing page as well.

Figure 15: WAN configuration for Multiple PPPoE (part 2)

Secondary PPPoE Profile Configuration	
Address Mode:	<input checked="" type="radio"/> Dynamic IP <input type="radio"/> Static IP
IP Address:	<input type="text" value="0.0.0.0"/>
IP Subnet Mask:	<input type="text" value="0.0.0.0"/>
User Name:	<input type="text" value="dlink"/>
Password:	<input type="password" value="*****"/>
Service:	<input type="text"/> (Optional)
Authentication Type:	Auto-negotiate <input type="button" value="v"/>
Reconnect Mode:	<input checked="" type="radio"/> Always On <input type="radio"/> On Demand
Maximum Idle Time:	<input type="text" value="5"/>
Secondary PPPoE Domain Name System (DNS) Servers	
DNS Server Source:	Get Dynamically from ISP <input type="button" value="v"/>
Primary DNS Server:	<input type="text" value="0.0.0.0"/>
Secondary DNS Server:	<input type="text" value="0.0.0.0"/>
Mac Address	
MAC Address Source:	Use Default Address <input type="button" value="v"/>
MAC Address:	<input type="text" value="00:00:00:00:00:00"/>

3.2.5 Russia L2TP and PPTP WAN

For Russia L2TP WAN connections, you can choose the address mode of the connection to get an IP address from the ISP or configure a static IP address provided by the ISP. For DHCP client connections, you can choose the MAC address of the router to register with the ISP. In some cases you may need to clone the LAN host’s MAC address if the ISP is registered with that LAN host.

Figure 16: Russia L2TP ISP configuration

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
<ul style="list-style-type: none"> Wizard > Internet Settings > Wireless Settings > Network Settings > DMZ Setup > VPN Settings > USB Settings > VLAN Settings > 	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0070C0; color: white; padding: 2px; display: flex; justify-content: space-between;"> WAN1 SETUP LOGOUT </div> <p style="font-size: small; margin-top: 5px;">This page allows you to set up your Internet connection. Ensure that you have the Internet connection information such as the IP Addresses, account information, etc. This information is usually provided by your ISP or network administrator.</p> <div style="text-align: center; margin-top: 10px;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div>			
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">ISP Connection Type</div> <p>ISP Connection Type: Russia L2TP</p> <p>Address Mode:</p> <p>Dynamic IP: <input type="radio"/></p> <p>Static IP: <input checked="" type="radio"/></p> <p>IP Address: <input style="width: 100%;" type="text"/></p> <p>IP Subnet Mask: <input style="width: 100%;" type="text"/></p> <p>User Name: <input style="width: 100%;" type="text"/></p> <p>Password: <input style="width: 100%;" type="text"/></p> <p>Secret: <input style="width: 100%;" type="text"/></p> <p>Split Tunnel: <input type="checkbox"/></p> <p>Reconnect Mode:</p> <p>Always on: <input type="radio"/></p> <p>On demand: <input checked="" type="radio"/></p> <p>Maximum Idle Time: <input style="width: 50%;" type="text"/> (minutes, 0 = Infinite)</p> <p>Server Address: <input style="width: 100%;" type="text"/></p> </div>			
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">Domain Name System (DNS) Servers</div> <p>DNS Server Source: Use These DNS Servers</p> <p>Primary DNS Server: <input style="width: 100%;" type="text"/></p> <p>Secondary DNS Server: <input style="width: 100%;" type="text"/></p> </div>			
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">Mac Address</div> <p>MAC Address Source: Use this MAC Address</p> <p>MAC Address: <input style="width: 100%;" type="text"/></p> </div>			

3.2.6 WAN Configuration in an IPv6 Network

Setup > IPv6 > IPv6 WAN1 Config

For IPv6 WAN connections, this router can have a static IPv6 address or receive connection information when configured as a DHCPv6 client. In the case where the ISP assigns you a fixed address to access the internet, the static configuration settings must be completed. In addition to the IPv6 address assigned to your router, the IPv6 prefix length defined by the ISP is needed. The default IPv6 Gateway address is the server at the ISP that this router will connect to for accessing the internet. The primary and secondary DNS servers on the ISP's IPv6 network are used for resolving internet addresses, and these are provided along with the static IP address and prefix length from the ISP.

When the ISP allows you to obtain the WAN IP settings via DHCP, you need to provide details for the DHCPv6 client configuration. The DHCPv6 client on the gateway can be either stateless or stateful. If a stateful client is selected the gateway will connect to the ISP's DHCPv6 server for a leased address. For stateless DHCP there need not be a DHCPv6 server available at the ISP, rather ICMPv6 discover messages will originate from this gateway and will be used for auto configuration. A third option to specify the IP address and prefix length of a preferred DHCPv6 server is available as well.

Figure 17: IPv6 WAN Setup page

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Application Rules				
Website Filter				
Firewall Settings				
Wireless Settings				
Advanced Network				
Routing				
Certificates				
Users				
IP/MAC Binding				
IPv6				
Radius Settings				
Power Saving				
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0056b3; color: white; padding: 2px;">IPv6 WAN2 CONFIG LOGOUT</div> <div style="padding: 5px;"> <p>This page allow user to IPv6 related WAN2 configurations.</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p> </div> </div>			
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">Internet Address</div> <div style="padding: 5px;"> <p>IPv6: Static IPv6</p> </div> </div>			
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">Static IP Address</div> <div style="padding: 5px;"> <p>IPv6 Address: <input style="width: 150px;" type="text"/></p> <p>IPv6 Prefix Length: <input style="width: 50px;" type="text"/></p> <p>Default IPv6 Gateway: <input style="width: 150px;" type="text"/></p> <p>Primary DNS Server: <input style="width: 150px;" type="text"/></p> <p>Secondary DNS Server: <input style="width: 150px;" type="text"/></p> </div> </div>			
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">DHCPv6</div> <div style="padding: 5px;"> <p>Stateless Address Auto Configuration: <input checked="" type="radio"/></p> <p>Stateful Address Auto Configuration: <input type="radio"/></p> </div> </div>			

3.2.7 Checking WAN Status

Setup > Internet Settings > WAN Status

The status and summary of configured settings for both WAN1 and WAN2 are available on the WAN Status page. You can view the following key connection status information for each WAN port:

- Connection time: The connection uptime
- Connection type: Dynamic IP or Static IP
- Connection state: This is whether the WAN is connected or disconnected to an ISP. The Link State is whether the physical WAN connection in place; the Link State can be UP (i.e. cable inserted) while the WAN Connection State is down.
- IP address / subnet mask: IP Address assigned
- Gateway IP address: WAN Gateway Address

Figure 18: Connection Status information for both WAN ports

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
-----------	-------	----------	-------	--------

Wizard

Internet Settings

Wireless Settings

Network Settings

DMZ Setup

VPN Settings

USB Settings

VLAN Settings

[LOGOUT](#)

The WAN Status provides the current status of the WAN interfaces.

WAN1 Information(Ipv4)

MAC Address: 00:DE:AD:20:75:01

IPv4 Address: 0.0.0.0 / 0.0.0.0

Wan State: DOWN

NAT (IPv4 only): Enabled

IPv4 Connection Type: Dynamic IP (DHCP)

IPv4 Connection State: Not Yet Connected

Link State: LINK DOWN

WAN Mode: Use only single WAN port: Secondary WAN

Gateway: 0.0.0.0

Primary DNS: 0.0.0.0

Secondary DNS: 0.0.0.0

WAN2 Information(Ipv4)

MAC Address: AA:BB:CC:DD:EF:01

IPv4 Address: 0.0.0.0 / 0.0.0.0

Wan State: DOWN

NAT (IPv4 only): Enabled

IPv4 Connection Type: ThreeG

IPv4 Connection State: Unable To Open Communication Port

Link State: LINK DOWN

WAN Mode: Use only single WAN port: Secondary WAN

Gateway: 0.0.0.0

Primary DNS: 0.0.0.0

Secondary DNS: 0.0.0.0

The WAN status page allows you to Enable or Disable static WAN links. For WAN settings that are dynamically received from the ISP, you can Renew or Release the link parameters if required.

3.3 Bandwidth Controls

Advanced > Advanced Network > Traffic Management > Bandwidth Profiles

Bandwidth profiles allow you to regulate the traffic flow from the LAN to WAN 1 or WAN 2. This is useful to ensure that low priority LAN users (like guests or HTTP service) do not monopolize the available WAN’s bandwidth for cost-savings or bandwidth-priority-allocation purposes.

Bandwidth profiles configuration consists of enabling the bandwidth control feature from the GUI and adding a profile which defines the control parameters. The profile can then be associated with a traffic selector, so that bandwidth profile can be applied to the traffic matching the selectors. Selectors are elements like IP addresses or services that would trigger the configured bandwidth regulation.

Figure 19: List of Configured Bandwidth Profiles


DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS									
Application Rules	<div style="border: 1px solid #ccc; padding: 5px;"> <p>BANDWIDTH PROFILES LOGOUT</p> <p>This page shows the list of configured bandwidth profiles. These profiles then can be used with the traffic selectors.</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p> <hr/> <p>Enable Bandwidth Profiles: <input checked="" type="checkbox"/></p> <p>List of Bandwidth Profiles</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 30px;"><input type="checkbox"/></th> <th style="width: 40%;">Name</th> <th style="width: 30%;">Bandwidth Rate / Priority</th> </tr> </thead> <tbody> <tr> <td><input type="checkbox"/></td> <td>Guests</td> <td>Low</td> </tr> <tr> <td><input type="checkbox"/></td> <td>Engineering</td> <td>1-1000000 Kbps</td> </tr> </tbody> </table> <p style="text-align: center;"> <input type="button" value="Edit"/> <input type="button" value="Delete"/> <input type="button" value="Add"/> </p> </div>				<input type="checkbox"/>	Name	Bandwidth Rate / Priority	<input type="checkbox"/>	Guests	Low	<input type="checkbox"/>	Engineering	1-1000000 Kbps
<input type="checkbox"/>					Name	Bandwidth Rate / Priority							
<input type="checkbox"/>					Guests	Low							
<input type="checkbox"/>					Engineering	1-1000000 Kbps							
Website Filter													
Firewall Settings													
Wireless Settings													
Advanced Network													
Routing													
Certificates													
Users													
IP/MAC Binding													
IPv6													
Radius Settings													
Power Saving													

To create a new bandwidth profile, click Add in the List of Bandwidth Profiles. The following configuration parameters are used to define a bandwidth profile:

- Profile Name: This identifier is used to associate the configured profile to the traffic selector
- You can choose to limit the bandwidth either using priority or rate.
 - If using priority “Low”, “High”, “Medium” can be selected. If there is a low priority profile associated with traffic selector A and a high priority profile associated with traffic selector B, then the WAN bandwidth allocation preference will be to traffic selector B packets.

- For finer control, the Rate profile type can be used. With this option the minimum and maximum bandwidth allowed by this profile can be limited.
- Choose the WAN interface that the profile should be associated with.

Figure 20: Bandwidth Profile Configuration page

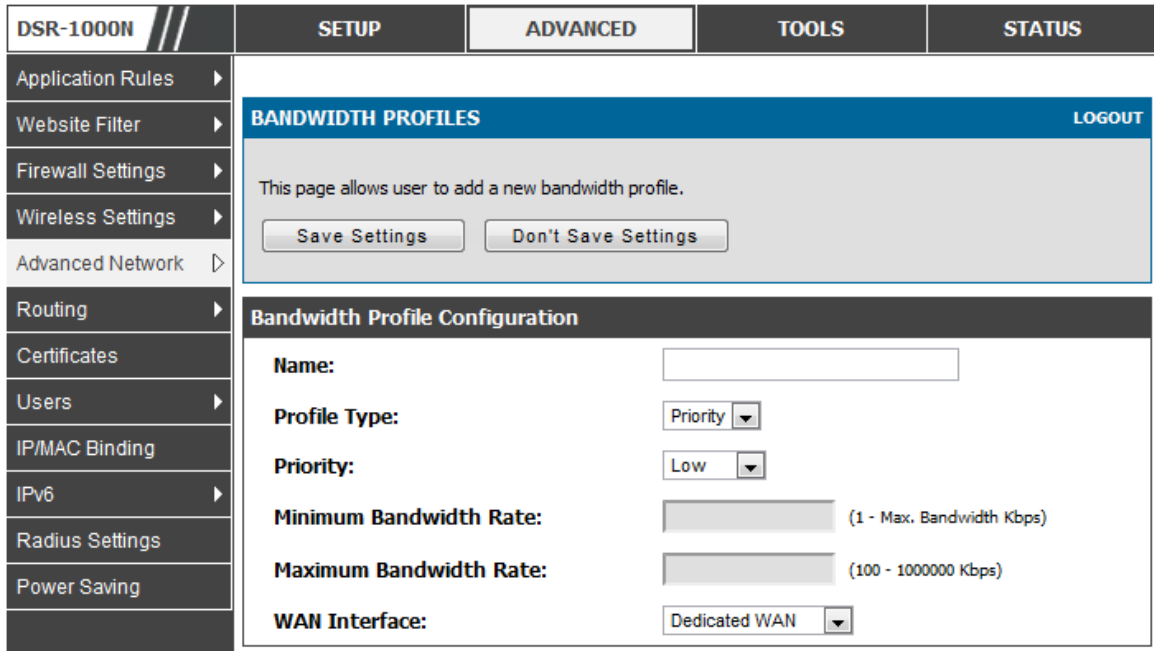


Advanced > Advanced Network > Traffic Management > Traffic Selectors

Once a profile has been created it can then be associated with a traffic flow from the LAN to WAN. To create a traffic selector, click Add on the Traffic Selectors page. Traffic selector configuration binds a bandwidth profile to a type or source of LAN traffic with the following settings:

- Available profiles: Assign one of the defined bandwidth profiles
- Service: You can have the selected bandwidth regulation apply to a specific service (i.e. FTP) from the LAN. If you do not see a service that you want, you can configure a custom service through the *Advanced > Firewall Settings > Custom Services* page. To have the profile apply to all services, select ANY.
- Traffic Selector Match Type: this defines the parameter to filter against when applying the bandwidth profile. A specific machine on the LAN can be identified via IP address or MAC address, or the profile can apply to a LAN port or VLAN group. As well a wireless network can be selected by its BSSID for bandwidth shaping.

Figure 21: Traffic Selector Configuration

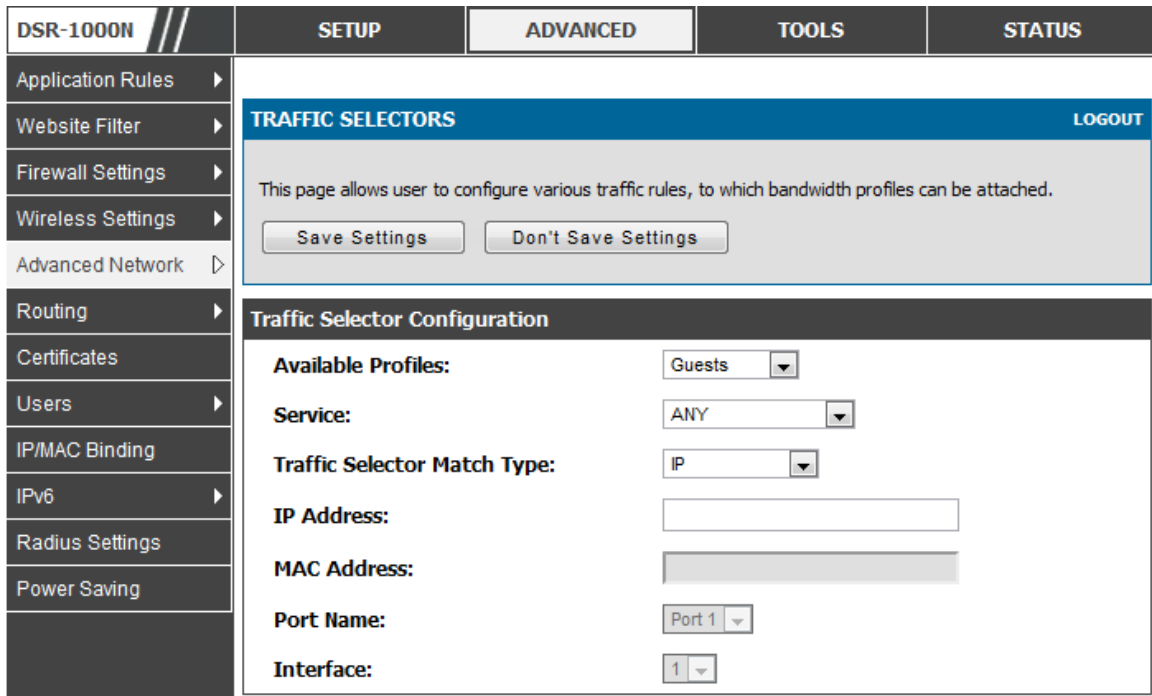

3.4 Features with Multiple WAN Links

This router supports multiple WAN links. This allows you to take advantage of failover and load balancing features to ensure certain internet dependent services are prioritized in the event of unstable WAN connectivity on one of the ports.

Setup > Internet Settings > WAN Mode

To use Auto Failover or Load Balancing, WAN link failure detection must be configured. This involves accessing DNS servers on the internet or ping to an internet address (user defined). If required, you can configure the number of retry attempts when the link seems to be disconnected or the threshold of failures that determines if a WAN port is down.

3.4.1 Auto Failover

In this case one of your WAN ports is assigned as the primary internet link for all internet traffic. The secondary WAN port is used for redundancy in case the primary link goes down for any reason. Both WAN ports (primary and secondary) must be configured to connect to the respective ISP's before enabling this feature. The secondary WAN port will remain unconnected until a failure is detected on the primary link (either port can be assigned as the primary). In the event of a failure on the primary port, all internet traffic will be rolled over to the backup port. When configured in Auto Failover mode, the link status of the primary WAN port is checked at regular intervals as defined by the failure detection settings.

Note that both WAN1 and WAN2 can be configured as the primary internet link.

- Auto-Rollover using WAN port-WAN1: WAN1 is the primary internet link.
- Auto-Rollover using WAN port-WAN2: WAN2 is the primary internet link.

Failover Detection Settings: To check connectivity of the primary internet link, one of the following failure detection methods can be selected:

- DNS lookup using WAN DNS Servers: DNS Lookup of the DNS Servers of the primary link are used to detect primary WAN connectivity.
- DNS lookup using DNS Servers: DNS Lookup of the custom DNS Servers can be specified to check the connectivity of the primary link.
- Ping these IP addresses: These IP's will be pinged at regular intervals to check the connectivity of the primary link.
- Retry Interval is: The number tells the router how often it should run the above configured failure detection method.
- Failover after: This sets the number of retries after which failover is initiated.

3.4.2 Load Balancing

This feature allows you to use multiple WAN links (and presumably multiple ISP's) simultaneously. After configuring more than one WAN port, the load balancing option is available to carry traffic over more than one link. Protocol bindings are used to segregate and assign services over one WAN port in order to manage internet flow. The configured failure detection method is used at regular intervals on all configured WAN ports when in Load Balancing mode.

DSR currently support three algorithms for Load Balancing:

Round Robin: This algorithm is particularly useful when the connection speed of one WAN port greatly differs from another. In this case you can define protocol bindings to route low-latency services (such as VOIP) over the higher-speed link and let low-volume background traffic (such as SMTP) go over the lower speed link. Protocol binding is explained in next section.

Spill Over: If Spill Over method is selected, WAN1 acts as a dedicated link till a threshold is reached. After this, WAN2 will be used for new connections. You can configure spill-over mode by using following options:

- Load Tolerance: It is the percentage of bandwidth after which the router switches to secondary WAN.
- Max Bandwidth: This sets the maximum bandwidth tolerable by the primary WAN.

If the link bandwidth goes above the load tolerance value of max bandwidth, the router will spill-over the next connections to secondary WAN.

For example, if the maximum bandwidth of primary WAN is 1 Kbps and the load tolerance is set to 70. Now everytime a new connection is established the bandwidth increases. After a certain number of connections say bandwidth reached 70% of 1Kbps, the new connections will be spilled-over to secondary WAN. The maximum value of load tolerance is 80 and the least is 20.

Protocol Bindings: Refer Section 3.4.3 for details

Load balancing is particularly useful when the connection speed of one WAN port greatly differs from another. In this case you can define protocol bindings to route low-latency services (such as VOIP) over the higher-speed link and let low-volume background traffic (such as SMTP) go over the lower speed link.

Figure 22: Load Balancing is available when multiple WAN ports are configured and Protocol Bindings have been defined

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS				
Wizard	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0070C0; color: white; padding: 2px;">WAN MODE LOGOUT</div> <p>The Port Mode settings allow you to configure whether the router should use only one WAN port or both. If you are connected to only one ISP, then select Use only single WAN port, which is the default setting. From the drop-down list, choose which WAN port to use for your Internet connection.</p> <p>If you have two ISP links for Internet connectivity, the router can be configured in one of the following modes:</p> <div style="text-align: center; margin-top: 10px;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div>							
Internet Settings								
Wireless Settings								
Network Settings								
DMZ Setup								
VPN Settings								
USB Settings								
VLAN Settings								
Port Mode								
<p>Auto-Rollover using WAN port: <input type="radio"/> WAN1</p> <p>Load Balancing: <input type="radio"/> Round Robin</p> <p>Use only single WAN port: <input checked="" type="radio"/> WAN2</p>								
WAN Failure Detection Method								
<p>None: <input checked="" type="radio"/></p> <p>DNS lookup using WAN DNS Servers: <input type="radio"/></p> <p>DNS lookup using DNS Servers: <input type="radio"/></p> <p>WAN1: <input type="text" value="202.153.32.2"/></p> <p>WAN2: <input type="text" value="202.153.32.2"/></p> <p>Ping these IP addresses: <input type="radio"/></p> <p>WAN1: <input type="text" value="192.168.10.1"/></p> <p>WAN2: <input type="text" value="192.168.20.1"/></p> <p>Retry Interval is: <input type="text" value="30"/></p> <p>Failover after: <input type="text" value="4"/></p>								

3.4.3 Protocol Bindings

Advanced > Routing > Protocol Bindings

Protocol bindings are required when the Load Balancing feature is in use. Choosing from a list of configured services or any of the user-defined services, the type of traffic can be assigned to go over only one of the available WAN ports. For increased flexibility the source network or machines can be specified as well as the destination network or machines. For example the VOIP traffic for a set of LAN IP addresses can be assigned to one WAN and any VOIP traffic from the remaining IP

addresses can be assigned to the other WAN link. Protocol bindings are only applicable when load balancing mode is enabled and more than one WAN is configured.

Figure 23: Protocol binding setup to associate a service and/or LAN source to a WAN and/or destination network

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Application Rules ▶	<div style="background-color: #0070C0; color: white; padding: 5px; display: flex; justify-content: space-between;"> PROTOCOL BINDINGS LOGOUT </div> <p>This page allows user to add a new protocol binding rule for the WAN interfaces.</p> <div style="display: flex; justify-content: center; gap: 20px;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div>			
Website Filter ▶				
Firewall Settings ▶				
Wireless Settings ▶				
Advanced Network ▶				
Routing ▷				
Certificates				
Users ▶				
IP/MAC Binding				
IPv6 ▶				
Radius Settings				
Power Saving				
	<div style="background-color: #333; color: white; padding: 5px;">Protocol Binding Configuration</div> <p>Service: <input type="text" value="ANY"/></p> <p>Local Gateway: <input type="text" value="Dedicated WAN"/></p> <p>Source Network: <input type="text" value="Any"/></p> <p>Start Address: <input type="text"/></p> <p>End Address: <input type="text"/></p> <p>Destination Network: <input type="text" value="Any"/></p> <p>Start Address: <input type="text"/></p> <p>End Address: <input type="text"/></p>			

3.5 Routing Configuration

Routing between the LAN and WAN will impact the way this router handles traffic that is received on any of its physical interfaces. The routing mode of the gateway is core to the behavior of the traffic flow between the secure LAN and the internet.

3.5.1 Routing Mode

Setup > Internet Settings > Routing Mode

This device supports classical routing, network address translation (NAT), and transport mode routing.

- With classical routing, devices on the LAN can be directly accessed from the internet by their public IP addresses (assuming appropriate firewall settings). If your ISP has assigned an IP address for each of the computers that you use, select Classic Routing.

- NAT is a technique which allows several computers on a LAN to share an Internet connection. The computers on the LAN use a "private" IP address range while the WAN port on the router is configured with a single "public" IP address. Along with connection sharing, NAT also hides internal IP addresses from the computers on the Internet. NAT is required if your ISP has assigned only one IP address to you. The computers that connect through the router will need to be assigned IP addresses from a private subnet.
- Transparent routing between the LAN and WAN does not perform NAT. Broadcast and multicast packets that arrive on the LAN interface are switched to the WAN and vice versa, if they do not get filtered by firewall or VPN policies. To maintain the LAN and WAN in the same broadcast domain select Transparent mode, which allows bridging of traffic from LAN to WAN and vice versa, except for router-terminated traffic and other management traffic. All DSR features (such as 3G modem support) are supported in transparent mode assuming the LAN and WAN are configured to be in the same broadcast domain.

✎ NAT routing has a feature called "NAT Hair-pinning" that allows internal network users on the LAN and DMZ to access internal servers (eg. an internal FTP server) using their externally-known domain name. This is also referred to as "NAT loopback" since LAN generated traffic is redirected through the firewall to reach LAN servers by their external name.

Figure 24: Routing Mode is used to configure traffic routing between WAN and LAN, as well as Dynamic routing (RIP)

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard	<p>ROUTING MODE LOGOUT</p> <p>This page allows user to configure different routing modes like NAT, Classical Routing and Transparent. This page also allows to configure the RIP (Routing Information Protocol)</p> <p>Save Settings Don't Save Settings</p>			
Internet Settings	<p>Routing Mode between WAN and LAN</p> <p>NAT: <input checked="" type="radio"/></p> <p>Classical Routing: <input type="radio"/></p> <p>Transparent <input type="radio"/></p>			
Wireless Settings	<p>Dynamic Routing (RIP)</p> <p>RIP Direction: <input type="text" value="None"/></p> <p>RIP Version: <input type="text" value="Disabled"/></p>			
Network Settings	<p>Authentication for RIP-2B/2M</p> <p>Enable Authentication for RIP-2B/2M: <input type="checkbox"/></p> <p>First Key Parameters</p> <p>MD5 Key Id: <input type="text"/></p> <p>MD5 Auth Key: <input type="text"/></p> <p>Not Valid Before: MM DD YYYY HH MM SS <input type="text"/> / <input type="text"/> / <input type="text"/> - <input type="text"/> : <input type="text"/> : <input type="text"/></p> <p>Not Valid After: MM DD YYYY HH MM SS <input type="text"/> / <input type="text"/> / <input type="text"/> - <input type="text"/> : <input type="text"/> : <input type="text"/></p> <p>Second Key Parameters</p> <p>MD5 Key Id: <input type="text"/></p> <p>MD5 Auth Key: <input type="text"/></p> <p>Not Valid Before: MM DD YYYY HH MM SS <input type="text"/> / <input type="text"/> / <input type="text"/> - <input type="text"/> : <input type="text"/> : <input type="text"/></p> <p>Not Valid After: MM DD YYYY HH MM SS <input type="text"/> / <input type="text"/> / <input type="text"/> - <input type="text"/> : <input type="text"/> : <input type="text"/></p>			
DMZ Setup				
VPN Settings				
USB Settings				
VLAN Settings				

3.5.2 Dynamic Routing (RIP)

Setup > Internet Settings > Routing Mode

Dynamic routing using the Routing Information Protocol (RIP) is an Interior Gateway Protocol (IGP) that is common in LANs. With RIP this router can exchange routing information with other supported routers in the LAN and allow for dynamic adjustment of routing tables in order to adapt to modifications in the LAN without interrupting traffic flow.

The RIP direction will define how this router sends and receives RIP packets. Choose between:

- Both: The router both broadcasts its routing table and also processes RIP information received from other routers. This is the recommended setting in order to fully utilize RIP capabilities.
- Out Only: The router broadcasts its routing table periodically but does not accept RIP information from other routers.
- In Only: The router accepts RIP information from other routers, but does not broadcast its routing table.
- None: The router neither broadcasts its route table nor does it accept any RIP packets from other routers. This effectively disables RIP.
 - The RIP version is dependent on the RIP support of other routing devices in the LAN.
- Disabled: This is the setting when RIP is disabled.
- RIP-1 is a class-based routing version that does not include subnet information. This is the most commonly supported version.
- RIP-2 includes all the functionality of RIPv1 plus it supports subnet information. Though the data is sent in RIP-2 format for both RIP-2B and RIP-2M, the mode in which packets are sent is different. RIP-2B broadcasts data in the entire subnet while RIP-2M sends data to multicast addresses.

If RIP-2B or RIP-2M is the selected version, authentication between this router and other routers (configured with the same RIP version) is required. MD5 authentication is used in a first/second key exchange process. The authentication key validity lifetimes are configurable to ensure that the routing information exchange is with current and supported routers detected on the LAN.

3.5.3 Static Routing

Advanced > Routing > Static Routing

Advanced > IPv6 > IPv6 Static Routing

Manually adding static routes to this device allows you to define the path selection of traffic from one interface to another. There is no communication between this router and other devices to account for changes in the path; once configured the static route will be active and effective until the network changes.

The List of Static Routes displays all routes that have been added manually by an administrator and allows several operations on the static routes. The List of IPv4 Static Routes and List of IPv6 Static Routes share the same fields (with one exception):

- **Name:** Name of the route, for identification and management.
- **Active:** Determines whether the route is active or inactive. A route can be added to the table and made inactive, if not needed. This allows routes to be used as needed without deleting and re-adding the entry. An inactive route is not broadcast if RIP is enabled.
- **Private:** Determines whether the route can be shared with other routers when RIP is enabled. If the route is made private, then the route will not be shared in a RIP broadcast or multicast. This is only applicable for IPv4 static routes.
- **Destination:** the route will lead to this destination host or IP address.
- **IP Subnet Mask:** This is valid for IPv4 networks only, and identifies the subnet that is affected by this static route
- **Interface:** The physical network interface (WAN1, WAN2, DMZ or LAN), through which this route is accessible.
- **Gateway:** IP address of the gateway through which the destination host or network can be reached.
- **Metric:** Determines the priority of the route. If multiple routes to the same destination exist, the route with the lowest metric is chosen.

Figure 25: Static route configuration fields

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Application Rules	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0070C0; color: white; padding: 2px;">STATIC ROUTE CONFIGURATION LOGOUT</div> <p style="text-align: center; margin-top: 10px;">This page allows user to add a new static route.</p> <div style="display: flex; justify-content: center; gap: 20px;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div>			
Website Filter				
Firewall Settings				
Wireless Settings				
Advanced Network				
Routing				
Certificates				
Users				
IP/MAC Binding				
IPv6				
Radius Settings	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">Static Route Configuration</div> <p>Route Name: <input type="text"/></p> <p>Active: <input type="checkbox"/></p> <p>Private: <input type="checkbox"/></p> <p>Destination IP Address: <input type="text"/></p> <p>IP Subnet Mask: <input type="text"/></p> <p>Interface: <input type="text" value="Dedicated WAN"/></p> <p>Gateway IP Address: <input type="text"/></p> <p>Metric: <input type="text"/></p> </div>			
Power Saving				

3.6 Configurable Port - WAN Option

This router supports one of the physical ports to be configured as a secondary WAN Ethernet port or a dedicated DMZ port. If the port is selected to be a secondary WAN interface, all configuration pages relating to WAN2 are enabled.

Setup > Internet Settings > WAN2 Setup

WAN2 configuration is identical to the WAN1 configuration with one significant exception: configuration for the 3G USB modem is available only on WAN2.

3G WAN support is available on the dual WAN products: DSR-1000 and DSR-1000N.

Figure 26: WAN2 configuration for 3G internet (part 1)

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
<ul style="list-style-type: none"> Wizard ▶ Internet Settings ▷ Wireless Settings ▶ Network Settings ▶ DMZ Setup ▶ VPN Settings ▶ USB Settings VLAN Settings ▶ 	<div style="background-color: #0056b3; color: white; padding: 5px;"> WAN2 SETUP LOGOUT </div> <p>This page allows you to set up your Internet connection. Ensure that you have the Internet connection information such as the IP Addresses, account information, etc. This information is usually provided by your ISP or network administrator.</p> <p>NOTE: If you have a PPPoE connection, first create your PPPoE profile on the Internet Settings > PPPoE Profiles page > WAN2 PPPoE Profiles page</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p> <div style="background-color: #333; color: white; padding: 5px;"> ISP Connection Type </div> <p>ISP Connection Type: <input type="text" value="3G Internet"/></p> <p>PPPoE Profile Name: <input type="text"/></p> <p>User Name: <input type="text" value="admin"/></p> <p>Password: <input type="text" value="XXXXXXXX"/></p> <p>Secret: <input type="text"/></p> <p>MPPE Encryption: <input type="checkbox"/></p> <p>Split Tunnel: <input type="checkbox"/></p> <p>Connectivity Type: <input type="text" value="Keep Connected"/></p> <p>Idle Time: <input type="text"/></p> <p>My IP Address: <input type="text"/></p> <p>Server Address: <input type="text"/></p> <p>Gateway IP Address: <input type="text"/></p>			

Cellular 3G internet access is available on WAN2 via a 3G USB modem for DSR-1000 and DSR-1000N. The cellular ISP that provides the 3G data plan will provide the authentication requirements to establish a connection. The dial Number and APN are specific to the cellular carriers. Once the connection type settings are configured and saved, navigate to the WAN status page (*Setup > Internet Settings > WAN Status*) and Enable the WAN2 link to establish the 3G connection.

Figure 27: WAN2 configuration for 3G internet (part 2)

Internet (IP) Address	
IP Address Source:	Get Dynamically from ISP
IP Address:	
IP Subnet Mask:	
Gateway IP Address:	
Domain Name System (DNS) Servers	
DNS Server Source:	Get Dynamically from ISP
Primary DNS Server:	
Secondary DNS Server:	
DHCP Connection (Dynamic IP Address)	
MAC Address Source:	Use Default Address
MAC Address:	
Host Name:	
3G Internet Connection Type	
Username:	WAP@CINGULARGPR (Optional)
Password:	*****
Dial Number:	*99#
Authentication Protocol:	None
APN:	wap.cingular (Optional)

3.7 WAN Port Settings

Advanced > Advanced Network > WAN Port Setup

The physical port settings for each WAN link can be defined here. If your ISP account defines the WAN port speed or is associated with a MAC address, this information is required by the router to ensure a smooth connection with the network.

The default MTU size supported by all ports is 1500. This is the largest packet size that can pass through the interface without fragmentation. This size can be increased, however large packets can introduce network lag and bring down the interface speed. Note that a 1500 byte size packet is the largest allowed by the Ethernet protocol at the network layer.

The port speed can be sensed by the router when Auto is selected. With this option the optimal port settings are determined by the router and network. The duplex (half or full) can be defined based on the port support, as well as one of three port speeds: 10 Mbps, 100 Mbps and 1000 Mbps (i.e. 1 Gbps). The default setting is 100 Mbps for all ports.

The default MAC address is defined during the manufacturing process for the interfaces, and can uniquely identify this router. You can customize each WAN port's MAC address as needed, either by letting the WAN port assume the current LAN host's MAC address or by entering a MAC address manually.

Figure 28: Physical WAN port settings

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Application Rules ▶	<div style="background-color: #0056b3; color: white; padding: 5px;">WAN PORT SETUP LOGOUT</div> <p>This page allows user to configure advanced WAN options for the router.</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p>			
Website Filter ▶				
Firewall Settings ▶				
Wireless Settings ▶				
Advanced Network ▷				
Routing ▶				
Certificates				
Users ▶				
IP/MAC Binding				
IPv6 ▶				
Radius Settings	<div style="background-color: #333; color: white; padding: 5px;">WANs Ping</div> <p>Respond to Ping: <input type="checkbox"/></p>			
Power Saving	<div style="background-color: #333; color: white; padding: 5px;">WAN1 Port Setup</div> <p>MTU Size: <input type="text" value="Default"/></p> <p>Custom MTU: <input type="text" value="1500"/></p> <p>Port Speed: <input type="text" value="Auto Sense"/></p>			
	<div style="background-color: #333; color: white; padding: 5px;">WAN2 Port Setup</div> <p>MTU Size: <input type="text" value="Default"/></p> <p>Custom MTU: <input type="text" value="1500"/></p> <p>Port Speed: <input type="text" value="Auto Sense"/></p>			

Chapter 4. Wireless Access Point Setup


This router has an integrated 802.11n radio that allows you to create an access point for wireless LAN clients. The security/encryption/authentication options are grouped in a wireless Profile, and each configured profile will be available for selection in the AP configuration menu. The profile defines various parameters for the AP, including the security between the wireless client and the AP, and can be shared between multiple APs instances on the same device when needed.

 The content in this section is applicable to the DSR-500N and DSR-1000N products.

Up to four unique wireless networks can be created by configuring multiple “virtual” APs. Each such virtual AP appears as an independent AP (unique SSID) to supported clients in the environment, but is actually running on the same physical radio integrated with this router.

You will need the following information to configure your wireless network:

- Types of devices expected to access the wireless network and their supported Wi-Fi™ modes
- The router’s geographical region
- The security settings to use for securing the wireless network.


 Profiles may be thought of as a grouping of AP parameters that can then be applied to not just one but multiple AP instances (SSIDs), thus avoiding duplication if the same parameters are to be used on multiple AP instances or SSIDs.

4.1 Wireless Settings Wizard

Setup > Wizard > Wireless Settings

The Wireless Network Setup Wizard is available for users new to networking. By going through a few straightforward configuration pages you can enable a Wi-Fi™ network on your LAN and allow supported 802.11 clients to connect to the configured Access Point.

Figure 29: Wireless Network Setup Wizards

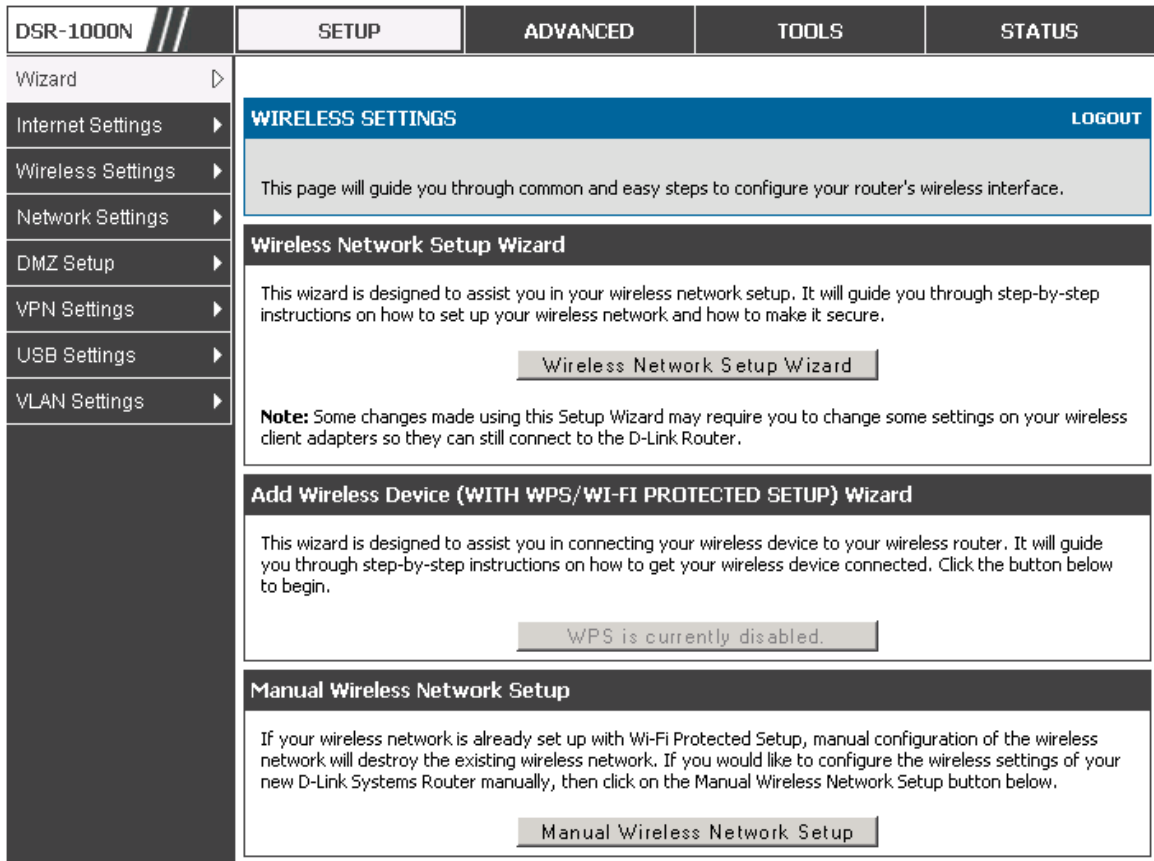

4.1.1 Wireless Network Setup Wizard

This wizard provides a step-by-step guide to create and secure a new access point on the router. The network name (SSID) is the AP identifier that will be detected by supported clients. The Wizard uses a TKIP+AES cipher for WPA / WPA2 security; depending on support on the client side, devices associate with this AP using either WPA or WPA2 security with the same pre-shared key.

The wizard has the option to automatically generate a network key for the AP. This key is the pre-shared key for WPA or WPA2 type security. Supported clients that have been given this PSK can associate with this AP. The default (auto-assigned) PSK is “passphrase”.

The last step in the Wizard is to click the Connect button, which confirms the settings and enables this AP to broadcast its availability in the LAN.

4.1.2 Add Wireless Device with WPS

With WPS enabled on your router, the selected access point allows supported WPS clients to join the network very easily. When the Auto option for connecting a wireless device is chose, you will be presented with two common WPS setup options:

- **Personal Identification Number (PIN):** The wireless device that supports WPS may have an alphanumeric PIN, and if entered in this field the AP will establish a link to the client. Click Connect to complete setup and connect to the client.
- **Push Button Configuration (PBC):** for wireless devices that support PBC, press and hold down on this button and within 2 minutes, click the PBC connect button. The AP will detect the wireless device and establish a link to the client.

 You need to enable at least one AP with WPA/WPA2 security and also enable WPS in the *Advanced > Wireless Settings > WPS* page to use the WPS wizard.

4.1.3 Manual Wireless Network Setup

This button on the Wizard page will link to the *Setup > Wireless Settings > Access Points* page. The manual options allow you to create new APs or modify the parameters of APs created by the Wizard.

4.2 Wireless Profiles

Setup > Wireless Settings > Profiles

The profile allows you to assign the security type, encryption and authentication to use when connecting the AP to a wireless client. The default mode is “open”, i.e. no security. This mode is insecure as it allows any compatible wireless clients to connect to an AP configured with this security profile.

To create a new profile, use a unique profile name to identify the combination of settings. Configure a unique SSID that will be the identifier used by the clients to communicate to the AP using this profile. By choosing to broadcast the SSID, compatible wireless clients within range of the AP can detect this profile’s availability.

The AP offers all advanced 802.11 security modes, including WEP, WPA, WPA2 and WPA+WPA2 options. The security of the Access point is configured by the Wireless Security Type section:

- **Open:** select this option to create a public “open” network to allow unauthenticated devices to access this wireless gateway.
- **WEP (Wired Equivalent Privacy):** this option requires a static (pre-shared) key to be shared between the AP and wireless client. Note that WEP does not support 802.11n data rates; is it appropriate for legacy 802.11 connections.
- **WPA (Wi-Fi Protected Access):** For stronger wireless security than WEP, choose this option. The encryption for WPA will use TKIP and also CCMP if required. The authentication can be a pre-shared key (PSK), Enterprise mode with RADIUS

server, or both. Note that WPA does not support 802.11n data rates; is it appropriate for legacy 802.11 connections.

- WPA2: this security type uses CCMP encryption (and the option to add TKIP encryption) on either PSK (pre-shared key) or Enterprise (RADIUS Server) authentication.
- WPA + WPA2: this uses both encryption algorithms, TKIP and CCMP. WPA clients will use TKIP and WPA2 clients will use CCMP encryption algorithms.


 “WPA+WPA2” is a security option that allows devices to connect to an AP using the strongest security that it supports. This mode allows legacy devices that only support WPA2 keys (such as an older wireless printer) to connect to a secure AP where all the other wireless clients are using WPA2.

Figure 30: List of Available Profiles shows the options available to secure the wireless link

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
-----------	-------	----------	-------	--------

Wizard ▶

Internet Settings ▶

Wireless Settings ▷

Network Settings ▶

DMZ Setup ▶

VPN Settings ▶

USB Settings

VLAN Settings ▶

PROFILES							LOGOUT
A profile is a grouping of wireless settings which can be shared across multiple APs. AP specific settings are configured on the Access Point Configuration page. The profile allows for easy duplication of SSIDs, security settings, encryption methods, client authentication, etc. across APs.							
List of Profiles							
<input type="checkbox"/>	Profile Name	SSID	Broadcast	Security	Encryption	Authentication	
<input type="checkbox"/>	default1	admin	✔	WPA+WPA2	TKIP+CCMP	PSK	
<input type="checkbox"/>	DSR-guest	DSR_guest	✘	OPEN	NONE	NONE	

Edit Delete Add

4.2.1 WEP Security

If WEP is the chosen security option, you must set a unique static key to be shared with clients that wish to access this secured wireless network. This static key can be generated from an easy-to-remember passphrase and the selected encryption length.

- Authentication: select between Open System, or Shared Key schemes
- Encryption: select the encryption key size -- 64 bit WEP or 128 bit WEP. The larger size keys provide stronger encryption, thus making the key more difficult to crack
- WEP Passphrase: enter a alphanumeric phrase and click Generate Key to generate 4 unique WEP keys with length determined by the encryption key

size. Next choose one of the keys to be used for authentication. The selected key must be shared with wireless clients to connect to this device.

Figure 31: Profile configuration to set network security

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
<ul style="list-style-type: none"> Wizard ▶ Internet Settings ▶ Wireless Settings ▶ Network Settings ▶ DMZ Setup ▶ VPN Settings ▶ USB Settings ▶ VLAN Settings ▶ 	<div style="text-align: right;">LOGOUT</div> <div style="background-color: #0056b3; color: white; padding: 5px;">PROFILES</div> <p>The Profile Configuration page allows you to set or modify the network identifiers and wireless settings of a particular wireless profile. Profiles can be applied to more than once access point if needed.</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p> <div style="background-color: #333; color: white; padding: 5px;">Profile Configuration</div> <p>Profile Name: <input type="text"/></p> <p>SSID: <input type="text" value="admin"/></p> <p>Broadcast SSID: <input checked="" type="checkbox"/></p> <p>Security: <input type="text" value="OPEN"/></p> <p>Encryption: <input type="text" value="TKIP"/></p> <p>Authentication: <input type="text" value="PSK"/></p> <p>WPA Password: <input type="text"/></p> <p>Enable Pre-Authentication: <input type="checkbox"/></p> <div style="background-color: #333; color: white; padding: 5px;">WEP Index and Keys</div> <p>Authentication: <input type="text" value="Open System"/></p> <p>Encryption: <input type="text" value="64 bit WEP"/></p> <p>WEP Passphrase: <input type="text"/> <input type="button" value="generate key"/></p> <p>WEP Key 1: <input type="text"/></p> <p>WEP Key 2: <input type="text"/></p> <p>WEP Key 3: <input type="text"/></p> <p>WEP Key 4: <input type="text"/></p>			

4.2.2 WPA or WPA2 with PSK

A pre-shared key (PSK) is a known passphrase configured on the AP and client both and is used to authenticate the wireless client. An acceptable passphrase is between 8 to 63 characters in length.

4.2.3 RADIUS Authentication

Setup > Wireless Settings > RADIUS Settings

Enterprise Mode uses a RADIUS Server for WPA and/or WPA2 security. A RADIUS server must be configured and accessible by the router to authenticate wireless client connections to an AP enabled with a profile that uses RADIUS authentication.

- The Authentication IP Address is required to identify the server. A secondary RADIUS server provides redundancy in the event that the primary server cannot be reached by the router when needed.
- Authentication Port: the port for the RADIUS server connection
- Secret: enter the shared secret that allows this router to log into the specified RADIUS server(s). This key must match the shared secret on the RADIUS Server.
- The Timeout and Retries fields are used to either move to a secondary server if the primary cannot be reached, or to give up the RADIUS authentication attempt if communication with the server is not possible.

Figure 32: RADIUS server (External Authentication) configuration

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0070C0; color: white; padding: 2px;">RADIUS SERVER LOGOUT</div> <p>This page configures the RADIUS servers to be used for authentication. A RADIUS server maintains a database of user accounts used in larger environments. If a RADIUS server is configured in the LAN, it can be used for authenticating users that want to connect to the wireless network provided by this device. If the first/primary RADIUS server is not accessible at any time, then the device will attempt to contact the secondary RADIUS server for user authentication.</p> <div style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div>			
Internet Settings				
Wireless Settings				
Network Settings				
DMZ Setup				
VPN Settings				
USB Settings				
VLAN Settings				
Radius Server Configuration				
Authentication Server IP Address (Primary):		<input type="text" value="192.168.1.2"/>		
Authentication Server IP Address (Secondary):		<input type="text" value="192.168.1.3"/>		
Authentication Port:		<input type="text" value="1812"/>		
Secret:		<input type="text" value="*****"/>		
Timeout:		<input type="text" value="1"/> (Seconds)		
Retries:		<input type="text" value="2"/>		

4.3 Creating and Using Access Points

Setup > Wireless Settings > Access Points

Once a profile (a group of security settings) is created, it can be assigned to an AP on the router. The AP SSID can be configured to broadcast its availability to the 802.11 environment can be used to establish a WLAN network.

The AP configuration page allows you to create a new AP and link to it one of the available profiles. This router supports multiple AP's referred to as virtual access points (VAPs). Each virtual AP that has a unique SSIDs appears as an independent access point to clients. This valuable feature allows the router's radio to be configured in a way to optimize security and throughput for a group of clients as required by the user. To create a VAP, click the "add" button on the *Setup > Wireless Settings > Access Points* page. After setting the AP name, the profile dropdown menu is used to select one of the configured profiles.


 The AP Name is a unique identifier used to manage the AP from the GUI, and is not the SSID that is detected by clients when the AP has broadcast enabled.

Figure 33: Virtual AP configuration

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard ▶				
Internet Settings ▶	ACCESS POINTS LOGOUT			
Wireless Settings ▷	<p>This page allows you to create a new AP or edit the configuration of an existing AP. The details will then be displayed in the AP table on the Wireless > Access Points page.</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p>			
Network Settings ▶	Access Point Configuration			
DMZ Setup ▶	<p>AP Name: <input type="text"/></p> <p>Profile Name: <input type="text" value="default1"/></p> <p>Active Time: <input type="checkbox"/></p> <p>Start Time: <input type="text"/> hour <input type="text"/> minute <input type="text" value="AM"/></p> <p>Stop Time: <input type="text"/> hour <input type="text"/> minute <input type="text" value="AM"/></p> <p>WLAN Partition: <input type="checkbox"/></p>			
VPN Settings ▶				
USB Settings				
VLAN Settings ▶				

A valuable power saving feature is the start and stop time control for this AP. You can conserve on the radio power by disabling the AP when it is not in use. For example on evenings and weekends if you know there are no wireless clients, the start and stop time will enable/disable the access point automatically.

Once the AP settings are configured, you must enable the AP on the radio on the *Setup > Wireless Settings > Access Points* page. The status field changes to “Enabled” if the AP is available to accept wireless clients. If the AP is configured to broadcast its SSID (a profile parameter), a green check mark indicating it is broadcasting will be shown in the List of Available Access points.

Figure 34: List of configured access points (Virtual APs) shows one enabled access point on the radio, broadcasting its SSID

The screenshot shows the router's configuration page for 'ACCESS POINTS'. The page title is 'ACCESS POINTS' with a 'LOGOUT' link. A text box explains that the table lists configured APs and their status. Below is a table titled 'List of Available Access Points' with columns: Status, Virtual AP, SSID, Broadcast, Profile Name, Active Time, Start Time, and Stop Time. Two rows are shown: one for 'ap1' (admin SSID, Broadcast checked, Profile Name default1, Active Time No) and one for 'Open_guests' (DSR_guest SSID, Broadcast unchecked, Profile Name DSR-guest, Active Time Yes, Start Time 9:3 AM, Stop Time 12:30 PM). Below the table are buttons for 'Edit', 'Enable', 'Disable', 'Delete', 'Add', 'MAC Filter', and 'Status'.

<input type="checkbox"/>	Status	Virtual AP	SSID	Broadcast	Profile Name	Active Time	Start Time	Stop Time
<input type="checkbox"/>	Enabled	ap1	admin	✓	default1	No	-	-
<input type="checkbox"/>	Enabled	Open_guests	DSR_guest	⊘	DSR-guest	Yes	9:3 AM	12:30 PM

The clients connected to a particular AP can be viewed by using the Status Button on the List of Available Access Points. Traffic statistics are shown for that individual AP, as compared to the summary stats for each AP on the Statistics table. Connected clients are sorted by the MAC address and indicate the security parameters used by the wireless link, as well as the time connected to this particular AP. Clicking the Details button next to the connected client will give the detailed send and receive traffic statistics for the wireless link between this AP and the client.

4.3.1 Primary benefits of Virtual APs:

- Optimize throughput: if 802.11b, 802.11 g, and 802.11n clients are expected to access the LAN via this router, creating 3 VAPs will allow you to manage or shape traffic for each group of clients. A unique SSID can be created for the network of 802.11b clients and another SSID can be assigned for the 802.11n clients. Each can have different security parameters – remember, the SSID and security of the link is determined by the profile. In this way legacy clients can access the network without bringing down the overall throughput of more capable 802.11n clients.
- Optimize security: you may wish to support select legacy clients that only offer WEP security while using WPA2 security for the majority of clients for the radio. By creating two VAPs configured with different SSIDs and different security parameters, both types of clients can connect to the LAN. Since WPA2 is more secure, you may want to broadcast this SSID and not

broadcast the SSID for the VAP with WEP since it is meant to be used for a few legacy devices in this scenario.

4.4 Tuning Radio Specific Settings

Setup > Wireless Settings > Radio Settings

The Radio Settings page lets you configure the channels and power levels available for the AP's enabled on the DSR. The router has a dual band 802.11n radio, meaning either 2.4 GHz or 5 GHz frequency of operation can be selected (not concurrently though). Based on the selected operating frequency, the mode selection will let you define whether legacy connections or only 802.11n connections (or both) are accepted on configured APs.

Figure 35: Radio card configuration options

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS																		
Wizard	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0056b3; color: white; padding: 2px;">RADIO SETTINGS</div> <div style="text-align: right; color: white; font-size: small;">LOGOUT</div> <p style="font-size: small; margin-top: 10px;">This page allows you to configure the hardware settings for each available radio card.</p> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div>																					
Internet Settings																						
Wireless Settings																						
Network Settings																						
DMZ Setup																						
VPN Settings																						
USB Settings																						
VLAN Settings																						
Radio Configuration																						
					<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 60%;">Operating Frequency:</td> <td style="width: 40%;">2.4GHz</td> </tr> <tr> <td>Mode:</td> <td>ng</td> </tr> <tr> <td>Channel Spacing:</td> <td>20/40MHz</td> </tr> <tr> <td>Control Side Band:</td> <td>Upper</td> </tr> <tr> <td>Current Channel:</td> <td>Auto</td> </tr> <tr> <td>Channel:</td> <td>Auto</td> </tr> <tr> <td>Default Transmit Power:</td> <td>31 (dBm)</td> </tr> <tr> <td>Transmit Power:</td> <td>15 dBm</td> </tr> <tr> <td>Transmission Rate:</td> <td>Best(Automatic)</td> </tr> </table>				Operating Frequency:	2.4GHz	Mode:	ng	Channel Spacing:	20/40MHz	Control Side Band:	Upper	Current Channel:	Auto	Channel:	Auto	Default Transmit Power:	31 (dBm)
Operating Frequency:	2.4GHz																					
Mode:	ng																					
Channel Spacing:	20/40MHz																					
Control Side Band:	Upper																					
Current Channel:	Auto																					
Channel:	Auto																					
Default Transmit Power:	31 (dBm)																					
Transmit Power:	15 dBm																					
Transmission Rate:	Best(Automatic)																					

The ratified 802.11n support on this radio requires selecting the appropriate broadcast (NA or NG etc.) mode, and then defining the channel spacing and control side band for 802.11n traffic. The default settings are appropriate for most networks. For example, changing the channel spacing to 40 MHz can improve bandwidth at the expense of supporting earlier 802.11n clients.

The available transmission channels are governed by regulatory constraints based on the region setting of the router. The maximum transmission power is similarly governed by regulatory limits; you have the option to decrease from the default maximum to reduce the signal strength of traffic out of the radio.

4.5 Advanced Wireless Settings

Advanced > Wireless Settings > Advanced Wireless

Sophisticated wireless administrators can modify the 802.11 communication parameters in this page. Generally, the default settings are appropriate for most networks. Please refer to the GUI integrated help text for further details on the use of each configuration parameter.

Figure 36: Advanced Wireless communication settings

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Application Rules				
Website Filter				
Firewall Settings				
Wireless Settings	LOGOUT			
Advanced Network	<p>ADVANCED WIRELESS</p> <p>This page is used to specify advanced configuration settings for the radio.</p> <p>Save Settings Don't Save Settings</p>			
Routing	<p>Advanced Wireless Configuration</p> <p>Beacon Interval: <input type="text" value="100"/> (Milliseconds)</p> <p>Dtim Interval: <input type="text" value="2"/></p> <p>RTS Threshold: <input type="text" value="2346"/></p> <p>Fragmentation Threshold: <input type="text" value="2346"/></p> <p>Preamble Mode: <input type="text" value="Long"/></p> <p>Protection Mode: <input type="text" value="None"/></p> <p>Power Save Enable: <input type="checkbox"/></p> <p>Short Retry Limit: <input type="text" value="16"/></p> <p>Long Retry Limit: <input type="text" value="16"/></p>			
Certificates				
Users				
IP/MAC Binding				
IPv6				
Power Saving				

4.6 Wi-Fi Protected Setup (WPS)

Advanced > Wireless Settings > WPS

WPS is a simplified method to add supporting wireless clients to the network. WPS is only applicable for APs that employ WPA or WPA2 security. To use WPS, select the eligible VAPs from the dropdown list of APs that have been configured with this security and enable WPS status for this AP.

The WPS Current Status section outlines the security, authentication, and encryption settings of the selected AP. These are consistent with the AP’s profile. There are two setup options available for WPS:

- **Personal Identification Number (PIN):** The wireless device that supports WPS may have an alphanumeric PIN, if so add the PIN in this field. The router will

connect within 60 seconds of clicking the “Configure via PIN” button immediately below the PIN field. There is no LED indication that a client has connected.

- **Push Button Configuration (PBC):** for wireless devices that support PBC, press and hold down on this button and within 2 minutes click the PBC connect button. The AP will detect the wireless device and establish a link to the client.

🔗 More than one AP can use WPS, but only one AP can be used to establish WPS links to client at any given time.

Figure 37: WPS configuration for an AP with WPA/WPA2 profile

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Application Rules ▶	<div style="border: 1px solid #ccc; padding: 5px;"> <div style="background-color: #0070c0; color: white; padding: 2px 5px; display: flex; justify-content: space-between;"> WPS LOGOUT </div> <p style="font-size: small; margin-top: 5px;">This page allows you to define and modify the Wi-Fi Protected Setup (WPS) configuration parameters.</p> <div style="display: flex; justify-content: center; gap: 10px; margin-top: 5px;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div> <div style="background-color: #333; color: white; padding: 2px 5px; margin-top: 5px;">WPS Configuration</div> <div style="margin-top: 5px;"> <p>Select VAP: <input type="text" value="ap1"/></p> <p>WPS Status: <input type="text" value="Disabled"/></p> </div> <div style="background-color: #333; color: white; padding: 2px 5px; margin-top: 5px;">WPS Current Status</div> <div style="margin-top: 5px;"> <p>Security: N/A</p> <p>Authentication: N/A</p> <p>Encryption: N/A</p> </div> <div style="background-color: #333; color: white; padding: 2px 5px; margin-top: 5px;">WPS Setup Method</div> <div style="margin-top: 5px;"> <p>Station PIN: <input type="text"/></p> <p style="text-align: center;"><input type="button" value="Configure via PIN"/></p> <p>Session Status: N/A</p> </div>			
Website Filter ▶				
Firewall Settings ▶				
Wireless Settings ▷				
Advanced Network ▶				
Routing ▶				
Certificates				
Users ▶				
IP/MAC Binding				
IPv6 ▶				
Power Saving				

Chapter 5. Securing the Private Network

You can secure your network by creating and applying rules that your router uses to selectively block and allow inbound and outbound Internet traffic. You then specify how and to whom the rules apply. To do so, you must define the following:

- Services or traffic types (examples: web browsing, VoIP, other standard services and also custom services that you define)
- Direction for the traffic by specifying the source and destination of traffic; this is done by specifying the “From Zone” (LAN/WAN/DMZ) and “To Zone” (LAN/WAN/DMZ)
- Schedules as to when the router should apply rules
- Any Keywords (in a domain name or on a URL of a web page) that the router should allow or block
- Rules for allowing or blocking inbound and outbound Internet traffic for specified services on specified schedules
- MAC addresses of devices that should not access the internet
- Port triggers that signal the router to allow or block access to specified services as defined by port number
- Reports and alerts that you want the router to send to you

You can, for example, establish restricted-access policies based on time-of-day, web addresses, and web address keywords. You can block Internet access by applications and services on the LAN, such as chat rooms or games. You can block just certain groups of PCs on your network from being accessed by the WAN or public DMZ network.

5.1 Firewall Rules

Advanced > Firewall Settings > Firewall Rules

Inbound (WAN to LAN/DMZ) rules restrict access to traffic entering your network, selectively allowing only specific outside users to access specific local resources. By default all access from the insecure WAN side are blocked from accessing the secure LAN, except in response to requests from the LAN or DMZ. To allow outside devices to access services on the secure LAN, you must create an inbound firewall rule for each service.

If you want to allow incoming traffic, you must make the router’s WAN port IP address known to the public. This is called “exposing your host.” How you make your address known depends on how the WAN ports are configured; for this router you

may use the IP address if a static address is assigned to the WAN port, or if your WAN address is dynamic a DDNS (Dynamic DNS) name can be used.

Outbound (LAN/DMZ to WAN) rules restrict access to traffic leaving your network, selectively allowing only specific local users to access specific outside resources. The default outbound rule is to allow access from the secure zone (LAN) to either the public DMZ or insecure WAN. You can change this default behavior in the *Firewall Settings > Default Outbound Policy* page. When the default outbound policy is allow always, you can to block hosts on the LAN from accessing internet services by creating an outbound firewall rule for each service.

Figure 38: List of Available Firewall Rules

The screenshot shows the router's configuration interface. On the left is a navigation menu with items like Application Rules, Website Filter, Firewall Settings, etc. The main content area is titled 'IPV4 FIREWALL RULES' and includes a description of a firewall. Below this is a table titled 'List of Available Firewall Rules' with columns for Status, From Zone, To Zone, Service, Action, Source Hosts, Destination Hosts, Local Server, Internet Destination, and Log. At the bottom of the table are buttons for Edit, Enable, Disable, Delete, and Add.

<input type="checkbox"/>	Status	From Zone	To Zone	Service	Action	Source Hosts	Destination Hosts	Local Server	Internet Destination	Log
<input type="checkbox"/>	Disabled	LAN	WAN	ANY	ALLOW by schedule, otherwise block	176.16.2.200 - 176.16.2.254	Any			Never
<input type="checkbox"/>	Disabled	WAN	LAN	FTP	ALLOW by schedule, otherwise block	Any		176.16.2.155	WAN1	Never
<input type="checkbox"/>	Disabled	WAN	DMZ	DocServer	ALLOW always	Any		172.16.1.11	WAN1	Never

5.2 Defining Rule Schedules

Tools > Schedules

Firewall rules can be enabled or disabled automatically if they are associated with a configured schedule. The schedule configuration page allows you to define days of the week and the time of day for a new schedule, and then this schedule can be selected in the firewall rule configuration page.

All schedules will follow the time in the routers configured time zone. Refer to the section on choosing your Time Zone and configuring NTP servers for more information.

Figure 39: List of Available Schedules to bind to a firewall rule

SCHEDULES LOGOUT				
When you create a firewall rule, you can specify a schedule when the rule applies. The table lists all the Available Schedules for this device and allows several operations on the Schedules.				
List of Available Schedules				
<input type="checkbox"/>	Name	Days	Start Time	End Time
<input type="checkbox"/>	Guests	Monday, Tuesday, Wednesday, Thursday, Friday	09:00 AM	05:00 PM
<input type="checkbox"/>	Marketing	Tuesday, Wednesday, Thursday	12:00 AM	11:59 PM
<input type="checkbox"/>	EngineeringWeekend	Sunday, Saturday	12:00 AM	11:59 PM

5.3 Configuring Firewall Rules

Advanced > Firewall Settings > Firewall Rules


All configured firewall rules on the router are displayed in the Firewall Rules list. This list also indicates whether the rule is enabled (active) or not, and gives a summary of the From/To zone as well as the services or users that the rule affects.

To create a new firewall rules, follow the steps below:

1. View the existing rules in the List of Available Firewall Rules table.
2. To edit or add an outbound or inbound services rule, do the following:
 - To edit a rule, click the checkbox next to the rule and click Edit to reach that rule’s configuration page.
 - To add a new rule, click Add to be taken to a new rule’s configuration page. Once created, the new rule is automatically added to the original table.
3. Chose the From Zone to be the source of originating traffic: either the secure LAN, public DMZ, or insecure WAN. For an inbound rule WAN should be selected as the From Zone.
4. Choose the To Zone to be the destination of traffic covered by this rule. If the From Zone is the WAN, the To Zone can be the public DMZ or secure LAN. Similarly if the From Zone is the LAN, then the To Zone can be the public DMZ or insecure WAN.
5. Parameters that define the firewall rule include the following:

- Service: ANY means all traffic is affected by this rule. For a specific service the drop down list has common services, or you can select a custom defined service.
 - Action & Schedule: Select one of the 4 actions that this rule defines: BLOCK always, ALLOW always, BLOCK by schedule otherwise ALLOW, or ALLOW by schedule otherwise BLOCK. A schedule must be preconfigured in order for it to be available in the dropdown list to assign to this rule.
 - Source & Destination users: For each relevant category, select the users to which the rule applies:
 - Any (all users)
 - Single Address (enter an IP address)
 - Address Range (enter the appropriate IP address range)
 - Log: traffic that is filtered by this rule can be logged; this requires configuring the router's logging feature separately.
 - QoS Priority: Outbound rules (where To Zone = insecure WAN only) can have the traffic marked with a QoS priority tag. Select a priority level:
 - Normal-Service: ToS=0 (lowest QoS)
 - Minimize-Cost: ToS=1
 - Maximize-Reliability: ToS=2
 - Maximize-Throughput: ToS=4
 - Minimize-Delay: ToS=8 (highest QoS)
6. Inbound rules can use Destination NAT (DNAT) for managing traffic from the WAN. Destination NAT is available when the To Zone = DMZ or secure LAN.
- With an inbound allow rule you can enter the internal server address that is hosting the selected service.
 - You can enable port forwarding for an incoming service specific rule (From Zone = WAN) by selecting the appropriate checkbox. This will allow the selected service traffic from the internet to reach the appropriate LAN port via a port forwarding rule.
 - Translate Port Number: With port forwarding, the incoming traffic to be forwarded to the port number entered here.

- External IP address: The rule can be bound to a specific WAN interface by selecting either the primary WAN or configurable port WAN as the source IP address for incoming traffic.

 This router supports multi-NAT and so the External IP address does not necessarily have to be the WAN address. On a single WAN interface, multiple public IP addresses are supported. If your ISP assigns you more than one public IP address, one of these can be used as your primary IP address on the WAN port, and the others can be assigned to servers on the LAN or DMZ. In this way the LAN/DMZ server can be accessed from the internet by its aliased public IP address.

7. Outbound rules can use Source NAT (SNAT) in order to map (bind) all LAN/DMZ traffic matching the rule parameters to a specific WAN interface or external IP address (usually provided by your ISP).

Once the new or modified rule parameters are saved, it appears in the master list of firewall rules. To enable or disable a rule, click the checkbox next to the rule in the list of firewall rules and choose Enable or Disable.


 The router applies firewall rules in the order listed. As a general rule, you should move the strictest rules (those with the most specific services or addresses) to the top of the list. To reorder rules, click the checkbox next to a rule and click up or down.

Figure 40: Example where an outbound SNAT rule is used to map an external IP address (209.156.200.225) to a private DMZ IP address (10.30.30.30)

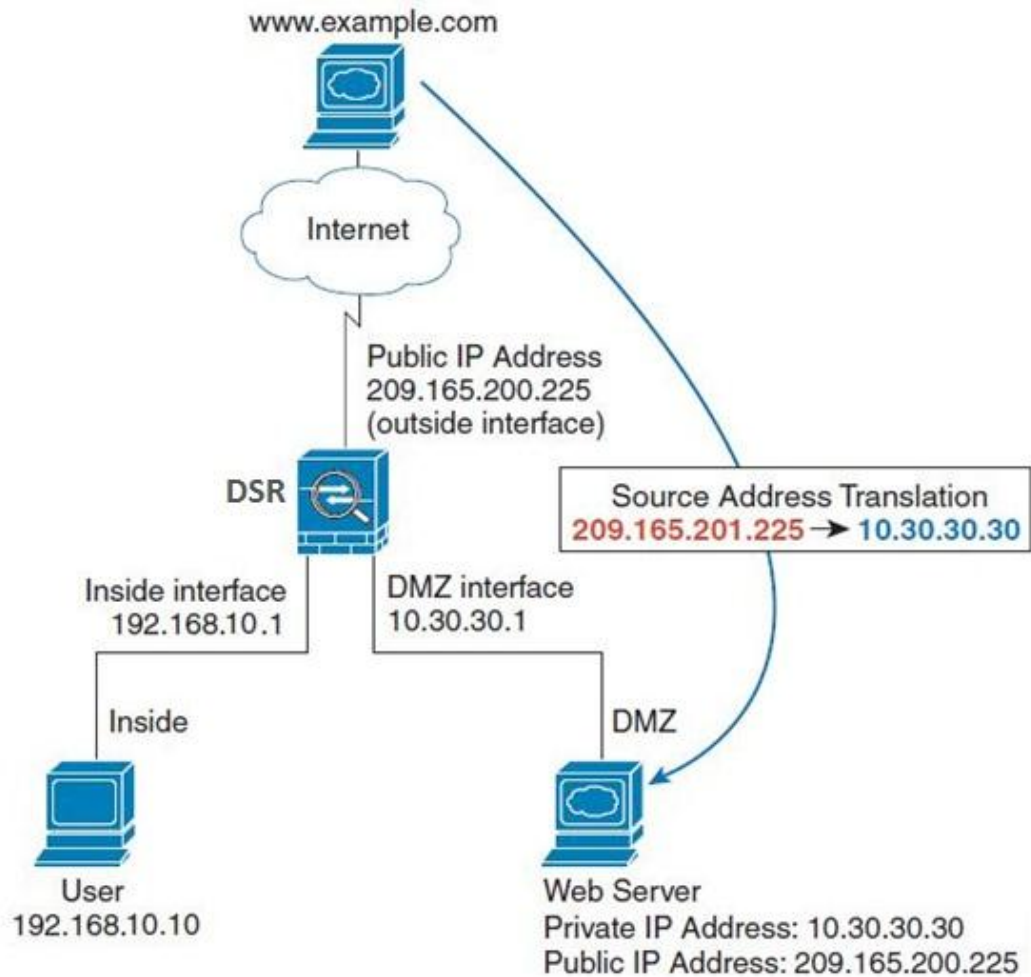


Figure 41: The firewall rule configuration page allows you to define the To/From zone, service, action, schedules, and specify source/destination IP addresses as needed.

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Application Rules ▶				
Website Filter ▶				
Firewall Settings ▷	<div style="background-color: #0056b3; color: white; padding: 5px;"> IPV4 FIREWALL RULES LOGOUT </div> <p>This page allows you to add a new firewall rule or edit the configuration of an existing firewall rule. The details will then be displayed in the List of Available Firewall Rules table on the Firewall Rules page.</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p>			
Wireless Settings ▶				
Advanced Network ▶				
Routing ▶				
Certificates				
Users ▶				
IP/MAC Binding				
IPv6 ▶				
Power Saving				
Firewall Rule Configuration				
<p>From Zone: <input type="text" value="SECURE (LAN)"/></p> <p>To Zone: <input type="text" value="INSECURE (Dedicated WAN/Configurable WAN)"/></p> <p>Service: <input type="text" value="ANY"/></p> <p>Action: <input type="text" value="Always Block"/></p> <p>Select Schedule: <input type="text" value="Guests"/></p> <p>Source Hosts: <input type="text" value="Any"/></p> <p>From: <input type="text"/></p> <p>To: <input type="text"/></p> <p>Destination Hosts: <input type="text" value="Any"/></p> <p>From: <input type="text"/></p> <p>To: <input type="text"/></p> <p>Log: <input type="text" value="Never"/></p> <p>QoS Priority: <input type="text" value="Normal-Service"/></p>				
Source NAT Settings				
<p>External IP Address: <input type="text" value="WAN Interface Address"/></p> <p>Single IP Address: <input type="text"/></p> <p>WAN Interface: <input type="text" value="WAN1"/></p>				
Destination NAT Settings				
<p>Internal IP Address: <input type="text"/></p> <p>Enable Port Forwarding: <input type="checkbox"/></p> <p>Translate Port Number: <input type="text"/></p> <p>External IP Address: <input type="text" value="Dedicated WAN"/></p> <p>Other IP Address: <input type="text"/></p>				

5.3.1 Firewall Rule Configuration Examples

Example 1: Allow inbound HTTP traffic to the DMZ

Situation: You host a public web server on your local DMZ network. You want to allow inbound HTTP requests from any outside IP address to the IP address of your web server at any time of day.

Solution: Create an inbound rule as follows.

Parameter	Value
From Zone	Insecure (WAN1/WAN2)
To Zone	Public (DMZ)
Service	HTTP
Action	ALLOW always
Send to Local Server (DNAT IP)	192.168.5.2 (web server IP address)
Destination Users	Any
Log	Never

Example 2: Allow videoconferencing from range of outside IP addresses

Situation: You want to allow incoming videoconferencing to be initiated from a restricted range of outside IP addresses (132.177.88.2 - 132.177.88.254), from a branch office.

Solution: Create an inbound rule as follows. In the example, CUSeeMe (the video conference service used) connections are allowed only from a specified range of external IP addresses.

Parameter	Value
From Zone	Insecure (WAN1/WAN2)
To Zone	Secure (LAN)
Service	CU-SEEME:UDP
Action	ALLOW always
Send to Local Server (DNAT IP)	192.168.10.11
Destination Users	Address Range
From	132.177.88.2
To	134.177.88.254
Enable Port Forwarding	Yes (enabled)

Example 3: Multi-NAT configuration

Situation: You want to configure multi-NAT to support multiple public IP addresses on one WAN port interface.

Solution: Create an inbound rule that configures the firewall to host an additional public IP address. Associate this address with a web server on the DMZ. If you arrange with your ISP to have more than one public IP address for your use, you can use the additional public IP addresses to map to servers on your LAN. One of these public IP addresses is used as the primary IP address of the router. This address is used to provide Internet access to your LAN PCs through NAT. The other addresses are available to map to your DMZ servers.

The following addressing scheme is used to illustrate this procedure:

- WAN IP address: 10.1.0.118
- LAN IP address: 192.168.10.1; subnet 255.255.255.0
- Web server host in the DMZ, IP address: 192.168.12.222
- Access to Web server: (simulated) public IP address 10.1.0.52

Parameter	Value
From Zone	Insecure (WAN1/WAN2)
To Zone	Public (DMZ)
Service	HTTP
Action	ALLOW always
Send to Local Server (DNAT IP)	192.168.12.222 (web server local IP address)
Destination Users	Single Address
From	10.1.0.52
WAN Users	Any
Log	Never

Example 4: Block traffic by schedule if generated from specific range of machines

Use Case: Block all HTTP traffic on the weekends if the request originates from a specific group of machines in the LAN having a known range of IP addresses, and anyone coming in through the Network from the WAN (i.e. all remote users).

Configuration:

1. Setup a schedule:
 - To setup a schedule that affects traffic on weekends only, navigate to Security: Schedule, and name the schedule “Weekend”
 - Define “weekend” to mean 12 am Saturday morning to 12 am Monday morning – all day Saturday & Sunday

- In the Scheduled days box, check that you want the schedule to be active for “specific days”. Select “Saturday” and “Sunday”
- In the scheduled time of day, select “all day” – this will apply the schedule between 12 am to 11:59 pm of the selected day.
- Click apply – now schedule “Weekend” isolates all day Saturday and Sunday from the rest of the week.

Figure 42: Schedule configuration for the above example.

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Admin	<h3>SCHEDULE CONFIGURATION LOGOUT</h3> <p>This page allows user to configure schedules. These schedules then can be applied to firewall rules to achieve schedule based firewall.</p> <p><input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/></p> <h4>Schedule Name</h4> <p>Name: <input type="text"/></p> <h4>Scheduled Days</h4> <p>Do you want this schedule to be active on all days or specific days? <input type="button" value="All Days"/></p> <p>Monday: <input type="checkbox"/></p> <p>Tuesday: <input type="checkbox"/></p> <p>Wednesday: <input type="checkbox"/></p> <p>Thursday: <input type="checkbox"/></p> <p>Friday: <input type="checkbox"/></p> <p>Saturday: <input type="checkbox"/></p> <p>Sunday: <input type="checkbox"/></p> <h4>Scheduled Time of Day</h4> <p>Do you want this schedule to be active all day or at specific times during the day?</p> <p><input type="button" value="All Day"/></p> <p>Start Time:</p> <p>Hour: <input type="text"/></p> <p>Minute: <input type="text"/></p> <p><input type="button" value="AM"/></p> <p>End Time:</p> <p>Hour: <input type="text"/></p> <p>Minute: <input type="text"/></p> <p><input type="button" value="AM"/></p>			
Date and Time				
Log Settings				
System				
Firmware				
Firmware via USB				
Dynamic DNS				
System Check				
Schedules				

- Since we are trying to block HTTP requests, it is a service with To Zone: Insecure (WAN1/WAN2) that is to be blocked according to schedule “Weekend”.

3. Select the Action to “Block by Schedule, otherwise allow”. This will take a predefined schedule and make sure the rule is a blocking rule during the defined dates/times. All other times outside the schedule will not be affected by this firewall blocking rule
4. As we defined our schedule in schedule “Weekend”, this is available in the dropdown menu
5. We want to block the IP range assigned to the marketing group. Let’s say they have IP 192.168.10.20 to 192.168.10.30. On the Source Users dropdown, select Address Range and add this IP range as the From and To IP addresses.
6. We want to block all HTTP traffic to any services going to the insecure zone. The Destination Users dropdown should be “any”.
7. We don’t need to change default QoS priority or Logging (unless desired) – clicking apply will add this firewall rule to the list of firewall rules.
8. The last step is to enable this firewall rule. Select the rule, and click “enable” below the list to make sure the firewall rule is active

5.4 Security on Custom Services

Advanced > Firewall Settings > Custom Services

Custom services can be defined to add to the list of services available during firewall rule configuration. While common services have known TCP/UDP/ICMP ports for traffic, many custom or uncommon applications exist in the LAN or WAN. In the custom service configuration menu you can define a range of ports and identify the traffic type (TCP/UDP/ICMP) for this service. Once defined, the new service will appear in the services list of the firewall rules configuration menu.

Figure 43: List of user defined services.

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Application Rules				
Website Filter	CUSTOM SERVICES LOGOUT			
Firewall Settings	<p>When you create a firewall rule, you can specify a service that is controlled by the rule.. Common types of services are available for selection, and you can create your own custom services. This page allows creation of custom services against which firewall rules can be defined. Once defined, the new service will appear in the List of Available Custom Services table.</p>			
Wireless Settings	List Of Available Custom Services			
Advanced Network	<input type="checkbox"/>	Name	Type	ICMP Type / Port Range
Routing	<input type="checkbox"/>	DocServer	TCP	4554 - 4556
Certificates	<input type="button" value="Edit"/> <input type="button" value="Delete"/> <input type="button" value="Add"/>			
Users				
IP/MAC Binding				
IPv6				
Power Saving				

5.5 ALG support

Advanced > Firewall Settings > ALGs

Application Level Gateways (ALGs) are security component that enhance the firewall and NAT support of this router to seamlessly support application layer protocols. In some cases enabling the ALG will allow the firewall to use dynamic ephemeral TCP/UDP ports to communicate with the known ports a particular client application (such as H.323 or RTSP) requires, without which the admin would have to open large number of ports to accomplish the same support. Because the ALG understands the protocol used by the specific application that it supports, it is a very secure and efficient way of introducing support for client applications through the router’s firewall.

Figure 44: Available ALG support on the router.


DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS																
Application Rules																				
Website Filter																				
Firewall Settings																				
Wireless Settings																				
Advanced Network																				
Routing																				
Certificates																				
Users																				
IP/MAC Binding																				
IPv6																				
Power Saving																				
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0056b3; color: white; padding: 2px;">ALGS LOGOUT</div> <p>Application Level Gateway allows customized NAT traversal filters to be plugged into the gateway to support address and port translation for certain application layer "control/data" protocols such as TFTP, SIP, RTSP, IPsec, PPTP etc. Each ALG provides special handling for a specific protocol or application. A number of ALGs for common applications are enabled by default.</p> <div style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div>																			
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">Enable ALGs</div> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">PPTP:</td> <td style="text-align: center; padding: 2px;"><input type="checkbox"/></td> </tr> <tr> <td style="padding: 2px;">IPSec:</td> <td style="text-align: center; padding: 2px;"><input type="checkbox"/></td> </tr> <tr> <td style="padding: 2px;">RTSP:</td> <td style="text-align: center; padding: 2px;"><input type="checkbox"/></td> </tr> <tr> <td style="padding: 2px;">SIP:</td> <td style="text-align: center; padding: 2px;"><input checked="" type="checkbox"/></td> </tr> <tr> <td style="padding: 2px;">H.323:</td> <td style="text-align: center; padding: 2px;"><input checked="" type="checkbox"/></td> </tr> <tr> <td style="padding: 2px;">SMTP:</td> <td style="text-align: center; padding: 2px;"><input checked="" type="checkbox"/></td> </tr> <tr> <td style="padding: 2px;">DNS:</td> <td style="text-align: center; padding: 2px;"><input checked="" type="checkbox"/></td> </tr> <tr> <td style="padding: 2px;">TFTP:</td> <td style="text-align: center; padding: 2px;"><input checked="" type="checkbox"/></td> </tr> </table> </div>				PPTP:	<input type="checkbox"/>	IPSec:	<input type="checkbox"/>	RTSP:	<input type="checkbox"/>	SIP:	<input checked="" type="checkbox"/>	H.323:	<input checked="" type="checkbox"/>	SMTP:	<input checked="" type="checkbox"/>	DNS:	<input checked="" type="checkbox"/>	TFTP:	<input checked="" type="checkbox"/>
PPTP:	<input type="checkbox"/>																			
IPSec:	<input type="checkbox"/>																			
RTSP:	<input type="checkbox"/>																			
SIP:	<input checked="" type="checkbox"/>																			
H.323:	<input checked="" type="checkbox"/>																			
SMTP:	<input checked="" type="checkbox"/>																			
DNS:	<input checked="" type="checkbox"/>																			
TFTP:	<input checked="" type="checkbox"/>																			

5.6 VPN Passthrough for Firewall

Advanced > Firewall Settings > VPN Passthrough

This router's firewall settings can be configured to allow encrypted VPN traffic for IPsec, PPTP, and L2TP VPN tunnel connections between the LAN and internet. A specific firewall rule or service is not appropriate to introduce this passthrough support; instead the appropriate check boxes in the VPN Passthrough page must be enabled.

Figure 45: Passthrough options for VPN tunnels

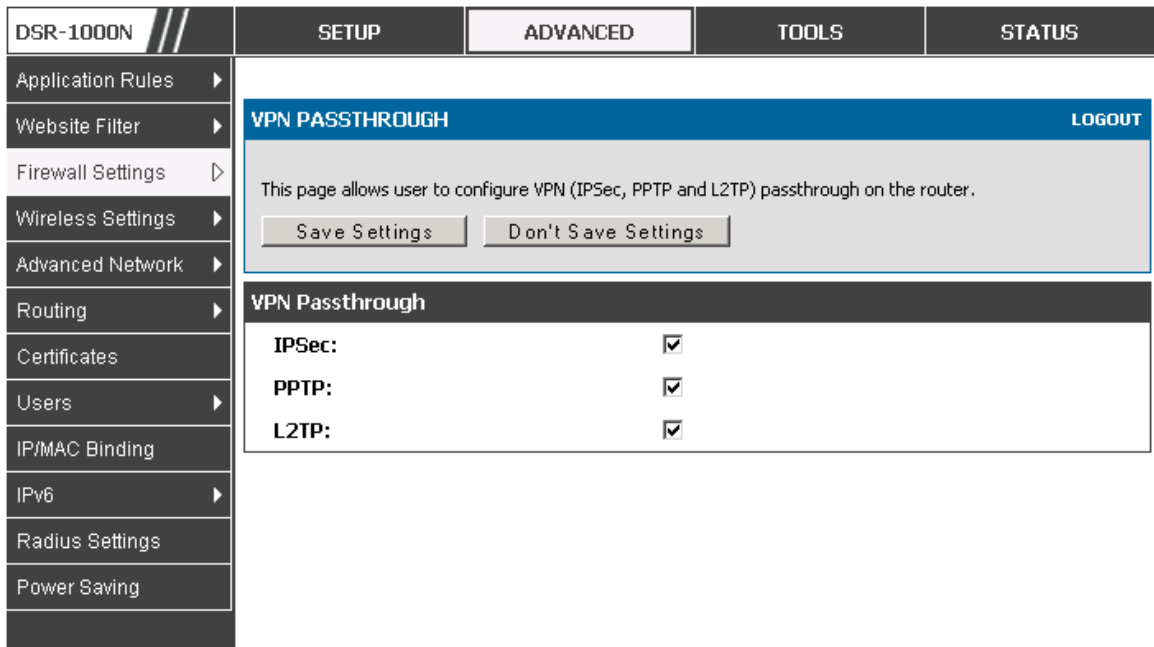


5.7 Application Rules

Advanced > Application Rules > Application Rules

Application rules are also referred to as port triggering. This feature allows devices on the LAN or DMZ to request one or more ports to be forwarded to them. Port triggering waits for an outbound request from the LAN/DMZ on one of the defined outgoing ports, and then opens an incoming port for that specified type of traffic. This can be thought of as a form of dynamic port forwarding while an application is transmitting data over the opened outgoing or incoming port(s).

Port triggering application rules are more flexible than static port forwarding that is an available option when configuring firewall rules. This is because a port triggering rule does not have to reference a specific LAN IP or IP range. As well ports are not left open when not in use, thereby providing a level of security that port forwarding does not offer.

 Port triggering is not appropriate for servers on the LAN, since there is a dependency on the LAN device making an outgoing connection before incoming ports are opened.

Some applications require that when external devices connect to them, they receive data on a specific port or range of ports in order to function properly. The router must send all incoming data for that application only on the required port or range of ports. The router has a list of common applications and games with corresponding outbound and inbound ports to open. You can also specify a port triggering rule by defining the type of traffic (TCP or UDP) and the range of incoming and outgoing ports to open when enabled.

Figure 46: List of Available Application Rules showing 4 unique rules

The screenshot shows the 'List of Available Application Rules' page in the router's web interface. The page has a navigation menu on the left with options like 'Application Rules', 'Website Filter', 'Firewall Settings', etc. The top navigation bar includes 'SETUP', 'ADVANCED', 'TOOLS', and 'STATUS'. The main content area features a blue header 'APPLICATION RULES' with a 'LOGOUT' link. Below the header is a grey box with the text: 'The table lists all the available port triggering rules and allows several operations on the rules.' The table is titled 'List of Available Application Rules' and contains the following data:

	Name	Enable	Protocol	Interface	Outgoing Ports		Incoming Ports	
					Start Port	End Port	Start Port	End Port
<input type="checkbox"/>	XBoxUDP	Yes	UDP	LAN	88	88	88	88
<input type="checkbox"/>	XBoxUDP2	No	UDP	LAN	3074	3074	3074	3074
<input type="checkbox"/>	XBoxTCP	Yes	TCP	LAN	3074	3074	3074	3074
<input type="checkbox"/>	mIRC	Yes	TCP	LAN	2024	6000	1024	5000

At the bottom of the table are three buttons: 'Edit', 'Delete', and 'Add'.

The application rule status page will list any active rules, i.e. incoming ports that are being triggered based on outbound requests from a defined outgoing port.

5.8 Web Content Filtering

The gateway offers some standard web filtering options to allow the admin to easily create internet access policies between the secure LAN and insecure WAN. Instead of creating policies based on the type of traffic (as is the case when using firewall rules), web based content itself can be used to determine if traffic is allowed or dropped.

5.8.1 Content Filtering

Advanced > Website Filter > Content Filtering

Content filtering must be enabled to configure and use the subsequent features (list of Trusted Domains, filtering on Blocked Keywords, etc.). Proxy servers, which can be used to circumvent certain firewall rules and thus a potential security gap, can be blocked for all LAN devices. Java applets can be prevented from being downloaded from internet sites, and similarly the gateway can prevent ActiveX controls from being downloaded via Internet Explorer. For added security cookies, which typically contain session information, can be blocked as well for all devices on the private network.

Figure 47: Content Filtering used to block access to proxy servers and prevent ActiveX controls from being downloaded

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Application Rules				
Website Filter	CONTENT FILTERING LOGOUT			
Firewall Settings	<p>This content filtering option allow the user to block access to certain Internet sites. Up to 32 key words in the site's name (web site URL) can be specified, which will block access to the site. To setup URL's,go to Approved URL's and Blocked URL's page.</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p>			
Wireless Settings	Content Filtering Configuration			
Advanced Network	Enable Content Filtering: <input checked="" type="checkbox"/>			
Routing	Web Components			
Certificates	Proxy: <input checked="" type="checkbox"/>			
Users	Java: <input checked="" type="checkbox"/>			
IP/MAC Binding	ActiveX: <input checked="" type="checkbox"/>			
IPv6	Cookies: <input type="checkbox"/>			
Power Saving				

5.8.2 Approved URLs

Advanced > Website Filter > Approved URLs

The Approved URLs is an acceptance list for all URL domain names. Domains added to this list are allowed in any form. For example, if the domain “yahoo” is added to this list then all of the following URL’s are permitted access from the LAN: www.yahoo.com, yahoo.co.uk, etc.

Figure 48: Two trusted domains added to the Approved URLs List

The screenshot shows the DSR-1000N web interface. At the top, there is a navigation bar with tabs for 'SETUP', 'ADVANCED', 'TOOLS', and 'STATUS'. Below this is a left-hand navigation menu with items like 'Application Rules', 'Website Filter', 'Firewall Settings', etc. The main content area has a red message: 'Please Turn On [Content Filtering](#) to configure Approved URLs'. Below this is a blue header for 'APPROVED URLS' with a 'LOGOUT' button. The main content area contains the text 'This page displays the approved URLs.' and a table titled 'Approved URLs List'.

Approved URLs List	
<input type="checkbox"/>	Trusted Domains
<input type="checkbox"/>	www.yahoo.com
<input type="checkbox"/>	www.dlink.com


Below the table are three buttons: 'Edit', 'Delete', and 'Add'.

5.8.3 Blocked Keywords

Advanced > Website Filter > Blocked Keywords

Keyword blocking allows you to block all website URL’s or site content that contains the keywords in the configured list. This is lower priority than the Approved URL List; i.e. if the blocked keyword is present in a site allowed by a Trusted Domain in the Approved URL List, then access to that site will be allowed. Import/export from a text or CSV file for keyword blocking is also supported.

Figure 49: Two keywords added to the block list

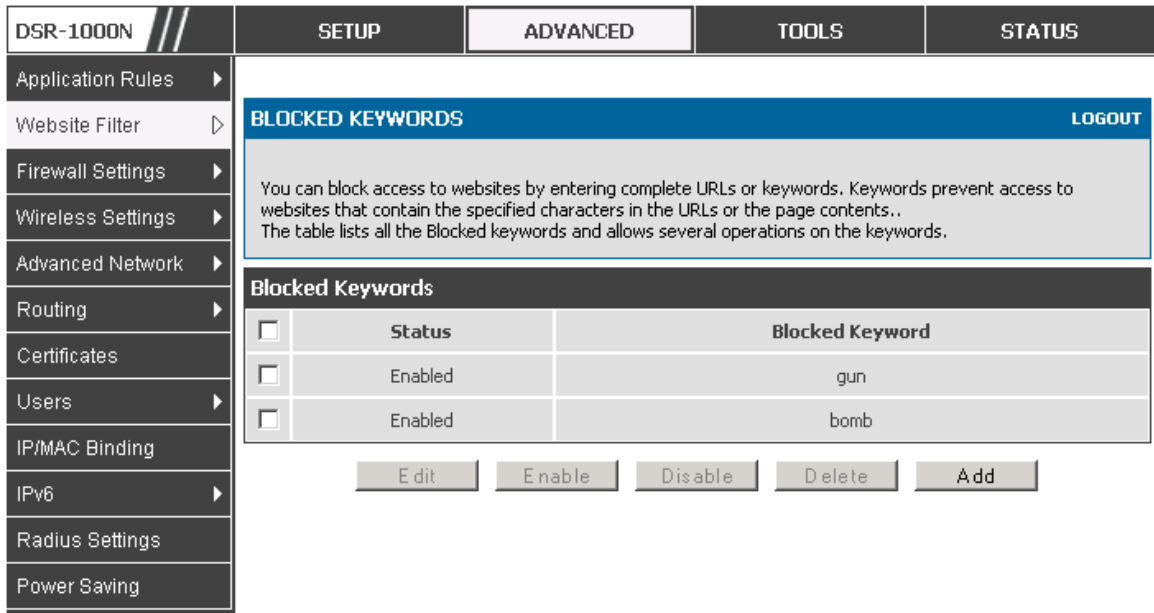

The screenshot shows the 'Blocked Keywords' configuration page in the DSR-1000N web interface. The left sidebar contains a navigation menu with items like 'Application Rules', 'Website Filter', 'Firewall Settings', etc. The top navigation bar has 'ADVANCED' selected. The main content area features a blue header 'BLOCKED KEYWORDS' with a 'LOGOUT' link. Below the header is a text block explaining that keywords prevent access to websites containing those characters. A table lists two blocked keywords: 'gun' and 'bomb', both with 'Enabled' status. At the bottom, there are five buttons: 'Edit', 'Enable', 'Disable', 'Delete', and 'Add'.

Blocked Keywords	
<input type="checkbox"/>	Blocked Keyword
<input type="checkbox"/>	gun
<input type="checkbox"/>	bomb

5.9 IP/MAC Binding

Advanced > IP/MAC Binding

Another available security measure is to only allow outbound traffic (from the LAN to WAN) when the LAN node has an IP address matching the MAC address bound to it. This is IP/MAC Binding, and by enforcing the gateway to validate the source traffic's IP address with the unique MAC Address of the configured LAN node, the administrator can ensure traffic from that IP address is not spoofed. In the event of a violation (i.e. the traffic's source IP address doesn't match up with the expected MAC address having the same IP address) the packets will be dropped and can be logged for diagnosis.

Figure 50: The following example binds a LAN host’s MAC Address to an IP address served by DSR. If there is an IP/MAC Binding violation, the violating packet will be dropped and logs will be captured

DSR-1000N					
SETUP		ADVANCED	TOOLS	STATUS	
Application Rules	IP/MAC BINDING LOGOUT				
Website Filter					
Firewall Settings					
Wireless Settings					
Advanced Network	List of IP/MAC Binding				
Routing	<input type="checkbox"/>	Name	MAC Address	IP Address	Log Dropped Packets
Certificates	<input type="checkbox"/>	test-ipmac1	AD:21:00:BC:32:25	97.0.0.8	Disabled
Users	<input type="checkbox"/>	test-ipmac2	24:67:AB:CD:24:12	192.168.25.49	Enabled
IP/MAC Binding	<input type="button" value="Edit"/> <input type="button" value="Delete"/> <input type="button" value="Add"/>				
IPv6					
Power Saving					

5.10 Intrusion Prevention (IPS)

Advanced > Advanced Network > IPS

The gateway’s Intrusion Prevention System (IPS) prevents malicious attacks from the internet from accessing the private network. Static attack signatures loaded to the DSR allow common attacks to be detected and prevented. The checks can be enabled between the WAN and DMZ or LAN, and a running counter will allow the administrator to see how many malicious intrusion attempts from the WAN have been detected and prevented.

Figure 51: Intrusion Prevention features on the router

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Application Rules ▶				
Website Filter ▶				
Firewall Settings ▶				
Wireless Settings ▶				
Advanced Network ▷				
Routing ▶				
Certificates				
Users ▶				
IP/MAC Binding				
IPv6 ▶				
Radius Settings				
Power Saving				
	<div style="text-align: right;">LOGOUT</div> <p>This page allows user to configure Intrusion Detection System and Intrusion Preventions system on the router.</p> <p>Save Settings Don't Save Settings</p>			
	Intrusion Detection/Prevention Enable			
	Enable Intrusion Detection: <input type="checkbox"/>			
	Enable Intrusion Prevention: <input type="checkbox"/>			
	IPS Checks Active Between			
	LAN and WAN: <input type="checkbox"/>			
	DMZ and WAN: <input type="checkbox"/>			
	IPS Status			
	Number of Signatures Loaded: 0			

5.11 Protecting from Internet Attacks

Advanced > Advanced Network > Attack Checks

Attacks can be malicious security breaches or unintentional network issues that render the router unusable. Attack checks allow you to manage WAN security threats such as continual ping requests and discovery via ARP scans. TCP and UDP flood attack checks can be enabled to manage extreme usage of WAN resources.

Additionally certain Denial-of-Service (DoS) attacks can be blocked. These attacks, if uninhibited, can use up processing power and bandwidth and prevent regular network services from running normally. ICMP packet flooding, SYN traffic flooding, and Echo storm thresholds can be configured to temporarily suspect traffic from the offending source.

Figure 52: Protecting the router and LAN from internet attacks

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Application Rules ▶	<div style="background-color: #0056b3; color: white; padding: 5px;">ATTACK CHECKS LOGOUT</div> <p>This page allows you to specify whether or not to protect against common attacks from the LAN and WAN networks.</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p> <div style="background-color: #333; color: white; padding: 5px;">WAN Security Checks</div> <p>Enable Stealth Mode: <input type="checkbox"/></p> <p>Block TCP flood: <input checked="" type="checkbox"/></p> <div style="background-color: #333; color: white; padding: 5px;">LAN Security Checks</div> <p>Block UDP flood: <input checked="" type="checkbox"/></p> <div style="background-color: #333; color: white; padding: 5px;">ICSA Settings</div> <p>Block ICMP Notification: <input checked="" type="checkbox"/></p> <p>Block Fragmented Packets: <input type="checkbox"/></p> <p>Block Multicast Packets: <input type="checkbox"/></p> <div style="background-color: #333; color: white; padding: 5px;">DoS Attacks</div> <p>SYN Flood Detect Rate [max/sec]: <input type="text" value="128"/></p> <p>Echo Storm [ping pkts./sec]: <input type="text" value="15"/></p> <p>ICMP Flood [ICMP pkts./sec]: <input type="text" value="100"/></p>			
Website Filter ▶				
Firewall Settings ▶				
Wireless Settings ▶				
Advanced Network ▷				
Routing ▶				
Certificates				
Users ▶				
IP/MAC Binding				
IPv6 ▶				
Power Saving				

Chapter 6. IPsec / PPTP / L2TP VPN

A VPN provides a secure communication channel (“tunnel”) between two gateway routers or a remote PC client. The following types of tunnels can be created:

- Gateway-to-gateway VPN: to connect two or more routers to secure traffic between remote sites.
- Remote Client (client-to-gateway VPN tunnel): A remote client initiates a VPN tunnel as the IP address of the remote PC client is not known in advance. The gateway in this case acts as a responder.
- Remote client behind a NAT router: The client has a dynamic IP address and is behind a NAT Router. The remote PC client at the NAT router initiates a VPN tunnel as the IP address of the remote NAT router is not known in advance. The gateway WAN port acts as responder.
- PPTP server for LAN / WAN PPTP client connections.
- L2TP server for LAN / WAN L2TP client connections.

Figure 53: Example of Gateway-to-Gateway IPsec VPN tunnel using two DSR routers connected to the Internet


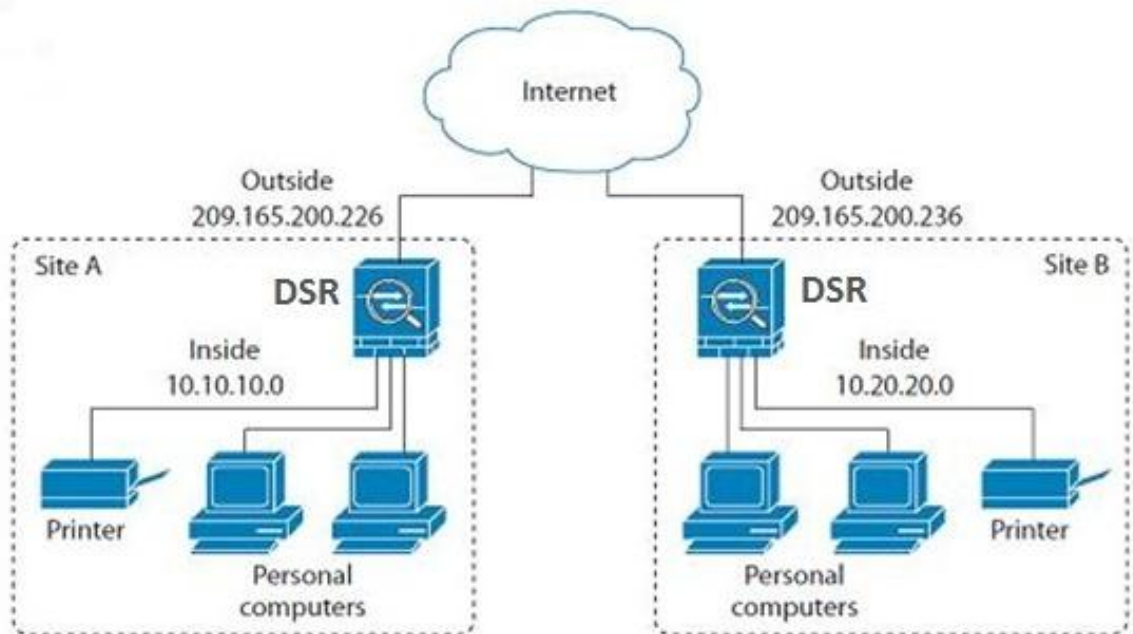


Figure 54: Example of three IPsec client connections to the internal network through the DSR IPsec gateway

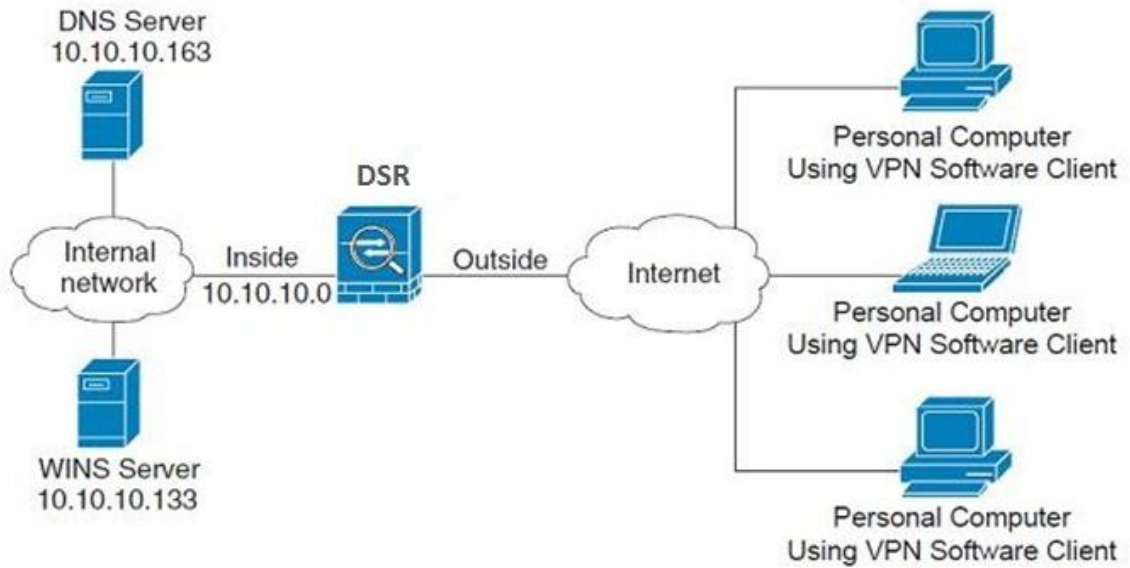


6.1 VPN Wizard

Setup > Wizard > VPN Wizard

You can use the VPN wizard to quickly create both IKE and VPN policies. Once the IKE or VPN policy is created, you can modify it as required.

Figure 55: VPN Wizard launch screen

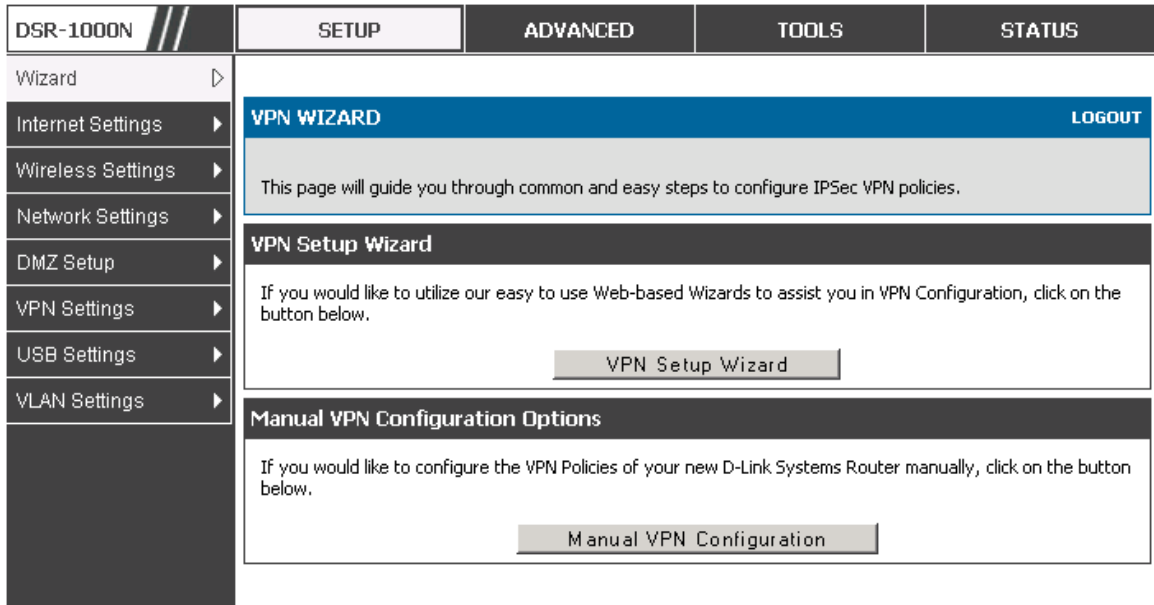

To easily establish a VPN tunnel using VPN Wizard, follow the steps below:


1. Select the VPN tunnel type to create

- The tunnel can either be a gateway to gateway connection (site-to-site) or a tunnel to a host on the internet (remote access).
- Set the Connection Name and pre-shared key: the connection name is used for management, and the pre-shared key will be required on the VPN client or gateway to establish the tunnel
- Determine the local gateway for this tunnel; if there is more than 1 WAN configured the tunnel can be configured for either of the gateways.

2. Configure Remote and Local WAN address for the tunnel endpoints

- Remote Gateway Type: identify the remote endpoint of the tunnel by FQDN or static IP address
- Remote WAN IP address / FQDN: This field is enabled only if the peer you are trying to connect to is a Gateway. For VPN Clients, this IP address or Internet Name is determined when a connection request is received from a client.
- Local Gateway Type: identify this router’s endpoint of the tunnel by FQDN or static IP address


- Local WAN IP address / FQDN: This field can be left blank if you are not using a different FQDN or IP address than the one specified in the WAN port’s configuration.
3. Configure the Secure Connection Remote Accessibility fields to identify the remote network:
- Remote LAN IP address: address of the LAN behind the peer gateway
 - Remote LAN Subnet Mask: the subnet mask of the LAN behind the peer

 **Note:** The IP address range used on the remote LAN must be different from the IP address range used on the local LAN.

4. Review the settings and click Connect to establish the tunnel.

The Wizard will create a Auto IPsec policy with the following default values for a VPN Client or Gateway policy (these can be accessed from a link on the Wizard page):

Parameter	Default value from Wizard
Exchange Mode	Aggressive (Client policy) or Main (Gateway policy)
ID Type	FQDN
Local WAN ID	wan_local.com (only applies to Client policies)
Remote WAN ID	wan_remote.com (only applies to Client policies)
Encryption Algorithm	3DES
Authentication Algorithm	SHA-1
Authentication Method	Pre-shared Key
PFS Key-Group	DH-Group 2(1024 bit)
Life Time (Phase 1)	24 hours
Life Time (Phase 2)	8 hours
NETBIOS	Enabled (only applies to Gateway policies)

 The VPN Wizard is the recommended method to set up an Auto IPsec policy. Once the Wizard creates the matching IKE and VPN policies required by the Auto policy, one can modify the required fields through the edit link. Refer to the online help for details.

6.2 Configuring IPsec Policies

Setup > VPN Settings > IPsec > IPsec Policies

An IPsec policy is between this router and another gateway or this router and a IPsec client on a remote host. The IPsec mode can be either tunnel or transport depending on the network being traversed between the two policy endpoints.

- **Transport:** This is used for end-to-end communication between this router and the tunnel endpoint, either another IPsec gateway or an IPsec VPN client on a host. Only the data payload is encrypted and the IP header is not modified or encrypted.
- **Tunnel:** This mode is used for network-to-network IPsec tunnels where this gateway is one endpoint of the tunnel. In this mode the entire IP packet including the header is encrypted and/or authenticated.

When tunnel mode is selected, you can enable NetBIOS and DHCP over IPsec. DHCP over IPsec allows this router to serve IP leases to hosts on the remote LAN. As well in this mode you can define the single IP address, range of IPs, or subnet on both the local and remote private networks that can communicate over the tunnel.

Figure 56: IPsec policy configuration

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0056b3; color: white; padding: 2px;">IPSEC CONFIGURATION LOGOUT</div> <p style="font-size: small; margin-top: 5px;">This page allows user to configure a auto VPN (IPSec) policy.</p> <div style="margin-top: 5px;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div>			
Internet Settings				
Wireless Settings				
Network Settings				
DMZ Setup				
VPN Settings				
USB Settings				
VLAN Settings				
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">General</div> <p>Policy Name: <input type="text"/></p> <p>Policy Type: <input type="text" value="Auto Policy"/></p> <p>IPSec Mode: <input type="text" value="Tunnel Mode"/></p> <p>Select Local Gateway: <input type="text" value="Dedicated WAN"/></p> <p>Remote Endpoint: <input type="text" value="IP Address"/></p> <p><input type="text"/></p> <p>Enable NetBIOS: <input type="checkbox"/></p> <p>Local IP: <input type="text" value="Any"/></p> <p>Local Start IP Address: <input type="text"/></p> <p>Local End IP Address: <input type="text"/></p> <p>Local Subnet Mask: <input type="text"/></p> <p>Remote IP: <input type="text" value="Any"/></p> <p>Remote Start IP Address: <input type="text"/></p> <p>Remote End IP Address: <input type="text"/></p> <p>Remote Subnet Mask: <input type="text"/></p> </div>			

Once the tunnel type and endpoints of the tunnel are defined you can determine the Phase 1 / Phase 2 negotiation to use for the tunnel. This is covered in the IPsec mode setting, as the policy can be Manual or Auto. For Auto policies, the Internet Key Exchange (IKE) protocol dynamically exchanges keys between two IPsec hosts. The Phase 1 IKE parameters are used to define the tunnel’s security association details. The Phase 2 Auto policy parameters cover the security association lifetime and encryption/authentication details of the phase 2 key negotiation.

The VPN policy is one half of the IKE/VPN policy pair required to establish an Auto IPsec VPN tunnel. The IP addresses of the machine or machines on the two VPN endpoints are configured here, along with the policy parameters required to secure the tunnel

Figure 57: IPsec policy configuration continued (Auto policy via IKE)

Phase1(IKE SA Parameters)	
Exchange Mode:	Main
Direction / Type:	Both
Nat Traversal:	
On:	<input checked="" type="radio"/>
Off:	<input type="radio"/>
NAT Keep Alive Frequency (in seconds):	20
Local Identifier Type:	Local Wan IP
Local Identifier:	
Remote Identifier Type:	Remote Wan IP
Remote Identifier:	
Encryption Algorithm:	3DES
Authentication Algorithm:	SHA-1
Authentication Method:	Pre-shared key
Pre-shared key:	
Diffie-Hellman (DH) Group:	Group 2 (1024 bit)
SA-Lifetime (sec):	28800
Enable Dead Peer Detection:	<input type="checkbox"/>
Detection Period:	10
Reconnect after failure count:	3
Enable Extended Authentication:	<input type="checkbox"/>
Username:	admin
Password:	XXXXXXXX

A Manual policy does not use IKE and instead relies on manual keying to exchange authentication parameters between the two IPsec hosts. The incoming and outgoing security parameter index (SPI) values must be mirrored on the remote tunnel endpoint. As well the encryption and integrity algorithms and keys must match on the remote IPsec host exactly in order for the tunnel to establish successfully. Note that using Auto policies with IKE are preferred as in some IPsec implementations the SPI (security parameter index) values require conversion at each endpoint.

DSR supports VPN roll-over feature. This means that policies configured on primary WAN will rollover to the secondary WAN incase of a link failure on a primary WAN. This feature can be used only if your WAN is configured in Auto-Rollover mode.

Figure 58: IPsec policy configuration continued (Auto / Manual Phase 2)

Phase2-(Manual Policy Parameters)	
SPI-Incoming:	<input type="text"/>
SPI-Outgoing:	<input type="text"/>
Encryption Algorithm:	3DES
Key Length:	<input type="text"/>
Key-In:	<input type="text"/>
Key-Out:	<input type="text"/>
Integrity Algorithm:	SHA-1
Key-In:	<input type="text"/>
Key-Out:	<input type="text"/>
Phase2-(Auto Policy Parameters)	
SA Lifetime:	<input type="text"/> Seconds
Encryption Algorithm:	3DES
Key Length:	<input type="text"/>
Integrity Algorithm:	SHA-1
PFS Key Group:	<input type="checkbox"/> DH Group 1 (768 bit)

6.2.1 Extended Authentication (XAUTH)

You can also configure extended authentication (XAUTH). Rather than configure a unique VPN policy for each user, you can configure the VPN gateway router to authenticate users from a stored list of user accounts or with an external authentication server such as a RADIUS server. With a user database, user accounts created in the router are used to authenticate users.


With a configured RADIUS server, the router connects to a RADIUS server and passes to it the credentials that it receives from the VPN client. You can secure the connection between the router and the RADIUS server with the authentication protocol supported by the server (PAP or CHAP). For RADIUS – PAP, the router first checks in the user database to see if the user credentials are available; if they are not, the router connects to the RADIUS server.

6.2.2 Internet over IPsec tunnel

In this feature all the traffic will pass through the VPN Tunnel and from the Remote Gateway the packet will be routed to Internet. On the remote gateway side, the outgoing packet will be SNAT'ed.

6.3 Configuring VPN clients

Remote VPN clients must be configured with the same VPN policy parameters used in the VPN tunnel that the client wishes to use: encryption, authentication, life time, and PFS key-group. Upon establishing these authentication parameters, the VPN Client user database must also be populated with an account to give a user access to the tunnel.

 VPN client software is required to establish a VPN tunnel between the router and remote endpoint. Open source software (such as OpenVPN or Openswan) as well as Microsoft IPsec VPN software can be configured with the required IKE policy parameters to establish an IPsec VPN tunnel. Refer to the client software guide for detailed instructions on setup as well as the router's online help.

The user database contains the list of VPN user accounts that are authorized to use a given VPN tunnel. Alternatively VPN tunnel users can be authenticated using a configured Radius database. Refer to the online help to determine how to populate the user database and/or configure RADIUS authentication.

6.4 PPTP / L2TP Tunnels

This router supports VPN tunnels from either PPTP or L2TP ISP servers. The router acts as a broker device to allow the ISP's server to create a TCP control connection between the LAN VPN client and the VPN server.

6.4.1 PPTP Tunnel Support

Setup > VPN Settings > PPTP > PPTP Server

A PPTP VPN can be established through this router. Once enabled a PPTP server is available on the router for LAN and WAN PPTP client users to access. Once the PPTP server is enabled, PPTP clients that are within the range of configured IP addresses of allowed clients can reach the router's PPTP server. Once authenticated by the PPTP server (the tunnel endpoint), PPTP clients have access to the network managed by the router.

Figure 59: PPTP tunnel configuration – PPTP Server

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard				
Internet Settings				
Wireless Settings				
Network Settings				
DMZ Setup				
VPN Settings				
USB Settings				
VLAN Settings				
	<div style="text-align: right;">PPTP SERVER LOGOUT</div> <p>PPTP allows an external user to connect to your router through the internet. This section allows you to enable/disable PPTP server and define a range of IP addresses for clients connecting to your router. The connected clients can function as if they are on your LAN (they can communicate with LAN hosts, access any servers present etc.)</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p>			
	<div style="text-align: center;">PPTP Server Configuration</div> <p>Enable PPTP Server? <input type="checkbox"/></p>			
	<div style="text-align: center;">Enter the range of IP addresses that is allocated to PPTP Clients</div> <p>Starting IP Address: <input type="text"/></p> <p>Ending IP Address: <input type="text"/></p>			

6.4.2 L2TP Tunnel Support

Setup > VPN Settings > L2TP > L2TP Server

A L2TP VPN can be established through this router. Once enabled a L2TP server is available on the router for LAN and WAN L2TP client users to access. Once the L2TP server is enabled, L2TP clients that are within the range of configured IP addresses of allowed clients can reach the router’s L2TP server. Once authenticated by the L2TP server (the tunnel endpoint), L2TP clients have access to the network managed by the router.

Figure 60: L2TP tunnel configuration – L2TP Server

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard				
Internet Settings				
Wireless Settings				
Network Settings				
DMZ Setup				
VPN Settings				
USB Settings				
VLAN Settings				
	<div style="text-align: right;">L2TP SERVER LOGOUT</div> <p>L2TP allows an external user to connect to your router through the internet, forming a VPN. This section allows you to enable/disable L2TP server and define a range of IP addresses for clients connecting to your router. The connected clients can function as if they are on your LAN (they can communicate with LAN hosts, access any servers present etc.)</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p>			
	<div style="text-align: center;">L2TP Server Configuration</div> <p>Enable L2TP Server? <input type="checkbox"/></p>			
	<div style="text-align: center;">Enter the range of IP addresses that is allocated to L2TP Clients</div> <p>Starting IP Address: <input type="text"/></p> <p>Ending IP Address: <input type="text"/></p>			

Chapter 7. SSL VPN


The router provides an intrinsic SSL VPN feature as an alternate to the standard IPsec VPN. SSL VPN differs from IPsec VPN mainly by removing the requirement of a pre-installed VPN client on the remote host. Instead, users can securely login through the SSL User Portal using a standard web browser and receive access to configured network resources within the corporate LAN. The router supports multiple concurrent sessions to allow remote users to access the LAN over an encrypted link through a customizable user portal interface, and each SSL VPN user can be assigned unique privileges and network resource access levels.

The remote user can be provided different options for SSL service through this router:

- **VPN Tunnel:** The remote user's SSL enabled browser is used in place of a VPN client on the remote host to establish a secure VPN tunnel. A SSL VPN client (Active-X or Java based) is installed in the remote host to allow the client to join the corporate LAN with pre-configured access/policy privileges. At this point a virtual network interface is created on the user's host and this will be assigned an IP address and DNS server address from the router. Once established, the host machine can access allocated network resources.
- **Port Forwarding:** A web-based (ActiveX or Java) client is installed on the client machine again. Note that Port Forwarding service only supports TCP connections between the remote user and the router. The router administrator can define specific services or applications that are available to remote port forwarding users instead of access to the full LAN like the VPN tunnel.

✎ ActiveX clients are used when the remote user accesses the portal using the Internet Explorer browser. The Java client is used for other browsers like Mozilla Firefox, Netscape Navigator, Google Chrome, and Apple Safari.

Figure 61: Example of clientless SSL VPN connections to the DSR

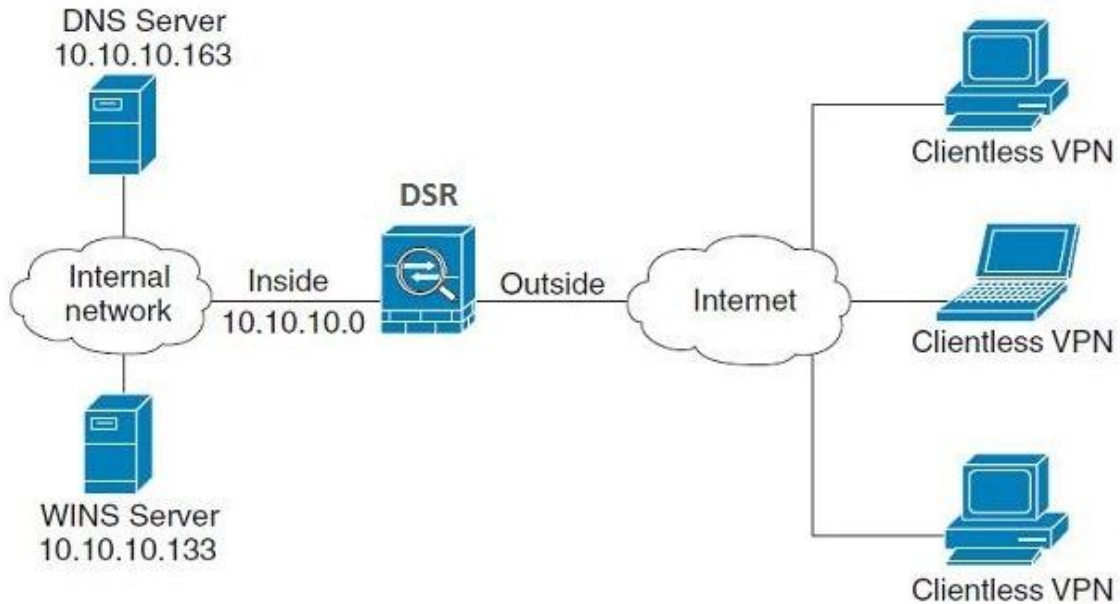

7.1 Users, Groups, and Domains

Advanced > Users > Users

Authentication of the users (IPsec, SSL VPN, or GUI) is done by the router using either a local database on the router or external authentication servers (i.e. LDAP or RADIUS). The remote user must specify the user, group and domain when logging in to the router. One or more users are members of a Group. One or more Groups belong to an authentication Domain.

The user settings contain the following:

- User Name: This is unique identifier of the user.
- First Name: This is the user's first name
- Last Name: This is the user's last name
- User Type: The user's access privileges are defined as an SSL VPN User, administrator, guest, XAUTH user, L2TP user, PPTP user, Local User. The SSL VPN User or administrator user should be selected.
- Select Group: A group is chosen from a list of configured groups.
- Password: The password associated with the user name.
- Confirm Password: The same password as above is required to mitigate against typing errors.

- Idle Timeout: The session timeout for the user.

Once the user is configured, the DSR will display a list of all configured users.

Figure 62: Available Users with login status and associated Group/Domain

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS																														
Application Rules	<p>USERS LOGOUT</p> <p>This page shows a list of available users in the system. A user can add, delete and edit the users also. This page can also be used for setting policies on users.</p> <p>List of Users</p> <table border="1"> <thead> <tr> <th><input type="checkbox"/></th> <th>User Name</th> <th>Group</th> <th>Type</th> <th>Authentication Domain</th> <th>Login Status</th> </tr> </thead> <tbody> <tr> <td><input type="checkbox"/></td> <td>admin *</td> <td>SSLVPN</td> <td>Administrator</td> <td>Local User Database</td> <td>Enabled (LAN and WAN)</td> </tr> <tr> <td><input type="checkbox"/></td> <td>guest *</td> <td>SSLVPN</td> <td>Guest</td> <td>Local User Database</td> <td>Disabled</td> </tr> <tr> <td><input type="checkbox"/></td> <td>Engineering</td> <td>SSLVPN</td> <td>SSL VPN User</td> <td>Local User Database</td> <td>Enabled (LAN and WAN)</td> </tr> <tr> <td><input type="checkbox"/></td> <td>sdg</td> <td>SSLVPN</td> <td>Local User</td> <td>Local User Database</td> <td>Enabled (LAN and WAN)</td> </tr> </tbody> </table> <p style="text-align: center;"> <input type="button" value="Edit"/> <input type="button" value="Delete"/> <input type="button" value="Add"/> </p> <p style="text-align: center;"> <input type="button" value="Login Policies"/> <input type="button" value="Policies By Browsers"/> <input type="button" value="Policies By IP"/> </p>				<input type="checkbox"/>	User Name	Group	Type	Authentication Domain	Login Status	<input type="checkbox"/>	admin *	SSLVPN	Administrator	Local User Database	Enabled (LAN and WAN)	<input type="checkbox"/>	guest *	SSLVPN	Guest	Local User Database	Disabled	<input type="checkbox"/>	Engineering	SSLVPN	SSL VPN User	Local User Database	Enabled (LAN and WAN)	<input type="checkbox"/>	sdg	SSLVPN	Local User	Local User Database	Enabled (LAN and WAN)
<input type="checkbox"/>					User Name	Group	Type	Authentication Domain	Login Status																									
<input type="checkbox"/>					admin *	SSLVPN	Administrator	Local User Database	Enabled (LAN and WAN)																									
<input type="checkbox"/>					guest *	SSLVPN	Guest	Local User Database	Disabled																									
<input type="checkbox"/>					Engineering	SSLVPN	SSL VPN User	Local User Database	Enabled (LAN and WAN)																									
<input type="checkbox"/>					sdg	SSLVPN	Local User	Local User Database	Enabled (LAN and WAN)																									
Website Filter																																		
Firewall Settings																																		
Wireless Settings																																		
Advanced Network																																		
Routing																																		
Certificates																																		
Users																																		
IP/MAC Binding																																		
IPv6																																		
Radius Settings																																		
Power Saving																																		

Advanced > Users > Domains

The Domain determines the authentication method (local user database, external server) to be used when validating the remote user’s connection. As well the Domain determines the portal layout presented to the remote SSL user. Since the portal layout assigns access to SSL VPN tunnel and/or SSL VPN Port Forwarding features, the domain is essential in defining the authentication and features exposed to SSL users.

The following information is used to configure a domain:

- Domain Name: The unique identifier of the domain.
- Authentication Type: The authentication type can be one of the following: Local User Database, Radius-PAP, Radius-CHAP, Radius-MSCHAP, Radius-MSCHAPv2, NT Domain, Active Directory, and LDAP.
- Authentication Server: If the SSL VPN connection will use an authentication method other than the Local User Database (such as a RADIUS server), then the sever access details are needed. If there are multiple authentication servers, user can enter the details for upto three authentication servers.
- Authentication Secret: If the domain uses RADIUS authentication then the authentication secret is required (and this has to match the secret configured on the RADIUS server).

- **Timeout:** The timeout period for reaching the authentication server.
- **Retries:** The number of retries to authenticate with the authentication server after which the DSR stops trying to reach the server.
- **Workgroup:** This is required is for NT domain authentication. If there are multiple workgroups, user can enter the details for upto two workgroups.
- **LDAP Base DN:** This is the base domain name for the LDAP authentication server. If there are multiple LDAP authentication servers, user can enter the details for upto two LDAP Base DN.
- **Active Directory Domain:** If the domain uses the Active Directory authentication, the Active Directory domain name is required. Users configured in the Active Directory database are given access to the SSL VPN portal with their Active Directory username and password. If there are multiple Active Directory domains, user can enter the details for upto two authentication domains.

Once the domain is configured, the DSR will display a list of all configured domains.


Advanced > Users > Groups

Groups are used to assign access policies to a set of SSL users within a domain. Groups are domain subsets that can be seen as types of SSL users; some groups require access to all available network resources and some can be provided access to a select few. With groups, a very secure hierarchy of SSL VPN remote access can be created for all types of users with minimal number of policies to configure.

To configure a group in the DSR, enter the following information:

- **Name:** This is a unique identifier for a group name.
- **Domain:** This is the authenticating domain the group is attached to.
- **Idle timeout:** This is the log in timeout period for users of this group.

Once the group is defined the DSR will display a list of all configured groups.

 You must create a Domain first, and then a new Group can be created and assigned to the Domain. The last step is to add specific SSL VPN users to an already-configured Group.

7.1.1 User Types and Passwords

Advanced > Users > Users

User level policies can be specified by browser, IP address of the host, and whether the user can login to the router's GUI in addition to the SSL VPN portal. The following user types are assigned to a user that reaches the GUI login screen from the LAN or WAN:

- **Administrator:** This is the router's super-user, and can manage the router, use SSL VPN to access network resources, and login to L2TP/PPTP servers on the WAN. There will always be one default administrator user for the GUI.

- Guest (read only): The guest user gains read only access to the GUI to observe and review configuration settings. The guest does not have SSL VPN access.
- SSL VPN User: This user has access to the SSL VPN services as determined by the group policies and authentication domain of which it is a member. The domain-determined SSL VPN portal will be displayed when logging in with this user type.
- XAuth User: This user's authentication is performed by an externally configured RADIUS or other Enterprise server. It is not part of the local user database.
- L2TP User: These are L2TP VPN tunnel LAN users that can establish a tunnel with the L2TP server on the WAN.
- PPTP User: These are PPTP VPN tunnel LAN users that can establish a tunnel with the PPTP server on the WAN.
- Local User: This user's authentication domain is located on the router itself.

Once the user type is determined, you can define/modify the password and idle login timeout for the user. It is recommended that passwords contains no dictionary words from any language, and is a mixture of letters (both uppercase and lowercase), numbers, and symbols. The password can be up to 30 characters.

Figure 63: User configuration options

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Application Rules	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0070C0; color: white; padding: 2px;">USERS CONFIGURATION LOGOUT</div> <p style="text-align: center;">This page allows a user to add new system users.</p> <div style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div>			
Website Filter				
Firewall Settings				
Wireless Settings				
Advanced Network				
Routing				
Certificates				
Users				
IP/MAC Binding				
IPV6				
Radius Settings	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">Users Configuration</div> <p>User Name: <input type="text"/></p> <p>First Name: <input type="text"/></p> <p>Last Name: <input type="text"/></p> <p>User Type: <input type="text" value="SSL VPN User"/></p> <p>Select Group: <input type="text" value="SSLVPN"/></p> <p>Password: <input type="password"/></p> <p>Confirm Password: <input type="password"/></p> <p>Idle Timeout: <input type="text"/> (Minutes)</p> </div>			
Power Saving				

7.2 Using SSL VPN Policies

Setup > VPN Settings > SSL VPN Server > SSL VPN Policies

SSL VPN Policies can be created on a Global, Group, or User level. User level policies take precedence over Group level policies and Group level policies take precedence over Global policies. These policies can be applied to a specific network resource, IP address or ranges on the LAN, or to different SSL VPN services supported by the router. The List of Available Policies can be filtered based on whether it applies to a user, group, or all users (global).


 A more specific policy takes precedence over a generic policy when both are applied to the same user/group/global domain. I.e. a policy for a specific IP address takes precedence over a policy for a range of addresses containing the IP address already referenced.

Figure 64: List of SSL VPN polices (Global filter)

DSR-1000N // **SETUP** **ADVANCED** **TOOLS** **STATUS**

Wizard
Internet Settings
Wireless Settings
Network Settings
DMZ Setup
VPN Settings
USB Settings
VLAN Settings

SSL VPN POLICIES **LOGOUT**

Policies are useful to permit or deny access to specific network resources, IP addresses, or IP networks. They may be defined at the user, group or global level.
By Default, a global PERMIT policy (not displayed) was already configured over all addresses and over all services/ports.

Query

View List of SSL VPN Policies For: Global

Available Groups:

Available Users:

Display

List of SSL VPN Policies

<input type="checkbox"/>	Name	Service	Destination	Permission
<input type="checkbox"/>	Port2525open	VPN Tunnel	0.0.0.0/2525-2525	Permit

Edit Delete Add

To add a SSL VPN policy, you must first assign it to a user, group, or make it global (i.e. applicable to all SSL VPN users). If the policy is for a group, the available configured groups are shown in a drop down menu and one must be selected. Similarly, for a user defined policy a SSL VPN user must be chosen from the available list of configured users.

The next step is to define the policy details. The policy name is a unique identifier for this rule. The policy can be assigned to a specific Network Resource (details follow in the subsequent section), IP address, IP network, or all devices on the LAN of the router. Based on the selection of one of these four options, the appropriate configuration fields are required (i.e. choosing the network resources from a list of defined resources, or defining the IP addresses). For applying the policy to addresses the port range/port number can be defined.

The final steps require the policy permission to be set to either permit or deny access to the selected addresses or network resources. As well the policy can be specified for one or all of the supported SSL VPN services (i.e. VPN tunnel)

Once defined, the policy goes into effect immediately. The policy name, SSL service it applies to, destination (network resource or IP addresses) and permission (deny/permit) is outlined in a list of configured policies for the router.

Figure 65: SSL VPN policy configuration

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard	<div style="background-color: #0056b3; color: white; padding: 5px;">SSL VPN POLICY CONFIGURATION LOGOUT</div> <p>This page allows you to add a new SSL VPN Policy or edit the configuration of an existing SSL VPN Policy.</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p>			
Internet Settings				
Wireless Settings				
Network Settings				
DMZ Setup				
VPN Settings				
USB Settings				
VLAN Settings				
	<div style="background-color: #333; color: white; padding: 5px;">Policy For</div> <p>Policy For: <input type="text" value="Global"/></p> <p>Available Groups: <input type="text"/></p> <p>Available Users: <input type="text"/></p>			
	<div style="background-color: #333; color: white; padding: 5px;">SSL VPN Policy</div> <p>Apply Policy to: <input type="text" value="Network Resource"/></p> <p>Policy Name: <input type="text"/></p> <p>IP Address: <input type="text"/></p> <p>Mask Length: <input type="text"/></p>			
	<div style="background-color: #333; color: white; padding: 5px;">Port Range / Port Number</div> <p>Begin: <input type="text"/></p> <p>End: <input type="text"/></p> <p>Service: <input type="text" value="VPN Tunnel"/></p> <p>Defined Resources: <input type="text" value="DocServer"/></p> <p>Permission: <input type="text" value="Permit"/></p>			

To configure a policy for a single user or group of users, enter the following information:

- **Policy for:** The policy can be assigned to a group of users, a single user, or all users (making it a global policy). To customize the policy for specific users or groups, the user can select from the Available Groups and Available Users drop down.
- **Apply policy to:** This refers to the LAN resources managed by the DSR, and the policy can provide (or prevent) access to network resources, IP network, etc.
- **Policy name:** This field is a unique name for identifying the policy. **IP address:** Required when the governed resource is identified by its IP address or range of addresses.
- **Mask Length:** Required when the governed resource is identified by a range of addresses within a subnet.

- **Port range:** If the policy governs a type of traffic, this field is used for defining TCP or UDP port number(s) corresponding to the governed traffic. Leaving the starting and ending port range blank corresponds to all UDP and TCP traffic.
- **Service:** This is the SSL VPN service made available by this policy. The services offered are VPN tunnel, port forwarding or both.
- **Defined resources:** This policy can provide access to specific network resources. Network resources must be configured in advance of creating the policy to make them available for selection as a defined resource. Network resources are created with the following information
- **Permission:** The assigned resources defined by this policy can be explicitly permitted or denied.

7.2.1 Using Network Resources

Setup > VPN Settings > SSL VPN Server > Resources

Network resources are services or groups of LAN IP addresses that are used to easily create and configure SSL VPN policies. This shortcut saves time when creating similar policies for multiple remote SSL VPN users.

Adding a Network Resource involves creating a unique name to identify the resource and assigning it to one or all of the supported SSL services. Once this is done, editing one of the created network resources allows you to configure the object type (either IP address or IP range) associated with the service. The Network Address, Mask Length, and Port Range/Port Number can all be defined for this resource as required. A network resource can be defined by configuring the following in the GUI:

- **Resource name:** A unique identifier name for the resource.
- **Service:** The SSL VPN service corresponding to the resource (VPN tunnel, Port Forwarding or All).

Figure 66: List of configured resources, which are available to assign to SSL VPN policies

The screenshot shows the configuration page for a Unified Services Router. On the left is a navigation menu with options like Wizard, Internet Settings, Wireless Settings, Network Settings, DMZ Setup, VPN Settings, USB Settings, and VLAN Settings. The main content area is titled 'RESOURCES' and includes a 'LOGOUT' link. Below the title is a text box explaining that resources are groups of host names, IP addresses, or IP networks. A table titled 'List of Resources' contains one entry: 'DocServer' with the service 'VPN Tunnel'. At the bottom of the table are three buttons: 'Delete', 'Configure', and 'Add'.

7.3 Application Port Forwarding

Setup > VPN Settings > SSL VPN Server > Port Forwarding

Port forwarding allows remote SSL users to access specified network applications or services after they login to the User Portal and launch the Port Forwarding service. Traffic from the remote user to the router is detected and re-routed based on configured port forwarding rules.

Internal host servers or TCP applications must be specified as being made accessible to remote users. Allowing access to a LAN server requires entering the local server IP address and TCP port number of the application to be tunneled. The table below lists some common applications and corresponding TCP port numbers:

TCP Application	Port Number
FTP Data (usually not needed)	20
FTP Control Protocol	21
SSH	22
Telnet	23
SMTP (send mail)	25
HTTP (web)	80
POP3 (receive mail)	110
NTP (network time protocol)	123
Citrix	1494
Terminal Services	3389
VNC (virtual network computing)	5900 or 5800

As a convenience for remote users, the hostname (FQDN) of the network server can be configured to allow for IP address resolution. This host name resolution provides users with easy-to-remember FQDN's to access TCP applications instead of error-prone IP addresses when using the Port Forwarding service through the SSL User Portal.

To configure port forwarding, following are required:

- Local Server IP address: The IP address of the local server which is hosting the application.
- TCP port: The TCP port of the application

Once the new application is defined it is displayed in a list of configured applications for port forwarding.

allow users to access the private network servers by using a hostname instead of an IP address, the FQDN corresponding to the IP address is defined in the port forwarding host configuration section.

- Local server IP address: The IP address of the local server hosting the application. The application should be configured in advance.
- Fully qualified domain name: The domain name of the internal server is to be specified

Once the new FQDN is configured, it is displayed in a list of configured hosts for port forwarding.


 Defining the hostname is optional as minimum requirement for port forwarding is identifying the TCP application and local server IP address. The local server IP address of the configured hostname must match the IP address of the configured application for port forwarding.

Figure 67: List of Available Applications for SSL Port Forwarding

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS						
Wizard	<p>PORT FORWARDING LOGOUT</p> <p>The Port Forwarding page allows you to detect and re-route data sent from remote users to the SSL VPN gateway to predefined applications running on private networks.</p>									
Internet Settings	<p>List of Configured Applications for Port Forwarding</p> <table border="1"> <thead> <tr> <th><input type="checkbox"/></th> <th>Local Server IP Address</th> <th>TCP Port Number</th> </tr> </thead> <tbody> <tr> <td><input type="checkbox"/></td> <td>97.0.0.64</td> <td>125</td> </tr> </tbody> </table> <p style="text-align: center;"> <input type="button" value="Delete"/> <input type="button" value="Add"/> </p>				<input type="checkbox"/>	Local Server IP Address	TCP Port Number	<input type="checkbox"/>	97.0.0.64	125
<input type="checkbox"/>	Local Server IP Address	TCP Port Number								
<input type="checkbox"/>	97.0.0.64	125								
Wireless Settings	<p>List of Configured Host Names for Port Forwarding</p> <table border="1"> <thead> <tr> <th><input type="checkbox"/></th> <th>Local Server IP Address</th> <th>Fully Qualified Domain Name</th> </tr> </thead> <tbody> <tr> <td><input type="checkbox"/></td> <td>192.168.15.25</td> <td>test</td> </tr> </tbody> </table> <p style="text-align: center;"> <input type="button" value="Delete"/> <input type="button" value="Add"/> </p>				<input type="checkbox"/>	Local Server IP Address	Fully Qualified Domain Name	<input type="checkbox"/>	192.168.15.25	test
<input type="checkbox"/>	Local Server IP Address	Fully Qualified Domain Name								
<input type="checkbox"/>	192.168.15.25	test								
Network Settings										
DMZ Setup										
VPN Settings										
USB Settings										
VLAN Settings										

7.4 SSL VPN Client Configuration

Setup > VPN Settings > SSL VPN Client > SSL VPN Client

An SSL VPN tunnel client provides a point-to-point connection between the browser-side machine and this router. When a SSL VPN client is launched from the user portal, a "network adapter" with an IP address from the corporate subnet, DNS and WINS settings is automatically created. This allows local applications to access services on the private network without any special network configuration on the remote SSL VPN client machine.

It is important to ensure that the virtual (PPP) interface address of the VPN tunnel client does not conflict with physical devices on the LAN. The IP address range for the SSL VPN virtual network adapter should be either in a different subnet or non-overlapping range as the corporate LAN.


 The IP addresses of the client's network interfaces (Ethernet, Wireless, etc.) cannot be identical to the router's IP address or a server on the corporate LAN that is being accessed through the SSL VPN tunnel.

Figure 68: SSL VPN client adapter and access configuration

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0056b3; color: white; padding: 2px;">SSL VPN CLIENT LOGOUT</div> <p>An SSL VPN tunnel client provides a point-to-point connection between the browser-side machine and this device. When a SSL VPN client is launched from the user portal, a "network adaptor" with an IP address, DNS and WINS settings is automatically created, which allows local applications to talk to services on the private network without any special network configuration on the remote SSL VPN client machine.</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p> </div>			
Internet Settings				
Wireless Settings				
Network Settings				
DMZ Setup				
VPN Settings				
USB Settings				
VLAN Settings				
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">Client IP Address Range</div> <p>Enable Split Tunnel Support: <input type="checkbox"/></p> <p>DNS Suffix (Optional) : <input type="text"/></p> <p>Primary DNS Server (Optional) : <input type="text"/></p> <p>Secondary DNS Server (Optional) : <input type="text"/></p> <p>Client Address Range Begin: <input type="text" value="192.168.251.1"/></p> <p>Client Address Range End: <input type="text" value="192.168.251.254"/></p> <p>LCP Timeout: <input type="text" value="60"/> (Seconds)</p> </div>			

The router allows full tunnel and split tunnel support. Full tunnel mode just sends all traffic from the client across the VPN tunnel to the router. Split tunnel mode only sends traffic to the private LAN based on pre-specified client routes. These client routes give the SSL client access to specific private networks, thereby allowing access control over specific LAN services.

Client level configuration supports the following:

- **Enable Split Tunnel Support:** With a split tunnel, only resources which are referenced by client routes can be accessed over the VPN tunnel. With full tunnel support (if the split tunnel option is disabled the DSR acts in full tunnel mode) all addresses on the private network are accessible over the VPN tunnel. Client routes are not required.
- **DNS Suffix:** The DNS suffix name which will be given to the SSL VPN client. This configuration is optional.
- **Primary DNS Server:** DNS server IP address to set on the network adaptor created on the client host. This configuration is optional.
- **Secondary DNS Server:** Secondary DNS server IP address to set on the network adaptor created on the client host. This configuration is optional.
- **Client Address Range Begin:** Clients who connect to the tunnel get a DHCP served IP address assigned to the network adaptor from the range of addresses beginning with this IP address


Client Address Range End: The ending IP address of the DHCP range of addresses served to the client network adaptor.

Setup > VPN Settings > SSL VPN Client > Configured Client Routes

If the SSL VPN client is assigned an IP address in a different subnet than the corporate network, a client route must be added to allow access to the private LAN through the VPN tunnel. As well a static route on the private LAN's firewall (typically this router) is needed to forward private traffic through the VPN Firewall to the remote SSL VPN client. When split tunnel mode is enabled, the user is required to configure routes for VPN tunnel clients:

- Destination network: The network address of the LAN or the subnet information of the destination network from the VPN tunnel clients' perspective is set here.
- Subnet mask: The subnet information of the destination network is set here.

Figure 69: Configured client routes only apply in split tunnel mode

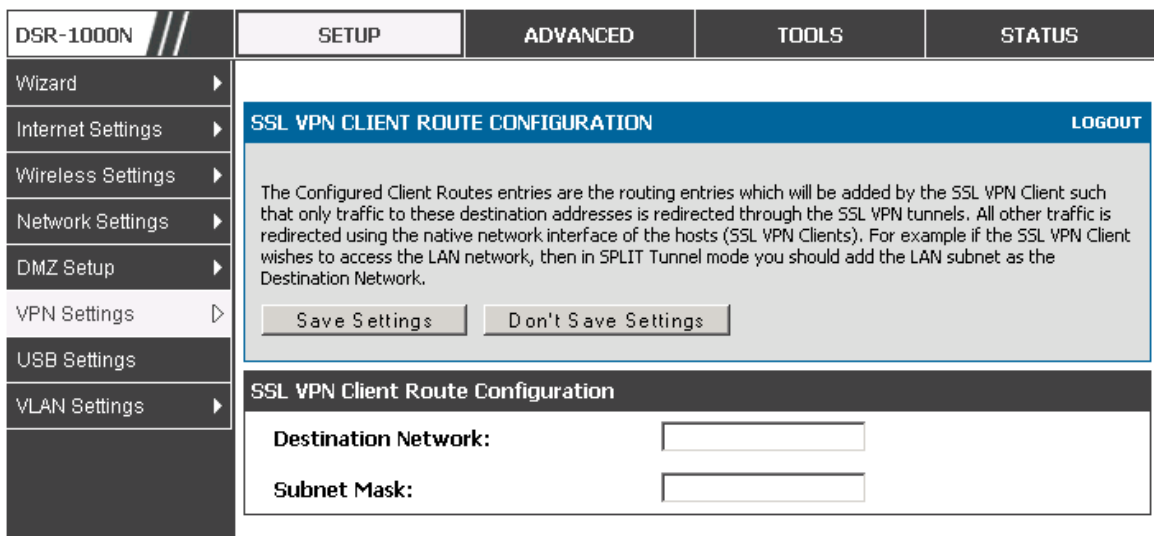

7.5 User Portal

Setup > VPN Settings > SSL VPN Client > SSL VPN Client Portal

When remote users want to access the private network through an SSL tunnel (either using the Port Forwarding or VPN tunnel service), they login through a user portal. This portal provides the authentication fields to provide the appropriate access levels and privileges as determined by the router administrator. The domain where the user account is stored must be specified, and the domain determines the authentication method and portal layout screen presented to the remote user.

Figure 70: List of configured SSL VPN portals. The configured portal can then be associated with an authentication domain

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard	PORTAL LAYOUTS LOGOUT			
Internet Settings	The table lists the SSL portal layouts configured for this device and allows several operations on the portal layouts.			
Wireless Settings	List of of Layouts			
Network Settings	<input type="checkbox"/>	Layout Name	Use Count	Portal URL
DMZ Setup	<input type="checkbox"/>	SSLVPN*	1	https://0.0.0.0/portal/SSLVPN
VPN Settings	<input type="checkbox"/>	MarketingAccess	0	https://0.0.0.0/portal/MarketingAccess
USB Settings	<input type="button" value="Edit"/> <input type="button" value="Delete"/> <input type="button" value="Set Default"/> <input type="button" value="Add"/>			
VLAN Settings				

7.5.1 Creating Portal Layouts

Setup > VPN Settings > SSL VPN Server > Portal Layouts

The router allows you to create a custom page for remote SSL VPN users that is presented upon authentication. There are various fields in the portal that are customizable for the domain, and this allows the router administrator to communicate details such as login instructions, available services, and other usage details in the portal visible to remote users. During domain setup, configured portal layouts are available to select for all users authenticated by the domain.

The default portal LAN IP address is <https://192.168.10.1/scgi-bin/userPortal/portal>. This is the same page that opens when the “User Portal” link is clicked on the SSL VPN menu of the router GUI.

The router administrator creates and edits portal layouts from the configuration pages in the SSL VPN menu. The portal name, title, banner name, and banner contents are all customizable to the intended users for this portal. The portal name is appended to the SSL VPN portal URL. As well, the users assigned to this portal (through their authentication domain) can be presented with one or more of the router’s supported SSL services such as the VPN Tunnel page or Port Forwarding page.

To configure a portal layout and theme, following information is needed:

- Portal layout name: A descriptive name for the custom portal that is being configured. It is used as part of the SSL portal URL.
- Portal site title: The portal web browser window title that appears when the client accesses this portal. This field is optional.
- Banner title: The banner title that is displayed to SSL VPN clients prior to login. This field is optional.

- **Banner message:** The banner message that is displayed to SSL VPN clients prior to login. This field is optional.
- **Display banner message on the login page:** The user has the option to either display or hide the banner message in the login page.
- **HTTP meta tags for cache control:** This security feature prevents expired web pages and data from being stored in the client’s web browser cache. It is recommended that the user selects this option.
- **ActiveX web cache cleaner:** An ActiveX cache control web cleaner can be pushed from the gateway to the client browser whenever users login to this SSL VPN portal.
- **SSL VPN portal page to display:** The User can either enable VPN tunnel page or Port Forwarding, or both depending on the SSL services to display on this portal.

Once the portal settings are configured, the newly configured portal is added to the list of portal layouts.

Figure 71: SSL VPN Portal configuration

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Wizard	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0070C0; color: white; padding: 2px;">PORTAL LAYOUT CONFIGURATION LOGOUT</div> <p style="font-size: small;">This page allows you to add a new portal layout or edit the configuration of an existing portal layout. The details will then be displayed in the List of Portal Layouts table on the SSL VPN Server > Portal Layouts page under the VPN menu.</p> <div style="text-align: center; margin-top: 10px;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div>			
Internet Settings				
Wireless Settings				
Network Settings				
DMZ Setup				
VPN Settings				
USB Settings				
VLAN Settings				
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">Portal Layout and Theme Name</div> <p>Portal Layout Name: <input type="text"/></p> <p>Portal Site Title (Optional) : <input type="text"/></p> <p>Banner Title (Optional) : <input type="text"/></p> <p>Banner Message (Optional) : <input style="width: 100%; height: 40px;" type="text"/></p> <p>Display banner message on login page: <input type="checkbox"/></p> <p>HTTP meta tags for cache control (recommended): <input type="checkbox"/></p> <p>ActiveX web cache cleaner: <input type="checkbox"/></p> </div>			
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">SSL VPN Portal Pages to Display</div> <p>VPN Tunnel page: <input checked="" type="checkbox"/></p> <p>Port Forwarding: <input type="checkbox"/></p> </div>			

Chapter 8. Advanced Configuration Tools

8.1 USB Device Setup

Setup > USB Settings

The DSR Unified Services Router has a USB interface for printer access, file sharing and on the DSR-1000 / DSR-1000N models 3G modem support. There is no configuration on the GUI to enable USB device support. Upon inserting your USB storage device, printer cable or 3G modem the DSR router will automatically detect the type of connected peripheral.

- USB Mass Storage: also referred to as a “share port”, files on a USB disk connected to the DSR can be accessed by LAN users as a network drive.
- USB Printer: The DSR can provide the LAN with access to printers connected through the USB. The printer driver will have to be installed on the LAN host and traffic will be routed through the DSR between the LAN and printer.
- USB 3G modem: A 3G modem dongle can be plugged in and used as a secondary WAN. Load balancing, auto-failover, or primary WAN access can be configured through the 3G interface.

To configure printer on a Windows machine, follow below given steps:


- Click 'Start' on the desktop.
- Select 'Printers and faxes' option.
- Right click and select 'add printer' or click on 'Add printer' present at the left menu.
- Select the 'Network Printer' radio button and click next (select "device isn't listed in case of Windows7").
- Select the 'Connect to printer using URL' radio button ('Select a shared printer by name'in case of Windows 7) and give the following URL `http://<Router's LAN IP address>:631/printers/<Model Name>` (Model Name can be found in the USB status page of router's GUI).
- Click 'next' and select the appropriate driver from the displayed list.
- Click on 'next' and 'finish' to complete adding the printer.

Figure 72: USB Device Detection

USB SETTINGS
LOGOUT

This page displays information about the USB devices connected to the USB port(s). This page also allows user to do certain configurations on USB devices, such as safely unmounting the devices.

USB-1: Device Not Connected




Device Vendor: NA

Device Model: NA

Device Type: NA

Mount Status: NA

USB-2: Device Not Connected



Device Vendor: NA

Device Model: NA

Device Type: NA

Mount Status: NA

8.2 Authentication Certificates

Advanced > Certificates

This gateway uses digital certificates for IPsec VPN authentication as well as SSL validation (for HTTPS and SSL VPN authentication). You can obtain a digital certificate from a well known Certificate Authority (CA) such as VeriSign, or generate and sign your own certificate using functionality available on this gateway. The gateway comes with a self-signed certificate, and this can be replaced by one signed by a CA as per your networking requirements. A CA certificate provides strong assurance of the server’s identity and is a requirement for most corporate network VPN solutions.

The certificates menu allows you to view a list of certificates (both from a CA and self-signed) currently loaded on the gateway. The following certificate data is displayed in the list of Trusted (CA) certificates:

CA Identity (Subject Name): The certificate is issued to this person or organization

Issuer Name: This is the CA name that issued this certificate

Expiry Time: The date after which this Trusted certificate becomes invalid

A self certificate is a certificate issued by a CA identifying your device (or self-signed if you don't want the identity protection of a CA). The Active Self Certificate table lists the self certificates currently loaded on the gateway. The following information is displayed for each uploaded self certificate:

- **Name:** The name you use to identify this certificate, it is not displayed to IPsec VPN peers or SSL users.
- **Subject Name:** This is the name that will be displayed as the owner of this certificate. This should be your official registered or company name, as IPsec or SSL VPN peers are shown this field.
- **Serial Number:** The serial number is maintained by the CA and used to identify this signed certificate.
- **Issuer Name:** This is the CA name that issued (signed) this certificate
- **Expiry Time:** The date after which this signed certificate becomes invalid – you should renew the certificate before it expires.

To request a self certificate to be signed by a CA, you can generate a Certificate Signing Request from the gateway by entering identification parameters and passing it along to the CA for signing. Once signed, the CA's Trusted Certificate and signed certificate from the CA are uploaded to activate the self-certificate validating the identity of this gateway. The self certificate is then used in IPsec and SSL connections with peers to validate the gateway's authenticity.

Figure 73: Certificate summary for IPsec and HTTPS management

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
-----------	-------	----------	-------	--------

- Application Rules ▶
- Website Filter ▶
- Firewall Settings ▶
- Wireless Settings ▶
- Advanced Network ▶
- Routing ▶
- Certificates
- Users ▶
- IP/MAC Binding
- IPv6 ▶
- Radius Settings
- Power Saving

CERTIFICATES
LOGOUT

Digital Certificates (also known as X509 Certificates) are used to authenticate the identity of users and systems, and are issued by Certification Authorities (CA) such as VeriSign, Thawte and other organizations. Digital Certificates are used by this router during the Internet Key Exchange (IKE) authentication phase to authenticate connecting VPN gateways or clients, or to be authenticated by remote entities.

Trusted Certificates (CA Certificate)

<input type="checkbox"/>	CA Identity (Subject Name)	Issuer Name	Expiry Time
<input type="button" value="Upload"/> <input type="button" value="Delete"/>			

Active Self Certificates

<input type="checkbox"/>	Name	Subject Name	Serial Number	Issuer Name	Expiry Time
<input type="button" value="Upload"/> <input type="button" value="Delete"/>					

Self Certificate Requests

<input type="checkbox"/>	Name	Status	Action
<input type="checkbox"/>	Router_1	Active Self Certificate Not Uploaded	<input type="button" value="View"/>

8.3 Advanced Switch Configuration

The DSR allows you to adjust the power consumption of the hardware based on your actual usage. The two “green” options available for your LAN switch are Power Saving by Link Status and Length Detection State. With “Power Saving by Link Status” option enabled, the total power consumption by the LAN switch is dependent function of on the number of connected ports. The overall current draw when a single port is connected is less than when all the ports are connected. With “Length Detection State” option enabled, the overall current supplied to a LAN port is reduced when a smaller cable length is connected on a LAN port.

Jumbo Frames support can be configured as an advanced switch configuration. Jumbo frames are Ethernet frames with more than 1500 bytes of payload. When this option is enabled, the LAN devices can exchange information at Jumbo frames rate.

Figure 74: Advanced Switch Settings

SETUP	ADVANCED	TOOLS	STATUS
-------	-----------------	-------	--------

SWITCH SETTINGS		LOGOUT
<p>This page allows user to enable/disable power saving, jumbo frames in the router.</p> <p> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p>		
Power Saving Options		
Power Saving by Link Status:	<input checked="" type="checkbox"/>	
Power Saving by Cable Length:	<input checked="" type="checkbox"/>	
Jumbo Frames Option		
Enable Jumbo Frames:	<input type="checkbox"/>	


Chapter 9. Administration & Management

9.1 Configuration Access Control

The primary means to configure this gateway via the browser-independent GUI. The GUI can be accessed from LAN node by using the gateway’s LAN IP address and HTTP, or from the WAN by using the gateway’s WAN IP address and HTTPS (HTTP over SSL).

Administrator and Guest users are permitted to login to the router’s management interface. The user type is set in the *Advanced > Users > Users* page. The Admin or Guest user can be configured to access the router GUI from the LAN or the Internet (WAN) by enabling the corresponding Login Policy.


Figure 75: User Login policy configuration

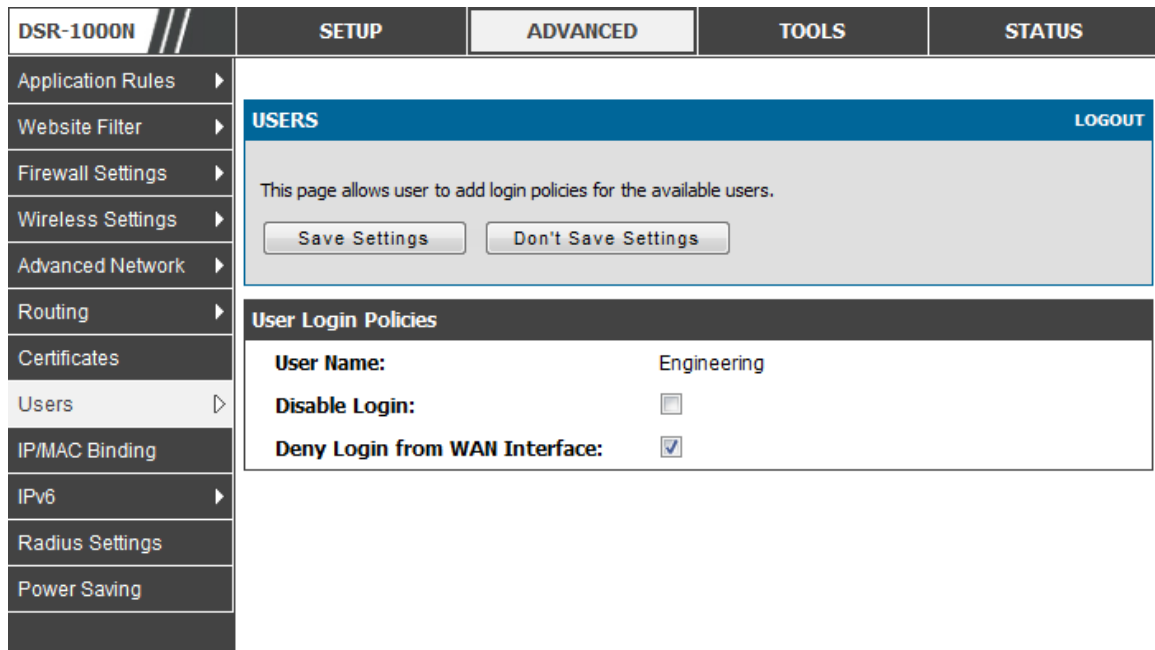

9.1.1 Remote Management

Both HTTPS and telnet access can be restricted to a subset of IP addresses. The router administrator can define a known PC, single IP address or range of IP addresses that are allowed to access the GUI with HTTPS. The opened port for SSL traffic can be changed from the default of 443 at the same time as defining the allowed remote management IP address range.

Figure 76: Remote Management from the WAN

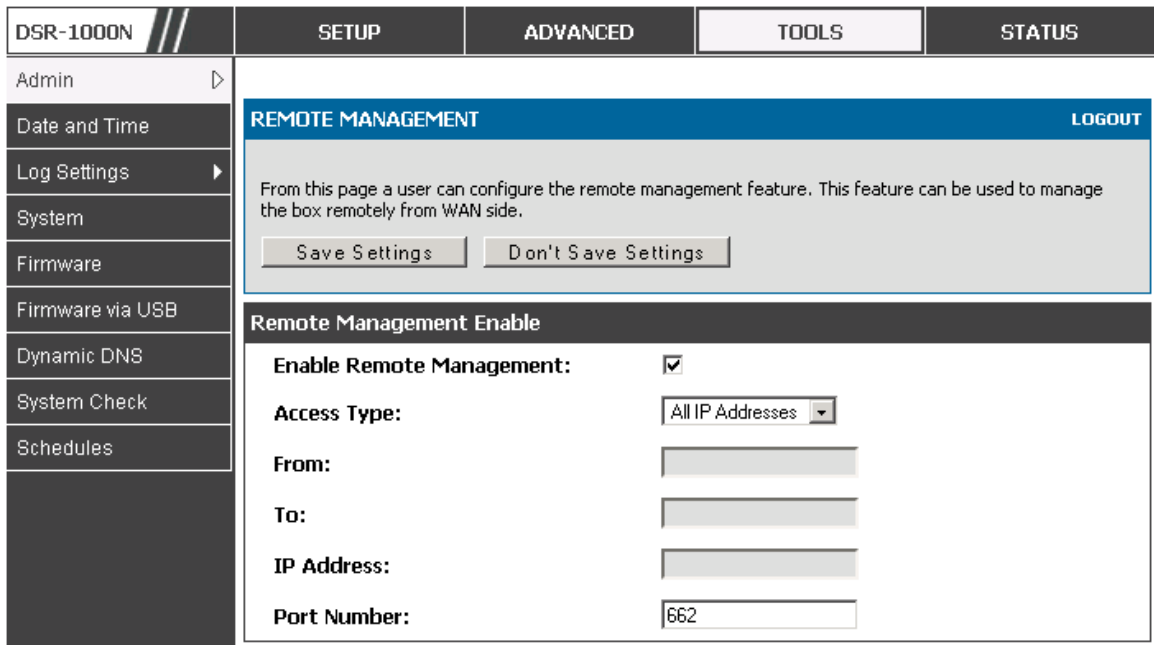

9.1.2 CLI Access

In addition to the web-based GUI, the gateway supports SSH and Telnet management for command-line interaction. The CLI login credentials are shared with the GUI for administrator users. To access the CLI, type “cli” in the SSH or console prompt and login with administrator user credentials.

9.2 SNMP Configuration

Tools > Admin > SNMP

SNMP is an additional management tool that is useful when multiple routers in a network are being managed by a central Master system. When an external SNMP manager is provided with this router’s Management Information Base (MIB) file, the manager can update the router’s hierarchal variables to view or update configuration parameters. The router as a managed device has an SNMP agent that allows the MIB configuration variables to be accessed by the Master (the SNMP manager). The Access Control List on the router identifies managers in the network that have read-only or read-write SNMP credentials. The Traps List outlines the port over which notifications from this router are provided to the SNMP community (managers) and also the SNMP version (v1, v2c, v3) for the trap.

Figure 77: SNMP Users, Traps, and Access Control

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
-----------	-------	----------	-------	--------

Admin				
Date and Time				
Log Settings				
System				
Firmware				
Dynamic DNS				
System Check				
Schedules				

SNMP				LOGOUT
Simple Network Management Protocol (SNMP) lets you monitor and manage your router from an SNMP manager. SNMP provides a remote means to monitor and control network devices, and to manage configurations, statistics collection, performance, and security.				
SNMP v3 Users List				
	Name	Privilege	Security level	
<input type="checkbox"/>	dlink	RWUSER	NoAuthNoPriv	
<input type="checkbox"/>	guest	ROUSER	NoAuthNoPriv	
<input type="button" value="Edit"/>				
Traps List				
	IP Address	Port	Community	SNMP Version
<input type="checkbox"/>				
<input type="button" value="Edit"/> <input type="button" value="Delete"/> <input type="button" value="Add"/>				
Access Control List				
	IP Address	Subnet Mask	Community	Access Type
<input type="checkbox"/>				
<input type="button" value="Edit"/> <input type="button" value="Delete"/> <input type="button" value="Add"/>				

Tools > Admin > SNMP System Info

The router is identified by an SNMP manager via the System Information. The identifier settings The SysName set here is also used to identify the router for SysLog logging.


Figure 78: SNMP system information for this router

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Admin				
Date and Time				
Log Settings				
System				
Firmware				
Dynamic DNS				
System Check				
Schedules				
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0070C0; color: white; padding: 2px;">SNMP LOGOUT</div> <p>This page displays the current SNMP configuration of the router. The following MIB (Management Information Base) fields are displayed and can be modified here.</p> <div style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div>			
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">SNMP System Information</div> <p>SysContact: <input type="text"/></p> <p>SysLocation: <input type="text"/></p> <p>SysName: <input type="text" value="DSR_router"/></p> </div>			

9.3 Configuring Time Zone and NTP

Tools > Date and Time

You can configure your time zone, whether or not to adjust for Daylight Savings Time, and with which Network Time Protocol (NTP) server to synchronize the date and time. You can choose to set Date and Time manually, which will store the information on the router’s real time clock (RTC). If the router has access to the internet, the most accurate mechanism to set the router time is to enable NTP server communication.

 Accurate date and time on the router is critical for firewall schedules, Wi-Fi power saving support to disable APs at certain times of the day, and accurate logging.

Please follow the steps below to configure the NTP server:

1. Select the router’s time zone, relative to Greenwich Mean Time (GMT).
2. If supported for your region, click to Enable Daylight Savings.
3. Determine whether to use default or custom Network Time Protocol (NTP) servers. If custom, enter the server addresses or FQDN.

Figure 79: Date, Time, and NTP server setup

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Admin	<div style="background-color: #0056b3; color: white; padding: 2px;">DATE AND TIME</div> <div style="text-align: right; font-size: small; color: white;">LOGOUT</div> <p>This page allows us to set the date, time and NTP servers. Network Time Protocol (NTP) is a protocol that is used to synchronize computer clock time in a network of computers. Accurate time across a network is important for many reasons.</p> <div style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div>			
Date and Time	<div style="background-color: #333; color: white; padding: 2px;">Date and Time</div> <p>Current Router Time: Mon Feb 1 14:44:03 GMT 2010</p> <p>Time Zone: (GMT-08:00) Pacific Time (US and Canada) <input type="button" value="v"/></p> <p>Enable Daylight Saving: <input checked="" type="checkbox"/></p> <p>Configure NTP Servers: <input type="radio"/></p> <p>Set Date and Time Manually: <input checked="" type="radio"/></p>			
Log Settings	<div style="background-color: #333; color: white; padding: 2px;">NTP Servers Configuration</div> <p>Default NTP Server: <input checked="" type="radio"/></p> <p>Custom NTP Server: <input type="radio"/></p> <p>Primary NTP Server: <input type="text" value="0.us.pool.ntp.org"/></p> <p>Secondary NTP Server: <input type="text" value="1.us.pool.ntp.org"/></p>			
System	<div style="background-color: #333; color: white; padding: 2px;">Set Date And Time</div> <p>Year Month Day Hours Min Sec</p> <p><input type="text"/> / <input type="text"/> / <input type="text"/> - <input type="text"/> : <input type="text"/> : <input type="text"/></p>			
Firmware				
Dynamic DNS				
System Check				
Schedules				

9.4 Log Configuration

This router allows you to capture log messages for traffic through the firewall, VPN, and over the wireless AP. As an administrator you can monitor the type of traffic that goes through the router and also be notified of potential attacks or errors when they are detected by the router. The following sections describe the log configuration settings and the ways you can access these logs.

9.4.1 Defining What to Log

Tools > Log Settings > Logs Facility

The Logs Facility page allows you to determine the granularity of logs to receive from the router. There are three core components of the router, referred to as Facilities:

- **Kernel:** This refers to the Linux kernel. Log messages that correspond to this facility would correspond to traffic through the firewall or network stack.

- **System:** This refers to application and management level features available on this router, including SSL VPN and administrator changes for managing the unit.
- **Wireless:** This facility corresponds to the 802.11 driver used for providing AP functionality to your network.
- **Local1-UTM:** This facility corresponds to IPS (Intrusion Prevention System) which helps in detecting malicious intrusion attempts from the WAN.

For each facility, the following events (in order of severity) can be logged: Emergency, Alert, Critical, Error, Warning, Notification, Information, Debugging. When a particular severity level is selected, all events with severity equal to and greater than the chosen severity are captured. For example if you have configured CRITICAL level logging for the Wireless facility, then 802.11 logs with severities CRITICAL, ALERT, and EMERGENCY are logged. The severity levels available for logging are:

- **EMERGENCY:** system is unusable
- **ALERT:** action must be taken immediately
- **CRITICAL:** critical conditions
- **ERROR:** error conditions
- **WARNING:** warning conditions
- **NOTIFICATION:** normal but significant condition
- **INFORMATION:** informational
- **DEBUGGING:** debug-level messages

Figure 80: Facility settings for Logging

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS																											
Admin																															
Date and Time																															
Log Settings	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0070C0; color: white; padding: 2px;">LOGS FACILITY LOGOUT</div> <p style="font-size: small; margin-top: 5px;">This page allows user to set the date and time for the router. User can use the automatic or manual date and settings depending upon his choice.</p> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div>																														
System	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">Logs Facility</div> <p style="margin-top: 5px;">Facility: <input style="width: 80px;" type="text" value="System"/> <input type="button" value="Display"/></p> </div>																														
Firmware	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">Display and Send Logs</div> <table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 40%;"></th> <th style="width: 30%; text-align: center;">Display in Event Log</th> <th style="width: 30%; text-align: center;">Send to Syslog</th> </tr> </thead> <tbody> <tr> <td>Emergency:</td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>Alert:</td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>Critical:</td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>Error:</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>Warning:</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>Notification:</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>Information:</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>Debugging:</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> </tbody> </table> </div>					Display in Event Log	Send to Syslog	Emergency:	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Alert:	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Critical:	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Error:	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Warning:	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Notification:	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Information:	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Debugging:	<input type="checkbox"/>	<input checked="" type="checkbox"/>
	Display in Event Log	Send to Syslog																													
Emergency:	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																													
Alert:	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																													
Critical:	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																													
Error:	<input type="checkbox"/>	<input checked="" type="checkbox"/>																													
Warning:	<input type="checkbox"/>	<input checked="" type="checkbox"/>																													
Notification:	<input type="checkbox"/>	<input checked="" type="checkbox"/>																													
Information:	<input type="checkbox"/>	<input checked="" type="checkbox"/>																													
Debugging:	<input type="checkbox"/>	<input checked="" type="checkbox"/>																													
Firmware via USB																															
Dynamic DNS																															
System Check																															
Schedules																															

The display for logging can be customized based on where the logs are sent, either the Event Log viewer in the GUI (the Event Log viewer is in the *Status > Logs* page) or a remote Syslog server for later review. E-mail logs, discussed in a subsequent section, follow the same configuration as logs configured for a Syslog server.

Tools > Log Settings > Logs Configuration

This page allows you to determine the type of traffic through the router that is logged for display in Syslog, E-mailed logs, or the Event Viewer. Denial of service attacks, general attack information, login attempts, dropped packets, and similar events can be captured for review by the IT administrator.


Traffic through each network segment (LAN, WAN, DMZ) can be tracked based on whether the packet was accepted or dropped by the firewall.

Accepted Packets are those that were successfully transferred through the corresponding network segment (i.e. LAN to WAN). This option is particularly useful when the Default Outbound Policy is “Block Always” so the IT admin can monitor traffic that is passed through the firewall.

- Example: If Accept Packets from LAN to WAN is enabled and there is a firewall rule to allow SSH traffic from LAN, then whenever a LAN machine tries to make an SSH connection, those packets will be accepted and a message will be logged. (Assuming the log option is set to Allow for the SSH firewall rule.)

Dropped Packets are packets that were intentionally blocked from being transferred through the corresponding network segment. This option is useful when the Default Outbound Policy is “Allow Always”.

- Example: If Drop Packets from LAN to WAN is enabled and there is a firewall rule to block ssh traffic from LAN, then whenever a LAN machine tries to make an ssh connection, those packets will be dropped and a message will be logged. (Make sure the log option is set to allow for this firewall rule.)

 Enabling accepted packet logging through the firewall may generate a significant volume of log messages depending on the typical network traffic. This is recommended for debugging purposes only.

In addition to network segment logging, unicast and multicast traffic can be logged. Unicast packets have a single destination on the network, whereas broadcast (or multicast) packets are sent to all possible destinations simultaneously. One other useful log control is to log packets that are dropped due to configured bandwidth profiles over a particular interface. This data will indicate to the admin whether the bandwidth profile has to be modified to account for the desired internet traffic of LAN users.

Figure 81: Log configuration options for traffic through router

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS																					
Admin	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0070C0; color: white; padding: 2px;">LOGS CONFIGURATION LOGOUT</div> <p style="text-align: center; margin-top: 10px;">This page allows user to configure system wide log settings.</p> <div style="display: flex; justify-content: center; gap: 20px;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </div> </div>																								
Date and Time																									
Log Settings																									
System																									
Firmware																									
Firmware via USB																									
Dynamic DNS																									
System Check																									
Schedules																									
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">Routing Logs</div> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 60%;"></th> <th style="width: 20%; text-align: center;">Accepted Packets</th> <th style="width: 20%; text-align: center;">Dropped Packets</th> </tr> </thead> <tbody> <tr> <td>LAN to WAN:</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>WAN to LAN:</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>WAN to DMZ:</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>DMZ to WAN:</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>LAN to DMZ:</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>DMZ to LAN:</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> </tbody> </table> </div>					Accepted Packets	Dropped Packets	LAN to WAN:	<input type="checkbox"/>	<input checked="" type="checkbox"/>	WAN to LAN:	<input type="checkbox"/>	<input checked="" type="checkbox"/>	WAN to DMZ:	<input type="checkbox"/>	<input checked="" type="checkbox"/>	DMZ to WAN:	<input type="checkbox"/>	<input checked="" type="checkbox"/>	LAN to DMZ:	<input type="checkbox"/>	<input checked="" type="checkbox"/>	DMZ to LAN:	<input type="checkbox"/>	<input checked="" type="checkbox"/>
	Accepted Packets	Dropped Packets																							
LAN to WAN:	<input type="checkbox"/>	<input checked="" type="checkbox"/>																							
WAN to LAN:	<input type="checkbox"/>	<input checked="" type="checkbox"/>																							
WAN to DMZ:	<input type="checkbox"/>	<input checked="" type="checkbox"/>																							
DMZ to WAN:	<input type="checkbox"/>	<input checked="" type="checkbox"/>																							
LAN to DMZ:	<input type="checkbox"/>	<input checked="" type="checkbox"/>																							
DMZ to LAN:	<input type="checkbox"/>	<input checked="" type="checkbox"/>																							
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">System Logs</div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tbody> <tr> <td>All Unicast Traffic:</td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>All Broadcast / Multicast Traffic:</td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> </tbody> </table> </div>				All Unicast Traffic:	<input checked="" type="checkbox"/>	All Broadcast / Multicast Traffic:	<input checked="" type="checkbox"/>																	
All Unicast Traffic:	<input checked="" type="checkbox"/>																								
All Broadcast / Multicast Traffic:	<input checked="" type="checkbox"/>																								
	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #333; color: white; padding: 2px;">Other Events Logs</div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tbody> <tr> <td>Bandwidth Limit:</td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> </tbody> </table> </div>				Bandwidth Limit:	<input checked="" type="checkbox"/>																			
Bandwidth Limit:	<input checked="" type="checkbox"/>																								

9.4.2 Sending Logs to E-mail or Syslog

Tools > Log Settings > Remote Logging

Once you have configured the type of logs that you want the router to collect, they can be sent to either a Syslog server or an E-Mail address. For remote logging a key configuration field is the Remote Log Identifier. Every logged message will contain the configured prefix of the Remote Log Identifier, so that syslog servers or email addresses that receive logs from more than one router can sort for the relevant device’s logs.

Once you enable the option to e-mail logs, enter the e-mail server’s address (IP address or FQDN) of the SMTP server. The router will connect to this server when sending e-mails out to the configured addresses. The SMTP port and return e-mail addresses are required fields to allow the router to package the logs and send a valid e-mail that is accepted by one of the configured “send-to” addresses. Up to three e-mail addresses can be configured as log recipients.

In order to establish a connection with the configured SMTP port and server, define the server’s authentication requirements. The router supports Login Plain (no encryption) or CRAM-MD5 (encrypted) for the username and password data to be sent to the SMTP server. Authentication can be disabled if the server does not have

this requirement. In some cases the SMTP server may send out IDENT requests, and this router can have this response option enabled as needed.

Once the e-mail server and recipient details are defined you can determine when the router should send out logs. E-mail logs can be sent out based on a defined schedule by first choosing the unit (i.e. the frequency) of sending logs: Hourly, Daily, or Weekly. Selecting Never will disable log e-mails but will preserve the e-mail server settings.

Figure 82: E-mail configuration as a Remote Logging option

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Admin	<div style="background-color: #0070C0; color: white; padding: 5px;">REMOTE LOGGING CONFIGURATION LOGOUT</div> <p>This page allows user to configure the remote logging options for the router.</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p> <div style="background-color: #333; color: white; padding: 2px;">Log Options</div> <p>Remote Log Identifier: <input type="text" value="DSR-1000N"/></p> <div style="background-color: #333; color: white; padding: 2px;">Enable E-Mail Logs</div> <p>Enable E-Mail Logs: <input type="checkbox"/></p> <p>E-Mail Server Address: <input type="text"/></p> <p>SMTP Port: <input type="text" value="25"/></p> <p>Return E-Mail Address: <input type="text"/></p> <p>Send to E-Mail Address(1): <input type="text"/></p> <p>Send to E-Mail Address(2): <input type="text"/> (Optional)</p> <p>Send to E-Mail Address(3): <input type="text"/> (Optional)</p> <p>Authentication with SMTP Server: <input type="text" value="None"/> ▼</p> <p>User Name: <input type="text" value="admin"/></p> <p>Password: <input type="text" value="*****"/></p> <p>Respond to Identd from SMTP Server: <input type="checkbox"/></p> <div style="background-color: #333; color: white; padding: 2px;">Send E-mail logs by Schedule</div> <p>Unit: <input type="text" value="Never"/> ▼</p> <p>Day: <input type="text" value="Sunday"/> ▼</p> <p>Time: <input type="text" value="1:00"/> ▼ <input checked="" type="radio"/> (AM) <input type="radio"/> (PM)</p>			
Date and Time				
Log Settings				
System				
Firmware				
Firmware via USB				
Dynamic DNS				
System Check				
Schedules				

An external Syslog server is often used by network administrator to collect and store logs from the router. This remote device typically has less memory constraints than

the local Event Viewer on the router’s GUI, and thus can collect a considerable number of logs over a sustained period. This is typically very useful for debugging network issues or to monitor router traffic over a long duration.

This router supports up to 8 concurrent Syslog servers. Each can be configured to receive different log facility messages of varying severity. To enable a Syslog server select the checkbox next to an empty Syslog server field and assign the IP address or FQDN to the Name field. The selected facility and severity level messages will be sent to the configured (and enabled) Syslog server once you save this configuration page’s settings.


Figure 83: Syslog server configuration for Remote Logging (continued)

SYS LOG SERVER CONFIGURATION				
		Name	SysLog Facility	SysLog Severity
<input type="checkbox"/>	SysLog Server1:	<input type="text"/>	All	All
<input type="checkbox"/>	SysLog Server2:	<input type="text"/>	All	All
<input type="checkbox"/>	SysLog Server3:	<input type="text"/>	All	All
<input type="checkbox"/>	SysLog Server4:	<input type="text"/>	All	All
<input type="checkbox"/>	SysLog Server5:	<input type="text"/>	All	All
<input type="checkbox"/>	SysLog Server6:	<input type="text"/>	All	All
<input type="checkbox"/>	SysLog Server7:	<input type="text"/>	All	All
<input type="checkbox"/>	SysLog Server8:	<input type="text"/>	All	All

9.4.3 Event Log Viewer in GUI

Status > Logs > View All Logs


The router GUI lets you observe configured log messages from the Status menu. Whenever traffic through or to the router matches the settings determined in the *Tools > Log Settings > Logs Facility* or *Tools > Log Settings > Logs Configuration* pages, the corresponding log message will be displayed in this window with a timestamp.

 It is very important to have accurate system time (manually set or from a NTP server) in order to understand log messages.

Status > Logs > VPN Logs

This page displays IPsec VPN log messages as determined by the configuration settings for facility and severity. This data is useful when evaluating IPsec VPN traffic and tunnel health.

Figure 84: VPN logs displayed in GUI event viewer

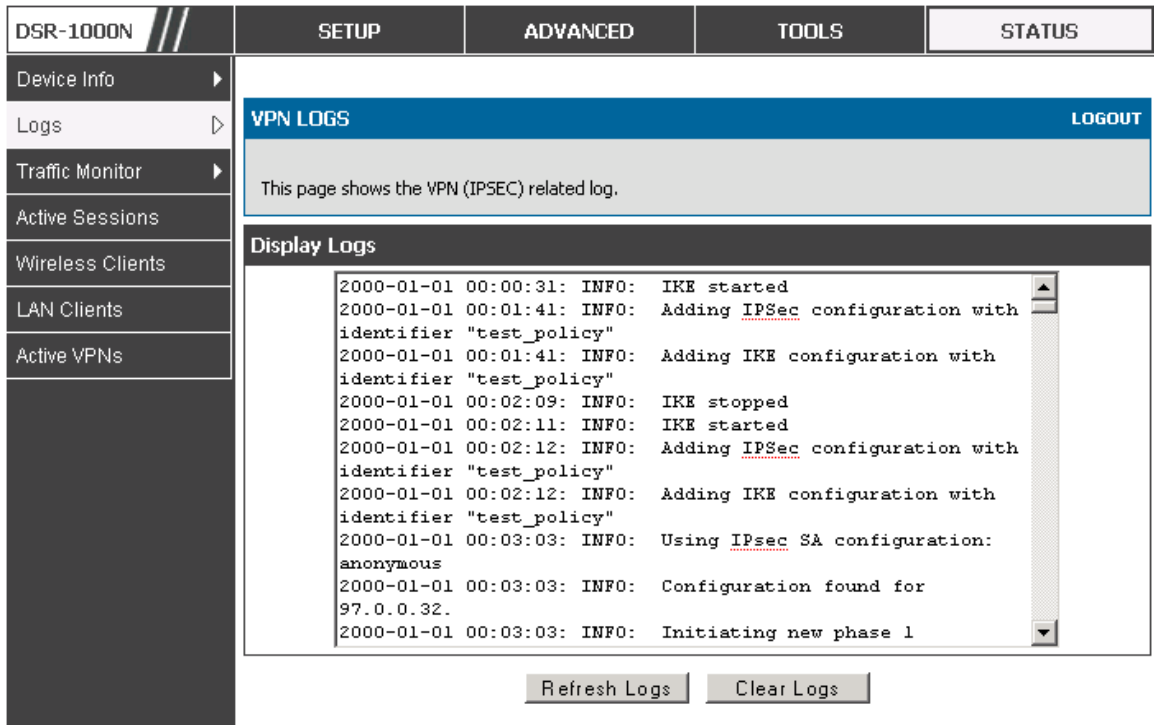

9.5 Backing up and Restoring Configuration Settings

Tools > System

You can back up the router’s custom configuration settings to restore them to a different device or the same router after some other changes. During backup, your settings are saved as a file on your host. You can restore the router's saved settings from this file as well. This page will also allow you revert to factory default settings or execute a soft reboot of the router.


IMPORTANT! During a restore operation, do NOT try to go online, turn off the router, shut down the PC, or do anything else to the router until the operation is complete. This will take approximately 1 minute. Once the LEDs are turned off, wait a few more seconds before doing anything with the router.

For backing up configuration or restoring a previously saved configuration, please follow the steps below:

1. To save a copy of your current settings, click the Backup button in the Save Current Settings option. The browser initiates an export of the configuration file and prompts to save the file on your host.

2. To restore your saved settings from a backup file, click Browse then locate the file on the host. After clicking Restore, the router begins importing the file’s saved configuration settings. After the restore, the router reboots automatically with the restored settings.
3. To erase your current settings and revert to factory default settings, click the Default button. The router will then restore configuration settings to factory defaults and will reboot automatically. (See Appendix B for the factory default parameters for the router).

Figure 85: Restoring configuration from a saved file will result in the current configuration being overwritten and a reboot

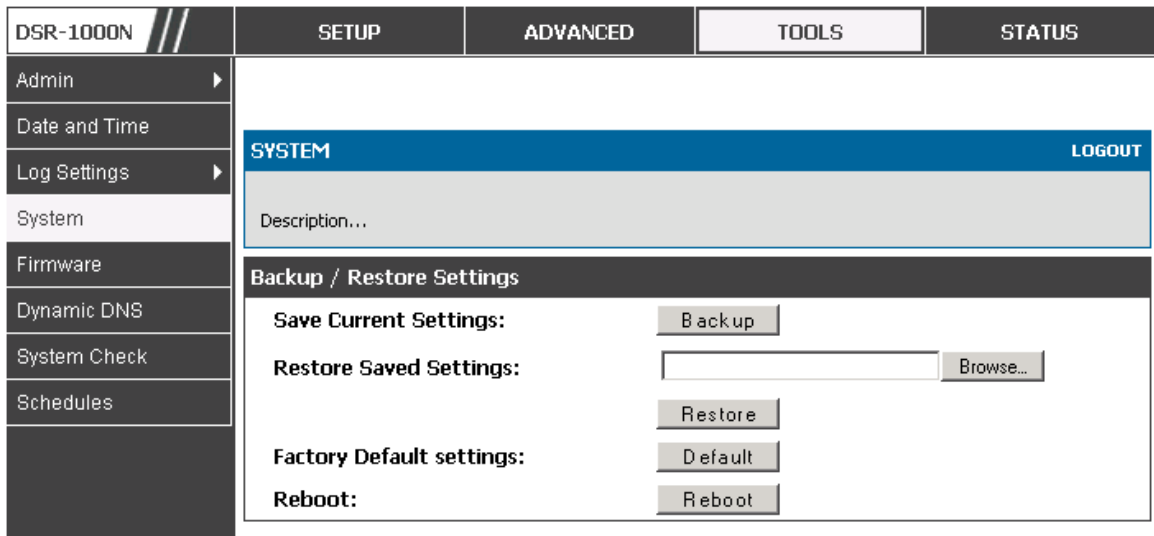

9.6 Upgrading Router Firmware

Tools > Firmware

You can upgrade to a newer software version from the Administration web page. In the Firmware Upgrade section, to upgrade your firmware, click Browse, locate and select the firmware image on your host, and click Upgrade. After the new firmware image is validated, the new image is written to flash, and the router is automatically rebooted with the new firmware. The Firmware Information and also the *Status > Device Info > Device Status* page will reflect the new firmware version.

✎ IMPORTANT! During firmware upgrade, do NOT try to go online, turn off the DSR, shut down the PC, or interrupt the process in anyway until the operation is complete. This should take only a minute or so including the reboot process. Interrupting the upgrade process at specific points when the flash is being written to may corrupt the flash memory and render the router unusable without a low-level process of restoring the flash firmware (not through the web GUI).

Figure 86: Firmware version information and upgrade option

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Admin				
Date and Time				
Log Settings	FIRMWARE LOGOUT			
System	This page allows user to upgrade/downgrade the router firmware. This page also show the information regarding firmware version and build time.			
Firmware	Firmware Information			
Firmware via USB	Firmware Version: 1.01B27			
Dynamic DNS	Firmware Date: Mon Feb 22 18:52:44 2010			
System Check	Firmware Upgrade			
Schedules	Locate & select the upgrade file: <input type="button" value="Choose File"/> No file chosen <input type="button" value="Upgrade"/>			
	Firmware Upgrade Notification Options			
	Check Now: <input type="button" value="Check Now"/>			
	Status:			

This router also supports an automated notification to determine if a newer firmware version is available for this router. By clicking the Check Now button in the notification section, the router will check a D-Link server to see if a newer firmware version for this router is available for download and update the Status field below.

9.7 Dynamic DNS Setup

Tools > Dynamic DNS

Dynamic DNS (DDNS) is an Internet service that allows routers with varying public IP addresses to be located using Internet domain names. To use DDNS, you must setup an account with a DDNS provider such as DynDNS.org, D-Link DDNS, or Oray.net.

Each configured WAN can have a different DDNS service if required. Once configured, the router will update DDNS services changes in the WAN IP address so that features that are dependent on accessing the router’s WAN via FQDN will be directed to the correct IP address. When you set up an account with a DDNS service, the host and domain name, username, password and wildcard support will be provided by the account provider.

Figure 87: Dynamic DNS configuration


DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
Admin	<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: #0070C0; color: white; padding: 2px;">DYNAMIC DNS LOGOUT</div> <p>Dynamic DNS (DDNS) is an Internet service that allows routers with varying public IP addresses to be located using Internet domain names. To use DDNS, you must setup an account with a DDNS provider such as DynDNS.com, DlinkDDNS.com or Oray.net.</p> <p style="text-align: center;"> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p> </div>			
Date and Time				
Log Settings				
System				
Firmware				
Dynamic DNS				
System Check				
Schedules				
	<div style="background-color: #333; color: white; padding: 2px;">WAN Mode</div> <p>Current WAN Mode: Use only single WAN port Configurable WAN</p>			
	<div style="background-color: #333; color: white; padding: 2px;">Dedicated WAN (DDNS Status:)</div> <p>Select the Dynamic DNS Service: <input type="text" value="None"/></p> <p>Host and Domain Name: <input type="text"/></p> <p>User Name: <input type="text" value="admin"/></p> <p>Password: <input type="password" value="xxxxxx"/></p> <p>Use wildcards: <input type="checkbox"/></p> <p>Update every 30 days: <input type="checkbox"/></p>			
	<div style="background-color: #333; color: white; padding: 2px;">Configurable WAN (DDNS Status: DDNS IS ENABLED)</div> <p>Select the Dynamic DNS Service: <input type="text" value="dyndns"/></p> <p>Host and Domain Name: <input type="text" value="test.dyndns.com"/></p> <p>User Name: <input type="text" value="dsr"/></p> <p>Password: <input type="password" value="xxx"/></p> <p>Use wildcards: <input type="checkbox"/></p> <p>Update every 30 days: <input checked="" type="checkbox"/></p>			

9.8 Using Diagnostic Tools

Tools > System Check

The router has built in tools to allow an administrator to evaluate the communication status and overall network health.

Figure 88: Router diagnostics tools available in the GUI

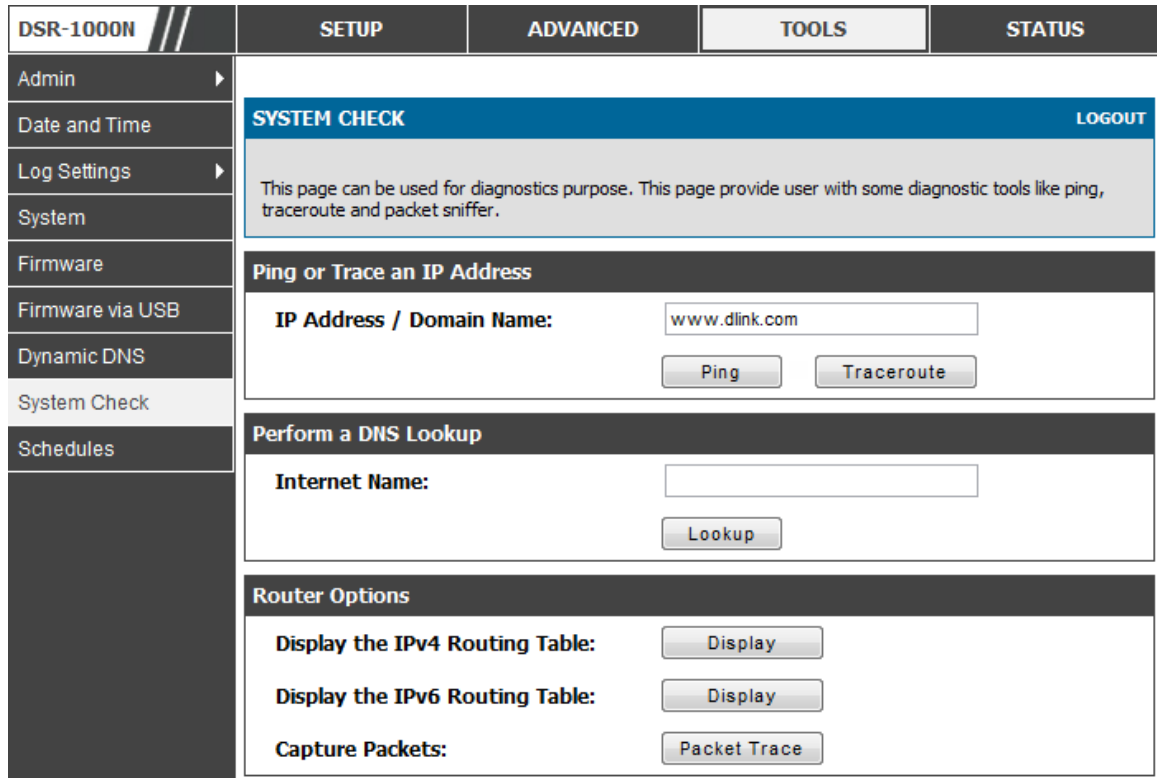

9.8.1 Ping

This utility can be used to test connectivity between this router and another device on the network connected to this router. Enter an IP address and click PING. The command output will appear indicating the ICMP echo request status.

9.8.2 Trace Route

This utility will display all the routers present between the destination IP address and this router. Up to 30 “hops” (intermediate routers) between this router and the destination will be displayed.

Figure 89: Sample traceroute output

The screenshot shows the DSR-1000N web interface. The top navigation bar includes 'DSR-1000N', 'SETUP', 'ADVANCED', 'TOOLS', and 'STATUS'. A sidebar on the left contains menu items: Admin, Date and Time, Log Settings, System, Firmware, Firmware via USB, Dynamic DNS, System Check, and Schedules. The main content area displays a red message: 'Trace Route To www.dlink.com...'. Below this is a blue header for 'SYSTEM CHECK' with a 'LOGOUT' link. A grey box contains the text: 'This page displays the output of the diagnostic command which user runs.' Underneath is a 'Command Output' section showing the kernel IP routing table. At the bottom of the main content area is a 'Back...' button.

Destination	Gateway	Genmask	Flags	Metric	Ref	Use	Iface
127.0.0.1	127.0.0.1	255.255.255.255	UGH	1	0	0	lo
192.168.2.0	*	255.255.255.0	U	0	0	0	bdg22
192.168.2.0	192.168.2.1	255.255.255.0	UG	1	0	0	bdg22
192.168.75.0	*	255.255.255.0	U	0	0	0	eth1
192.168.75.0	192.168.75.100	255.255.255.0	UG	1	0	0	eth1
97.0.0.0	*	255.0.0.0	U	0	0	0	bdg1
97.0.0.0	97.0.0.2	255.0.0.0	UG	1	0	0	bdg1
default	192.168.75.4	0.0.0.0	UG	0	0	0	eth1

9.8.3 DNS Lookup

To retrieve the IP address of a Web, FTP, Mail or any other server on the Internet, type the Internet Name in the text box and click Lookup. If the host or domain entry exists, you will see a response with the IP address. A message stating “Unknown Host” indicates that the specified Internet Name does not exist.

This feature assumes there is internet access available on the WAN link(s).

9.8.4 Router Options

The static and dynamic routes configured on this router can be shown by clicking Display for the corresponding routing table. Clicking the Packet Trace button will allow the router to capture and display traffic through the DSR between the LAN and WAN interface as well. This information is often very useful in debugging traffic and routing issues.

Chapter 10. Router Status and Statistics

10.1 System Overview

The Status page allows you to get a detailed overview of the system configuration. The settings for the wired and wireless interfaces are displayed in the DSR Status page, and then the resulting hardware resource and router usage details are summarized on the router's Dashboard.

10.1.1 Device Status

Status > Device Info > Device Status

The DSR Status page gives a summary of the router configuration settings configured in the Setup and Advanced menus. The static hardware serial number and current firmware version are presented in the General section. The WAN and LAN interface information shown on this page are based on the administrator configuration parameters. The radio band and channel settings are presented below along with all configured and active APs that are enabled on this router.

Figure 90: Device Status display

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
-----------	-------	----------	-------	--------

Device Info ▶

Logs ▶

Traffic Monitor ▶

Active Sessions

Wireless Clients

LAN Clients

Active VPNs

DEVICE STATUS LOGOUT

This page displays the current settings of the ports and displays a snapshot of the system information.

General

System Name:	DSR_router
Firmware Version:	1.01B18
Serial Number:	00000000000001

WAN1 Information

MAC Address:	00:DE:AD:20:75:01
IPv4 Address:	0.0.0.0 / 0.0.0.0
IPv6 Address:	
Wan State:	DOWN
NAT (IPv4 only):	Enabled
IPv4 Connection Type:	Dynamic IP (DHCP)
IPv6 Connection Type:	IPv6 is disabled
IPv4 Connection State:	Not Yet Connected
IPv6 Connection State:	IPv6 is disabled
Link State:	LINK DOWN
WAN Mode:	Use only single WAN port: Secondary WAN
Gateway:	0.0.0.0
Primary DNS:	0.0.0.0
Secondary DNS:	0.0.0.0

Figure 91: Device Status display (continued)

WAN2 Information			
MAC Address:	AA:BB:CC:DD:EF:01		
IPv4 Address:	0.0.0.0 / 0.0.0.0		
IPv6 Address:			
Wan State:	DOWN		
NAT (IPv4 only):	Enabled		
IPv4 Connection Type:	ThreeG		
IPv6 Connection Type:	IPv6 is disabled		
IPv4 Connection State:	Unable To Open Communication Port		
IPv6 Connection State:	IPv6 is disabled		
Link State:	LINK DOWN		
WAN Mode:	Use only single WAN port: Secondary WAN		
Gateway:	0.0.0.0		
Primary DNS:	0.0.0.0		
Secondary DNS:	0.0.0.0		
LAN Information			
MAC Address:	00:DE:AD:20:75:00		
IP Address:	176.16.2.40 / 255.255.255.0		
IPv6 Address:			
DHCP Server:	Disabled		
DHCP Relay:	Disabled		
DHCPv6 Server:	IPv6 is disabled		
Wireless LAN			
Operating Frequency:	2.4GHz		
Mode:	N/G-Mixed		
Channel:	Auto		
Available Access Points			
SSID	SECURITY	ENCRYPTION	AUTHENTICATION
admin	WPA+WPA2	TKIP+CCMP	PSK

10.1.2 Resource Utilization

Status > Device Info > Dashboard

The Dashboard page presents hardware and usage statistics. The CPU and Memory utilization is a function of the available hardware and current configuration and traffic through the router. Interface statistics for the wired connections (LAN, WAN1, WAN2/DMZ, VLANs) provide indication of packets through and packets dropped by the interface. Click refresh to have this page retrieve the most current statistics.

Figure 92: Resource Utilization statistics

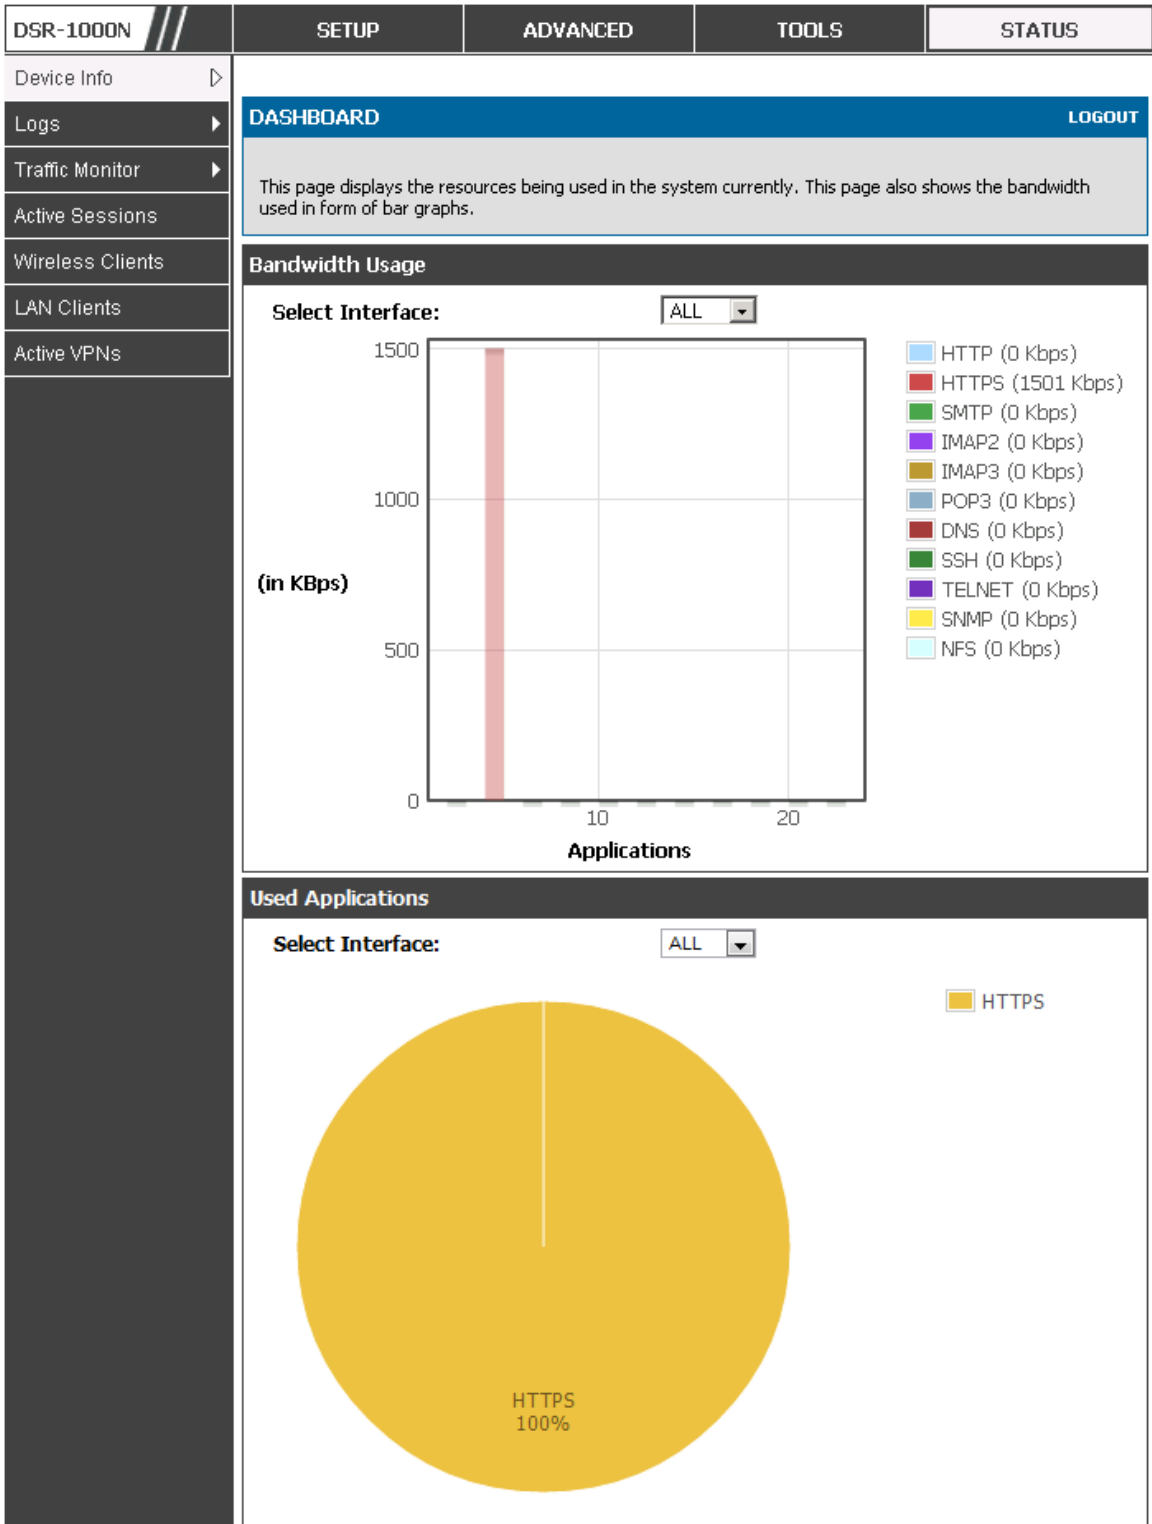


Figure 93: Resource Utilization data (continued)

CPU Utilization	
CPU usage by user:	27 %
CPU usage by kernel:	11 %
CPU idle:	62 %
CPU waiting for IO:	0 %

Memory Utilization	
Total Memory:	247908 KB
Used Memory:	172848 KB
Free Memory:	75060 KB
Cached Memory:	30840 KB
Buffer Memory:	7800 KB

Interface (LAN)	
Incoming Packets: :	49900
Outgoing Packets:	5259
Dropped In Packets:	0
Dropped Out Packets:	0

Interface (WAN1)	
Incoming Packets: :	0
Outgoing Packets:	8
Dropped In Packets:	0
Dropped Out Packets:	0

Interface (DMZ/WAN2)	
Incoming Packets:	0
Outgoing Packets:	10
Dropped In Packets:	0
Dropped Out Packets:	0

Figure 94: Resource Utilization data (continued)

Interface (VLAN)	
Incoming Packets:	
Outgoing Packets:	
Dropped In Packets:	
Dropped Out Packets:	
Delayed Packets:	
ICMP Received:	9
Frag Received:	
Frag Reass OK:	
Frag Reass fail:	
Active VPN Tunnels:	0
Active VLANs:	2
Active Interfaces:	6
Active Connection:	

10.2 Traffic Statistics

10.2.1 Wired Port Statistics

Status > Traffic Monitor > Device Statistics

Detailed transmit and receive statistics for each physical port are presented here. Each interface (WAN1, WAN2/DMZ, LAN, and VLANs) have port specific packet level information provided for review. Transmitted/received packets, port collisions, and the cumulating bytes/sec for transmit/receive directions are provided for each interface along with the port up time. If you suspect issues with any of the wired ports, this table will help diagnose uptime or transmit level issues with the port.

The statistics table has auto-refresh control which allows display of the most current port level data at each page refresh. The default auto-refresh for this page is 10 seconds.

Figure 95: Physical port statistics

The page will auto-refresh in 8 seconds

DEVICE STATISTICS LOGOUT

This page shows the Rx/Tx packet and byte count for all the system interfaces. It also shows the up time for all the interfaces.

System up Time : 0 days, 1 hours, 11 minutes, 56 seconds

Port Statistics						
Port	Tx Pkts	Rx Pkts	Collisions	Tx B/s	Rx B/s	Up time
Dedicated WAN	96	0	0	0	0	0 Days 01:10:22
Configurable Port (WAN)	8	0	0	0	0	0 Days 01:09:55
LAN	12014	10292	0	0	0	0 Days 01:09:55
LAN22				0	0	Not Yet Available

Poll Interval: (Seconds)

10.2.2 Wireless Statistics

Status > Traffic Monitor > Wireless Statistics

The Wireless Statistics tab displays the incrementing traffic statistics for each enabled access point. This page will give a snapshot of how much traffic is being transmitted over each wireless link. If you suspect that a radio or VAP may be down, the details on this page would confirm if traffic is being sent and received through the VAP.

The clients connected to a particular AP can be viewed by using the Status Button on the list of APs in the *Setup > Wireless > Access Points* page. Traffic statistics are shown for that individual AP, as compared to the summary stats for each AP on this Statistics page. The poll interval (the refresh rate for the statistics) can be modified to view more frequent traffic and collision statistics.

Figure 96: AP specific statistics

DSR-1000N
SETUP
ADVANCED
TOOLS
STATUS

- Device Info
- Logs
- Traffic Monitor
- Active Sessions
- Wireless Clients
- LAN Clients
- Active VPNs

The page will auto-refresh in 1 seconds

WIRELESS STATISTICS
LOGOUT

Wireless traffic statistics for all configured access points are displayed in this table. The receive (rx) and transmit (tx) data is shown per configured AP.

Wireless Statistics											
AP Name	Radio	Packets		Bytes		Errors		Dropped		Multicast	Collisions
		rx	tx	rx	tx	rx	tx	rx	tx		
ap1	1	0	0	0	0	0	0	0	173	0	0
Open_guests	1	0	0	0	0	0	0	0	127	0	0

Poll Interval: (Seconds)

10.3 Active Connections

10.3.1 Sessions through the Router

Status > Active Sessions

This table lists the active internet sessions through the router’s firewall. The session’s protocol, state, local and remote IP addresses are shown.

Figure 97: List of current Active Firewall Sessions

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
-----------	-------	----------	-------	--------

Device Info ▶

Logs ▶

Traffic Monitor ▶

Active Sessions

Wireless Clients

LAN Clients

Active VPNs

ACTIVE SESSIONS LOGOUT

This page displays a list of active sessions on your router.

Active Sessions			
Local	Internet	Protocol	State
97.0.0.5:3465	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3525	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3491	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3459	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3487	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3408	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3493	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3431	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3479	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3515	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3501	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3527	97.0.0.2:443	tcp	CLOSE
192.168.75.100:500	97.0.0.32:500	udp	none
97.0.0.5:3427	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3519	97.0.0.2:443	tcp	CLOSE
97.0.0.5:3507	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3543	97.0.0.2:443	tcp	CLOSE
97.0.0.5:3437	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3409	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3497	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3541	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3489	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3482	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3535	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3509	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3467	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3415	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3450	97.0.0.2:443	tcp	TIME_WAIT
97.0.0.5:3499	97.0.0.2:443	tcp	TIME_WAIT

10.3.2 Wireless Clients

Status > Wireless Clients

The clients connected to a particular AP can be viewed on this page. Connected clients are sorted by the MAC address and indicate the security parameters used by the wireless link, as well as the time connected to the corresponding AP.

The statistics table has auto-refresh control which allows display of the most current port level data at each page refresh. The default auto-refresh for this page is 10 seconds.

Figure 98: List of connected 802.11 clients per AP

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS
-----------	-------	----------	-------	--------

The page will auto-refresh in 4 seconds

WIRELESS CLIENTS LOGOUT

This list identifies the wireless clients (or stations) currently connected to the Access Points configured and enabled on this device.

Connected Clients						
AP Name	MAC Address	Radio	Security	Encryption	Authentication	Time Connected

Poll Interval: (Seconds)

10.3.3 LAN Clients

Status > LAN Clients

The LAN clients to the router are identified by an ARP scan through the LAN switch. The NetBios name (if available), IP address and MAC address of discovered LAN hosts are displayed.

Figure 99: List of LAN hosts

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS						
Device Info										
Logs	LAN CLIENTS LOGOUT									
Traffic Monitor	This page displays a list of LAN clients connected to the router.									
Active Sessions	List of LAN Clients									
Wireless Clients	<table border="1"> <thead> <tr> <th>Name</th> <th>IP Address</th> <th>MAC Address</th> </tr> </thead> <tbody> <tr> <td>EITHSTINTEL645</td> <td>97.0.0.5</td> <td>00:0F:1F:8E:B6:36</td> </tr> </tbody> </table>				Name	IP Address	MAC Address	EITHSTINTEL645	97.0.0.5	00:0F:1F:8E:B6:36
Name	IP Address	MAC Address								
EITHSTINTEL645	97.0.0.5	00:0F:1F:8E:B6:36								
LAN Clients										
Active VPNs										

10.3.4 Active VPN Tunnels

Status > Active VPNs

You can view and change the status (connect or drop) of the router’s IPsec security associations. Here, the active IPsec SAs (security associations) are listed along with the traffic details and tunnel state. The traffic is a cumulative measure of transmitted/received packets since the tunnel was established.

If a VPN policy state is “IPsec SA Not Established”, it can be enabled by clicking the Connect button of the corresponding policy. The Active IPsec SAs table displays a list of active IPsec SAs. Table fields are as follows.

Field	Description
Policy Name	IKE or VPN policy associated with this SA.
Endpoint	IP address of the remote VPN gateway or client.
Tx (KB)	Kilobytes of data transmitted over this SA.
Tx (Packets)	Number of IP packets transmitted over this SA.
State	Status of the SA for IKE policies: Not Connected or IPsec SA Established.

Figure 100: List of current Active VPN Sessions

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS		
Device Info	The page will auto-refresh in 7 seconds					
Logs	ACTIVE VPN LOGOUT					
Traffic Monitor	This page displays the active VPN connections, IPSEC as well as SSL.					
Active Sessions	Active IPsec SAs					
Wireless Clients	Policy Name	Endpoint	tx (KB)	tx (Packets)	State	Action
LAN Clients	test_policy	97.0.0.32	0.00	0	IPsec SA Not Established	<input type="button" value="Connect"/>
Active VPNs	test_manual_pol	97.0.0.58	0.00	0	IPsec SA Not Established	<input type="button" value="Connect"/>
	Active SSL VPN Connections					
	User Name	IP Address	Local PPP Interface	Peer PPP Interface IP	Connect Status	
	Poll Interval: <input type="text" value="10"/> (Seconds) <input type="button" value="Start"/> <input type="button" value="Stop"/>					

All active SSL VPN connections, both for VPN tunnel and VPN Port forwarding, are displayed on this page as well. Table fields are as follows.

Field	Description
User Name	The SSL VPN user that has an active tunnel or port forwarding session to this router.
IP Address	IP address of the remote VPN client.
Local PPP Interface	The interface (WAN1 or WAN2) through which the session is active.
Peer PPP Interface IP	The assigned IP address of the virtual network adapter.
Connect Status	Status of the SSL connection between this router and the remote VPN client: Not Connected or Connected.

Chapter 11. Trouble Shooting

11.1 Internet connection

Symptom: You cannot access the router's web-configuration interface from a PC on your LAN.

Recommended action:

1. Check the Ethernet connection between the PC and the router.
2. Ensure that your PC's IP address is on the same subnet as the router. If you are using the recommended addressing scheme, your PC's address should be in the range 192.168.10.2 to 192.168.10.254.
3. Check your PC's IP address. If the PC cannot reach a DHCP server, some versions of Windows and Mac OS generate and assign an IP address. These auto-generated addresses are in the range 169.254.x.x. If your IP address is in this range, check the connection from the PC to the firewall and reboot your PC.
4. If your router's IP address has changed and you don't know what it is, reset the router configuration to factory defaults (this sets the firewall's IP address to 192.168.10.1).
5. If you do not want to reset to factory default settings and lose your configuration, reboot the router and use a packet sniffer (such as Ethereal™) to capture packets sent during the reboot. Look at the Address Resolution Protocol (ARP) packets to locate the router's LAN interface address.
6. Launch your browser and ensure that Java, JavaScript, or ActiveX is enabled. If you are using Internet Explorer, click Refresh to ensure that the Java applet is loaded. Close the browser and launch it again.
7. Ensure that you are using the correct login information. The factory default login name is admin and the password is password. Ensure that CAPS LOCK is off when entering this information.

Symptom: Router does not save configuration changes.

Recommended action:

1. When entering configuration settings, click Apply before moving to another menu or tab; otherwise your changes are lost.
2. Click Refresh or Reload in the browser. Your changes may have been made, but the browser may be caching the old configuration.

Symptom: Router cannot access the Internet.

Possible cause: If you use dynamic IP addresses, your router may not have requested an IP address from the ISP.

Recommended action:

1. Launch your browser and go to an external site such as www.google.com.
2. Access the firewall's configuration main menu at <http://192.168.10.1>.
3. Select **Monitoring > Router Status**.
4. Ensure that an IP address is shown for the WAN port. If 0.0.0.0 is shown, your firewall has not obtained an IP address from your ISP. See the next symptom.

Symptom: Router cannot obtain an IP address from the ISP.

Recommended action:

1. Turn off power to the cable or DSL modem.
2. Turn off the router.
3. Wait 5 minutes, and then reapply power to the cable or DSL modem.
4. When the modem LEDs indicate that it has resynchronized with the ISP, reapply power to the router. If the router still cannot obtain an ISP address, see the next symptom.

Symptom: Router still cannot obtain an IP address from the ISP.

Recommended action:

1. Ask your ISP if it requires a login program — PPP over Ethernet (PPPoE) or some other type of login.
2. If yes, verify that your configured login name and password are correct.
3. Ask your ISP if it checks for your PC's hostname.
4. If yes, select **Network Configuration > WAN Settings > Ethernet ISP Settings** and set the account name to the PC hostname of your ISP account.
5. Ask your ISP if it allows only one Ethernet MAC address to connect to the Internet, and therefore checks for your PC's MAC address.
6. If yes, inform your ISP that you have bought a new network device, and ask them to use the firewall's MAC address.
7. Alternatively, select **Network Configuration > WAN Settings > Ethernet ISP Settings** and configure your router to spoof your PC's MAC address.

Symptom: Router can obtain an IP address, but PC is unable to load Internet pages.

Recommended action:

1. Ask your ISP for the addresses of its designated Domain Name System (DNS) servers. Configure your PC to recognize those addresses. For details, see your operating system documentation.
2. On your PC, configure the router to be its TCP/IP gateway.

11.2 Date and time

Symptom: Date shown is January 1, 1970.

Possible cause: The router has not yet successfully reached a network time server (NTS).

Recommended action:

1. If you have just configured the router, wait at least 5 minutes, select *Administration > Time Zone*, and recheck the date and time.
2. Verify your Internet access settings.

Symptom: Time is off by one hour.

Possible cause: The router does not automatically adjust for Daylight Savings Time.

Recommended action:

1. Select *Administration > Time Zone* and view the current date and time settings.
2. Click to check or uncheck “Automatically adjust for Daylight Savings Time”, then click Apply.

11.3 Pinging to Test LAN Connectivity

Most TCP/IP terminal devices and firewalls contain a ping utility that sends an ICMP echo-request packet to the designated device. The DSR responds with an echo reply. Troubleshooting a TCP/IP network is made very easy by using the ping utility in your PC or workstation.

11.3.1 Testing the LAN path from your PC to your router

1. From the PC’s Windows toolbar, select Start > Run.
2. Type ping <IP_address> where <IP_address> is the router’s IP address. Example: ping 192.168.10.1.
3. Click OK.

4. Observe the display:
 - If the path is working, you see this message sequence:
Pinging <IP address> with 32 bytes of data
Reply from <IP address>: bytes=32 time=NN ms TTL=xxx
 - If the path is not working, you see this message sequence:
Pinging <IP address> with 32 bytes of data
Request timed out
5. If the path is not working, Test the physical connections between PC and router
 - If the LAN port LED is off, go to the “LED displays” section on page B-1 and follow instructions for “LAN or Internet port LEDs are not lit.”
 - Verify that the corresponding link LEDs are lit for your network interface card and for any hub ports that are connected to your workstation and firewall.
6. If the path is still not up, test the network configuration:
 - Verify that the Ethernet card driver software and TCP/IP software are installed and configured on the PC.
 - Verify that the IP address for the router and PC are correct and on the same subnet.

11.3.2 Testing the LAN path from your PC to a remote device

1. From the PC's Windows toolbar, select Start > Run.
2. Type ping -n 10 <IP_address> where -n 10 specifies a maximum of 10 tries and <IP address> is the IP address of a remote device such as your ISP's DNS server. Example:
ping -n 10 10.1.1.1.
3. Click OK and then observe the display (see the previous procedure).
4. If the path is not working, do the following:
 - Check that the PC has the IP address of your firewall listed as the default gateway. (If the IP configuration of your PC is assigned by DHCP, this information is not visible in your PC's Network Control Panel.)

- Verify that the network (subnet) address of your PC is different from the network address of the remote device.
- Verify that the cable or DSL modem is connected and functioning.
- Ask your ISP if it assigned a hostname to your PC.

If yes, select *Network Configuration > WAN Settings > Ethernet ISP Settings* and enter that hostname as the ISP account name.

- Ask your ISP if it rejects the Ethernet MAC addresses of all but one of your PCs.

Many broadband ISPs restrict access by allowing traffic from the MAC address of only your broadband modem; but some ISPs additionally restrict access to the MAC address of just a single PC connected to that modem. If this is the case, configure your firewall to clone or spoof the MAC address from the authorized PC.

11.4 Restoring factory-default configuration settings

To restore factory-default configuration settings, do either of the following:

1. Do you know the account password and IP address?
 - If yes, select *Administration > Settings Backup & Upgrade* and click default.
 - If no, do the following:

On the rear panel of the router, press and hold the Reset button about 10 seconds, until the test LED lights and then blinks.

Release the button and wait for the router to reboot.

2. If the router does not restart automatically; manually restart it to make the default settings effective.
3. After a restore to factory defaults —whether initiated from the configuration interface or the Reset button — the following settings apply:
 - LAN IP address: 192.168.10.1
 - Username: admin
 - Password: password
 - DHCP server on LAN: enabled
 - WAN port configuration: Get configuration via DHCP

Chapter 12. Credits

Microsoft, Windows are registered trademarks of Microsoft Corp.

Linux is a registered trademark of Linus Torvalds.

UNIX is a registered trademark of The Open Group.



Appendix A. Glossary

ARP	Address Resolution Protocol. Broadcast protocol for mapping IP addresses to MAC addresses.
CHAP	Challenge-Handshake Authentication Protocol. Protocol for authenticating users to an ISP.
DDNS	Dynamic DNS. System for updating domain names in real time. Allows a domain name to be assigned to a device with a dynamic IP address.
DHCP	Dynamic Host Configuration Protocol. Protocol for allocating IP addresses dynamically so that addresses can be reused when hosts no longer need them.
DNS	Domain Name System. Mechanism for translating H.323 IDs, URLs, or e-mail IDs into IP addresses. Also used to assist in locating remote gatekeepers and to map IP addresses to hostnames of administrative domains.
FQDN	Fully qualified domain name. Complete domain name, including the host portion. Example: serverA.companyA.com.
FTP	File Transfer Protocol. Protocol for transferring files between network nodes.
HTTP	Hypertext Transfer Protocol. Protocol used by web browsers and web servers to transfer files.
IKE	Internet Key Exchange. Mode for securely exchanging encryption keys in ISAKMP as part of building a VPN tunnel.
IPsec	IP security. Suite of protocols for securing VPN tunnels by authenticating or encrypting IP packets in a data stream. IPsec operates in either transport mode (encrypts payload but not packet headers) or tunnel mode (encrypts both payload and packet headers).
ISAKMP	Internet Key Exchange Security Protocol. Protocol for establishing security associations and cryptographic keys on the Internet.
ISP	Internet service provider.
MAC Address	Media-access-control address. Unique physical-address identifier attached to a network adapter.
MTU	Maximum transmission unit. Size, in bytes, of the largest packet that can be passed on. The MTU for Ethernet is a 1500-byte packet.
NAT	Network Address Translation. Process of rewriting IP addresses as a packet passes through a router or firewall. NAT enables multiple hosts on a LAN to access the Internet using the single public IP address of the LAN's gateway router.
NetBIOS	Microsoft Windows protocol for file sharing, printer sharing, messaging, authentication, and name resolution.
NTP	Network Time Protocol. Protocol for synchronizing a router to a single clock on the network, known as the clock master.
PAP	Password Authentication Protocol. Protocol for authenticating users to a remote access server or ISP.

PPPoE	Point-to-Point Protocol over Ethernet. Protocol for connecting a network of hosts to an ISP without the ISP having to manage the allocation of IP addresses.
PPTP	Point-to-Point Tunneling Protocol. Protocol for creation of VPNs for the secure transfer of data from remote clients to private servers over the Internet.
RADIUS	Remote Authentication Dial-In User Service. Protocol for remote user authentication and accounting. Provides centralized management of usernames and passwords.
RSA	Rivest-Shamir-Adleman. Public key encryption algorithm.
TCP	Transmission Control Protocol. Protocol for transmitting data over the Internet with guaranteed reliability and in-order delivery.
UDP	User Data Protocol. Protocol for transmitting data over the Internet quickly but with no guarantee of reliability or in-order delivery.
VPN	Virtual private network. Network that enables IP traffic to travel securely over a public TCP/IP network by encrypting all traffic from one network to another. Uses tunneling to encrypt all information at the IP level.
WINS	Windows Internet Name Service. Service for name resolution. Allows clients on different IP subnets to dynamically resolve addresses, register themselves, and browse the network without sending broadcasts.
XAUTH	IKE Extended Authentication. Method, based on the IKE protocol, for authenticating not just devices (which IKE authenticates) but also users. User authentication is performed after device authentication and before IPsec negotiation.

Appendix B. Factory Default Settings

Feature	Description	Default Setting
Device login	User login URL	http://192.168.10.1
	User name (case sensitive)	admin
	Login password (case sensitive)	admin
Internet Connection	WAN MAC address	Use default address
	WAN MTU size	1500
	Port speed	Autosense
Local area network (LAN)	IP address	192.168.10.1
	IPv4 subnet mask	255.255.255.0
	RIP direction	None
	RIP version	Disabled
	RIP authentication	Disabled
	DHCP server	Enabled
	DHCP starting IP address	192.168.10.2
	DHCP ending IP address	192.168.10.100
	Time zone	GMT
	Time zone adjusted for Daylight Saving Time	Disabled
	SNMP	Disabled
	Remote management	Disabled
Firewall	Inbound communications from the Internet	Disabled (except traffic on port 80, the HTTP port)
	Outbound communications to the Internet	Enabled (all)
	Source MAC filtering	Disabled
	Stealth mode	Enabled

Appendix C. Standard Services Available for Port Forwarding & Firewall Configuration

ANY	ICMP-TYPE-8	RLOGIN
AIM	ICMP-TYPE-9	RTELNET
BGP	ICMP-TYPE-10	RTSP:TCP
BOOTP_CLIENT	ICMP-TYPE-11	RTSP:UDP
BOOTP_SERVER	ICMP-TYPE-13	SFTP
CU-SEEME:UDP	ICQ	SMTP
CU-SEEME:TCP	IMAP2	SNMP:TCP
DNS:UDP	IMAP3	SNMP:UDP
DNS:TCP	IRC	SNMP-TRAPS:TCP
FINGER	NEWS	SNMP-TRAPS:UDP
FTP	NFS	SQL-NET
HTTP	NNTP	SSH:TCP
HTTPS	PING	SSH:UDP
ICMP-TYPE-3	POP3	STRMWORKS
ICMP-TYPE-4	PPTP	TACACS
ICMP-TYPE-5	RCMD	TELNET
ICMP-TYPE-6	REAL-AUDIO	TFTP
ICMP-TYPE-7	REXEC	VDOLIVE

Appendix D. Log Output Reference

Facility: System (Networking)

Log Message	Severity	Log Message	Severity
DBUpdate event: Table: %s opCode:%d rowId:%d	DEBUG	BridgeConfig: too few arguments to command %s	ERROR
networkIntable.txt not found	DEBUG	BridgeConfig: too few arguments to command %s	ERROR
sqlite3QueryResGet failed	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
Interface is already deleted in bridge	DEBUG	ddnsDisable failed	ERROR
removing %s from bridge %s... %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
adding %s to bridge %s... %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
stopping bridge...	DEBUG	ddnsDisable failed	ERROR
stopping bridge...	DEBUG	failed to call ddns enable	ERROR
stopping bridge...	DEBUG	ddnsDisable failed	ERROR
%s:DBUpdate event: Table: %s opCode:%d rowId:%d	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
Wan is not up	DEBUG	Error in executing DB update handler	ERROR
%s:DBUpdate event: Table: %s opCode:%d rowId:%d	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
doDNS:failed	DEBUG	Illegal invocation of ddnsView (%s)	ERROR
doDNS:failed	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
doDNS:Result = FAILED	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
doDNS:Result SUCCESS	DEBUG	ddns: SQL error: %s	ERROR
Write Old Entry: %s %s %s: to %s	DEBUG	Illegal operation interface got deleted	ERROR
Write New Entry: %s %s #%s : to %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
Write Old Entry: %s %s %s: to %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
Write New Entry: %s %s #%s : to %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
ifStaticMgmtDBUpdateHandler: returning with "	DEBUG	ddnsDisable failed	ERROR
nimfLinkStatusGet: buffer: \	DEBUG	ddns: SQL error: %s	ERROR
nimfLinkStatusGetErr: returning with status: %d	DEBUG	Failed to call ddns enable	ERROR
nimfAdvOptSetWrap: current Mac Option: %d	DEBUG	ddns: SQL error: %s	ERROR
nimfAdvOptSetWrap: current Port Speed Option: %d	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
nimfAdvOptSetWrap: current Mtu Option: %d	DEBUG	Failed to call ddns enable	ERROR
nimfAdvOptSetWrap: looks like we are reconnecting. "	DEBUG	ddns: SQL error: %s	ERROR
nimfAdvOptSetWrap: Mtu Size: %d	DEBUG	ddnsDisable failed	ERROR
nimfAdvOptSetWrap: NIMF table is %s	DEBUG	ddns: SQL error: %s	ERROR
nimfAdvOptSetWrap:WAN_MODE TRIGGER	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
nimfAdvOptSetWrap: MTU: %d	DEBUG	Failed to call ddns enable	ERROR
nimfAdvOptSetWrap: MacAddress: %s	DEBUG	ddns: SQL error: %s	ERROR
nimfAdvOptSetWrap: old Mtu Flag: %d	DEBUG	ddnsDisable failed	ERROR

nimfAdvOptSetWrap: user has changed MTU option	DEBUG	ddns: SQL error: %s	ERROR
nimfAdvOptSetWrap: MTU: %d	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
nimfAdvOptSetWrap: old MTU size: %d	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
nimfAdvOptSetWrap: old Port Speed Option: %d	DEBUG	ddnsDisable failed	ERROR
nimfAdvOptSetWrap: old Mac Address Option: %d	DEBUG	ddns: SQL error: %s	ERROR
nimfAdvOptSetWrap: MacAddress: %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
Setting LED [%d]:[%d] For %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
l2tpEnable: command string: %s	DEBUG	ddnsDisable failed	ERROR
nimfAdvOptSetWrap: handling reboot scenario	DEBUG	failed to call ddns enable	ERROR
nimfAdvOptSetWrap: INDICATOR = %d	DEBUG	ddns: SQL error: %s	ERROR
nimfAdvOptSetWrap: UpdateFlag: %d	DEBUG	ddnsDisable failed	ERROR
nimfAdvOptSetWrap: returning with status: %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
nimfGetUpdateMacFlag: MacTable Flag is: %d	DEBUG	Error in executing DB update handler	ERROR
nimfMacGet: Mac Option changed	DEBUG	Failed to open the resolv.conf file. Exiting./n	ERROR
nimfMacGet: Update Flag: %d	DEBUG	Could not write to the resolv.conf file. Exiting.	ERROR
nimfMacGet: MacAddress: %s	DEBUG	Error opening the lanUptime File	ERROR
nimfMacGet: MacAddress: %s	DEBUG	Error Opening the lanUptime File.	ERROR
nimfMacGet: MacAddress: %s	DEBUG	failed to open %s	ERROR
nimfMacGet: MacAddress: %s	DEBUG	failed to open %s	ERROR
nimfMacGet: MacAddress: %s	DEBUG	failed to query networkInterface table	ERROR
nimfMacGet:Mac option Not changed \	DEBUG	failed to query networkInterface table	ERROR
nimfMacGet: MacAddress: %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
nimfMacGet: MacAddress: %s	DEBUG	failed to enable IPv6 forwarding	ERROR
nimfMacGet: MacAddress: %s	DEBUG	failed to set capabilities on the "	ERROR
nimfMacGet: returning with status: %s	DEBUG	failed to enable IPv6 forwarding	ERROR
Now in enableing LanBridge function	DEBUG	failed to set capabilities on the "	ERROR
sucessfully executed the command %s	DEBUG	failed to disable IPv6 forwarding	ERROR
Now in disabling LanBridge function	DEBUG	failed to set capabilities on the "	ERROR
sucessfully executed the command %s	DEBUG	failed to open %s	ERROR
configPortTblHandler:Now we are in Sqlite Update "	DEBUG	Could not create ISATAP Tunnel	ERROR
The Old Configuration of ConfiPort was:%s	DEBUG	Could not destroy ISATAP Tunnel	ERROR
The New Configuration of ConfiPort was:%s	DEBUG	Could not configure ISATAP Tunnel	ERROR
The user has deselected the configurable port	DEBUG	Could not de-configure ISATAP Tunnel	ERROR
failed query %s	DEBUG	nimfStatusUpdate: updating NimfStatus failed	ERROR
failed query %s	DEBUG	nimfStatusUpdate: updating NimfStatus failed	ERROR
failed query %s	DEBUG	nimfLinkStatusGet: determinig link's status failed	ERROR
%s:DBUpdate event: Table: %s opCode:%d rowId:%d	DEBUG	nimfLinkStatusGet: opening status file failed	ERROR

%s:DBUpdate event: Table: %s opCode:%d rowId:%d	DEBUG	Failed to commit	ERROR
%s:%d SIP ENABLE: %s	DEBUG	ifStatusDBUpdate: Failed to begin "	ERROR
sipTblHandler:failed to update ifStatic	DEBUG	%s: SQL error: %s	ERROR
sipTblHandler:failed to update Configport	DEBUG	%s: Failed to commit "	ERROR
%s:%d SIP DISABLE: %s	DEBUG	nimfNetfFaceTblHandler: unable to get LedPinId	ERROR
%s:%d SIP SET CONF: %s	DEBUG	nimfNetfFaceTblHandler: unable to get LedPinId	ERROR
Failed to open %s: %s	DEBUG	nimfNetfFaceTblHandler: unable to get LedPinId	ERROR
Failed to start sipalg	DEBUG	%s: unable to kill dhclient	ERROR
Failed to stop sipalg	DEBUG	nimfAdvOptSetWrap: unable to get current Mac Option	ERROR
Failed to get config info	DEBUG	nimfAdvOptSetWrap: unable to get current Port "	ERROR
Network Mask: 0x%x	DEBUG	nimfAdvOptSetWrap: unable to get current MTU Option	ERROR
RTP DSCP Value: 0x%x	DEBUG	nimfAdvOptSetWrap: error getting Mac Address from "	ERROR
Need more arguments	DEBUG	nimfAdvOptSetWrap: unable to get the MTU	ERROR
Invalid lanaddr	DEBUG	nimfAdvOptSetWrap: error setting interface advanced "	ERROR
Invalid lanmask	DEBUG	nimfAdvOptSetWrap: error getting MTU size	ERROR
Invalid option	DEBUG	nimfAdvOptSetWrap: unable to get Mac Address	ERROR
Failed to set config info	DEBUG	nimfAdvOptSetWrap: error setting interface advanced "	ERROR
Unknown option	DEBUG	nimfAdvOptSetWrap: failed to get old connectiontype	ERROR
sshdTblHandler	DEBUG	nimfAdvOptSetWrap: old connection type is: %s	ERROR
pPort: %s	DEBUG	nimfAdvOptSetWrap: failed to get old MTU Option	ERROR
pProtocol: %s	DEBUG	nimfAdvOptSetWrap: error getting MTU size	ERROR
pListerAddr: %s	DEBUG	nimfOldFieldValueGet: failed to get old "	ERROR
pKeyBits: %s	DEBUG	nimfOldFieldValueGet: user has changed MTU size	ERROR
pRootEnable: %s	DEBUG	nimfAdvOptSetWrap: failed to get old Port Speed "	ERROR
pRsaEnable: %s	DEBUG	nimfAdvOptSetWrap: user has changed Port Speed	ERROR
pDsaEnable: %s	DEBUG	nimfAdvOptSetWrap: failed to get old Mac Address "	ERROR
pPassEnable: %s	DEBUG	nimfAdvOptSetWrap: user has changed Mac Address "	ERROR
pEmptyPassEnable: %s	DEBUG	nimfAdvOptSetWrap: unable to get Mac Address	ERROR
pSftpEnable: %s	DEBUG	nimfAdvOptSetWrap:Failed to RESET the flag	ERROR
pScpEnable: %s	DEBUG	nimfAdvOptSetWrap: setting advanced options failed	ERROR
pSshdEnable: %s	DEBUG	nimfAdvOptSetWrap: interface advanced options applied	ERROR

pPrivSep: %s	DEBUG	nimfGetUpdateMacFlag: unable to get Flag from MacTable	ERROR
%s:DBUpdate event: Table: %s opCode:%d rowId:%d	DEBUG	nimfMacGet: Updating MAC address failed	ERROR
Re-Starting sshd daemon....	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
sshd re-started successfully.	DEBUG	error executing the command %s	ERROR
sshd stopped .	DEBUG	error executing the command %s	ERROR
failed query %s	DEBUG	error executing the command %s	ERROR
vlan disabled, not applying vlan configuration..	DEBUG	disableLan function is failed to disable ConfigPort"	ERROR
failed query %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
failed query %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
no ports present in this vlanId %d	DEBUG	Unable to Disable configurable port from	ERROR
failed query %s	DEBUG	configPortTbIHandler has failed	ERROR
vlan disabled, not applying vlan configuration..	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
disabling vlan	DEBUG	Error in executing DB update handler	ERROR
enabling vlan	DEBUG	sqlite3QueryResGet failed	ERROR
vlan disabled, not applying vlan configuration..	DEBUG	Failed to execute switchConfig for port\	ERROR
no ports present in this vlanId %d	DEBUG	Failed to execute switchConfig for port enable	ERROR
failed query %s	DEBUG	Failed to execute ifconfig for port enable	ERROR
vlan disabled, not applying vlan configuration..	DEBUG	Failed to execute ethtool for\	ERROR
removing %s from bridge%s... %s	DEBUG	Failed to execute switchConfig for port disable	ERROR
adding %s to bridge%d... %s	DEBUG	Failed to execute ifconfig for port disable	ERROR
restarting bridge...	DEBUG	sqlite3QueryResGet failed	ERROR
[switchConfig] Ignoring event on port number %d	DEBUG	sqlite3_mprintf failed	ERROR
restarting bridge...	DEBUG	sqlite3QueryResGet failed	ERROR
executing %s ... %s	DEBUG	Failed to execute switchConfig for port mirroring	ERROR
removing %s from bridge%s... %s	DEBUG	Usage:%s <DB Name> <Entry Name> <logFile> <subject>	ERROR
adding %s to bridge%d... %s	DEBUG	sqlite3QueryResGet failed	ERROR
[switchConfig] Ignoring event on %s	DEBUG	Could not get all the required variables to email the Logs.	ERROR
restarting bridge...	DEBUG	runSmtClient failed	ERROR
[switchConfig] Ignoring event on port number %d	DEBUG	getaddrinfo returned %s	ERROR
[switchConfig] executing %s ... %s	DEBUG	file not found	ERROR
restarting bridge...	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
UserName: %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
Password: %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
lspName: %s	DEBUG	No memory to allocate	ERROR
DialNumber: %s	DEBUG	Failed to Open SSHD Configuration File	ERROR
Apn: %s	DEBUG	Ipaddress should be provided with accessoption 1	ERROR

GetDnsFromIsp: %s	DEBUG	Subnetaddress should be provided with accessoption 2	ERROR
IdleTimeOutFlag: %s	DEBUG	Failed to restart sshd	ERROR
IdleTimeOutValue: %d	DEBUG	unable to open the "	ERROR
AuthMetho: %d	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
executing %s ... %s	DEBUG	Error in executing DB update handler	ERROR
removing %s from bridge%d... %s	DEBUG	Error in executing DB update handler	ERROR
adding %s to bridge%d... %s	DEBUG	unknown vlan state	ERROR
stopping bridge...	DEBUG	Failed to execute vlanConfig binary for vlanId %d	ERROR
restarting bridge...	DEBUG	sqlite3_mprintf failed	ERROR
Could not configure 6to4 Tunnel Interface	DEBUG	Access port can be present only in single vlan	ERROR
Could not de-configure 6to4 Tunnel Interface	DEBUG	Failed to execute vlanConfig binary for vlanId %d	ERROR
failed to restart 6to4 tunnel interfaces	DEBUG	unknown vlan state	ERROR
BridgeConfig: too few arguments to command %s	DEBUG	Failed to execute vlanConfig binary for port number %d	ERROR
BridgeConfig: unsupported command %d	DEBUG	Failed to clear vlan for oldPVID %d	ERROR
BridgeConfig returned error=%d	DEBUG	Failed to execute vlanConfig binary for port number %d	ERROR
sqlite3QueryResGet failed	DEBUG	Failed to clear vlan for %d	ERROR
Error in executing DB update handler	DEBUG	Failed to set vlan entry for vlan %d	ERROR
sqlite3QueryResGet failed	DEBUG	Failed to set vlan entries, while enabling \	ERROR
Failed to remove vlan Interface for vlanId \	DEBUG	sqlite3QueryResGet failed	ERROR
sqlite3QueryResGet failed	DEBUG	Failed to execute vlanConfig binary for port number %d	ERROR
Invalid oidp passed	DEBUG	Failed to execute vlanConfig binary for vlanId %d	ERROR
Invalid oidp passed	DEBUG	Failed to enable vlan	ERROR
Failed to get oid from the tree	DEBUG	Failed to disable vlan	ERROR
threegEnable: Input to wrapper %s	DEBUG	Failed to set vlanPort table entries, while \	ERROR
threegEnable: spawning command %s	DEBUG	Failed to enable vlan	ERROR
threegMgmtHandler: query string: %s	DEBUG	unknown vlan state	ERROR
threegMgmtHandler: returning with status: %s	DEBUG	Error in executing DB update handler	ERROR
adding to dhcpreally ifgroup failed	DEBUG	unknown vlan state	ERROR
adding to ipset fwDhcpRelay failed	DEBUG	Failed to execute vlanConfig binary for vlanId %d	ERROR
Disabling Firewall Rule for DHCP Relay Protocol	DEBUG	sqlite3_mprintf failed	ERROR
Enabling Firewall Rule for DHCP Relay Protocol	DEBUG	Access port can be present only in single vlan	ERROR
prerouting Firewall Rule add for Relay failed	DEBUG	Failed to execute vlanConfig binary for vlanId %d	ERROR
prerouting Firewall Rule add for Relay failed	DEBUG	unknown vlan state	ERROR
%s: SQL get query: %s	DEBUG	Failed to execute vlanConfig binary for port number %d	ERROR
%s: sqlite3QueryResGet failed	DEBUG	Failed to clear vlan for oldPVID %d	ERROR
%s: no result found	DEBUG	Failed to execute vlanConfig binary for port number %d	ERROR

%s: buffer overflow	DEBUG	Failed to clear vlan for %d	ERROR
%s: value of %s in %s table is: %s	DEBUG	Failed to set vlan entry for vlan %d	ERROR
%s: returning with status: %s	DEBUG	Failed to set vlan entries, while enabling \	ERROR
dnsResolverConfigure: addressFamily: %d	DEBUG	Failed to execute vlanConfig binary for port number %d	ERROR
dnsResolverConfigure: LogicalIfName: %s	DEBUG	Failed to execute vlanConfig binary for vlanId %d	ERROR
chap-secrets File found	DEBUG	Failed to enable vlan	ERROR
PID File for xl2tpd found	DEBUG	Failed to disable vlan	ERROR
pid: %d	DEBUG	Failed to set vlanPort table entries, while \	ERROR
options.xl2tpd file found	DEBUG	Failed to enable vlan	ERROR
options.xl2tpd file not found	DEBUG	unknown vlan state	ERROR
Conf File for xl2tpd found	DEBUG	threegMgmtInit: unable to open the database file %s	ERROR
xl2tpd.conf not found	DEBUG	threegConnEnable: failed to get the WanMode	ERROR
Chap Secrets file found	DEBUG	threegEnable:spawning failed	ERROR
Chap Secrets file not found	DEBUG	threegDisable: unable to kill ppp daemon	ERROR
%s:DBUUpdate event: Table: %s opCode:%d rowId:%d	DEBUG	threegMgmtHandler: Query: %s	ERROR
chap-secrets File found	DEBUG	threegMgmtHandler: error in executing database update	ERROR
PID File for pptpd found	DEBUG	Error in executing DB update handler	ERROR
pid: %d	DEBUG	are we getting invoked twice ??	ERROR
PID File for pptpd interface found	DEBUG	could not open %s to append	ERROR
pid: %d	DEBUG	could not write nameserver %s to %s	ERROR
options.pptpd file found	DEBUG	could not write nameserver %s to %s	ERROR
options.pptpd file not found	DEBUG	could not open %s to truncate	ERROR
Conf File for pptpd found	DEBUG	dnsResolverConfigMgmtInit: unable to open the "	ERROR
pptpd.conf not found	DEBUG	resolverConfigDBUdateHandler: sqlite3QueryResGet "	ERROR
Chap Secrets file found	DEBUG	could not configure DNS resolver	ERROR
Chap Secrets file not found	DEBUG	dnsResolverConfigure: could not write nameserver:%s,"	ERROR
%s:DBUUpdate event: Table: %s opCode:%d rowId:%d	DEBUG	unboundMgmt: unable to open the "	ERROR
chap-secrets File found	DEBUG	ioctl call Failed-could not update active user Details	ERROR
pppoeMgmtTblHandler: MtuFlag: %d	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
pppoeMgmtTblHandler: Mtu: %d	DEBUG	Can't kill xl2tpd	ERROR
pppoeMgmtTblHandler: IdleTimeOutFlag: %d	DEBUG	xl2tpd restart failed	ERROR
pppoeMgmtTblHandler: IdleTimeOutValue: %d	DEBUG	failed to get field value	ERROR
pppoeMgmtTblHandler: UserName: %s	DEBUG	failed to get field value	ERROR
pppoeMgmtTblHandler: Password: %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
pppoeMgmtTblHandler: DNS specified: %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
pppoeMgmtTblHandler: Service: %s	DEBUG	unboundMgmt: unable to open the "	ERROR
pppoeMgmtTblHandler: StaticIp: %s	DEBUG	writing options.xl2tpd failed	ERROR

pppoeMgmtTblHandler: NetMask: %s	DEBUG	xl2tpdStop failed	ERROR
pppoeMgmtTblHandler: AuthOpt: %d	DEBUG	writing xl2tpd.conf failed	ERROR
pppoeMgmtTblHandler: Satus: %d	DEBUG	writing options.xl2tpd failed	ERROR
pppoeEnable: ppp dial string: %s	DEBUG	xl2tpdStop failed	ERROR
pppoeMgmtDBUpdateHandler: returning with status: %s	DEBUG	xl2tpdStart failed	ERROR
pptpMgmtTblHandler: MtuFlag: %d	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
pptpMgmtTblHandler: Mtu: %d	DEBUG	writing Chap-secrets/Pap-Secrets failed	ERROR
pptpMgmtTblHandler: IdleTimeOutFlag: %d	DEBUG	xl2tpdStop failed	ERROR
pptpMgmtTblHandler: IdleTimeOutValue: %d	DEBUG	xl2tpdStart failed	ERROR
pptpMgmtTblHandler: GetDnsFromIsp: %d	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
pptpMgmtTblHandler: UserName: %s	DEBUG	writing Chap-secrets/Pap-Secrets failed	ERROR
pptpMgmtTblHandler: Password: %s	DEBUG	xl2tpdStop failed	ERROR
pptpMgmtTblHandler: dynamic MyIp configured	DEBUG	xl2tpdStart failed	ERROR
pptpMgmtTblHandler: MyIp: %s	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
pptpMgmtTblHandler: ServerIp: %s	DEBUG	writing Chap-secrets/Pap-Secrets failed	ERROR
pptpMgmtTblHandler: StaticIp: %s	DEBUG	Error in executing DB update handler	ERROR
pptpMgmtTblHandler: NetMask: %s	DEBUG	unboundMgmt: unable to open the "	ERROR
pptpMgmtTblHandler: MppeEncryptSupport: %s	DEBUG	Can't kill pptpd	ERROR
pptpMgmtTblHandler: SplitTunnel: %s	DEBUG	pptpd restart failed	ERROR
pptpEnable: ppp dial string: %s	DEBUG	Can't kill pptpd	ERROR
pptpEnable: spawning command %s	DEBUG	failed to get field value	ERROR
PID File for dhcpc found	DEBUG	failed to get field value	ERROR
pid: %d	DEBUG	unboundMgmt: unable to open the "	ERROR
pptpMgmtDBUpdateHandler: query string: %s	DEBUG	writing options.pptpd failed	ERROR
pptpMgmtDBUpdateHandler: returning with status: %s	DEBUG	pptpdStop failed	ERROR
dhcpcReleaseLease: dhcpc release command: %s	DEBUG	writing pptpd.conf failed	ERROR
dhcpcMgmtTblHandler: MtuFlag: %d	DEBUG	writing options.pptpd failed	ERROR
dhcpcMgmtTblHandler: Mtu: %d	DEBUG	pptpdStop failed	ERROR
DHCPv6 Server started successfully.	DEBUG	pptpdStart failed	ERROR
DHCPv6 Server stopped successfully	DEBUG	writing Chap-secrets/Pap-Secrets failed	ERROR
DHCPv6 Client started successfully.	DEBUG	Error in executing DB update handler	ERROR
DHCPv6 Client stopped successfully.	DEBUG	pppStatsUpdate: unable to get default MTU	ERROR
DHCPv6 Client Restart successful	DEBUG	pppoeMgmtInit: unable to open the database file %s	ERROR
l2tpMgmtTblHandler: MtuFlag: %d	DEBUG	pppoeDisable: unable to kill ppp daemon	ERROR
l2tpMgmtTblHandler: Mtu: %d	DEBUG	pppoeMultipleEnableDisable: pppoe enable failed	ERROR
l2tpMgmtTblHandler: IspName: %s	DEBUG	pppoeMultipleEnableDisable: pppoe disable failed	ERROR

I2tpMgmtTbIHandler: UserName: %s	DEBUG	pppoeMgmtTbIHandler: unable to get current Mtu Option	ERROR
I2tpMgmtTbIHandler: Password: %s	DEBUG	pppoeMgmtTbIHandler: unable to get the Mtu	ERROR
I2tpMgmtTbIHandler: AccountName: %s	DEBUG	pppoeMgmtTbIHandler: pppoe enable failed	ERROR
I2tpMgmtTbIHandler: DomainName: %s	DEBUG	pppoeMgmtDBUpdateHandler: failed query: %s	ERROR
I2tpMgmtTbIHandler: Secret: not specified	DEBUG	pppoeMgmtDBUpdateHandler: error in executing "	ERROR
I2tpMgmtTbIHandler: Secret: %s	DEBUG	pptpMgmtInIt: unable to open the database file %s	ERROR
I2tpMgmtTbIHandler: dynamic MyIp configured	DEBUG	pptpEnable: error executing command: %s	ERROR
I2tpMgmtTbIHandler: MyIp: %s	DEBUG	pptpEnable: unable to resolve address: %s	ERROR
I2tpMgmtTbIHandler: ServerIp: %s	DEBUG	pptpEnable: inet_aton failed	ERROR
I2tpMgmtTbIHandler: StaticIp: %s	DEBUG	pptpEnable: inet_aton failed	ERROR
I2tpMgmtTbIHandler: NetMask: %s	DEBUG	pptpEnable: spawning failed	ERROR
I2tpMgmtTbIHandler: SplitTunnel: %s	DEBUG	pptpDisable: unable to kill ppp daemon	ERROR
needToStartHealthMonitor: returning with status: %s	DEBUG	pptpMgmtTbIHandler: unable to get current MTU Option	ERROR
I2tpEnable: command string: %s	DEBUG	pptpMgmtTbIHandler: unable to get the Mtu	ERROR
I2tpEnable: command: %s	DEBUG	pptpMgmtTbIHandler: dbRecordValueGet failed for %s "	ERROR
I2tpEnable: command string: %s	DEBUG	pptpMgmtTbIHandler: pptp enable failed	ERROR
PID File for dhcpc found	DEBUG	pptpMgmtTbIHandler: pptp disable failed	ERROR
pid: %d	DEBUG	pptpMgmtDBUpdateHandler: sqlite3QueryResGet "	ERROR
I2tpMgmtDBUpdateHandler: query string: %s	DEBUG	pptpMgmtDBUpdateHandler: error in executing "	ERROR
I2tpMgmtDBUpdateHandler: returning with status: %s	DEBUG	Illegal invocation of dhcpConfig (%s)	ERROR
RADVD started successfully	DEBUG	dhcpLibInIt: unable to open the database file %s	ERROR
RADVD stopped successfully	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
empty update. nRows=%d nCols=%d	WARN	dhcpcMgmtInIt: unable to open the database file %s	ERROR
Wan is not up or in load balancing mode	WARN	dhcpcReleaseLease: unable to release lease	ERROR
threegMgmtHandler: no row found. nRows = %d nCols = %d	WARN	dhcpcEnable: unable to kill dhclient	ERROR
pppoeMgmtDBUpdateHandler: empty update.	WARN	dhcpcEnable: enabling dhcpc failed on: %s	ERROR
dhcpcEnable: dhclient already running on: %s	WARN	dhcpcDisable: unable to kill dhclient	ERROR
dhcpcDisable: deleted dhclient.leases	WARN	dhcpcDisable: delete failed for dhclient.leases	ERROR
I2tpMgmtInIt: unable to open the database file %s	ERROR	dhcpcDisable: failed to reset the ip	ERROR
I2tpEnable: unable to resolve address: %s	ERROR	dhcpcMgmtTbIHandler: unable to get current Mtu Option	ERROR
I2tpEnable: inet_aton failed	ERROR	dhcpcMgmtTbIHandler: unable to get the Mtu	ERROR

The Enable Command is %s	ERROR	dhcpcMgmtTbIHandler: dhclient enable failed	ERROR
I2tpEnable:Executing the Command failed	ERROR	dhcpcMgmtTbIHandler: dhcpc release failed	ERROR
I2tpDisable: command string: %s	ERROR	dhcpcMgmtTbIHandler: dhcpc disable failed	ERROR
I2tpDisable: unable to stop I2tp session	ERROR	dhcpcMgmtDBUpdateHandler: failed query: %s	ERROR
I2tpMgmtTbIHandler: unable to get current MTU option	ERROR	dhcpcMgmtDBUpdateHandler: error in executing "	ERROR
I2tpMgmtTbIHandler: unable to get the Mtu	ERROR	DHCPv6 Client start failed.	ERROR
I2tpMgmtTbIHandler: dbRecordValueGet failed for %s "	ERROR	DHCPv6 Client stop failed.	ERROR
I2tpMgmtTbIHandler: I2tpEnable failed	ERROR	failed to create/open DHCPv6 client "	ERROR
I2tpMgmtTbIHandler: disabling I2tp failed	ERROR	failed to write DHCPv6 client configuration file	ERROR
I2tpMgmtDBUpdateHandler: sqlite3QueryResGet "	ERROR	failed to restart DHCPv6 Client	ERROR
I2tpMgmtDBUpdateHandler: error in executing	ERROR	failed to create/open DHCPv6 Server "	ERROR
Illegal invocation of tcpdumpConfig (%s)	ERROR	Restoring old configuration..	ERROR
Failed to start tcpdump	ERROR	DHCPv6 Server configuration update failed	ERROR
Failed to stop tcpdump	ERROR	DHCPv6 Server Restart failed	ERROR
Invalid tcpdumpEnable value	ERROR	sqlite3QueryResGet failed.Query:%s	ERROR

Facility: System (VPN)

Log Message	Severity	Log Message	Severity
%d command not supported by eapAuth	DEBUG	PEAP key derive: ERROR	ERROR
pCtx NULL.	DEBUG	PEAP context is NULL: ERROR	ERROR
Current cert subject name= %s	DEBUG	Constructing P2 response: ERROR	ERROR
X509_STORE_CTX_get_ex_data failed.	DEBUG	innerEapRecv is NULL: ERROR	ERROR
Cannot get cipher, no session est.	DEBUG	Decrypting TLS data: ERROR	ERROR
%s: SSL_ERROR_WANT_X509_LOOKUP	DEBUG	Wrong identity size: ERROR	ERROR
err code = (%d) in %s	DEBUG	Wrong size for extensions packet: ERROR	ERROR
BIO_write: Error	DEBUG	innerEapRecv is NULL: ERROR.	ERROR
Decrypting: BIO reset failed	DEBUG	Inner EAP processing: ERROR	ERROR
Encrypting BIO reset: ERROR	DEBUG	TLS handshake: ERROR.	ERROR
BIO_read: Error	DEBUG	Sending P1 response: ERROR	ERROR
EAP state machine changed from %s to %s.	DEBUG	Unexpected tlsGlueContinue return value.	ERROR
EAP state machine changed from %s to %s.	DEBUG	No more fragments in message. ERROR	ERROR
Received EAP Packet with code %d	DEBUG	No phase 2 data or phase 2 data buffer NULL: ERROR	ERROR
Response ID %d	DEBUG	Allocating memory for PEAP Phase 2 payload: ERROR	ERROR
Response Method %d	DEBUG	TLS encrypting response: ERROR	ERROR

Created EAP/PEAP context: OK	DEBUG	Setting message in fragment buffer: ERROR	ERROR
Deleted EAP/PEAP context: OK	DEBUG	Allocating TLS read buffer is NULL: ERROR	ERROR
Upper EAP sent us: decision = %d method state = %d	DEBUG	Setting last fragment: ERROR	ERROR
P2 decision=(%d); methodState=(%d)	DEBUG	Getting message: ERROR	ERROR
Writing message to BIO: ERROR.	DEBUG	Processing PEAP message: ERROR	ERROR
Encrypted (%d) bytes for P2	DEBUG	Setting fragment: ERROR	ERROR
P2: sending fragment.	DEBUG	Creating receive buffer: ERROR	ERROR
P2: message size = %d	DEBUG	Setting first fragment: ERROR	ERROR
P2: sending unfragmented message.	DEBUG	Sending P1 response: ERROR	ERROR
P1: Sending fragment.	DEBUG	NULL request (or response) PDU or NULL context: ERROR	ERROR
P1: Total TLS message size = (%d)	DEBUG	Expecting start packet, got something else: ERROR	ERROR
P1: sending unfragmented message.	DEBUG	Protocol version mismatch: ERROR	ERROR
peapFragFirstProcess: TLS record size to receive = (%d)	DEBUG	Processing PEAP message (from frag): ERROR	ERROR
Setting version %d	DEBUG	Processing PEAP message: ERROR	ERROR
PEAP pkt rcvd: data len=(%d) flags=(%d) version=(%d)	DEBUG	Processing PEAP message: ERROR	ERROR
Got PEAP/Start packet.	DEBUG	Indicated length not valid: ERROR	ERROR
Got first fragment	DEBUG	Did not get Acknowledged result: ERROR	ERROR
Got fragment (n)	DEBUG	Cannot understand AVP value: ERROR	ERROR
Got last fragment	DEBUG	eapExtResp is NULL: ERROR	ERROR
Got unfragmented message	DEBUG	eapWscCtxCreate: EAPAUTH_MALLOC failed.	ERROR
Got frag ack.	DEBUG	eapWscProcess: umilocl req to WSC failed, status = %d	ERROR
Ext AVP parsed: flags=(0x%x)	DEBUG	eapWscCheck: Invalid frame	ERROR
Mandatory bit not set: WARNING	DEBUG	eapWscBuildReq: Invalid state %d	ERROR
Ext AVP parsed: type=(%d)	DEBUG	eapWscProcessWscResp: Invalid data recd pData = %p, dataLen"	ERROR
Ext AVP parsed: value=(%d)	DEBUG	Data received for invalid context, dropping it	ERROR
Got PEAPv0 success!	DEBUG	eapWscProcessWscResp: Build Request failed	ERROR
Got PEAPv0 failure!	DEBUG	eapWscProcessWscResp: Invalid state %d	ERROR
pCtx NULL.	DEBUG	eapWscProcessWscResp: Message processing failed 0x%X	ERROR
Authenticator response check: Error	DEBUG	eapWscProcessWscData: Invalid notification recd %d	ERROR
Authenticator response check: Failed	DEBUG	unable to initialize MD5	ERROR
MS-CHAP2 Response AVP size = %u	DEBUG	MDString: adpDigestInit for md5 failed	ERROR
Created EAP/MS-CHAP2 context: OK.	DEBUG	EAPAUTH_MALLOC failed.	ERROR
pCtx NULL.	DEBUG	EAPAUTH_MALLOC failed.	ERROR
Deleted EAP/MS-CHAPv2 context: OK	DEBUG	NULL context created: Error	ERROR
Not authenticated yet.	DEBUG	NULL context received: Error	ERROR
Authenticator response invalid	DEBUG	Authenticator ident invalid.	ERROR
EAP-MS-CHAPv2 password changed.	DEBUG	Success request message invalid:	ERROR

		Error	
rcvd. opCode %d.	DEBUG	Plugin context is NULL	ERROR
pCtx NULL.	DEBUG	Deriving implicit challenge: Error	ERROR
TLS message len changed in the fragment, ignoring.	DEBUG	Generating NT response: Error	ERROR
no data to send while fragment ack received.	DEBUG	NULL in/out buffer: Error	ERROR
TLS handshake successful.	DEBUG	Incorrect vendor id.	ERROR
Created EAP/TTLS context: OK	DEBUG	Allocating memory for outBuff: ERROR	ERROR
Deleted EAP/TTLS context: OK	DEBUG	AVP code not recognized	ERROR
No more fragments in message. ERROR	DEBUG	EAPAUTH_MALLOC failed.	ERROR
Upper EAP sent us: method state = %d; decision = %d	DEBUG	Converting password to unicode: Error	ERROR
P2: sending fragment.	DEBUG	Generating password hash: Error.	ERROR
P2 send unfragmented message.	DEBUG	Generating password hash hash: Error.	ERROR
P1: sending fragment.	DEBUG	Generating master key: Error.	ERROR
P1: sending unfragmented message.	DEBUG	Generating first 16 bytes of session key: Error.n	ERROR
\tTLSTMsgLen = 0x%x	DEBUG	Generating second 16 bytes of session key: Error.n	ERROR
Send req ptr = 0x%x; Send resp ptr = 0x%x	DEBUG	Converting password to unicode: Error	ERROR
P2 decision=(%d); methodState=(%d)	DEBUG	Constructing failure response: ERROR	ERROR
Default EAP: method state = %d; decision = %d	DEBUG	Error checking authenticator response.	ERROR
TTLS pkt: data len=(%d) flags=(0x%x)	DEBUG	Error generating NT response.	ERROR
Got start	DEBUG	Username string more than 256 ASCII characters: ERROR	ERROR
Got first fragment (n).	DEBUG	Invalid Value-Size.	ERROR
Got fragment (n).	DEBUG	Invalid MS-Length. Got (%d), expected (%d)	ERROR
Got last fragment	DEBUG	Error constructing response.	ERROR
Got unfragmented message.	DEBUG	Got type (%d), expecting (%d)	ERROR
Got frag ack.	DEBUG	Cannot handle message; opCode = %d	ERROR
Rcvd. AVP Code-%u: flags-0x%x: len-%u: vendorId-%u: "	DEBUG	EAPAUTH_MALLOC failed.	ERROR
MOD EAP: method state from upper = %d; decision = %d	DEBUG	tlsGlueCtxCreate failed.	ERROR
Got AVP len = %ul. Should be less than 16777215	DEBUG	client certificate must be set in the profile.	ERROR
AVP length extract: Error	DEBUG	received tls message length too big.	ERROR
pFB is NULL	DEBUG	total frags len > initial total tls length.	ERROR
Requesting message before assembly complete	DEBUG	total frags len > initial total tls length.	ERROR
pFB is NULL	DEBUG	total data rcvd(%d) doesnt match the initial "	ERROR
pFB is NULL	DEBUG	couldnt write %d data to TLS buffer.	ERROR
Buffer cannot hold message: ERROR	DEBUG	invalid flags %s passed to eapTlsBuildResp.	ERROR
pFB is NULL: Error	DEBUG	EAPAUTH_MALLOC failed.	ERROR
pFB is NULL	DEBUG	tlsGlueCtxCreate failed.	ERROR
TLS_FB* is NULL.	DEBUG	Context NULL: ERROR	ERROR

pFB->msgBuff is NULL.	DEBUG	Setting profile to glue layer: ERROR.	ERROR
Error calculating binary.	DEBUG	_eapCtxCreate failed.	ERROR
Error calculating binary.	DEBUG	%d authentication not enabled in the system.	ERROR
adpDigestInit for SHA1 failed.	DEBUG	Initializing inner non-EAP auth plugin: ERROR	ERROR
adpDigestInit for SHA1 failed.	DEBUG	TTLS key derive: ERROR	ERROR
E = %d	DEBUG	TTLS context from EAP plugin is NULL: ERROR	ERROR
R = %d	DEBUG	Allocating memory for TTLS Phase 2 payload: ERROR	ERROR
Could not initialize des-ecb	DEBUG	TLS Encrypting response: ERROR	ERROR
adpDigestInit for MD4 failed.	DEBUG	Allocating TLS read buffer is NULL: ERROR	ERROR
adpDigestInit for SHA1 failed.	DEBUG	Inner authentication (id: %d) unhandled	ERROR
adpDigestInit for SHA1 failed.	DEBUG	innerEapRecv is NULL: ERROR.	ERROR
Error converting received auth reponse to bin.	DEBUG	Decrypting TLS data: ERROR	ERROR
Gnerating challenge hash: Error	DEBUG	Processing Phase 2 method: Error	ERROR
Generating password hash: Error	DEBUG	Writing message to BIO: ERROR.	ERROR
Generating challenge response: Error	DEBUG	TLS handshake: ERROR.	ERROR
Conn cipher name=%s ver=%s: %s	DEBUG	Unexpected tlsGlueContinue return value.	ERROR
Send req ptr = 0x%x; Send resp ptr = 0x%x	DEBUG	NULL request (or response) PDU or NULL context	ERROR
Request ptr = 0x%x;	DEBUG	Protocol version mismatch: ERROR	ERROR
Response ptr = 0x%x	DEBUG	Creating receive buffer: ERROR	ERROR
Rcvd. AVP Code - %ul	DEBUG	Setting first fragment: ERROR	ERROR
Rcvd. AVP flags - 0x%02x	DEBUG	Setting fragment: ERROR	ERROR
Rcvd. AVP len - %ul	DEBUG	Setting last fragment: ERROR	ERROR
Rcvd. AVP vendor id - %ul	DEBUG	Getting message: ERROR	ERROR
\tCode = %d	DEBUG	Processing TTLS message: ERROR	ERROR
\tIdent = %d	DEBUG	Processing TTLS message: ERROR	ERROR
\tLen = %d	DEBUG	Processing TTLS message: ERROR	ERROR
\tType = %d	DEBUG	Decapsulating AVP: ERROR	ERROR
\tOpCode = %d	DEBUG	Processing EAP receive: Error	ERROR
\tMSID = %d	DEBUG	AVP code not EAP: Error	ERROR
\tmsLen = %d	DEBUG	Encapsulating AVP: ERROR	ERROR
\tvalSize = %d	DEBUG	profile %s doesnt exist.	ERROR
Frag Buffer bytes left = (%d)	DEBUG	profile %s is in use.	ERROR
Stripped username=(%s)	DEBUG	profile %s already exists.	ERROR
digestLen = %d.	DEBUG	EAPAUTH_MALLOC failed	ERROR
ClearText =	DEBUG	User not found.	ERROR
CipherText =	DEBUG	EAP-MD5 not enabled in system configuration.	ERROR
digestLen = %d.	DEBUG	EAP-MSCHAPV2 not enabled in system configuration.	ERROR
digestLen1 = %d.	DEBUG	EAP-TLS not enabled in system configuration.	ERROR
digestLen2 = %d.	DEBUG	EAP-TTLS not enabled in system configuration.	ERROR

password change is not allowed for this user	DEBUG	EAP-PEAP not enabled in system configuration.	ERROR
completed writing the policy	DEBUG	EAP-WSC not enabled in system configuration.	ERROR
completed writing the SA	DEBUG	PAP not enabled in system configuration.	ERROR
completed writing the proposal block	DEBUG	CHAP not enabled in system configuration.	ERROR
cmdBuf: %s	DEBUG	MSCHAP not enabled in system configuration.	ERROR
X509_DEBUG : Invalid Certificate for the generated"	DEBUG	MSCHAPV2 not enabled in system configuration.	ERROR
X590_ERROR : Failed to create File '%s'	DEBUG	PAP/Token not enabled in system configuration.	ERROR
x509TblHandler	DEBUG	EAP-MD5 not enabled in system configuration.	ERROR
pCertType: %s	DEBUG	EAP-MSCHAPV2 not enabled in system config.	ERROR
pRowQueryStr: %s	DEBUG	EAP-TLS not enabled in system configuration.	ERROR
x509SelfCertTblHandler	DEBUG	EAP-TTLS and EAP-PEAP are not valid as inner"	ERROR
pRowQueryStr: %s	DEBUG	invalid innerAuth %d.	ERROR
%s:DBUpdate event: Table: %s opCode:%d rowId:%d	DEBUG	profile %s doesnt exist.	ERROR
umiRegister failed	ERROR	Re-assembling fragments incorrect size	ERROR
eapAuthHandler: Invalid data received	ERROR	Error creating cipher context.	ERROR
EAPAUTH_MALLOC failed.	ERROR	Error initializing cipher context.	ERROR
malloc failed.	ERROR	Error creating digest context.	ERROR
BIO_new_mem_buf failed.	ERROR	Error initializing digest context.	ERROR
malloc failed.	ERROR	Error initializing DES in Klite	ERROR
BIO_new_mem_buf failed.	ERROR	Error initializing MD4 in Klite	ERROR
SSL_CTX_new (TLSv1_client_method) failed.	ERROR	Error initializing RC4 in Klite	ERROR
unable to set user configured CIPHER list %s	ERROR	Error initializing SHA in Klite	ERROR
Certificate verification failed.	ERROR	Error cleaning cipher context.	ERROR
Server name match failed. Got (%s) expected "	ERROR	Error destroying cipher context.	ERROR
SSL_CTX_use_certificate_file (cert, PEM) failed.	ERROR	Error cleaning digest context.	ERROR
SSL_CTX_use_PrivateKey_file failed.	ERROR	Error destroying digest context.	ERROR
private key does not match public key	ERROR	Error stripping domain name.	ERROR
SSL_CTX_load_verify_locations failed	ERROR	Error cleaning digest context.	ERROR
SSL_new failed.	ERROR	Error cleaning digest context.	ERROR
Both SSL_VERIFY_PEER and SSL_VERIFY_NONE set: Error	ERROR	Challenge not present in failure packet.	ERROR
EAPAUTH_MALLOC failed.	ERROR	Wrong challenge length.	ERROR
EAPAUTH_MALLOC failed.	ERROR	Incorrect password change version value.	ERROR
eapTimerCreate failed.	ERROR	Error generating password hash.	ERROR
eapCtxDelete:pCtx == NULL	ERROR	Error generating password hash.	ERROR
eapRole != EAP_ROLE_PEER or EAP_ROLE_AUTHENTICATOR	ERROR	Error encrypting password hash with block	ERROR

pEapCtx == NULL or pPDU == NULL.	ERROR	Could not initialize des-ecb	ERROR
received EAP pdu bigger than EAP_MTU_SIZE.	ERROR	Error cleaning cipher context.	ERROR
received EAP pdu bigger than EAP_MTU_SIZE.	ERROR	Error cleaning cipher context.	ERROR
state machine is in invalid state.	ERROR	Error cleaning digest context.	ERROR
unable to create method context.	ERROR	Error cleaning digest context.	ERROR
method ctxCreate failed.	ERROR	adpDigestInit for SHA1 failed.	ERROR
method profile set failed.	ERROR	X509_ERROR : .Query:%s	ERROR
state machine is in invalid state.	ERROR	X509_ERROR : Invalid Certificate for the "	ERROR
Only StandAlone authenticator supported currently.	ERROR	invalid x509 certificate	ERROR
state machine is in invalid state.	ERROR	Couldn't get the x509 cert hash	ERROR
BuildReq operation failed	ERROR	Memory allocation failed	ERROR
No method ops defined for current method	ERROR	FileName too lengthy	ERROR
Process operation failed	ERROR	Couldn't execute command	ERROR
state machine is in invalid state.	ERROR	Memory allocation failed	ERROR
Packet length mismatch %d, %d	ERROR	Memory allocation failed	ERROR
eapAuthTypeToType: Invalid eapAuthType %d	ERROR	invalid certificate data	ERROR
eapTypeToAuthType: Invalid eapType %d	ERROR	.Query:%s	ERROR
unable to create method context.	ERROR	.Query:%s	ERROR
method ctxCreate failed.	ERROR	Memory allocation failed	ERROR
Invalid condition, methodState = %d, respMethod = %d	ERROR	X509_ERROR : Failed to validate the certificate "	ERROR
A EAP Ctx map already exists	ERROR	Memory allocation failed	ERROR
eapTimerCreate: Currently unsupported for Peer role	ERROR	.Query:%s	ERROR
eapTimerStart: Currently unsupported for Peer role	ERROR	Invalid Sign Key Length : %d	ERROR
eapTimerDestroy: Currently unsupported for Peer role	ERROR	Invalid Hash Alg : %d	ERROR
eapTimerCancel: Currently unsupported for Peer role	ERROR	Invalid Sign Alg : %d	ERROR
eapTimerHandler: Currently unsupported for Peer role	ERROR	No Memory Available	ERROR
pCtx is NULL: ERROR	ERROR	Certificate Request Failed	ERROR
tlsGlueCtxCreate failed	ERROR	File Open Failed	ERROR
eapVars is NULL	ERROR	File is Empty	ERROR
Context NULL: ERROR	ERROR	Memory Allocation Failed	ERROR
Initializing inner EAP auth: ERROR	ERROR	File Open Failed	ERROR
pCtx is NULL: ERROR	ERROR	File is Empty	ERROR
Memory Allocation Failed	ERROR	Error in executing DB update handler	ERROR

Facility: System (Admin)

Log Message	Severity	Log Message	Severity
Usage:%s <DBFile>	DEBUG	unable to register to UMI	ERROR

Could not open database: %s	DEBUG	sqlite3QueryResGet failed	ERROR
CPU LOG File not found	DEBUG	radSendtoServer: socket: %s	ERROR
MEM LOG File not found	DEBUG	radSendtoServer: bind() Failed: %s: %s	ERROR
cpuMemUsageDBUpdateHandler: update query: %s	DEBUG	radRecvfromServer: recvfrom() Failed: %s	ERROR
Printing the whole list after inserting	DEBUG	radRecvfromServer: Packet too small from %s:%d: %s	ERROR
%s at %d(minute) %d(hour) %d(dayOfMonth) %d(month)"	DEBUG	radCheckMsgAuth: Invalid Message- Authenticator length in"	ERROR
adpCmdExec exited with return code=%d	DEBUG	radDictLoad: couldn't open dictionary %s: %s	ERROR
%s op=%d row=%d	DEBUG	radBuildAndSendReq: Invalid Request Code %d	ERROR
sqlite3_mprintf failed	DEBUG	radPairAssign: bad attribute value length	ERROR
sqlite3QueryResGet failed: query=%s	DEBUG	radPairAssign: unknown attribute type %d	ERROR
Printing the whole list after delete	DEBUG	radPairNew: unknown attribute %d	ERROR
%s at %d(minute) %d(hour) %d(dayOfMonth) %d(month)"	DEBUG	radPairGen: Attribute(%d) has invalid length	ERROR
Printing the whole list after inserting	DEBUG	radPairValue: unknown attribute type %d	ERROR
%s at %d(minute) %d(hour) %d(dayOfMonth) %d(month)"	DEBUG	radPairValueLen: unknown attribute type %d	ERROR
email logs: No logging events enabled	DEBUG	radPairLocate: Attribute(%d) has invalid length	ERROR
%s	DEBUG	radPairUnpackDefault: Unknown- Attribute[%d]:	ERROR
Mail sent and the Database is reset.	DEBUG	radConfigure: can't open %s: %s	ERROR
Disabled syslog server	DEBUG	radConfigure: %s: line %d: bogus format: %s	ERROR
Event logs are full, sending logs to email	DEBUG	radConfAssert: No AuthServer Specified	ERROR
Email logs sending failed	DEBUG	radConfAssert: No Default Timeout Specified	ERROR
Packing attribute: %s	DEBUG	radConfAssert: No Default Retry Count Specified	ERROR
Server found: %s, secret: %s	DEBUG	radExtractMppeKey: Invalid MS- MPPE-Key Length	ERROR
Packed Auth. Request: code:%d, id:%d, len:%d	DEBUG	radVendorMessage: Invalid Length in Vendor Message	ERROR
Sending Packet to %x:%d	DEBUG	radVendorMessage: Unknown Vendor ID received:%d	ERROR
Receiving Reply Packet...	DEBUG	radVendorAttrGet: Invalid Length in Vendor Message	ERROR
Verified Reply Packet Integrity	DEBUG	radVendorAttrGet: Unknown Vendor ID:%d	ERROR
Generated Reply Attribute-Value pairs	DEBUG	radVendorMessagePack: Unknown Vendor ID:%d	ERROR
Verified Message-Authenticator	DEBUG	radGetIPByName: couldn't resolve hostname: %s	ERROR
Unloaded RADIUS Dictionary	DEBUG	radGetHostIP: couldn't get hostname	ERROR
Adding Dictionary Attribute %s	DEBUG	radGetHostIP: couldn't get host IP address	ERROR
Adding Dictionary Value %s	DEBUG	radius dictionary loading failed	ERROR
Loaded Dictionary %s	DEBUG	Failed to set default timeout value	ERROR

Adding Dictionary Attribute '%s'	DEBUG	Failed to set default retries value	ERROR
Adding Dictionary Value %s	DEBUG	ERROR: incomplete DB update information.	ERROR
Receiving attribute: %s	DEBUG	old values result does not contain 2 rows	ERROR
Processing attribute: %s	DEBUG	sqlite3QueryResGet failed	ERROR
Processing attribute: %s	DEBUG	empty update. nRows=%d nCols=%d	ERROR
Processing attribute: %s	DEBUG	Error in executing DB update handler	ERROR
Processing attribute: %s	DEBUG	sqlite3QueryResGet failed	ERROR
radConfGet: "	DEBUG	Invalid SQLITE operation code - %d	ERROR
Added Server %s:%d with "	DEBUG	sqlite3QueryResGet failed	ERROR
Added Server %s:%d with "	DEBUG	empty result. nRows=%d nCols=%d	ERROR
Default Timeout Set to %d	DEBUG	sqlite3QueryResGet failed	ERROR
Default Retry Count Set to %d	DEBUG	empty result. nRows=%d nCols=%d	ERROR
%s - %s : %d	DEBUG	RADIUS Accounting Exchange Failed	ERROR
Deleting Server %s:%d with "	DEBUG	Unable to set debug for radAcct.	ERROR
Adding RowId:%d to Server %s:%d with "	DEBUG	Unable to set debug level for radAcct.	ERROR
rowIds: %d - %d	DEBUG	ERROR: option value not specified	ERROR
Deleting Server %s:%d with "	DEBUG	ERROR: option value not specified	ERROR
RADIUS Deconfigured	DEBUG	Unable to initialize radius	ERROR
Found Option %s on line %d of file %s	DEBUG	radEapMsgQueueAdd: Invalid EAP packet length(%d)	ERROR
Setting Option %s with value %s	DEBUG	radEapRecvTask: invalid EAP code:%d	ERROR
RADIUS Configured	DEBUG	radEapRecvTask: Packet length mismatch %d, %d	ERROR
%d : Server %s:%d with "	DEBUG	No attributes received in Access-Challenge message	ERROR
DBUpdate event: Table: %s opCode:%d rowId:%d	DEBUG	No State Attribute in Access-Challenge message	ERROR
Host IP address: %s	DEBUG	radEapRecvTask: "	ERROR
Adding Packet for existing cookie:%p	DEBUG	failed to initialize UMI	ERROR
Adding Packet and cookie:%p	DEBUG	umiRegister failed. errno=%d	ERROR
Releasing Packet and cookie:%p	DEBUG	Invalid arguments to ioctl handler	ERROR
Releasing Packet with cookie:%p	DEBUG	radEapSendRtn: Invalid Arguments radEapSendRtn: failed to allocate buffer	ERROR
Received EAP-Identity from Pnac: %s	DEBUG		ERROR
Filling User-Name: %s	DEBUG	umioctl failed	ERROR
Filling State:	DEBUG	failed to initialize EAP message queue	ERROR
Filling EAP-Message:	DEBUG	Unable to set debug for radEap.	ERROR
Filling Service-Type: %d	DEBUG	Unable to set debug level for radEap.	ERROR
Filling Framed-MTU: %d	DEBUG	ERROR: option value not specified	ERROR
Received Access-Challenge from Server	DEBUG	ERROR: option value not specified	ERROR
Sending Reply EAP Packet to Pnac	DEBUG	could not initialize MGMT framework	ERROR
Error sending packet to Pnac	DEBUG	Unable to initialize radius	ERROR
RADIUS Authentication Failed; "	DEBUG	Unable to set debug for radEap.	ERROR
RADIUS Authentication Successful; "	DEBUG	Unable to set debug level for radEap.	ERROR
Got Packet with cookie:%p	DEBUG	ERROR: option value not specified	ERROR
Next DNS Retry after 1 min	DEBUG	Unable to initialize radius	ERROR
Next Synchronization after"	DEBUG	Invalid username or password	ERROR

Next Synchronization after"	DEBUG	Unable to set debug for radAuth.	ERROR
Next Synchronization after %d \	DEBUG	Unable to set debug level for radAuth.	ERROR
Primary is not available, "	DEBUG	ERROR: option value not specified	ERROR
Secondary is not available, "	DEBUG	Unable to initialize radius	ERROR
Invalid value for use default servers, "	DEBUG	Invalid username, challenge or response	ERROR
No server is configured, "	DEBUG	Unable to set debug for radAuth.	ERROR
Backing off for %d seconds	DEBUG	Unable to set debug level for radAuth.	ERROR
Requesting time from %s	DEBUG	ERROR: option value not specified	ERROR
Synchronized time with %s	DEBUG	Unable to initialize radius	ERROR
Received KOD packet from %s	DEBUG	Invalid username or password	ERROR
No suitable server found %s	DEBUG	usage : %s <DB fileName>	ERROR
Received Invalid Length packet from %s	DEBUG	ntpd : umi initialization failed	ERROR
Received Invalid Version packet from %s	DEBUG	ntpd : ntpInit failed	ERROR
Received Invalid Mode packet from %s	DEBUG	ntpd : ntpMgmtInit failed	ERROR
Request Timed out from %s	DEBUG	There was an error while getting the timeZoneChangeScript."	ERROR
Looking Up %s	DEBUG	unexpected reply from %d cmd=%d !	ERROR
Timezone difference :%d	DEBUG	cmd %d not supported. caller %d	ERROR
Could not open file: %s	DEBUG	default reached	ERROR
Could not read data from file	DEBUG	Unable to initialize ntpControl	ERROR
ntpTblHandler	DEBUG	ntpMgmt : Couldn't open database %s	ERROR
status: %d	DEBUG	ERROR : incomplete DB update information	ERROR
tz: %d	DEBUG	empty update. nRows=%d nCols=%d	ERROR
DayLightsaving: %d	DEBUG	Error in executing DB update handler	ERROR
pNtpControl->ServerNames[PRIMARY_SERVER]: %s	DEBUG	requestNtpTime: Invalid addr	ERROR
pNtpControl->ServerNames[SECONDARY_SERVER] : %s	DEBUG	failed to take lock for compld: %d failed to convert ioctl args to buffer for"	ERROR
DS: %d	DEBUG	request timeout dst(%d) <-- src(%d)	ERROR
pPriServ %s	DEBUG	failed to take lock for compld: %d	ERROR
pSecServ %s	DEBUG	umiloctlArgsToBuf: failed to allocate memory	ERROR
Making request from %d --> %d	DEBUG	umiRecvFrom: could not allocate memory	ERROR
sent request dst(%d) <-- src(%d) using option %d	DEBUG	adpMalloc failed	ERROR
received request too small!(%d bytes)	DEBUG	context with ID: %d already registered	ERROR
Received a UMI request from %d	DEBUG	Failed to allocate memory for creating UMI context	ERROR
sent a reply src(%d) ---> dst(%d)	DEBUG	Failed to create recvSem for UMI context	ERROR
umiRegister (%x,%x,%x,%x)	DEBUG	Failed to create mutex locks for UMI context	ERROR
srcId=%d(%s) --> destId=%d(%s) cmd=%d inLen=%d outLen=%d	DEBUG	Failed to create mutex recvQLock for UMI context	ERROR
waiting for reply...Giving Up	DEBUG	Invalid arguments to umiloctl	ERROR
No request in the list after semTake	DEBUG	could not find the destination context	ERROR
reply timeout	DEBUG		ERROR

timeout after semTake	DEBUG	memPartAlloc for %d size failed	ERROR
srcId=%d(%s) <-- destId=%d(%s) cmd=%d	DEBUG	memPartAlloc for %d size failed	ERROR
Un-registering component with Id %d	DEBUG	No Handler registered for this UMI context	ERROR
failed to send ioctl request: dst(%d) <--- src(%d)	DEBUG	Couldn't find component with ID (%d),"	ERROR
processed a reply dst(%d) <-- src(%d)	DEBUG	id=%d handler=%x	ERROR
request with no result option dst(%d) <-- src(%d)	DEBUG	Received NULL buffer in umiBufToIoctlArgs()	ERROR
cmd = %s	DEBUG	usbMgmtInit: unable to open the database file %s	ERROR
cmdstring is %s %s:%d	DEBUG	call to printConfig failed	ERROR
Calling printerConfig binary ...	DEBUG	Failed to Disable Network Storage"	ERROR
Calling unmount for USB ...	DEBUG	Some error occurred while removing device	ERROR
Calling mount for USB ...	DEBUG	Some error occurred while removing device	ERROR
usbdevice is %d %s:%d	DEBUG	Sqlite update failed	ERROR
Query string: %s	DEBUG	Failed to enable printer properly	ERROR
sqlite3QueryResGet failed.Query:%s	DEBUG	Failed to mount device on system	ERROR
%s: 1. usb is already disconnected for old usb type. "	DEBUG	Failed to enable network storage device"	ERROR
%s: 2.call disable for new usb type !	DEBUG	Failed to mount device on system	ERROR
%s: 3. usb is already disconnected for old usb type. "	DEBUG	Sqlite update failed	ERROR
%s: 4. Disabled old usb type . Now "	DEBUG	USB1 Touch failed	ERROR
usbdevice is %d %s:%d	DEBUG	USB2 Touch failed	ERROR
USB: failed to begin transaction: %s	DEBUG	Sqlite update failed	ERROR
USB: SQL error: %s pSetString = %s	DEBUG	Failed query: %s	ERROR
USB: failed to commit transaction: %s	DEBUG	Failed to execute usb database update handler	ERROR
USB: updated table: %s	DEBUG	Usage:%s <DBFile> <opType> <tblName> <rowId>	ERROR
USB: returning with status: %s	DEBUG	Illegal invocation of snmpConfig (%s)	ERROR
%s:DBUpdate event: Table: %s opCode:%d rowId:%d	DEBUG	Invalid Community Access Type	ERROR
executing %s status =%d	DEBUG	Invalid User Access Type	ERROR
executing %s	DEBUG	Invalid Security Level	ERROR
%s returned status=%d	DEBUG	Invalid Authentication Algorithm	ERROR
%s returned status=%d	DEBUG	Invalid Privacy Algorithm	ERROR
snmpd.conf not found	DEBUG	Invalid Argument	ERROR
[SNMP_DEBUG] : Fwrite Successful	DEBUG	Failed to allocate memory for engineID	ERROR
[SNMP_DEBUG] : Fwrite failed	DEBUG	[SNMP_DEBUG]: Failed to get host address	ERROR
radPairGen: received unknown attribute %d of length %d	WARN	[SNMP_DEBUG] : FOPEN failed	ERROR
radPairGen: %s has unknown type	WARN	sqlite3QueryResGet failed.Query:%s	ERROR
radPairLocate: unknown attribute %d of length %d	WARN	sqlite3QueryResGet failed.Query:%s	ERROR
radPairLocate: %s has unknown type	WARN	Invalid Security Level	ERROR
Illegal invocation of cpuMemUsage (%s)	ERROR	Invalid Authentication Algorithm	ERROR

cpuMemUsageDBUpdateHandler: SQL error: %s	ERROR	Invalid Privacy Algorithm	ERROR
unable to open the DB file %s	ERROR	Failed to Get Host Address	ERROR
umilnit failed	ERROR	Invalid version	ERROR
unable to register to UMI	ERROR	snmp v3 Trap Configuration Failed	ERROR
Error Reading from the Database.	ERROR	sqlite3QueryResGet failed query:%s	ERROR
short DB update event request!	ERROR	sqlite3QueryResGet failed.Query:%s	ERROR
Error in executing DB update handler	ERROR	Failed to Open Snmp Configuration File	ERROR
adpListNodeRemove : Returned with an error	ERROR	Failed to write access control entries	ERROR
command too long. Try increasing "	ERROR	Failed to write snmpv3 users entries	ERROR
failed to allocate memory for CRON_NODE	ERROR	Failed to write snmp trap entries	ERROR
sqlite3QueryResGet failed	ERROR	Failed to write system entries.	ERROR
There was an error while reading the schedules.	ERROR	Failed to restart snmp	ERROR
unable to register to UMI	ERROR	%s failed with status	ERROR
short DB update event request!	ERROR	Error in executing DB update handler	ERROR
malloc(DB_UPDATE_NODE) failed	ERROR	%s: Unable to open file: %s	ERROR
short ifDev event request!	ERROR	RADVD start failed	ERROR
sqlite3_mprintf failed	ERROR	RADVD stop failed	ERROR
no component id matching %s	ERROR	failed to create/open RADVD configuration file %s	ERROR
umiloctl (%s, UMI_CMD_DB_UPDATE(%d)) failed.	ERROR	Restoring old configuration..	ERROR
sqlite3_mprintf failed	ERROR	failed to write/update RADVD configuration file	ERROR
sqlite3_mprintf failed	ERROR	upnpDisableFunc failed	ERROR
no component id matching %s	ERROR	upnpEnableFunc failed	ERROR
umiloctl (%s, UMI_CMD_IFDEV_EVENT(%d)) failed.	ERROR	sqlite3QueryResGet failed.Query:%s	ERROR
klogctl(9) failed	ERROR	Error in executing DB update handler	ERROR
malloc failed for %d bytes	ERROR	unable to open the DB file %s	ERROR
klogctl(4) failed	ERROR	umilnit failed	ERROR
emailLogs: Invalid Number of Arguments!! Exiting.	ERROR	unable to register to UMI	ERROR
sqlite3QueryResGet failed	ERROR	short DB update event request!	ERROR
Could not execute the smtpClient.	ERROR	short ifDev event request!	ERROR
Error while cleaning the database.Exiting. %s	ERROR	sqlite3_mprintf failed	ERROR
		%s failed. status=%d	ERROR

Facility: System (Firewall)

Log Message	Severity	Log Message	Severity
Enabling rule for protocol binding.	DEBUG	Disable all NAT rules.	DEBUG
Disabling rule for protocol binding.	DEBUG	Enable all NAT rules.	DEBUG
Enabling Remote SNMP on WAN.	DEBUG	Enabling NAT URL filter rules.	DEBUG
Disabling Remote SNMP on WAN	DEBUG	Restarting all NAT rules.	DEBUG

wan traffic counters are restarted	DEBUG	Deleting schedule based firewall rules.	DEBUG
Traffic limit has been reached	DEBUG	Deleting schedule based firewall rules from DB.	DEBUG
Traffic meter monthly limit has been changed to %d.	DEBUG	Update schedule based firewall rules in DB.	DEBUG
Enabling traffic meter for only download.	DEBUG	Restart schedule based firewall rules.	DEBUG
Enabling traffic meter for both directions.	DEBUG	inter vlan routing enabled	DEBUG
Enabling traffic meter with no limit.	DEBUG	inter vlan routing disabled	DEBUG
Email alert in traffic meter disabled.	DEBUG	Disabling Content Filter for %d	DEBUG
Email alert in traffic meter enabled.	DEBUG	Enabling Content Filter for %d	DEBUG
Traffic Meter:Monthly limit %d MB has been "	DEBUG	./src/firewall/linux/user/firewalld.c:59:#undef ADP_DEBUG2	DEBUG
Traffic Metering: Adding rule to drop all traffic	DEBUG	./src/firewall/linux/user/firewalld.c:61:#define ADP_DEBUG2 printf	DEBUG
Traffic Metering: %sabling Email traffic	DEBUG	Enabling Source MAC Filtering	DEBUG
Disabling attack checks for IPv6 rules.	DEBUG	Disabling Source MAC Filtering	DEBUG
Enabling attack checks for IPv6 rules.	DEBUG	Adding MAC Filter Policy for Block & Permit Rest	DEBUG
Configuring one to one NAT settings with %s private start IP "	DEBUG	Adding MAC Filter Policy for Permit & Block Rest	DEBUG
Deleting forward one to one NAT having setting %s private start"	DEBUG	Restarting Source MAC Address Policy	DEBUG
Disabling attack check for Block ping to WAN interface.	DEBUG	Disabling Firewall Rule for DHCP Relay Protocol	DEBUG
Disabling attack check for Stealth mode for tcp	DEBUG	Enabling Firewall Rule for DHCP Relay Protocol	DEBUG
Disabling attack check for Stealth mode for udp	DEBUG	pre-routing Firewall Rule add for Relay failed	DEBUG
Disabling attack check for TCP Flood.	DEBUG	pre-routing Firewall Rule add for Relay failed	DEBUG
Disabling attack check for UDP Flood.	DEBUG	Deleting MAC Filter Policy for Address %s	DEBUG
Disabling attack check for IPsec.	DEBUG	Adding MAC Filter Policy for Address %s	DEBUG
Disabling attack check for PPTP.	DEBUG	Disabling Firewall Rules for DMZ host	DEBUG
Disabling attack check for L2TP.	DEBUG	Enabling Firewall Rules for DMZ host	DEBUG
Disabling attack check for UDP Flood.	DEBUG	Disabling Firewall Rules for Spill Over Load Balancing	DEBUG
Disabling attack check for IPsec.	DEBUG	Disabling Firewall Rules for Load Balancing	DEBUG
Disabling attack check for PPTP.	DEBUG	Enabling Firewall Rules for Load Balancing	DEBUG
Disabling attack check for L2TP.	DEBUG	Enabling Firewall Rules for Spill Over Load Balancing	DEBUG
Enabling attack check for Block ping to WAN "	DEBUG	Enabling Firewall Rules for Auto Failover	DEBUG
Enabling attack check for Stealth Mode for tcp.	DEBUG	Enabling Firewall Rules for Load Balancing .	DEBUG
Enabling attack check for Stealth Mode for udp.	DEBUG	Enabling Firewall Rules for Spill Over Load Balancing .	DEBUG
Enabling attack check for TCP Flood.	DEBUG	Enabling Firewall Rules for Auto Failover	DEBUG
Enabling attack check for UDP Flood.	DEBUG	Deleting BlockSites Keyword \	DEBUG
Enabling attack check for IPsec.	DEBUG	Enabling BlockSites Keyword \	DEBUG
Enabling attack check for PPTP.	DEBUG	Disabling BlockSites Keyword \	DEBUG

Enabling attack check for L2TP.	DEBUG	Updating BlockSites Keyword from \	DEBUG
Enabling attack check for UDP Flood.	DEBUG	Inserting BlockSites Keyword \	DEBUG
Enabling attack check for IPsec.	DEBUG	Deleting Trusted Domain \	DEBUG
Enabling attack check for PPTP.	DEBUG	Adding Trusted Domain \	DEBUG
Enabling attack check for L2TP.	DEBUG	Restarting Schedule Based Firewall Rules	DEBUG
Enabling DoS attack check with %d SyncFlood detect rate, "	DEBUG	Enabling Remote SNMP	DEBUG
Disabling DoS attack check having %d SyncFlood detect rate,"	DEBUG	Disabling Remote SNMP	DEBUG
Enabling ICSA Notification Item for ICMP notification.	DEBUG	Enabling Remote SNMP	DEBUG
Enabling ICSA Notification Item for Fragmented Packets.	DEBUG	Disabling DOS Attacks	DEBUG
Enabling ICSA Notification Item for Multi cast Packets.	DEBUG	Enabling DOS Attacks	DEBUG
Disabling ICSA Notification Item for ICMP notification.	DEBUG	Enabling DOS Attacks	DEBUG
Disabling ICSA Notification Item for Fragmented Packets.	DEBUG	Restarting Firewall [%d]:[%d] For %s restartStatus = %d for LogicalIfName = %s	DEBUG
Disabling ICSA Notification Item for Multi cast Packets.	DEBUG		DEBUG
Adding IP/MAC binding rule for %s MAC address "	DEBUG	Deleting Lan Group %s	DEBUG
Deleting IP/MAC binding rule for %s MAC "	DEBUG	Adding Lan Group %s	DEBUG
./src/firewall/linux/user/firewalld.c:60:#undef ADP_DEBUG	DEBUG	Deleting lan host %s from group %s	DEBUG
./src/firewall/linux/user/firewalld.c:62:#define ADP_DEBUG printf	DEBUG	Adding lan host %s from group %s	DEBUG
Restarting traffic meter with %d mins, %d hours, "	DEBUG	Disabling Firewall Rule for IGMP Protocol	DEBUG
Updating traffic meter with %d mins, %d hours, "	DEBUG	Enabling Firewall Rule for IGMP Protocol	DEBUG
Deleting traffic meter.	DEBUG	Deleting IP/MAC Bind Rule for MAC address %s and IP "	DEBUG
Disabling block traffic for traffic meter.	DEBUG	Adding IP/MAC Bind Rule for MAC address %s and IP	DEBUG
Enabling traffic meter.	DEBUG	Deleting Protocol Bind Rule for Service %s	DEBUG
Adding lan group %s.	DEBUG	Deleting Protocol Bind Rule for Service %s	DEBUG
Deleting lan group %s.	DEBUG	Deleting Protocol Bind Rule for Service %s	DEBUG
Renaming lan group from %s to %s.	DEBUG	Adding Protocol Bind Rule for Service %s	DEBUG
Deleting host %s from %s group.	DEBUG	%s Session Settings	DEBUG
Adding host %s to %s group.	DEBUG	Restarting IPv6 Firewall Rules...	DEBUG
Enabling Keyword blocking for %s keyword.	DEBUG	Deleting Port Trigger Rule for %d:%d:%d:%d:%d	DEBUG
Disabling keyword Blocking for %s keyword .	DEBUG	Deleting Port Trigger Rule for %d:%d:%d:%d:%d	DEBUG
Deleting trusted domain with keyword %s.	DEBUG	Enabling Port Trigger Rule for %d:%d:%d:%d:%d	DEBUG
Adding %s keyword to trusted domain.	DEBUG	Disabling Port Trigger Rule for %d:%d:%d:%d:%d	DEBUG
Enabling Management Access from	DEBUG	Enabling Port Trigger Rule for	DEBUG

Internet on port %d		%d:%d:%d:%d	
Enabling remote access management for IP address range"	DEBUG	Disabling Port Trigger Rule for %d:%d:%d:%d	DEBUG
Enabling remote access management to only this PC.	DEBUG	Adding Port Trigger Rule for %d:%d:%d:%d	DEBUG
Disabling Management Access from Internet on port %d	DEBUG	Enabling Content Filter	DEBUG
Disabling remote access management for IP address range"	DEBUG	Disabling Content Filter	DEBUG
Disabling remote access management only to this PC.	DEBUG	Enabling Content Filter	DEBUG
MAC Filtering %sabled for BLOCK and PERMIT REST.	DEBUG	Setting NAT mode for pLogicalIfName = %s	DEBUG
MAC Filtering %sabled for PERMIT and BLOCK REST.	DEBUG	Enabling DROP for INPUT	DEBUG
Enabling Content Filtering.	DEBUG	Enabling DROP for FORWARD	DEBUG
Disabling Content Filtering.	DEBUG	Enabling NAT based Firewall Rules	DEBUG
Deleting rule, port triggering for protocol TCP.	DEBUG	Setting transparent mode for pLogicalIfName \	DEBUG
Deleting rule, port triggering for protocol UDP.	DEBUG	Enabling Accept for INPUT	DEBUG
Deleting rule, port triggering for protocol TCP.	DEBUG	Enabling Accept for FORWARD	DEBUG
Deleting rule, port triggering for protocol UDP.	DEBUG	Setting Routing mode for pLogicalIfName \	DEBUG
Enabling rule, port triggering for protocol TCP.	DEBUG	Enabling DROP for INPUT	DEBUG
Enabling rule, port triggering for protocol UDP.	DEBUG	Enabling DROP for FORWARD	DEBUG
Enabling rule, port triggering for protocol TCP.	DEBUG	Disabling NAT based Firewall Rules	DEBUG
Enabling rule, port triggering for protocol UDP.	DEBUG	Enabling Firewall Rules for URL Filtering & "	DEBUG
Enabling DNS proxy.	DEBUG	Adding Firewall Rule for RIP Protocol	DEBUG
Restarting DNS proxy.	DEBUG	Restarting Schedule Based Firewall Rules	DEBUG
checking DNS proxy for Secure zone.	DEBUG	enabling IPS checks between %s and %s zones.	DEBUG
checking DNS proxy for Public zone.	DEBUG	disabling IPS checks between %s and %s zones.	DEBUG
Enabling Block traffic from %s zone.	DEBUG	Stopping IPS...%s	DEBUG
Configuring firewall session settings for "	DEBUG	IPS started.	DEBUG
Disabling DMZ	DEBUG	Route already exists	DEBUG
Disabling WAN-DMZ rules .	DEBUG	Route addition failed: Network Unreachable	DEBUG
Enabling WAN DMZ rules .	DEBUG	Route addition failed: Network is down	DEBUG
Restarting DMZ rule having %s address with %s address.	DEBUG	Route addition failed	DEBUG
Enabling LAN DHCP relay.	DEBUG	Failed to add rule in iptables	DEBUG
OneToOneNat configured successfully	DEBUG	Failed to delete rule from iptables	DEBUG
OneToOneNat configuration failed	DEBUG	fwLBSpillOverConfigure: Something going wrong here	ERROR
Deleting scheduled IPv6 rules.	DEBUG	fwLBSpillOverConfigure: unable to get interfaceName	ERROR
delete from FirewallRules6 where ScheduleName = '%s'.	DEBUG	fwLBSpillOverConfigure: Could not set PREROUTING rules	ERROR

Update FirewallRules6 where ScheduleName = '%s' to New "	DEBUG	fwLBSpillOverConfigure: Could not set POSTROUTING rules	ERROR
Dns proxy Restart failed	DEBUG	fwLBSpillOverConfigure: Something going wrong Here	ERROR
deleting interface to ifgroup failed	DEBUG	fwL2TPGenericRules.c: unable to open the database file "	ERROR
adding interface to ifgroup failed	DEBUG	fwL2TPGenericRules.c: inet_aton failed	ERROR
deleting interface pVirtlface %s from ifgroup %d"	DEBUG	fwPPTPGenericRules.c: unable to open the database file "	ERROR
adding interface pVirtlface %s to ifgroup %d failed	DEBUG	fwPPTPGenericRules.c: inet_aton failed	ERROR
Deleting IP address %s.	DEBUG	DNS proxy firewall rule add failed for %s	ERROR
Adding new IP address %s.	DEBUG	deleting interface %s from ifgroup %d failed	ERROR
Updating old IP address %s to new IP address %s.	DEBUG	adding interface %s to ifgroup %d failed	ERROR
Restarting Firewall For %s Address Update from %s:%s	DEBUG	nimfBridgeTblHandler: unable to get interfaceName	ERROR
Disabling Firewall Rule for MSS packet marking	DEBUG	nimfBridgeTblHandler: \	ERROR
Enabling Firewall Rule for MSS packet marking	DEBUG	nimfBridgeTblHandler: unable to get \	ERROR
Enabling packet marking rule for %s IDLE timer	DEBUG	Failed to %s traffic from %s to %s to IPS.	ERROR
Deleted firewall rule %s for service %s with action %s	DEBUG	Failed to %s traffic from %s to %s to IPS.	ERROR
%s firewall rule %s for service %s with action %s	DEBUG	failed to start IPS service.	ERROR
Added firewall rule %s for service %s with action %s	DEBUG	Timeout in waiting for IPS service to start.	ERROR
Deleting inbound(WAN-LAN) firewall rule.	DEBUG	Usage:%s <DBFile> <opType> <tblName> <rowId> "	ERROR
Deleting inbound(WAN-DMZ) firewall rule.	DEBUG	xlr8NatConfig: illegal invocation of (%s)	ERROR
RIPng disabled.	DEBUG	Illegal invocation of [%s]	ERROR
RIPng enabled.	DEBUG	xlr8NatMgmtTblHandler: failed query: %s	ERROR
Disable IPv6 firewall rule.	DEBUG	Could not open file: %s	ERROR
Enable IPv6 firewall rule.	DEBUG	Rip Error Command Too Long	ERROR
Deleting IGMP proxy rule.	DEBUG	No authentication for Ripv1	ERROR
Enable IGMP proxy rule.	DEBUG	Invalid Rip Direction	ERROR
Restarting IGMP rule.	DEBUG	Invalid Rip Version	ERROR
Traffic meter enabled with no limit type.	DEBUG	Invalid Password for 1st Key	ERROR
Traffic meter enabled for only download.	DEBUG	Invalid Time for 1st Key	ERROR
Traffic meter enabled for both directions.	DEBUG	Invalid Password for 2nd Key	ERROR
Deleted firewall rule %s for service %s with action %s	DEBUG	Invalid Time for 2nd Key	ERROR
%s firewall rule %s for service %s with action %s	DEBUG	Invalid First KeyId	ERROR
Added firewall rule %s for service %s with action %s	DEBUG	Invalid Second KeyId	ERROR
Enabling Inter VLAN routing.	DEBUG	Invalid Authentication Type	ERROR
Updating inter VLAN routing status.	DEBUG	ripDisable failed	ERROR
Deleting inter VLAN routing.	DEBUG	ripEnable failed	ERROR

Facility: Local0 (Wireless)

Log Message	Severity	Log Message	Severity
(node=%s) setting %s to val = %d	DEBUG	sqlite3QueryResGet failed	ERROR
Custom wireless event: '%s'	DEBUG	sqlite3QueryResGet failed	ERROR
Wireless event: cmd=0x%x len=%d	DEBUG	VAP(%s) set beacon interval failed	ERROR
New Rogue AP (%02x:%02x:%02x:%02x:%02x:%02x) detected	DEBUG	VAP(%s) set DTIM interval failed	ERROR
WPS session in progress, ignoring enrolle assoc request	DEBUG	VAP(%s) set RTS Threshold failed	ERROR
ran query %s	DEBUG	VAP(%s) set Fragmentation Threshold failed	ERROR
DBUupdate event: Table: %s opCode:%d rowId:%d	DEBUG	VAP(%s) set Protection Mode failed	ERROR
%sing VAPs using profile %s	DEBUG	VAP(%s) set Tx Power failed	ERROR
%sing VAP %s	DEBUG	WDS Profile %s not found	ERROR
ran query %s	DEBUG	Failed to initalize WPS on %s	ERROR
%sing VAP instance %s	DEBUG	failed to get profile %s	ERROR
VAP(%s) set Short Preamble failed	DEBUG	could not initialize MGMT framework	ERROR
VAP(%s) set Short Retry failed	DEBUG	could not initialize MGMT framework	ERROR
VAP(%s) set Long Retry failed	DEBUG	dot11VapBssidUpdt SQL error: %s	ERROR
Decrypting context with key %s	DEBUG	sqlite3QueryResGet failed.Query:%s KDOT11_GET_PARAM(IEEE80211_I OC_CHANNEL) failed	ERROR
Unknown IAPP command %d received.	DEBUG	Failed to get the channel setting for %s	ERROR
unexpected reply from %d cmd=%d !	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
unexpected reply from %d cmd=%d !	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
Recvied DOT11_EAPOL_KEYMSG	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
shutting down AP:%s	DEBUG	profile %s not found	ERROR
APCtx Found	DEBUG	sqlite3QueryResGet failed.Query:%s	ERROR
APCtx Not-Found	DEBUG	Interface name and policy must be specified	ERROR
node not found *.*:%x:%x:%x	DEBUG	Interface name and policy must be specified	ERROR
error installing unicast key for %s	DEBUG	invalid ACL type %d	ERROR
cmd =%d i_type =%d i_val=%d	DEBUG	interface name not specified	ERROR
join event for new node %s	DEBUG	interface name not specified	ERROR
wpa/rsn IE id %d/%d not supported	DEBUG	Invalid interface - %s specified	ERROR
wpa IE id %d not supported	DEBUG	buffer length not specified	ERROR
leave event for node %s	DEBUG	Invalid length(%d) specified	ERROR
NodeFree request for node : %s	DEBUG	failed created iappdLock	ERROR
installing key to index %d	DEBUG	failed to create cipher contexts.	ERROR
iReq.i_val : %d	DEBUG	unable to register to UMI	ERROR
plfName : %s	DEBUG	iappSockInit() failed	ERROR
iReq.i_val : %d	DEBUG	iappInIt got error, unregistering it with UMI	ERROR
setting mode: %d	DEBUG	umiloctl(UMI_COMP_UDOT11,%d,%d) failed	ERROR
Global counter wrapped, re-generating...	DEBUG	umiloctl(UMI_COMP_KDOT11,%d,%d) failed	ERROR

Got PNAC_EVENT_PREAMTH_SUCCESS event for : %s	DEBUG	UDP failed, received Length is %d	ERROR
event for non-existent node %s	DEBUG	umiloctl(UMI_COMP_KDOT11, umiloctl(UMI_COMP_UDOT11,%d,%d) \	ERROR
PNAC_EVENT_EAPOL_START event received	DEBUG	umiloctl(UMI_COMP_KDOT11,%d,%d) \	ERROR
PNAC_EVENT_EAPOL_LOGOFF event received	DEBUG	umiloctl(UMI_COMP_KDOT11,%d,%d) \	ERROR
PNAC_EVENT_REAUTH event received	DEBUG	No IAPP Node found for req id %d	ERROR
PNAC_EVENT_AUTH_SUCCESS event received	DEBUG	umiloctl(UMI_COMP_UDOT11,%d,%d) \	ERROR
PNAC_EVENT_PORT_STATUS_CHAN GED event received	DEBUG	umiloctl(UMI_COMP_KDOT11,%d,%d) \	ERROR
unsupported event %d from PNAC event for non-existent node %s. Create new node.	DEBUG	umiloctl(UMI_COMP_UDOT11,%d,%d) failed	ERROR
Add new node to DOT11 Node list	DEBUG	UDP socket is not created	ERROR
Update dot11STA database	DEBUG	UDP send failed	ERROR
Add PMKSA to the list	DEBUG	IAPP: socket (SOCK_STREAM) failed.	ERROR
eapolRecvAuthKeyMsg: received key message	DEBUG	IAPP: TCP connect failed to %s.	ERROR
node not found	DEBUG	cmd %d not supported.sender=%d umiloctl(UMI_COMP_KDOT11,%d,%d) failed	ERROR
eapolRecvKeyMsg: replay counter not incremented	DEBUG	IAPP-CACHE-NOTIFY-REQUEST send to	ERROR
eapolRecvKeyMsg: replay counter is not same	DEBUG	./src/dot11/iapp/iappLib.c:1314: ADP_ERROR (ERROR
processing pairwise key message 2	DEBUG	BSSID value passed is NULL	ERROR
RSN IE matching: OK	DEBUG	reserved requestId is passed	ERROR
processing pairwise key message 4	DEBUG	interface name is NULL	ERROR
processing group key message 2	DEBUG	IP address value passed is NULL	ERROR
processing key request message from client	DEBUG	opening receive UDP socket failed enabling broadcast for UDP socket failed	ERROR
WPA version %2x %2x not supported	DEBUG	opening receive TCP socket for new AP failed	ERROR
(%s) group cipher %2x doesn't match	DEBUG	./src/dot11/iapp/iappLib.c:1784: ADP_ERROR(ERROR
(%s)Pairwise cipher %s not supported	DEBUG	./src/dot11/iapp/iappLib.c:1794: ADP_ERROR(ERROR
(%s) authentication method %d not supported	DEBUG	./src/dot11/iapp/iappLib.c:1803: ADP_ERROR(ERROR
%s:Auth method=%s pairwise cipher=%s IE size=%d	DEBUG	./src/dot11/iapp/iappLib.c:1803: ADP_ERROR(ERROR
WPA version %2x %2x not supported	DEBUG	failed created dot11dLock.	ERROR
Unable to obtain IE of type %d	DEBUG	failed initialize profile library.	ERROR
PTK state changed from %s to %s	DEBUG	failed to create cipher contexts.	ERROR
using PMKSA from cache	DEBUG	unable to register to UMI	ERROR
PTK GK state changed from %s to %s	DEBUG	could not create MIB tree	ERROR
GK state changed from %s to %s	DEBUG	unable to register to PNAC	ERROR
Sending PTK Msg1	DEBUG	Max registration attempts by DOT11 to PNAC exceeded	ERROR
Sending PTK Msg3	DEBUG	Creation of EAP WPS Profile Failed	ERROR
Sending GTK Msg1	DEBUG	umiloctl(UMI_COMP_IAPP,%d) failed	ERROR

sending EAPOL pdu to PNAC...	DEBUG	DOT11_RX_EAPOL_KEYMSG: unknown ifname %s	ERROR
creating pnaac authenticator with values %d %d - %s	DEBUG	cmd %d not supported.sender=%d	ERROR
Profile %s does not exist	DEBUG	interface name passed is NULL	ERROR
IAPP initialized.	DEBUG	BSSID passed is NULL	ERROR
Encrypting context key=%s for	DEBUG	interface name passed is NULL	ERROR
could not find access point context for %s	DEBUG	unable to allocate memory for DOT11_CTX	ERROR
join event for existing node %s	DEBUG	unable to install wme mapping on %s	ERROR
failed to send PNAC_FORCE_AUTHORIZED "	DEBUG	unable to get %s mac address	ERROR
failed to send PNAC_AUTHORIZED "	DEBUG	Failed to set %s SSID	ERROR
failed to send PNAC_VAR_KEY_AVAILABLE (TRUE) "	DEBUG	Failed to set SSID broadcast status	ERROR
failed to send PNAC_VAR_KEY_TX_EN (TRUE) "	DEBUG	Failed to set PreAuth mode	ERROR
failed to send PNAC_VAR_KEY_TX_EN (FALSE) "	DEBUG	unable to install key	ERROR
failed to send PNAC_FORCE_AUTHORIZED "	DEBUG	KDOT11_SET_PARAM:IEEE80211_I OC_AUTHMODE failed	ERROR
failed to send PNAC_AUTHORIZED "	DEBUG	KDOT11_SET_PARAM:IEEE80211_I OC_PRIVACY failed	ERROR
mic verification: OK	DEBUG	wpaInit failed	ERROR
pnacIfConfig: Invalid supplicant"	DEBUG	dot11InstallProfile: unable to get interface index	ERROR
Failed to process user request	DEBUG	adpHmacInIt(%s) failed	ERROR
Failed to process user request - %s(%d)	DEBUG	interface %s not found	ERROR
pnacIfConfigUmilocl: umilocl failed	DEBUG	AP not found on %s	ERROR
pnacIfConfigUmilocl: usrPnac returned %d	DEBUG	keyLen > PNAC_KEY_MAX_SIZE	ERROR
pnacIfConfigUmilocl: usrPnac returned %d	DEBUG	Invalid profile name passed	ERROR
pnacIfConfigUmilocl: usrPnac returned %d	DEBUG	Creation of WPS EAP Profile failed	ERROR
pnacKernNotifier: invalid PAE configuration "	DEBUG	unsupported command %d	ERROR
From pnaacEapDemoAuthRecv: unsupported response "	DEBUG	device %s not found	ERROR
From pnaacEapDemoAuthRecv: invalid codes received	DEBUG	unsupported command %d	ERROR
From pnaacRadXlateDemoRecv: received unknown "	DEBUG	dot11NodeAlloc failed	ERROR
From pnaacRadXlateDemoRecv: invalid codes received	DEBUG	Getting WPA IE failed for %s	ERROR
Error from pnaacRadXlateDemoRecv: malloc failed	DEBUG	Getting WPS IE failed for %s	ERROR
From pnaacRadXlateRadPktHandle: received a non-supported"	DEBUG	Failed initialize authenticator for node %s	ERROR
Only md5 authentication scheme currently supported. "	DEBUG	Failed to get the system up time while adding node %s	ERROR
Message from authenticator:	DEBUG	error creating PNAC port for node %s	ERROR
from pnaacPDUxmit: bufsize = %d, pktType = %d,"	DEBUG	dot11NodeAlloc failed	ERROR
pnacPDUxmit: sending eap packet. code = %d, "	DEBUG	Invalid arguments.	ERROR

pnacRecvRtn: no corresponding pnae port pae found	DEBUG	umiloctl(UMI_COMP_IAPP,%d) failed	ERROR
sending unicast key	DEBUG	Invalid IE.	ERROR
sending broadcast key	DEBUG	umiloctl(UMI_COMP_KDOT11_VAP,%d) failed	ERROR
from pnaeAuthPAEDisconnected: calling pnaeTxCannedFail	DEBUG	umiloctl(UMI_COMP_KDOT11,%d ,%d) failed	ERROR
from pnaeAuthPAEForceUnauth: calling pnaeTxCannedFail	DEBUG	KDOT11_SET_PARAM:IEEE80211_IOC_WME_CWMIN failed	ERROR
state changed from %s to %s	DEBUG	KDOT11_SET_PARAM:IEEE80211_IOC_WME_CWMAX failed	ERROR
PNAC user comp id not set. dropping event %d	DEBUG	KDOT11_SET_PARAM:IEEE80211_IOC_WME_AIFS failed	ERROR
sending event %d to %d	DEBUG	KDOT11_SET_PARAM:80211_IOC_WME_TXOPLIMIT failed	ERROR
requesting keys information from %d	DEBUG	KDOT11_SET_PARAM:IEEE80211_IOC_WME_ACM failed	ERROR
pnacUmiPortPaeParamSet: error in getting port pae	DEBUG	KDOT11_SET_PARAM:IEEE80211_IOC_WME failed	ERROR
pnacUmiPortPaeParamSet: invalid param - %d	DEBUG	invalid group cipher %d	ERROR
pnacRecvASInfoMessage: Skey of length %d set	DEBUG	KDOT11_SET_PARAM:IEEE80211_IOC_MCASTCIPHER failed	ERROR
pnacRecvASInfoMessage: reAuthPeriod set to: %d	DEBUG	KDOT11_SET_PARAM:IEEE80211_IOC_MCASTKEYLEN failed	ERROR
pnacRecvASInfoMessage: suppTimeout set to: %d	DEBUG	KDOT11_SET_PARAM:IEEE80211_IOC_UCASTCIPHERS failed	ERROR
PORT SUCCESSFULLY DESTROYED	DEBUG	KDOT11_SET_PARAM:IEEE80211_IOC_KEYMGMTALGS failed	ERROR
creating physical port for %s	DEBUG	KDOT11_SET_PARAM:IEEE80211_IOC_WPA failed	ERROR
pnacAuthInit: using default pnaeAuthParams	DEBUG	unknow cipher type = %d	ERROR
pnacSuppInit: using default pnaeSuppParams	DEBUG	umiloctl(UMI_COMP_IAPP,%d) failed	ERROR
Error from pnaeCombinedStMachTriggerFunc: "	DEBUG	invalid media value=%d	ERROR
Error from pnaeCombinedStMachTriggerFunc: "	DEBUG	invalid mediaOpt value=%d	ERROR
Error from pnaeCombinedStMachTriggerFunc: "	DEBUG	invalid mode value=%d	ERROR
Error from pnaeCombinedStMachTriggerFunc: "	DEBUG	dot11PnaeIcfCreate failed	ERROR
Error from pnaeCombinedStMachTriggerFunc: "	DEBUG	wpaPRF failed	ERROR
Error from pnaeCombinedStMachTriggerFunc: "	DEBUG	Error generating global key counter	ERROR
Error from pnaeCombinedStMachTriggerFunc: "	DEBUG	wpaCalcMic: unsupported key descriptor version	ERROR
Error from pnaeCombinedStMachTriggerFunc: "	DEBUG	integrity failed. need to stop all stations "	ERROR
Error from pnaeCombinedStMachTriggerFunc: "	DEBUG	couldn't find AP context for %s interface	ERROR
received a pdu on %s	DEBUG	dot11Malloc failed	ERROR
pnacRecvMapi: protoType: %04x pPhyPort->authToASSendRtn:%p	DEBUG	dot11Malloc failed	ERROR
port not found	DEBUG	eapolRecvKeyMsg: unknown descType =%d	ERROR

from pncacRecvMapi: pkt body len = %d, pktType = %d	DEBUG	eapolRecvKeyMsg: invalid descriptor version	ERROR
from pncacPDUPProcess: received PNCAC_EAP_PACKET	DEBUG	eapolRecvKeyMsg: incorrect descriptor version	ERROR
from pncacPDUPProcess: currentId = %d	DEBUG	eapolRecvKeyMsg: Ack must not be set	ERROR
from pncacPDUPProcess: code = %d, identifier = %d, "	DEBUG	eapolRecvKeyMsg: MIC bit must be set	ERROR
from pncacPDUPProcess: setting rxResp true	DEBUG	wpaAuthRecvPTKMsg2: unexpected packet received	ERROR
from pncacPDUPProcess: code = %d, identifier = %d, "	DEBUG	wpaAuthRecvPTKMsg2: mic check failed	ERROR
from pncacPDUPProcess: received "	DEBUG	wpaAuthRecvPTKMsg2: rsn ie mismatch	ERROR
from pncacPDUPProcess: received "	DEBUG	wpaAuthRecvPTKMsg4: unexpected packet received	ERROR
from pncacPDUPProcess: received PNCAC_EAPOL_KEY_PACKET	DEBUG	wpaAuthRecvPTKMsg4: keyDataLength not zero	ERROR
doing pncacTxCanceledFail	DEBUG	wpaAuthRecvPTKMsg4: mic check failed	ERROR
doing pncacTxCanceledSuccess	DEBUG	wpaAuthRecvGTKMsg2: unexpected packet received	ERROR
doing pncacTxReqId	DEBUG	secureBit not set in GTK Msg2	ERROR
doing pncacTxReq	DEBUG	wpaAuthRecvGTKMsg2: keyDataLength not zero	ERROR
doing pncacTxStart	DEBUG	wpaAuthRecvGTKMsg2: mic check failed	ERROR
doing pncacTxLogoff	DEBUG	wpaAuthRecvKeyReq: unexpected packet received	ERROR
doing pncacTxRspId: 1st cond	DEBUG	wpaAuthRecvKeyReq: keyDataLength not zero	ERROR
doing pncacTxRspId: entering 2nd cond	DEBUG	wpaAuthRecvKeyReq: mic check failed	ERROR
from pncacTxRspId: code = %d, identifier = %d, length = %d, "	DEBUG	invalid OUI %x %x %x	ERROR
doing pncacTxRspId: 2nd cond	DEBUG	(%s) invalid OUI %x %x %x	ERROR
doing pncacTxRspAuth: 1st cond	DEBUG	[%s:%d] Cipher in WPA IE : %x	ERROR
doing pncacTxRspAuth: 2nd cond	DEBUG	(%s) invalid OUI %x %x %x	ERROR
message for unknown port PAE	DEBUG	short WPA IE (length = %d) received	ERROR
from pncacACToSuppRecvRtn: calling pncacEapPktRecord	DEBUG	PTK state machine in unknown state.	ERROR
from pncacEapPktRecord: code = %d, identifier = %d, "	DEBUG	dot11InstallKeys failed	ERROR
from pncacEapPktRecord: received success pkt	DEBUG	group state machine entered into WPA_AUTH_GTK_INIT	ERROR
from pncacEapPktRecord: received failure pkt	DEBUG	dot11Malloc failed	ERROR
from pncacEapPktRecord: received request pkt	DEBUG	dot11Malloc failed	ERROR
unknown EAP-code %d	DEBUG	dot11Malloc failed	ERROR
Authenticator[%d]:	DEBUG	aesWrap failed	ERROR
Auth PAE state = %s	DEBUG	unknown key descriptor version %d	ERROR
Auth Reauth state = %s	DEBUG	dot11Malloc failed	ERROR
Back auth state = %s	DEBUG	could not initialize AES128ECB	ERROR
Supplicant[%d]:	DEBUG	could not initialize AES-128-ECB	ERROR
Supp Pae state = %s	DEBUG	MD5 initialization failed	ERROR

from pnaBackAuthFail: calling pnaTxCannedFail	DEBUG	RC4 framework initialization failed	ERROR
%s returned ERROR	DEBUG	PNAC framework initialization failed	ERROR
pnacUmiOctlHandler: cmd: %s(%d)	DEBUG	ERROR: option value not specified	ERROR
%s not configured for 802.1x	DEBUG	ERROR: -u can be used only with -s	ERROR
could not process PDU received from the wire	DEBUG	ERROR: user-name not specified	ERROR
pnacPDUForward: failed to forward the received PDU	DEBUG	failed to enable debug	ERROR
Creating PHY port with AUTH backend : %s SendRtn: %p RecvRtn:%p	DEBUG	[%s]: failed to convert string to MAC "	ERROR
pnacUmiAuthConfig: %s not configured for 802.1x	DEBUG	failed to initialize UMI	ERROR
pnacSuppRegisterUserInfo: not a valid AC	DEBUG	pnacPhyPortParamSet:invalid arguments	ERROR
pnacIfConfig: autoAuth Enabled	DEBUG	pnacPhyPortParamSet:Failed to create socket	ERROR
pnacSendRtn: no pna port pae found for "	DEBUG	Error from pnaPhyPortParamSet:%s-device invalid	ERROR
sending portStatus: %s[%d] to dot11	DEBUG	Error from pnaPhyPortParamSet:%s-Getting MAC address "	ERROR
pnacRecvASInfoMessage: Rkey of length %d set	DEBUG	pnacPhyPortParamSet:Failed to add 802.1X multicast "	ERROR
ASSendRtn: %p ASToAuthRecv: %p	DEBUG	pnacInterfaceUp: failed to create a raw socket	ERROR
adpRand failed:unable to generate random unicast key	WARN	pnacInterfaceUp: failed to get interface flags	ERROR
using group key as unicast key	WARN	failed to allocate buffer	ERROR
Integrity check failed more than once in last 60 secs.	WARN	UMI initialization failed	ERROR
MIC failed twice in last 60 secs, taking countermeasures	WARN	UMI initialization failed	ERROR
Failed to set dot11 port status	WARN	Error from pnaEapDemoAuthLibInit: malloc failed	ERROR
PTK state machine in NO_STATE.	WARN	Error from pnaEapDemoAuthRecv: received null EAP pkt	ERROR
PTK state machine in NO_STATE!!	WARN	Error from pnaEapDemoAuthRecv: send "	ERROR
PMKSA reccount not 1	WARN	Error from pnaRadXlateASAdd: cannot open socket	ERROR
IV verification failedknown subtype>	WARN	Error from pnaRadXlateDemoRecv: received null EAP pkt	ERROR
pnacIfConfig: overwriting previous interface "	WARN	From pnaRadXlateDemoRecv: send "	ERROR
pnacIfConfig: overwriting previous "	WARN	Error from pnaRadXlateDemoRecv: radius "	ERROR
pnacIfConfig: overwriting previous username"	WARN	Error from pnaRadXlateDemoRecv: radius "	ERROR
pnacIfConfig: overwriting previous password"	WARN	Error from pnaRadXlateRadIdRespSend: send to failed	ERROR
%s: Failed to set port status	WARN	Error from pnaRadXlateRadNonIdRespSend: send to failed	ERROR
%s: Failed to notify event to dot11	WARN	Error from pnaRadXlateRadRecvProc: rcvfrom failed	ERROR
pnacLibDeinit: Failed to destroy the	WARN	From	ERROR

phyPort:%s		pnacRadXlateRadPktIntegrityChk: no corresponding "	
pnacPortPaeDeconfig:kpnacPortPaeDeconfig failed	WARN	Error from pnacRadXlateRadPktIntegrityChk: no message "	ERROR
pnacPortPaeDeconfig:kpnacPortPaeDeconfig failed	WARN	Error from pnacRadXlateRadPktIntegrityChk: "	ERROR
pnacBackAuthSuccess: failed to notify the destination "	WARN	From pnacRadXlateRadChalPktHandle: no encapsulated eap "	ERROR
could not initialize MGMT framework	ERROR	Error from pnacRadXlateRadChalPktHandle: malloc for eap "	ERROR
umilnit failed	ERROR	Error from pnacEapDemoSuppUserInfoRegister: invalid "	ERROR
iapplnit failed	ERROR	Error from pnacEapDemoSuppRecv: received null EAP pkt	ERROR
could not initialize IAPP MGMT.	ERROR	Error from pnacEapDemoSuppRecv: send ptr to pnac supplicant"	ERROR
dot11Malloc failed	ERROR	From pnacEapDemoSuppRecv: user info not entered yet	ERROR
buffer length not specified	ERROR	Error from pnacEapDemoSuppRecv: couldn't "	ERROR
Invalid length(%d) specified	ERROR	MDString: adpDigestInit for md5 failed	ERROR
Failed to get information about authorized AP list.	ERROR	pnacUmilnit: UMI initialization failed	ERROR
Recd IE data for non-existent AP %s	ERROR	could not start PNAC task	ERROR
Recd IE data for wrong AP %s	ERROR	invalid aruments	ERROR
Received Invalid IE data from WSC	ERROR	pnacIfNameToIndex failed	ERROR
Recd IE data for non-existent AP %s	ERROR	pnacPhyPortParamSet: device invalid %s%d	ERROR
Recd WSC Start command without interface name	ERROR	pnacPhyPortParamSet: EIOCGADDR ioctl failed	ERROR
Recd WSC start for non-existent AP %s	ERROR	pnacPhyPortParamSet: multicast addr add ioctl failed	ERROR
Recd WSC start for wrong AP %s	ERROR	pnacPhyPortParamUnset: multicast addr del ioctl failed	ERROR
Unable to send WSC_WLAN_CMD_PORT to WSC	ERROR	pnacPDUxmit: Invalid arguments	ERROR
Failed to get the ap context for %s	ERROR	pnacPDUxmit: failed to get M_BLK_ID from pnaclsInterfaceUp: device %s%d invalid	ERROR
WPS can only be applied to WPA/WPA2 security profiles	ERROR	pnacRecvRtn: dropping received packet as port is"	ERROR
wpsEnable: running wscmd failed	ERROR	pnacSendRtn: Invalid arguments	ERROR
Failed to get the ap context for %s	ERROR	pnacSendRtn: no physical port corresponding to"	ERROR
WPS conf. under non WPA/WPA2 security setting	ERROR	pnacSendRtn: dropping packet as port"	ERROR
Failed to reset the Beacon Frame IE in the driver	ERROR	pnacAuthBuildRC4KeyDesc: adpEncryptInit(RC4) failed	ERROR
Failed to reset the Beacon Frame IE in the driver	ERROR	pnacAuthBuildRC4KeyDesc: adpCipherContextCtrl"	ERROR
WPS method cannot be NULL	ERROR	pnacDot11UserSet: incorrect buffer length	ERROR
PIN value length should be a multiple of 4 !!	ERROR		ERROR
Failed to initiate PIN based association, PIN = %s	ERROR	PNAC user component id not set.	ERROR

Failed to initiate PBC based enrolle association	ERROR	pnacKeyInfoGet:failed to allocate buffer	ERROR
Invalid association mode. (Allowed modes : PIN/PBC)	ERROR	PNAC user comp id not set. dropping EAPOL key pkt	ERROR
wpsEnable: running wscmd failed	ERROR	pnacUmiPortPaeParamSet: invalid buffer received	ERROR
Failed to send QUIT command to WSC from DOT11	ERROR	Error from pnacRecvASInfoMessage: "	ERROR
Failed to clear off the WPS process	ERROR	pnacRecvASInfoMessage: "	ERROR
missing profile name	ERROR	pnacRecvASInfoMessage: Bad info length	ERROR
A profile exists with the same name	ERROR	Error from pnacLibInit: malloc failed	ERROR
Error in allocating memory for profile	ERROR	could not create phy ports lock	ERROR
missing profile name	ERROR	could not create nodes ports lock	ERROR
missing profile name	ERROR	port exists for iface - %s	ERROR
Profile name and interface name must be specified	ERROR	pnacPhyPortCreate failed	ERROR
Profile %s does not exist	ERROR	kpnacPhyPortCreate failed	ERROR
Could not set profile %s on the interface %s	ERROR	invalid argument	ERROR
missing profile name	ERROR	pnacAuthConfig: maxAuth limit reached	ERROR
Profile %s does not exist	ERROR	pnacAuthConfig: malloc failed	ERROR
Profile %s does not exist	ERROR	Error from pnacAuthConfig: pAsArg cannot be NULL	ERROR
SSID should not be longer than %d	ERROR	Error from pnacAuthConfig: receive routine hook "	ERROR
Profile %s does not exist	ERROR	pnacAuthConfig: pnacAuthInit failed	ERROR
Profile %s does not exist	ERROR	kpnacPortPaeConfig failed	ERROR
Profile %s does not exist	ERROR	Invalid arguments	ERROR
Profile %s does not exist	ERROR	Error from pnacSuppConfig: malloc failed	ERROR
Profile %s does not exist	ERROR	Error from pnacSuppConfig: receive routine hook "	ERROR
Profile %s does not exist	ERROR	Error from pnacSuppConfig: pnacSupplnit failed	ERROR
SSID not set. SSID is needed to generate password hash	ERROR	kpnacPortPaeConfig failed	ERROR
Password string too big	ERROR	pnacAuthDeconfig failed: pPortPae NULL	ERROR
dot11Malloc failed	ERROR	Error from pnacPhyPortDestroy: port not configured	ERROR
Profile %s does not exist	ERROR	pnacPhyPortDestroy: Failed to deconfigure port	ERROR
Hex string should only have %d hex chars	ERROR	pnacPhyPortParamUnset FAILED	ERROR
dot11Malloc failed	ERROR	Error from pnacPhyPortCreate: malloc failed	ERROR
Profile %s does not exist	ERROR	Error from pnacPhyPortCreate: pnacPhyPortParamSet"	ERROR
invalid key index %d. key index should be 0-3.	ERROR	error from pnacPhyPortCreate: malloc failed	ERROR
wepKey length incorrect	ERROR	Error from pnacAuthInit: pnacPortTimersInit failed	ERROR
Profile %s does not exist	ERROR	Error from pnacAuthInit: pnacAuthPAEInit failed	ERROR

Invalid Cipher type %d	ERROR	Error from pncAuthInit: pncAuthKeyTxInit failed	ERROR
Profile supports WEP stas,Group cipher must be WEP	ERROR	Error from pncAuthInit: pncReauthTimerInit failed	ERROR
Profile %s does not exist	ERROR	Error from pncAuthInit: pncBackAuthInit failed	ERROR
Profile %s does not exist	ERROR	Error from pncAuthInit: pncCtrlDirInit failed	ERROR
Profile %s does not exist	ERROR	Error from pncAuthInit: pncKeyRecvInit failed	ERROR
invalid pairwise cipher type %d	ERROR	Error from pncSupplnit: malloc failed	ERROR
Cipher %s is already in the list.	ERROR	Error from pncSupplnit: pncPortTimersInit failed	ERROR
Profile %s does not exist	ERROR	Error from pncSupplnit: pncKeyRecvInit failed	ERROR
Invalid Cipher type %d	ERROR	Error from pncSupplnit: pncSuppKeyTxInit failed	ERROR
Cipher %s not found in the list.	ERROR	Error from pncSupplnit: pncSuppPAEInit failed	ERROR
Profile %s does not exist	ERROR	Error from pncRecvRtn: invalid arguments	ERROR
Profile %s does not exist	ERROR	Error from pncRecvMapi: unsupported PDU received	ERROR
Auth method %s is already in the list	ERROR	suppToACSendRtn returned not OK!	ERROR
Profile %s does not exist	ERROR	Error from pncBasicPktCreate: malloc failed	ERROR
Auth method %s not found in the list.	ERROR	Error from pncEAPPktCreate: basic pkt create failed	ERROR
Profile %s does not exist	ERROR	Error from pncTxCannedFail: eap pkt create failed	ERROR
Profile %s does not exist	ERROR	Error from pncTxCannedSuccess: eap pkt create failed	ERROR
Profile %s does not exist	ERROR	Error from pncTxReqId: eap pkt create failed	ERROR
invalid type value %d. supported values are 1,2,3,4	ERROR	Error from pncTxReq: eap pkt create failed	ERROR
Profile %s does not exist	ERROR	Error from pncSendRespToServer: malloc failed	ERROR
invalid type value %d. supported values are 1,2,3,4	ERROR	Error from pncSendRespToServer: no AS configured	ERROR
Profile %s does not exist	ERROR	Error from pncTxStart: basic pkt create failed	ERROR
invalid type value %d. supported values are 1,2,3,4	ERROR	Error from pncTxStart: basic pkt create failed	ERROR
Profile %s does not exist	ERROR	Error from pncTxRspld: eap pkt create failed	ERROR
invalid type value %d. supported values are 1,2,3,4	ERROR	Error from pncTxRspAuth: eap pkt create failed	ERROR
Profile %s does not exist	ERROR	Error from pncEapPktRecord: EAP packet too"	ERROR
invalid type value %d. supported values are 1,2,3,4	ERROR	Error from pncEapPktRecord: "	ERROR
Profile %s does not exist	ERROR	from pncBackAuthTimeout: calling pncTxCannedFail	ERROR
ERROR: incomplete DB update information.	ERROR	hmac_md5: adpHmacContextCreate failed	ERROR
old values result does not contain 2 rows	ERROR	hmac_md5:adpHmacInit failed	ERROR
sqlite3QueryResGet failed	ERROR	pncUmiloctlHandler: invalid cmd: %d	ERROR

Error in executing DB update handler	ERROR	pnacEapRadAuthSend: Invalid arguments	ERROR
sqlite3QueryResGet failed	ERROR	pnacEapRadAuthSend: failed to allocate inbuffer	ERROR
ERROR: incomplete DB update information.	ERROR	pnacXmit : umiloctl failed[%d]	ERROR
old values result does not contain 2 rows	ERROR	pnacPDUForward: Invalid input	ERROR
sqlite3QueryResGet failed	ERROR	pnacPDUForward: error in getting port pae information	ERROR
Error in executing DB update handler	ERROR	pnacPDUForward: error allocating memory	ERROR
sqlite3QueryResGet failed.Query:%s	ERROR	pnacUmiIfMacAddrChange: %s not configured for 802.1x	ERROR
sqlite3QueryResGet failed.Query:%s	ERROR	pnacUmiIfMacAddrChange: could not process PDU received"	ERROR
sqlite3QueryResGet failed.Query:%s	ERROR	pnacUmiPhyPortConfig: Invalid config data	ERROR
sqlite3QueryResGet failed.Query:%s	ERROR	pnacUmiPhyPortConfig: Invalid backend name specified	ERROR
startStopVap failed to stop %s	ERROR	pnacUmiPhyPortConfig: could not create PNAC physical"	ERROR
Invalid SQLITE operation code - %d	ERROR	pnacUmiAuthConfig: Invalid config data	ERROR
./src/dot11/mgmt/dot11Mgmt.c:1177: ADP_ERROR (ERROR	pnacUmiAuthConfig: Invalid backend name specified	ERROR
only delete event expected on dot11RogueAP.	ERROR	unable to create new EAP context.	ERROR
sqlite3QueryResGet failed	ERROR	unable to apply %s profile on the EAP context.	ERROR
unhandled database operation %d	ERROR	pnacUmiAuthConfig: could not configure PNAC PAE "	ERROR
sqlite3QueryResGet failed	ERROR	pnacUmiSuppConfig: Invalid config data	ERROR
failed to configure WPS on %s	ERROR	pnacUmiSuppConfig: Invalid backend name specified	ERROR
sqlite3QueryResGet failed	ERROR	pnacUmiSuppConfig: %s not configured for 802.1x	ERROR
sqlite3QueryResGet failed	ERROR	pnacUmiSuppConfig: could not PNAC port Access"	ERROR
sqlite3QueryResGet failed	ERROR	pnacUmiSuppConfig: Failed to register user information	ERROR
sqlite3QueryResGet failed	ERROR	pnacPortByMacDeconfig: port not found	ERROR
sqlite3QueryResGet failed	ERROR	pnacPortByMacDeconfig: port not found	ERROR
no VAP rows returned. expected one	ERROR	pnacUmiIfDown: Invalid config data	ERROR
multiple VAP rows returned. expected one	ERROR	pnacUmiIfDown: Invalid config data	ERROR
sqlite3QueryResGet failed	ERROR	Error from pnacPortDeconfig: port not configured	ERROR
invalid query result. ncols=%d nrows=%d	ERROR	pnacUmiIfDown: could not de-configure port	ERROR
%s:VAP(%s) create failed	ERROR	pnacUmiPhyPortDestroy: Invalid config data	ERROR
sqlite3QueryResGet failed	ERROR	pnacUmiPhyPortDestroy: Invalid config data	ERROR
invalid query result. ncols=%d nrows=%d	ERROR	pnacUmiPhyPortDestroy: Failed to destroy the port	ERROR

	Invalid config data	ERROR
--	---------------------	-------

Facility: Kernel

Log Message	Severity	Log Message	Severity
DNAT: multiple ranges no longer supported	DEBUG	%s: %s%:%d -> %s:%d %s,	DEBUG
DNAT: Target size %u wrong for %u ranges,	DEBUG	%s: %s%:%d %s,	DEBUG
DNAT: wrong table %s, tablename	DEBUG	%s: Failed to add WDS MAC: %s, dev->name,	DEBUG
DNAT: hook mask 0x%x bad, hook_mask	DEBUG	%s: Device already has WDS mac address attached,	DEBUG
%s%: resetting MPPC/MPPE compressor,	DEBUG	%s: Added WDS MAC: %s, dev->name,	DEBUG
%s%: wrong offset value: %d,	DEBUG	%s: WDS MAC address %s is not known by this interface,	DEBUG
%s%: wrong length of match value: %d,	DEBUG	[madwifi] %s() : Not enough space., __FUNCTION__	DEBUG
%s%: too big offset value: %d,	DEBUG	Returning to chan %d, ieeeChan	DEBUG
%s%: cannot decode offset value,	DEBUG	WEP	DEBUG
%s%: wrong length code: 0x%X,	DEBUG	AES	DEBUG
%s%: short packet (len=%d), __FUNCTION__	DEBUG	AES_CCM	DEBUG
%s%: bad sequence number: %d, expected: %d,	DEBUG	CKIP	DEBUG
%s%: bad sequence number: %d, expected: %d,	DEBUG	TKIP	DEBUG
PPPIOCDETACH file->f_count=%d,	DEBUG	%s: cannot map channel to mode; freq %u flags 0x%x,	DEBUG
PPP: outbound frame not passed	DEBUG	%s: %s, vap->iv_dev->name, buf	DEBUG
PPP: VJ decompression error	DEBUG	%s: [%s] %s, vap->iv_dev->name,	DEBUG
PPP: inbound frame not passed	DEBUG	%s: [%s] %s, vap->iv_dev->name, ether_sprintf(mac), buf	DEBUG
PPP: reconstructed packet	DEBUG	[%s:%s] discard %s frame, %s, vap->iv_dev->name,	DEBUG
PPP: no memory for	DEBUG	[%s:%s] discard frame, %s, vap->iv_dev->name,	DEBUG
missed pkts %u..%u,	DEBUG	[%s:%s] discard %s information element, %s,	DEBUG
%s%: resetting MPPC/MPPE compressor,	DEBUG	[%s:%s] discard information element, %s,	DEBUG
%s%: wrong offset value: %d,	DEBUG	[%s:%s] discard %s frame, %s, vap->iv_dev->name,	DEBUG
%s%: wrong length of match value: %d,	DEBUG	[%s:%s] discard frame, %s, vap->iv_dev->name,	DEBUG
%s%: too big offset value: %d,	DEBUG	ifmedia_add: null ifm	DEBUG
%s%: cannot decode offset value,	DEBUG	Adding entry for	DEBUG
%s%: wrong length code: 0x%X,	DEBUG	ifmedia_set: no match for 0x%x/0x%x,	DEBUG
%s%: short packet (len=%d), __FUNCTION__	DEBUG	ifmedia_set: target	DEBUG
%s%: bad sequence number: %d, expected: %d,	DEBUG	ifmedia_set: setting to	DEBUG

%s%d: bad sequence number: %d, expected: %d,	DEBUG	ifmedia_ioctl: no media found for 0x%x,	DEBUG
PPPIOCDETACH file->f_count=%d,	DEBUG	ifmedia_ioctl: switching %s to , dev->name	DEBUG
PPP: outbound frame not passed	DEBUG	ifmedia_match: multiple match for	DEBUG
PPP: VJ decompression error	DEBUG	<unknown type>	DEBUG
PPP: inbound frame not passed	DEBUG	desc->ifmt_string	DEBUG
PPP: reconstructed packet	DEBUG	mode %s, desc->ifmt_string	DEBUG
PPP: no memory for	DEBUG	<unknown subtype>	DEBUG
missed pkts %u..%u,	DEBUG	%s, desc->ifmt_string	DEBUG
%s: INC_USE_COUNT, now %d, __FUNCTION__, mod_use_count \	DEBUG	%s%s, seen_option++ ? , : ,	DEBUG
%s: DEC_USE_COUNT, now %d, __FUNCTION__, mod_use_count \	DEBUG	%s%s, seen_option++ ? , : ,	DEBUG
PPPOL2TP %s: _fmt,	DEBUG	%s, seen_option ? > :	DEBUG
PPPOL2TP: --> %s, __FUNCTION__)	DEBUG	%s: %s, dev->name, buf	DEBUG
PPPOL2TP: <-- %s, __FUNCTION__)	DEBUG	%s: no memory for sysctl table!, __func__	DEBUG
%s: recv: , tunnel->name	DEBUG	%s: no memory for VAP name!, __func__	DEBUG
%s: xmit:, session->name	DEBUG	%s: failed to register sysctls!, vap->iv_dev->name	DEBUG
%s: xmit:, session->name	DEBUG	%s: no memory for new proc entry (%s)!, __func__,	DEBUG
%s: module use_count is %d, __FUNCTION__, mod_use_count	DEBUG	%s: 0x%p len %u, tag, p, len	DEBUG
PPPOL2TP %s: _fmt,	DEBUG	%03d:, i	DEBUG
PPPOL2TP: --> %s, __FUNCTION__)	DEBUG	%02x, ((u_int8_t *)p)[i]	DEBUG
PPPOL2TP: <-- %s, __FUNCTION__)	DEBUG	first difference at byte %u, i	DEBUG
%s: recv: , tunnel->name	DEBUG	%s: , t->name	DEBUG
%s: xmit:, session->name	DEBUG	FAIL: ieee80211_crypto_newkey failed	DEBUG
%s: xmit:, session->name	DEBUG	FAIL: ieee80211_crypto_setkey failed	DEBUG
PPPOL2TP %s: _fmt,	DEBUG	FAIL: unable to allocate skbuff	DEBUG
PPPOL2TP: --> %s, __FUNCTION__)	DEBUG	FAIL: wep decap failed	DEBUG
PPPOL2TP: <-- %s, __FUNCTION__)	DEBUG	FAIL: decap botch; length mismatch	DEBUG
%s: recv: , tunnel->name	DEBUG	FAIL: decap botch; data does not compare	DEBUG
%s: xmit:, session->name	DEBUG	FAIL: wep encap failed	DEBUG
%s: xmit:, session->name	DEBUG	FAIL: encap data length mismatch	DEBUG
IRQ 31 is triggered	DEBUG	FAIL: encrypt data does not compare	DEBUG
[%s:%d] , __func__ , __LINE__ \	DEBUG	PASS	DEBUG
\t[R%s %#0x %#0x 0x%08x%08x], (status == ERROR ? # :), page, addr, (uint32_t)(*pValue >> 32), (uint32_t)(*pValue & 0xffffffff)	DEBUG	%u of %u 802.11i WEP test vectors passed, pass, total	DEBUG
\t[W%s %#0x %#0x 0x%08x%08x], (status == ERROR ? # :), page, addr, (uint32_t)(value >> 32), (uint32_t)(value & 0xffffffff)	DEBUG	%s: 0x%p len %u, tag, p, len	DEBUG
%s: mac_add %02X:%02X:%02X:%02X:%02X:%02X, dev->name, addr[0], addr[1], addr[2], addr[3], addr[4], addr[5]	DEBUG	%03d:, i	DEBUG

%s: mac_del %02X:%02X:%02X:%02X:%02X:%02X, dev->name, addr[0], addr[1], addr[2], addr[3], addr[4], addr[5]	DEBUG	%02x, ((u_int8_t *)p)[i]	DEBUG
%s: mac_kick %02X:%02X:%02X:%02X:%02X:%02X, dev->name, addr[0], addr[1], addr[2], addr[3], addr[4], addr[5]	DEBUG	first difference at byte %u, i	DEBUG
%s: mac_undefined %02X:%02X:%02X:%02X:%02X:%02X, dev->name, addr[0], addr[1], addr[2], addr[3], addr[4], addr[5]	DEBUG	%s: , t->name	DEBUG
%s: addr_add %02X:%02X:%02X:%02X:%02X:%02X, dev->name, addr[0], addr[1], addr[2], addr[3], addr[4], addr[5]	DEBUG	FAIL: ieee80211_crypto_newkey failed	DEBUG
%s: addr_del %02X:%02X:%02X:%02X:%02X:%02X, dev->name, addr[0], addr[1], addr[2], addr[3], addr[4], addr[5]	DEBUG	FAIL: ieee80211_crypto_setkey failed	DEBUG
%s: mac_undefined %02X:%02X:%02X:%02X:%02X:%02X, dev->name, addr[0], addr[1], addr[2], addr[3], addr[4], addr[5]	DEBUG	FAIL: unable to allocate skbuff	DEBUG
%s: set_float %d;%d,	DEBUG	FAIL: ccmp encap failed	DEBUG
IRQ 32 is triggered	DEBUG	FAIL: encap data length mismatch	DEBUG
ip_finish_output2: No header cache and no neighbour!	DEBUG	FAIL: encrypt data does not compare	DEBUG
a guy asks for address mask. Who is it?	DEBUG	FAIL: ccmp decap failed	DEBUG
icmp v4 hw csum failure)	DEBUG	FAIL: decap botch; length mismatch	DEBUG
expire>> %u %d %d %d, expire,	DEBUG	FAIL: decap botch; data does not compare	DEBUG
expire++ %u %d %d %d, expire,	DEBUG	PASS	DEBUG
rt_cache @%02x: %u.%u.%u.%u, hash,	DEBUG	%u of %u 802.11i AES-CCMP test vectors passed, pass, total	DEBUG
rt_bind_peer(0) @%p, NET_CALLER(iph)	DEBUG	%s: 0x%p len %u, tag, p, len	DEBUG
ip_rt_advice: redirect to	DEBUG	%03d:, i	DEBUG
ip_rt_bug: %u.%u.%u.%u -> %u.%u.%u.%u, %s,	DEBUG	%02x, ((u_int8_t *)p)[i]	DEBUG
udp cork app bug 2)	DEBUG	first difference at byte %u, i	DEBUG
udp cork app bug 3)	DEBUG	ieee80211_crypto_newkey failed	DEBUG
udp v4 hw csum failure.)	DEBUG	ieee80211_crypto_setkey failed	DEBUG
UDP: short packet: From %u.%u.%u.%u:%u %d/%d to %u.%u.%u.%u:%u,	DEBUG	unable to allocate skbuff	DEBUG
UDP: bad checksum. From %d.%d.%d.%d:%d to %d.%d.%d.%d:%d ulen %d,	DEBUG	tkip enmic failed	DEBUG
%s: lookup policy [list] found=%s,	DEBUG	enmic botch; length mismatch	DEBUG
%s: called: [output START], __FUNCTION__	DEBUG	enmic botch	DEBUG
%s: flow dst=%s, __FUNCTION__, XFRMSTRADDR(fl->fl4_dst, family)	DEBUG	tkip encap failed	DEBUG
%s: flow src=%s, __FUNCTION__, XFRMSTRADDR(fl->fl4_src, family)	DEBUG	encrypt phase1 botch	DEBUG

%s: flow dst=%s, __FUNCTION__, XFRMSTRADDR(fl->fl6_dst, family)	DEBUG	encrypt data length mismatch	DEBUG
%s: flow src=%s, __FUNCTION__, XFRMSTRADDR(fl->fl6_src, family)	DEBUG	encrypt data does not compare	DEBUG
a guy asks for address mask. Who is it?	DEBUG	tkip decap failed	DEBUG
icmp v4 hw csum failure)	DEBUG	decrypt phase1 botch	DEBUG
expire>> %u %d %d %d, expire,	DEBUG	decrypt data does not compare	DEBUG
expire++ %u %d %d %d, expire,	DEBUG	decap botch; length mismatch	DEBUG
rt_cache @%02x: %u.%u.%u.%u, hash,	DEBUG	decap botch; data does not compare	DEBUG
rt_bind_peer(0) @%p, NET_CALLER(ip)	DEBUG	tkip demic failed	DEBUG
ip_rt_advice: redirect to	DEBUG	802.11i TKIP test vectors passed	DEBUG
ip_rt_bug: %u.%u.%u.%u -> %u.%u.%u.%u, %s,	DEBUG	%s, buf	DEBUG
UDP: short packet: From %u.%u.%u.%u: %u %d/%d to %u.%u.%u.%u, %s,	DEBUG	Atheros HAL assertion failure: %s: line %u: %s,	DEBUG
UDP: bad checksum. From %d.%d.%d.%d: %d to %d.%d.%d.%d: %d ulen %d,	DEBUG	ath_hal: logging to %s %s, ath_hal_logfile,	DEBUG
a guy asks for address mask. Who is it?	DEBUG	ath_hal: logging disabled	DEBUG
fib_add_ifaddr: bug: prim == NULL	DEBUG	%s%s, sep, ath_hal_buildopts[i]	DEBUG
fib_del_ifaddr: bug: prim == NULL	DEBUG	ath_pci: No devices found, driver not installed.	DEBUG
expire>> %u %d %d %d, expire,	DEBUG	_fmt, __VA_ARGS__	DEBUG
expire++ %u %d %d %d, expire,	DEBUG	%s: Warning, using only %u entries in %u key cache,	DEBUG
rt_cache @%02x: %u.%u.%u.%u, hash,	DEBUG	%s: TX99 support enabled, dev->name %s:grppoll Buf allocation failed	DEBUG
rt_bind_peer(0) @%p,	DEBUG	, __func__	DEBUG
ip_rt_advice: redirect to	DEBUG	%s: %s: unable to start recv logic,	DEBUG
ip_rt_bug: %u.%u.%u.%u -> %u.%u.%u.%u, %s,	DEBUG	%s: %s: unable to start recv logic,	DEBUG
%s: lookup policy [list] found=%s,	DEBUG	%s: no skbuff, __func__	DEBUG
%s: called: [output START], __FUNCTION__	DEBUG	%s: hardware error; resetting, dev->name	DEBUG
%s: flow dst=%s, __FUNCTION__, XFRMSTRADDR(fl->fl4_dst, family)	DEBUG	%s: rx FIFO overrun; resetting, dev->name	DEBUG
%s: flow src=%s, __FUNCTION__, XFRMSTRADDR(fl->fl4_src, family)	DEBUG	%s: unable to reset hardware: '%s' (HAL status %u)	DEBUG
%s: flow dst=%s, __FUNCTION__, XFRMSTRADDR(fl->fl6_dst, family)	DEBUG	%s: unable to start recv logic, dev->name	DEBUG
%s: flow src=%s, __FUNCTION__, XFRMSTRADDR(fl->fl6_src, family)	DEBUG	%s: %s: unable to reset hardware: '%s' (HAL status %u),	DEBUG
a guy asks for address mask. Who is it?	DEBUG	%s: %s: unable to start recv logic,	DEBUG
icmp v4 hw csum failure)	DEBUG	ath_mgtstart: discard, no xmit buf	DEBUG
expire>> %u %d %d %d, expire,	DEBUG	%s: [%02u] %-7s , tag, ix, ciphers[hk->kv_type]	DEBUG
expire++ %u %d %d %d, expire,	DEBUG	%02x, hk->kv_val[i]	DEBUG
rt_cache @%02x: %u.%u.%u.%u, hash,	DEBUG	mac %s, ether_sprintf(mac)	DEBUG
rt_bind_peer(0) @%p, NET_CALLER(ip)	DEBUG	%s , sc->sc_splitmic ? mic : rxmic	DEBUG
ip_rt_advice: redirect to	DEBUG	%02x, hk->kv_mic[i]	DEBUG

ip_rt_bug: %u.%u.%u.%u -> %u.%u.%u.%u, %s,	DEBUG	txmic	DEBUG
UDP: short packet: From %u.%u.%u.%u:%u %d/%d to %u.%u.%u.%u:%u,	DEBUG	%02x, hk->kv_txmic[i]	DEBUG
UDP: bad checksum. From %d.%d.%d.%d:%d to %d.%d.%d.%d:%d ulen %d,	DEBUG	%s: unable to update h/w beacon queue parameters,	DEBUG
REJECT: ECHOREPLY no longer supported.	DEBUG	%s: stuck beacon; resetting (bmiss count %u),	DEBUG
ipt_rpc: only valid for PRE_ROUTING, FORWARD, POST_ROUTING, LOCAL_IN and/or LOCAL_OUT targets.	DEBUG	move data from NORMAL to XR	DEBUG
ip_nat_init: can't setup rules.	DEBUG	moved %d buffers from NORMAL to XR, index	DEBUG
ip_nat_init: can't register in hook.	DEBUG	move buffers from XR to NORMAL	DEBUG
ip_nat_init: can't register out hook.	DEBUG	moved %d buffers from XR to NORMAL, count	DEBUG
ip_nat_init: can't register adjust in hook.	DEBUG	%s:%d %s, __FILE__, __LINE__, __func__	DEBUG
ip_nat_init: can't register adjust out hook.	DEBUG	%s:%d %s, __FILE__, __LINE__, __func__	DEBUG
ip_nat_init: can't register local out hook.	DEBUG	%s: no buffer (%s), dev->name, __func__	DEBUG
ip_nat_init: can't register local in hook.	DEBUG	%s: no skbuff (%s), dev->name, __func__	DEBUG
ipt_hook: happy cracking.	DEBUG	%s: HAL qnum %u out of range, max %u!,	DEBUG
ip_contrack: can't register pre-routing defrag hook.	DEBUG	grppoll_start: grppoll Buf allocation failed	DEBUG
ip_contrack: can't register local_out defrag hook.	DEBUG	%s: HAL qnum %u out of range, max %u!,	DEBUG
ip_contrack: can't register pre-routing hook.	DEBUG	%s: AC %u out of range, max %u!,	DEBUG
ip_contrack: can't register local out hook.	DEBUG	%s: unable to update hardware queue	DEBUG
ip_contrack: can't register local in helper hook.	DEBUG	%s: bogus frame type 0x%x (%s), dev->name,	DEBUG
ip_contrack: can't register postrouting helper hook.	DEBUG	ath_stoprecv: rx queue 0x%x, link %p,	DEBUG
ip_contrack: can't register post-routing hook.	DEBUG	%s: %s: unable to reset channel %u (%u MHz)	DEBUG
ip_contrack: can't register local in hook.	DEBUG	%s: %s: unable to restart recv logic,	DEBUG
ip_contrack: can't register to sysctl.	DEBUG	%s: unable to allocate channel table, dev->name	DEBUG
ip_contrack_rtsp v IP_NF_RTSP_VERSION loading	DEBUG	%s: unable to allocate channel table, dev->name	DEBUG
ip_contrack_rtsp: max_outstanding must be a positive integer	DEBUG	%s: unable to collect channel list from HAL;	DEBUG
ip_contrack_rtsp: setup_timeout must be a positive integer	DEBUG	R (%p %llx) %08x %08x %08x %08x %08x %08x %c,	DEBUG
ip_contrack_rtsp: ERROR registering port %d, ports[i]	DEBUG	T (%p %llx) %08x %08x %08x %08x %08x %08x %08x %08x %c,	DEBUG
ip_nat_rtsp v IP_NF_RTSP_VERSION loading	DEBUG	%s: no memory for sysctl table!, __func__	DEBUG
%s: Sorry! Cannot find this match option., __FILE__	DEBUG	%s: no memory for device name storage!, __func__	DEBUG

ipt_time loading	DEBUG	%s: failed to register sysctlsl!, sc->sc_dev->name	DEBUG
ipt_time unloaded	DEBUG	%s: mac %d.%d phy %d.%d, dev->name,	DEBUG
ip_contrack_irc: max_dcc_channels must be a positive integer	DEBUG	5 GHz radio %d.%d 2 GHz radio %d.%d,	DEBUG
ip_contrack_irc: ERROR registering port %d,	DEBUG	radio %d.%d, ah->ah_analog5GhzRev >> 4,	DEBUG
ip_nat_h323: ip_nat_mangle_tcp_packet	DEBUG	radio %d.%d, ah->ah_analog5GhzRev >> 4,	DEBUG
ip_nat_h323: ip_nat_mangle_udp_packet	DEBUG	%s: Use hw queue %u for %s traffic, %s: Use hw queue %u for CAB traffic, dev->name,	DEBUG
ip_nat_h323: out of expectations	DEBUG	%s: Use hw queue %u for beacons, dev->name,	DEBUG
ip_nat_h323: out of RTP ports	DEBUG	Could not find Board Configuration Data	DEBUG
ip_nat_h323: out of TCP ports	DEBUG	Could not find Radio Configuration data	DEBUG
ip_nat_q931: out of TCP ports	DEBUG	ath_ahb: No devices found, driver not installed.	DEBUG
ip_nat_ras: out of TCP ports	DEBUG	_fmt, __VA_ARGS__	DEBUG
ip_nat_q931: out of TCP ports	DEBUG	_fmt, __VA_ARGS__	DEBUG
ip_contrack_core: Frag of proto %u.,	DEBUG	xlr8NatIpfFinishOutput: Err.. skb2 == NULL !	DEBUG
Broadcast packet!	DEBUG	xlr8NatSoftCtxEnqueue: Calling xlr8NatIpfFinishOutput () ..., status	DEBUG
Should bcast: %u.%u.%u.%u->%u.%u.%u.%u (sk=%p, ptype=%u),	DEBUG	xlr8NatSoftCtxEnqueue: xlr8NatIpfFinishOutput () returned [%d], status	DEBUG
ip_contrack version %s (%u buckets, %d max)	DEBUG	icmpExceptionHandler: Exception!	DEBUG
ERROR registering port %d,	DEBUG	fragExceptionHandler: Exception!	DEBUG
netfilter PSD loaded - (c) astaro AG	DEBUG	algExceptionHandler: Exception!	DEBUG
netfilter PSD unloaded - (c) astaro AG	DEBUG	dnsExceptionHandler: Exception!	DEBUG
%s , SELF	DEBUG	IPsecExceptionHandler: Exception!	DEBUG
%s , LAN	DEBUG	ESP Packet Src:%x Dest:%x Sport:%d dport:%d secure:%d spi:%d isr:%p,	DEBUG
%s , WAN	DEBUG	xlr8NatContrackPreHook: We found the valid context,	DEBUG
TRUNCATED	DEBUG	xlr8NatContrackPreHook: Not a secured packet.	DEBUG
SRC=%u.%u.%u.%u DST=%u.%u.%u.%u ,	DEBUG	xlr8NatContrackPreHook: isr=[%p], plsr	DEBUG
LEN=%u TOS=0x%02X PREC=0x%02X TTL=%u ID=%u ,	DEBUG	xlr8NatContrackPreHook: secure=[%d], secure	DEBUG
FRAG:%u , ntohs(ih->frag_off) & IP_OFFSET	DEBUG	Context found for ESP %p,pFlowEntry->post.plsr[0]	DEBUG
TRUNCATED	DEBUG	xlr8NatContrackPreHook: New connection.	DEBUG
PROTO=TCP	DEBUG	xlr8NatContrackPostHook: postSecure=[%d] postIsrc=[%p %p],	DEBUG
INCOMPLETE [%u bytes] ,	DEBUG	proto %d spi %d <-----> proto %d spi %d,pPktInfo->proto,pPktInfo->spi,	DEBUG
SPT=%u DPT=%u ,	DEBUG	IPSEC_INF Clock skew detected	DEBUG
SEQ=%u ACK=%u ,	DEBUG		DEBUG

WINDOW=%u , ntohs(th->>window)	DEBUG	IPSEC_ERR [%s:%d]: Max (%d) No of SA Limit reached,	DEBUG
RES=0x%02x , (u8)(ntohl(tcp_flag_word(th) & TCP_RESERVED_BITS) >> 22)	DEBUG	IPSEC_ERR [%s:%d]: Max (%d) No of SA Limit reached,	DEBUG
URGP=%u , ntohs(th->urg_ptr)	DEBUG	IPSEC_ERR [%s:%d]: time(secs): %u	DEBUG
TRUNCATED	DEBUG	ERROR: Failed to add entry to IPsec sa table	DEBUG
%02X, op[i]	DEBUG	ERROR: Failed to add entry to IPsec sa table	DEBUG
PROTO=UDP	DEBUG	ERROR: Failed to add entry to IPsec sa table	DEBUG
INCOMPLETE [%u bytes] ,	DEBUG	ERROR: Failed to add entry to IPsec sa table	DEBUG
SPT=%u DPT=%u LEN=%u ,	DEBUG	ERROR: Failed to add entry to IPsec sa table	DEBUG
SPT=%u DPT=%u LEN=%u ,	DEBUG	ERROR: Failed to add entry to IPsec sa table	DEBUG
PROTO=ICMP	DEBUG	unknown oid '%s', varName	DEBUG
INCOMPLETE [%u bytes] ,	DEBUG	could not find oid pointer for '%s', varName	DEBUG
TYPE=%u CODE=%u , ich->type, ich->code	DEBUG	unRegistering IPsecMib	DEBUG
INCOMPLETE [%u bytes] ,	DEBUG	ERROR: Failed to add entry to IPsec sa table	DEBUG
ID=%u SEQ=%u ,	DEBUG	ERROR: Failed to add entry to IPsec sa table	DEBUG
PARAMETER=%u ,	DEBUG	ERROR: Failed to add entry to IPsec sa table	DEBUG
GATEWAY=%u.%u.%u.%u ,	DEBUG	ERROR: Failed to add entry to IPsec sa table	DEBUG
MTU=%u , ntohs(ich->un.frag.mtu)	DEBUG	ERROR: Failed to add entry to IPsec sa table	DEBUG
PROTO=AH	DEBUG	ERROR: Failed to add entry to IPsec sa table	DEBUG
INCOMPLETE [%u bytes] ,	DEBUG	unknown oid '%s', varName	DEBUG
SPI=0x%x , ntohl(ah->spi)	DEBUG	could not find oid pointer for '%s', varName	DEBUG
PROTO=ESP	DEBUG	unRegistering IPsecMib	DEBUG
INCOMPLETE [%u bytes] ,	DEBUG	. %u.%u.%u.%u, NIPQUAD(trt->rt_dst)	DEBUG
SPI=0x%x , ntohl(eh->spi)	DEBUG	%02x, *p	DEBUG
PROTO=%u , ih->protocol	DEBUG	. %u.%u.%u.%u, NIPQUAD(trt->rt_dst)	DEBUG
UID=%u , skb->sk->sk_socket->file->f_uid	DEBUG	%02x, *p	DEBUG
<%d>%sIN=%s OUT=%s , loginfo->u.log.level,	DEBUG	. %u.%u.%u.%u, NIPQUAD(trt->rt_dst)	DEBUG
level_string	DEBUG	%02x, *p	DEBUG
%sIN=%s OUT=%s ,	DEBUG	. %u.%u.%u.%u, NIPQUAD(trt->rt_dst)	DEBUG
%s , prefix == NULL ? loginfo->prefix : prefix	DEBUG	%02x, *p	DEBUG
IN=	DEBUG	unable to register vIPsec kernel comp to UMI	DEBUG
OUT=	DEBUG	unregistering VIPSECK from UMI	DEBUG
PHYSIN=%s , physindev->name	DEBUG	in vIPsecKIoctlHandler cmd - %d, cmd	DEBUG

PHYSOUT=%s , physoutdev->name	DEBUG	%s: Error. DST Refcount value less than 1 (%d),	DEBUG
MAC=	DEBUG	for %s DEVICE refcnt: %d ,pDst->dev->name,	DEBUG
%02x%c, *p,	DEBUG	%s: Got Null m:%p *m:%p sa:%p *sa:%p,__func__,__ppBufMgr,	DEBUG
NAT: no longer support implicit source local NAT	DEBUG	%s Got Deleted SA:%p state:%d,__func__,pIPsecInfo,pIPsecInfo->state	DEBUG
NAT: packet src %u.%u.%u.%u -> dst %u.%u.%u.%u,	DEBUG	%s: %s: fmt, __FILE__, __FUNCTION__, ## args)	INFO
SNAT: multiple ranges no longer supported	DEBUG	%s: %s: fmt, __FILE__, __FUNCTION__, ## args)	INFO
format,##args)	DEBUG	ipt_TIME: format, ## args)	INFO
version	DEBUG	IPT_ACCOUNT_NAME : checkentry() wrong parameters (not equals existing table parameters).	INFO
offset_before=%d, offset_after=%d, correction_pos=%u, x->offset_before, x->offset_after, x->correction_pos	DEBUG	IPT_ACCOUNT_NAME : checkentry() too big netmask.	INFO
ip_ct_h323:	DEBUG	IPT_ACCOUNT_NAME : checkentry() failed to allocate %zu for new table %s., sizeof(struct t_ip_account_table), info->name	INFO
ip_ct_h323: incomplete TPKT (fragmented?)	DEBUG	IPT_ACCOUNT_NAME : checkentry() wrong network/netmask.	INFO
ip_ct_h245: decoding error: %s,	DEBUG	account: Wrong netmask given by netmask parameter (%i). Valid is 32 to 0., netmask	INFO
ip_ct_h245: packet dropped	DEBUG	IPT_ACCOUNT_NAME : checkentry() failed to create procs entry.	INFO
ip_ct_q931: decoding error: %s,	DEBUG	IPT_ACCOUNT_NAME : checkentry() failed to register match.	INFO
ip_ct_q931: packet dropped	DEBUG	failed to create procs entry .	INFO
ip_ct_ras: decoding error: %s,	DEBUG	MPPE/MPPC encryption/compression module registered	INFO
ip_ct_ras: packet dropped	DEBUG	MPPE/MPPC encryption/compression module unregistered	INFO
ERROR registering port %d,	DEBUG	PPP generic driver version PPP_VERSION	INFO
ERROR registering port %d,	DEBUG	MPPE/MPPC encryption/compression module registered	INFO
ipt_connlimit [%d]: src=%u.%u.%u.%u:%d dst=%u.%u.%u.%u:%d %s,	DEBUG	MPPE/MPPC encryption/compression module unregistered	INFO
ipt_connlimit [%d]: src=%u.%u.%u.%u:%d dst=%u.%u.%u.%u:%d new,	DEBUG	PPP generic driver version PPP_VERSION	INFO
ipt_connlimit: Oops: invalid ct state ?	DEBUG	PPPoL2TP kernel driver, %s,	INFO
ipt_connlimit: Hmm, kmalloc failed :-(DEBUG	PPPoL2TP kernel driver, %s,	INFO
ipt_connlimit: src=%u.%u.%u.%u mask=%u.%u.%u.%u	DEBUG	PPPoL2TP kernel driver, %s,	INFO
_lvi PPPOL2TP: _fmt, ##args	DEBUG	failed to create procs entry .	INFO
%02X, ptr[length]	DEBUG	proc dir not created ..	INFO
%02X, ((unsigned char *) m-	DEBUG	Initializing Product Data modules	INFO

>msg_iov[i].iov_base)[j]			
%02X, skb->data[i]	DEBUG	De initializing by \	INFO
_lvi PPPOL2TP: _fmt, ##args	DEBUG	kernel UML module loaded	INFO
%02X, ptr[length]	DEBUG	kernel UML module unloaded	INFO
%02X, ((unsigned char *) m->msg_iov[i].iov_base)[j]	DEBUG	Loading bridge module	INFO
%02X, skb->data[i]	DEBUG	Unloading bridge module	INFO
_lvi PPPOL2TP: _fmt, ##args	DEBUG	unsupported command %d, cmd	INFO
%02X, ptr[length]	DEBUG	Loading ifDev module	INFO
%02X, ((unsigned char *) m->msg_iov[i].iov_base)[j]	DEBUG	Unloading ifDev module	INFO
%02X, skb->data[i]	DEBUG	ERROR#%d in alloc_chrdev_region, result	INFO
KERN_EMERG THE value read is %d,value*/	DEBUG	ERROR#%d in cdev_add, result	INFO
KERN_EMERG Factory Reset button is pressed	DEBUG	using bcm switch %s, bcmswitch	INFO
KERN_EMERG Returing error in INTR registration	DEBUG	privlegedID %d wanporttNo: %d, privlegedID,wanportNo	INFO
KERN_EMERG Initialzing Factory defaults modules	DEBUG	Loading mii	INFO
Failed to allocate memory for pSipListNode	DEBUG	Unloading mii	INFO
SIPALG: Memeory allocation failed for pSipNodeEntryTbl	DEBUG	%s: Version 0.1	INFO
pkt-err %s, pktInfo.error	DEBUG	%s: driver unloaded, dev_info	INFO
pkt-err %s, pktInfo.error	DEBUG	wlan: %s backend registered, be->iab_name	INFO
pkt-err %s, pktInfo.error	DEBUG	wlan: %s backend unregistered,	INFO
%s Len=%d, msg, len	DEBUG	wlan: %s acl policy registered, iac->iac_name	INFO
%02x , ((uint8_t *) ptr)[i]	DEBUG	wlan: %s acl policy unregistered, iac->iac_name	INFO
End	DEBUG	%s, tmpbuf	INFO
CVM_MOD_EXP_BASE MISMATCH cmd=%x base=%x, cmd,	DEBUG	VLAN2	INFO
op->sizeofptr = %ld, op->sizeofptr	DEBUG	VLAN3	INFO
opcode cmd = %x, cmd	DEBUG	VLAN4 <%d %d> ,	INFO
modexp opcode received	DEBUG	%s: %s, dev_info, version	INFO
Memory Allocation failed	DEBUG	%s: driver unloaded, dev_info	INFO
modexpcrt opcode received	DEBUG	%s, buf	INFO
kmalloc failed	DEBUG	%s: %s (, dev_info, ath_hal_version	INFO
kmalloc failed	DEBUG	%s: driver unloaded, dev_info	INFO
kmalloc failed	DEBUG	%s: %s: mem=0x%lx, irq=%d hw_base=0x%p,	INFO
kmalloc failed	DEBUG	%s: %s, dev_info, version	INFO
kmalloc Failed	DEBUG	%s: driver unloaded, dev_info	INFO
kmalloc failed	DEBUG	%s: %s: mem=0x%lx, irq=%d,	INFO
unknown cyrpto ioctl cmd received %x, cmd	DEBUG	%s: %s: mem=0x%lx, irq=%d,	INFO
register_chrdev returned ZERO	DEBUG	%s: %s, dev_info, version	INFO
const char *descr, krb5_keyblock *k) {	DEBUG	%s: driver unloaded, dev_info	INFO
F password, &pdata	DEBUG	%s, buf	INFO

test key, key	DEBUG	%s: %s (, dev_info, ath_hal_version	INFO
pre-hashed key, key	DEBUG	%s: driver unloaded, dev_info	INFO
const char *descr, krb5_keyblock *k) {	DEBUG	%s: driver unloaded, dev_info	INFO
AES 128-bit key, &key	DEBUG	%s: Version 2.0.0	INFO
const char *descr, krb5_keyblock *k) {	DEBUG	%s: driver unloaded, dev_info	INFO
test key, key	DEBUG	%s: driver unloaded, dev_info	INFO
pre-hashed key, key	DEBUG	wlan: %s backend registered, be->iab_name	INFO
const char *descr, krb5_keyblock *k) {	DEBUG	wlan: %s backend unregistered,	INFO
128-bit AES key,&dk	DEBUG	wlan: %s acl policy registered, iac->iac_name	INFO
256-bit AES key, &dk	DEBUG	wlan: %s acl policy unregistered, iac->iac_name	INFO
WARNING:	DEBUG	%s: %s, dev_info, version	INFO
bwMonMultipathNxtHopSelect:: checking rates	DEBUG	%s: driver unloaded, dev_info	INFO
hop :%d dev:%s usableBwLimit = %d currBwShare = %d lastHopSelected = %d weightedHopPrefer = %d ,	DEBUG	%s: %s (, dev_info, ath_hal_version	INFO
1. selecting hop: %d lastHopSelected = %d , selHop, lastHopSelected	DEBUG	%s: driver unloaded, dev_info	INFO
4. hop :%d dev:%s usableBwLimit = %d currBwShare = %d lastHopSelected = %d weightedHopPrefer = %d ,	DEBUG	%s: %s: mem=0x%lx, irq=%d,	INFO
2. selecting hop: %d lastHopSelected = %d , selHop, lastHopSelected	DEBUG	%s: %s, dev_info, version	INFO
3. selecting hop: %d lastHopSelected = %d , selHop, lastHopSelected	DEBUG	%s: driver unloaded, dev_info	INFO
bwMonitor multipath selection enabled	DEBUG	ath_pci: switching rkill capability %s,	INFO
bwMonitor multipath selection disabled	DEBUG	Unknown autcreate mode: %s,	INFO
weightedHopPrefer set to %d ,weightedHopPrefer	DEBUG	%s: %s: mem=0x%lx, irq=%d,	INFO
bwMonitor sysctl registration failed	DEBUG	%s: %s, dev_info, version	INFO
bwMonitor sysctl registered	DEBUG	%s: driver unloaded, dev_info	INFO
bwMonitor sysctl not registered	DEBUG	%s: %s, dev_info, version	INFO
Unregistered bwMonitor sysctl	DEBUG	%s: unloaded, dev_info	INFO
CONFIG_SYSCTL enabled ...	DEBUG	%s: %s, dev_info, version	INFO
Initialized bandwidth monitor ...	DEBUG	%s: unloaded, dev_info	INFO
Removed bandwidth monitor ...	DEBUG	%s: %s, dev_info, version	INFO
Oops.. AES_GCM_encrypt failed (keylen:%u),key->cvm_keylen	DEBUG	%s: unloaded, dev_info	INFO
Oops.. AES_GCM_decrypt failed (keylen:%u),key->cvm_keylen	DEBUG	failed to create procs entry .	INFO
%s, msg	DEBUG	ICMP: %u.%u.%u.%u:	INFO
%02x%s, data[i],	DEBUG	ICMP: %u.%u.%u.%u: Source	INFO
Failed to set AES encrypt key	DEBUG	Wrong address mask %u.%u.%u.%u from	INFO
Failed to set AES encrypt key	DEBUG	Redirect from %u.%u.%u.%u on %s about	INFO
AES %s Encrypt Test Duration: %d:%d, hard ? Hard : Soft,	DEBUG	IP: routing cache hash table of %u buckets, %ldKbytes,	INFO
Failed to set AES encrypt key	DEBUG	source route option %u.%u.%u.%u -> %u.%u.%u.%u,	INFO

Failed to set AES encrypt key	DEBUG	ICMP: %u.%u.%u.%u:	INFO
AES %s Decrypt Test Duration: %d:%d, hard ? Hard : Soft,	DEBUG	ICMP: %u.%u.%u.%u: Source	INFO
Failed to set AES encrypt key	DEBUG	Wrong address mask %u.%u.%u.%u from	INFO
Failed to set AES encrypt key	DEBUG	Redirect from %u.%u.%u.%u on %s about	INFO
Failed to set AES encrypt key	DEBUG	IP: routing cache hash table of %u buckets, %ldKbytes,	INFO
Failed to set AES encrypt key	DEBUG	source route option %u.%u.%u.%u -> %u.%u.%u.%u,	INFO
Failed to set DES encrypt key[%d], i	DEBUG	Wrong address mask %u.%u.%u.%u from	INFO
Failed to set DES decrypt key[%d], i	DEBUG	Redirect from %u.%u.%u.%u on %s about	INFO
Failed to set DES encrypt key[%d], i	DEBUG	source route option	INFO
Failed to set DES decrypt key[%d], i	DEBUG	ICMP: %u.%u.%u.%u:	INFO
Failed to set DES encrypt key	DEBUG	ICMP: %u.%u.%u.%u: Source	INFO
Failed to set DES decrypt key	DEBUG	Wrong address mask %u.%u.%u.%u from	INFO
Failed to set DES encrypt key	DEBUG	Redirect from %u.%u.%u.%u on %s about	INFO
Failed to set DES decrypt key	DEBUG	IP: routing cache hash table of %u buckets, %ldKbytes,	INFO
AES Software Test:	DEBUG	source route option %u.%u.%u.%u -> %u.%u.%u.%u,	INFO
AES Software Test %s, aesSoftTest(0) ? Failed : Passed	DEBUG	IPsec: device unregistering: %s, dev->name	INFO
AES Hardware Test:	DEBUG	IPsec: device down: %s, dev->name	INFO
AES Hardware Test %s, aesHardTest(0) ? Failed : Passed	DEBUG	mark: only supports 32bit mark	WARNING
3DES Software Test:	DEBUG	ipt_time: invalid argument	WARNING
3DES Software Test %s, des3SoftTest(0) ? Failed : Passed	DEBUG	ipt_time: IPT_DAY didn't matched	WARNING
3DES Hardware Test:	DEBUG	./Logs_kernel.txt:45:KERN_WARNING	WARNING
3DES Hardware Test %s, des3HardTest(0) ? Failed : Passed	DEBUG	./Logs_kernel.txt:59:KERN_WARNING	WARNING
DES Software Test:	DEBUG	ipt_LOG: not logging via system console	WARNING
DES Software Test %s, desSoftTest(0) ? Failed : Passed	DEBUG	%s: wrong options length: %u, fname, opt_len	WARNING
DES Hardware Test:	DEBUG	%s: options rejected: o[0]=%02x, o[1]=%02x,	WARNING
DES Hardware Test %s, desHardTest(0) ? Failed : Passed	DEBUG	%s: wrong options length: %u,	WARNING
SHA Software Test:	DEBUG	%s: options rejected: o[0]=%02x, o[1]=%02x,	WARNING
SHA Software Test %s, shaSoftTest(0) ? Failed : Passed	DEBUG	%s: don't know what to do: o[5]=%02x,	WARNING
SHA Hardware Test:	DEBUG	%s: wrong options length: %u, fname, opt_len	WARNING
SHA Hardware Test %s, shaHardTest(0) ? Failed : Passed	DEBUG	%s: options rejected: o[0]=%02x, o[1]=%02x,	WARNING
MD5 Software Test:	DEBUG	%s: wrong options length: %u,	WARNING

MD5 Software Test %s, md5SoftTest(0) ? Failed : Passed	DEBUG	%s: options rejected: o[0]=%02x, o[1]=%02x,	WARNIN G
MD5 Hardware Test:	DEBUG	%s: don't know what to do: o[5]=%02x,	WARNIN G
MD5 Hardware Test %s, md5HardTest(0) ? Failed : Passed	DEBUG	*** New port %d *** , ntohs(expinfo- >natport)	WARNIN G
AES Software Test: %d iterations, iter	DEBUG	** skb len %d, dlen %d,(*pskb)->len,	WARNIN G
AES Software Test Duration: %d:%d,	DEBUG	***** Non linear skb	WARNIN G
AES Hardware Test: %d iterations, iter	DEBUG	End of sdp %p, nextthr	WARNIN G
AES Hardware Test Duration: %d:%d,	DEBUG	%s: unknown pairwise cipher %d,	WARNIN G
3DES Software Test: %d iterations, iter	DEBUG	%s: unknown group cipher %d,	WARNIN G
3DES Software Test Duration: %d:%d,	DEBUG	%s: unknown SIOCSIWAUTH flag %d,	WARNIN G
3DES Hardware Test: %d iterations, iter	DEBUG	%s: unknown SIOCGIWAUTH flag %d,	WARNIN G
3DES Hardware Test Duration: %d:%d,	DEBUG	%s: unknown algorithm %d,	WARNIN G
DES Software Test: %d iterations, iter	DEBUG	%s: key size %d is too large,	WARNIN G
DES Software Test Duration: %d:%d,	DEBUG	try_module_get failed \	WARNIN G
DES Hardware Test: %d iterations, iter	DEBUG	%s: request_irq failed, dev->name	WARNIN G
DES Hardware Test Duration: %d:%d,	DEBUG	try_module_get failed	WARNIN G
SHA Software Test: %d iterations, iter	DEBUG	try_module_get failed \	WARNIN G
SHA Software Test Duration: %d:%d,	DEBUG	%s: unknown pairwise cipher %d,	WARNIN G
SHA Hardware Test: %d iterations, iter	DEBUG	%s: unknown group cipher %d,	WARNIN G
SHA Hardware Test Duration: %d:%d,	DEBUG	%s: unknown SIOCSIWAUTH flag %d,	WARNIN G
MD5 Software Test: %d iterations, iter	DEBUG	%s: unknown SIOCGIWAUTH flag %d,	WARNIN G
MD5 Software Test Duration: %d:%d,	DEBUG	%s: unknown algorithm %d,	WARNIN G
MD5 Hardware Test: %d iterations, iter	DEBUG	%s: key size %d is too large,	WARNIN G
MD5 Hardware Test Duration: %d:%d,	DEBUG	unable to load %s, scan_modnames[mode]	WARNIN G
./pnac/src/pnac/linux/kernel/xcalibur.c:2 09:#define DEBUG_PRINTK printk	DEBUG	Failed to mkdir /proc/net/madwifi	WARNIN G
bcmDeviceInit: registration failed	DEBUG	try_module_get failed	WARNIN G
bcmDeviceInit: pCdev Add failed	DEBUG	%s: request_irq failed, dev->name	WARNIN G
REG Size == 8 Bit	DEBUG	too many virtual ap's (already got %d), sc->sc_nvaps	WARNIN G
Value = %x ::: At Page = %x : Addr = %x	DEBUG	%s: request_irq failed, dev->name	WARNIN G
REG Size == 16 Bit	DEBUG	rix %u (%u) bad ratekbps %u mode %u,	WARNIN G

Value = %x ::: At Page = %x : Addr = %x	DEBUG	cix %u (%u) bad ratekbps %u mode %u,	WARNIN G
REG Size == 32 Bit	DEBUG	%s: no rates for %s?,	WARNIN G
Value = %x ::: At Page = %x : Addr = %x	DEBUG	no rates yet! mode %u, sc->sc_curmode	WARNIN G
REG Size == 64 Bit	DEBUG	%u.%u.%u.%u sent an invalid ICMP	WARNIN G
REG Size is not in 8/16/32/64	DEBUG	dst cache overflow	WARNIN G
Written Value = %x ::: At Page = %x : Addr = %x	DEBUG	Neighbour table overflow.	WARNIN G
bcm_ioctl :Unknown ioctl Case :	DEBUG	host %u.%u.%u.%u/iface ignores	WARNIN G
====Register Dump for Port Number # %d====,port	DEBUG	martian destination %u.%u.%u.%u from	WARNIN G
%s : Read Status=%s data=%#x,regName[j],	DEBUG	martian source %u.%u.%u.%u from	WARNIN G
%s : Read Status=%s data=%#x,regName[j],	DEBUG	ll header:	WARNIN G
powerDeviceInit: device registration failed	DEBUG	%u.%u.%u.%u sent an invalid ICMP	WARNIN G
powerDeviceInit: adding device failed	DEBUG	dst cache overflow	WARNIN G
%s: Error: Big jump in pn number. TID=%d, from %x %x to %x %x.	DEBUG	Neighbour table overflow.	WARNIN G
%s: The MIC is corrupted. Drop this frame., __func__	DEBUG	host %u.%u.%u.%u/iface ignores	WARNIN G
%s: The MIC is OK. Still use this frame and update PN., __func__	DEBUG	martian destination %u.%u.%u.%u from	WARNIN G
ADDBA send failed: recipient is not a 11n node	DEBUG	martian source %u.%u.%u.%u from	WARNIN G
Cannot Set Rate: %x, value	DEBUG	ll header:	WARNIN G
Getting Rate Series: %x,vap->iv_fixed_rate.series	DEBUG	%u.%u.%u.%u sent an invalid ICMP	WARNIN G
Getting Retry Series: %x,vap->iv_fixed_rate.retries	DEBUG	dst cache overflow	WARNIN G
IC Name: %s,ic->ic_dev->name	DEBUG	Neighbour table overflow.	WARNIN G
usage: rtparams rt_idx <0 1> per <0..100> probe_intval <0..100>	DEBUG	host %u.%u.%u.%u/iface ignores	WARNIN G
usage: acparams ac <0 3> RTS <0 1> aggr scaling <0..4> min mbps <0..250>	DEBUG	martian source %u.%u.%u.%u from	WARNIN G
usage: hbrparams ac <2> enable <0 1> per_low <0..50>	DEBUG	ll header:	WARNIN G
%s(): ADDBA mode is AUTO, __func__	DEBUG	martian destination %u.%u.%u.%u from	WARNIN G
%s(): Invalid TID value, __func__	DEBUG	%u.%u.%u.%u sent an invalid ICMP	WARNIN G
%s(): ADDBA mode is AUTO, __func__	DEBUG	dst cache overflow	WARNIN G
%s(): Invalid TID value, __func__	DEBUG	Neighbour table overflow.	WARNIN G
%s(): Invalid TID value, __func__	DEBUG	host %u.%u.%u.%u/iface ignores	WARNIN G
Addba status IDLE	DEBUG	martian destination %u.%u.%u.%u	WARNIN

		from	G
%s(): ADDBA mode is AUTO, __func__	DEBUG	martian source %u.%u.%u.%u from	WARNING
%s(): Invalid TID value, __func__	DEBUG	ll header:	WARNING
Error in ADD- no node available	DEBUG	Unable to create ip_set_list	ERROR
%s(): Channel capabilities do not match, chan flags 0x%x,	DEBUG	Unable to create ip_set_hash	ERROR
%s: cannot map channel to mode; freq %u flags 0x%x,	DEBUG	ip_contrack_in: Frag of proto %u (hook=%u),	ERROR
ic_get_currentCountry not initialized yet	DEBUG	Unable to register netfilter socket option	ERROR
Country ie is %c%c%c,	DEBUG	Unable to create ip_contrack_hash	ERROR
%s: wrong state transition from %d to %d,	DEBUG	Unable to create ip_contrack slab cache	ERROR
%s: wrong state transition from %d to %d,	DEBUG	Unable to create ip_expect slab cache	ERROR
%s: wrong state transition from %d to %d,	DEBUG	Unable to create ip_set_iptreeb slab cache	ERROR
%s: wrong state transition from %d to %d,	DEBUG	Unable to create ip_set_iptreed slab cache	ERROR
%s: wrong state transition from %d to %d,	DEBUG	%s: cannot allocate space for %scompressor, fname,	ERROR
%s: wrong state transition from %d to %d,	DEBUG	%s: cannot allocate space for MPPC history,	ERROR
ieee80211_deliver_l2uf: no buf available	DEBUG	%s: cannot allocate space for MPPC history,	ERROR
%s: %s, vap->iv_dev->name, buf /* NB: no */	DEBUG	%s: cannot load ARC4 module, fname	ERROR
%s: [%s] %s, vap->iv_dev->name,	DEBUG	%s: cannot load SHA1 module, fname	ERROR
%s: [%s] %s, vap->iv_dev->name, ether_sprintf(mac), buf	DEBUG	%s: CryptoAPI SHA1 digest size too small, fname	ERROR
[%s:%s] discard %s frame, %s, vap->iv_dev->name,	DEBUG	%s: cannot allocate space for SHA1 digest, fname	ERROR
[%s:%s] discard frame, %s, vap->iv_dev->name,	DEBUG	%s%d: trying to write outside history	ERROR
[%s:%s] discard %s information element, %s,	DEBUG	%s%d: trying to write outside history	ERROR
[%s:%s] discard information element, %s,	DEBUG	%s%d: trying to write outside history	ERROR
[%s:%s] discard %s frame, %s, vap->iv_dev->name,	DEBUG	%s%d: too big uncompressed packet: %d,	ERROR
[%s:%s] discard frame, %s, vap->iv_dev->name,	DEBUG	%s%d: encryption negotiated but not an	ERROR
HBR list dumpNode\tAddress\t\tState\tTrigger\tBlock	DEBUG	%s%d: error - not an MPPC or MPPE frame	ERROR
Nodes informationAddress\t\tBlock\t\tDropped VI frames	DEBUG	Kernel doesn't provide ARC4 and/or SHA1 algorithms	ERROR
%d\t%2.2x:%2.2x:%2.2x:%2.2x:%2.2x:%2.2x\t%s\t%s\t%s,	DEBUG	PPP: not interface or channel??	ERROR
%2.2x:%2.2x:%2.2x:%2.2x:%2.2x:%2.2x\t%s\t%s\t%d,	DEBUG	PPP: no memory (VJ compressor)	ERROR
[%d]\tFunction\t%s, j, ni->node_trace[i].funcp	DEBUG	failed to register PPP device (%d), err	ERROR

[%d]\tMacAddr\t%s, j,	DEBUG	PPP: no memory (VJ comp pkt)	ERROR
[%d]\tDescp\t\t%s, j, ni->node_trace[i].descp	DEBUG	PPP: no memory (comp pkt)	ERROR
[%d]\tValue\t\t%llu(0x%llx), j, ni->node_trace[i].value,	DEBUG	ppp: compressor dropped pkt	ERROR
ifmedia_add: null ifm	DEBUG	PPP: no memory (fragment)	ERROR
Adding entry for	DEBUG	PPP: VJ uncompressed error	ERROR
ifmedia_set: no match for 0x%x/0x%x,	DEBUG	ppp_decompress_frame: no memory	ERROR
ifmedia_set: target	DEBUG	ppp_mp_reconstruct bad seq %u < %u,	ERROR
ifmedia_set: setting to	DEBUG	PPP: couldn't register device %s (%d),	ERROR
ifmedia_ioctl: switching %s to , dev->name	DEBUG	ppp: destroying ppp struct %p but dead=%d	ERROR
ifmedia_match: multiple match for	DEBUG	ppp: destroying undead channel %p !,	ERROR
<unknown type>	DEBUG	PPP: removing module but units remain!	ERROR
desc->ifmt_string	DEBUG	PPP: failed to unregister PPP device	ERROR
mode %s, desc->ifmt_string	DEBUG	%s: cannot allocate space for %scompressor, fname,	ERROR
<unknown subtype>	DEBUG	%s: cannot allocate space for MPPC history,	ERROR
%s, desc->ifmt_string	DEBUG	%s: cannot allocate space for MPPC history,	ERROR
%s%s, seen_option++ ? , : ,	DEBUG	%s: cannot load ARC4 module, fname	ERROR
%s%s, seen_option++ ? , : ,	DEBUG	%s: cannot load SHA1 module, fname	ERROR
%s, seen_option ? > :	DEBUG	%s: CryptoAPI SHA1 digest size too small, fname	ERROR
%s: %s, dev->name, buf	DEBUG	%s: cannot allocate space for SHA1 digest, fname	ERROR
%s: no memory for sysctl table!, __func__	DEBUG	%s%d: trying to write outside history	ERROR
%s: failed to register sysctls!, vap->iv_dev->name	DEBUG	%s%d: trying to write outside history	ERROR
Atheros HAL assertion failure: %s: line %u: %s,	DEBUG	%s%d: trying to write outside history	ERROR
ath_hal: logging to %s %s, ath_hal_logfile,	DEBUG	%s%d: too big uncompressed packet: %d,	ERROR
ath_hal: logging disabled	DEBUG	%s%d: encryption negotiated but not an	ERROR
%s%s, sep, ath_hal_buildopts[i]	DEBUG	%s%d: error - not an MPPC or MPPE frame	ERROR
ath_pci: No devices found, driver not installed.	DEBUG	Kernel doesn't provide ARC4 and/or SHA1 algorithms	ERROR
---:%d pri:%d qd:%u ad:%u sd:%u tot:%u amp:%d %02x:%02x:%02x,	DEBUG	PPP: not interface or channel??	ERROR
SC Pushbutton Notify on %s::%s,dev->name,vap->iv_dev->name	DEBUG	PPP: no memory (VJ compressor)	ERROR
Could not find Board Configuration Data	DEBUG	failed to register PPP device (%d), err	ERROR
Could not find Radio Configuration data	DEBUG	PPP: no memory (comp pkt)	ERROR
%s: No device, __func__	DEBUG	ppp: compressor dropped pkt	ERROR
ath_ahb: No devices found, driver not installed.	DEBUG	PPP: no memory (VJ comp pkt)	ERROR
PKTLOG_TAG %s:proc_dointvec failed, __FUNCTION__	DEBUG	PPP: no memory (comp pkt)	ERROR
PKTLOG_TAG %s:proc_dointvec failed,	DEBUG	PPP: no memory (fragment)	ERROR

__FUNCTION__			
%s: failed to register sysctls!, proc_name	DEBUG	PPP: VJ uncompressed error	ERROR
PKTLOG_TAG %s: proc_mkdir failed, __FUNCTION__	DEBUG	ppp_decompress_frame: no memory	ERROR
PKTLOG_TAG %s: pktlog_attach failed for %s,	DEBUG	ppp_mp_reconstruct bad seq %u < %u,	ERROR
PKTLOG_TAG %s:allocation failed for pl_info, __FUNCTION__	DEBUG	PPP: couldn't register device %s (%d),	ERROR
PKTLOG_TAG %s:allocation failed for pl_info, __FUNCTION__	DEBUG	ppp: destroying ppp struct %p but dead=%d	ERROR
PKTLOG_TAG %s: create_proc_entry failed for %s,	DEBUG	ppp: destroying undead channel %p !,	ERROR
PKTLOG_TAG %s: sysctl register failed for %s,	DEBUG	PPP: removing module but units remain!	ERROR
PKTLOG_TAG %s: page fault out of range, __FUNCTION__	DEBUG	PPP: failed to unregister PPP device	ERROR
PKTLOG_TAG %s: page fault out of range, __FUNCTION__	DEBUG	JBD: bad block at offset %u,	ERROR
PKTLOG_TAG %s: Log buffer unavailable, __FUNCTION__	DEBUG	JBD: corrupted journal superblock	ERROR
PKTLOG_TAG	DEBUG	JBD: bad block at offset %u,	ERROR
Logging should be disabled before changing bufer size	DEBUG	JBD: Failed to read block at offset %u,	ERROR
%s:allocation failed for pl_info, __func__	DEBUG	JBD: error %d scanning journal, err	ERROR
%s: Unable to allocate buffer, __func__	DEBUG	JBD: IO error %d recovering block	ERROR
%s:allocation failed for pl_info, __func__	DEBUG	./Logs_kernel.txt:303:KERN_ERR	ERROR
%s: Unable to allocate buffer, __func__	DEBUG	./Logs_kernel.txt:304:KERN_ERR	ERROR
Atheros HAL assertion failure: %s: line %u: %s,	DEBUG	JBD: recovery pass %d ended at	ERROR
ath_hal: logging to %s %s, ath_hal_logfile,	DEBUG	%s: %s:%d: BAD SESSION MAGIC \ \	ERROR
ath_hal: logging disabled	DEBUG	%s: %s:%d: BAD TUNNEL MAGIC \ \	ERROR
%s%s, sep, ath_hal_buildopts[i] failed to allocate rx descriptors: %d, error	DEBUG	msg->msg_namelen wrong, %d, msg- >msg_namelen	ERROR
ath_stoprecv: rx queue %p, link %p, no mpdu (%s), __func__	DEBUG	udp addr=%x/%hu, usin- >sin_addr.s_addr, usin->sin_port	ERROR
Reset rx chain mask. Do internal reset. (%s), __func__	DEBUG	%s: %s:%d: BAD TUNNEL MAGIC	ERROR
OS_CANCEL_TIMER failed!!	DEBUG	socki_lookup: socket file changed!	ERROR
%s: unable to allocate channel table, __func__	DEBUG	%s: %s:%d: BAD TUNNEL MAGIC	ERROR
%s: unable to collect channel list from hal;	DEBUG	%s: %s:%d: BAD SESSION MAGIC \ \	ERROR
%s: cannot map channel to mode; freq %u flags 0x%x,	DEBUG	%s: %s:%d: BAD TUNNEL MAGIC \ \	ERROR
%s: unable to reset channel %u (%uMhz)	DEBUG	msg->msg_namelen wrong, %d, msg- >msg_namelen	ERROR
%s: unable to restart recv logic,	DEBUG	addr family wrong: %d, usin- >sin_family	ERROR
%s: start DFS WAIT period on channel %d, __func__,sc->sc_curchan.channel	DEBUG	udp addr=%x/%hu, usin- >sin_addr.s_addr, usin->sin_port	ERROR

%s: cancel DFS WAIT period on channel %d, __func__, sc->sc_curchan.channel	DEBUG	%s: %s:%d: BAD TUNNEL MAGIC	ERROR
Non-DFS channel, cancelling previous DFS wait timer channel %d, sc->sc_curchan.channel	DEBUG	%s: %s:%d: BAD TUNNEL MAGIC	ERROR
%s: unable to reset hardware; hal status %u	DEBUG	socki_lookup: socket file changed!	ERROR
%s: unable to start recv logic, __func__	DEBUG	%s: %s:%d: BAD TUNNEL MAGIC	ERROR
%s: unable to start recv logic, __func__	DEBUG	%s: %s:%d: BAD SESSION MAGIC \	ERROR
%s: unable to reset hardware; hal status %u,	DEBUG	%s: %s:%d: BAD TUNNEL MAGIC \	ERROR
hardware error; resetting	DEBUG	msg->msg_namelen wrong, %d, msg->msg_namelen	ERROR
rx FIFO overrun; resetting	DEBUG	addr family wrong: %d, usin->sin_family	ERROR
%s: During Wow Sleep and got BMISS, __func__	DEBUG	udp addr=%x/%hu, usin->sin_addr.s_addr, usin->sin_port	ERROR
AC!RTS \tAggr Scaling!tMin Rate(Kbps)!tHBR \tPER LOW THRESHOLD	DEBUG	%s: %s:%d: BAD TUNNEL MAGIC	ERROR
BE!t%s!t%dt%6d!t%st%d,	DEBUG	%s: %s:%d: BAD TUNNEL MAGIC	ERROR
BK!t%s!t%dt%6d!t%st%d,	DEBUG	socki_lookup: socket file changed!	ERROR
VI!t%s!t%dt%6d!t%st%d,	DEBUG	%s: %s:%d: BAD TUNNEL MAGIC	ERROR
VO!t%s!t%dt%6d!t%st%d,	DEBUG	rebootHook: null function pointer	ERROR
--%d,%p,%lu:0x%x 0x%x 0x%p 0x%x 0x%x 0x%x 0x%x,	DEBUG	Bad ioctl command	ERROR
bb state: 0x%08x 0x%08x, bbstate(sc, 4ul), bbstate(sc, 5ul)	DEBUG	fResetMod: Failed to configure gpio pin	ERROR
%08x %08x %08x %08x %08x %08x %08x %08x %08x %08x %08x %08x,	DEBUG	fResetMod: Failed to register interrupt handler	ERROR
noise floor: (%d, %d) (%d, %d) (%d, %d),	DEBUG	registering char device failed	ERROR
%p: %08x %08x %08x %08x %08x %08x %08x %08x %08x %08x %08x %08x,	DEBUG	unregistering char device failed	ERROR
--%d,%p,%lu:0x%x 0x%x 0x%p 0x%x 0x%x 0x%x 0x%x,	DEBUG	proc entry delete failed	ERROR
%08x %08x %08x %08x %08x %08x %08x %08x %08x %08x %08x %08x,	DEBUG	proc entry initialization failed	ERROR
%s: unable to allocate device object, __func__	DEBUG	testCompHandler: received %s from %d, (char *)plnBuf,	ERROR
%s: unable to attach hardware; HAL status %u,	DEBUG	UMI proto registration failed %d,ret	ERROR
%s: HAL ABI mismatch;	DEBUG	AF_UMI registration failed %d,ret	ERROR
%s: Warning, using only %u entries in %u key cache,	DEBUG	umi initialization failed %d,ret	ERROR
unable to setup a beacon xmit queue!	DEBUG	kernel UMI registration failed!	ERROR
unable to setup CAB xmit queue!	DEBUG	./Logs_kernel.txt:447:KERN_ERR	ERROR
unable to setup xmit queue for BE traffic!	DEBUG	ERROR msm not found properly %d, len %d, msm,	ERROR
%s DFS attach failed, __func__	DEBUG	ModExp returned Error	ERROR
%s: Invalid interface id = %u, __func__, if_id	DEBUG	ModExp returned Error	ERROR
%s:grppoll Buf allocation failed	DEBUG	%s: 0x%p len %u, tag, p, (unsigned	ERROR

__func__		int)len	
%s: unable to start recv logic,	DEBUG	%03d:, i	ERROR
%s: Invalid interface id = %u, __func__, if_id	DEBUG	%02x, ((unsigned char *)p)[i]	ERROR
%s: unable to allocate channel table, __func__	DEBUG	mic check failed	ERROR
%s: Tx Antenna Switch. Do internal reset., __func__	DEBUG	%s: 0x%p len %u, tag, p, (unsigned int)len	ERROR
Radar found on channel %d (%d MHz),	DEBUG	%03d:, i	ERROR
End of DFS wait period	DEBUG	%02x, ((unsigned char *)p)[i]	ERROR
%s error allocating beacon, __func__	DEBUG	mic check failed	ERROR
failed to allocate UAPSD QoS NULL tx descriptors: %d, error	DEBUG	[%s] Wrong parameters, __func__	ERROR
failed to allocate UAPSD QoS NULL wbuf	DEBUG	[%s] Wrong Key length, __func__	ERROR
%s: unable to allocate channel table, __func__	DEBUG	[%s] Wrong parameters, __func__	ERROR
%s: unable to update h/w beacon queue parameters,	DEBUG	[%s] Wrong Key length, __func__	ERROR
ALREADY ACTIVATED	DEBUG	[%s] Wrong parameters, __func__	ERROR
%s: missed %u consecutive beacons,	DEBUG	[%s] Wrong Key length, __func__	ERROR
%s: busy times: rx_clear=%d, rx_frame=%d, tx_frame=%d, __func__, rx_clear, rx_frame, tx_frame	DEBUG	[%s] Wrong parameters, __func__	ERROR
%s: unable to obtain busy times, __func__	DEBUG	[%s] Wrong Key length, __func__	ERROR
%s: beacon is officially stuck,	DEBUG	[%s]: Wrong parameters, __func__	ERROR
Busy environment detected	DEBUG	[%s] Wrong Key Length %d, __func__, des_key_len	ERROR
Inteference detected	DEBUG	[%s] Wrong parameters %d, __func__, des_key_len	ERROR
rx_clear=%d, rx_frame=%d, tx_frame=%d,	DEBUG	[%s] Wrong Key Length %d, __func__, des_key_len	ERROR
%s: resume beacon xmit after %u misses,	DEBUG	[%s] Wrong parameters, __func__	ERROR
%s: stuck beacon; resetting (bmiss count %u),	DEBUG	[%s] Wrong Key Length, __func__	ERROR
EMPTY QUEUE	DEBUG	[%s] Wrong parameters, __func__	ERROR
SWRInfo: seqno %d isswRetry %d retryCnt %d,wh ? (*(u_int16_t *)&wh->i_seq[0]) >> 4 : 0, bf->bf_isswretry,bf->bf_swretries	DEBUG	[%s] Wrong Key Length, __func__	ERROR
Buffer #%%08X --> Next%%08X Prev%%08X Last%%08X,bf, TAILQ_NEXT(bf,bf_list), Stas%%08X flag%%08X Node%%08X, bf->bf_status, bf->bf_flags, bf->bf_node	DEBUG	[%s] Wrong parameters, __func__	ERROR
Descr #%%08X --> Next%%08X Data%%08X Ctl0%%08X Ctl1%%08X, bf->bf_daddr, ds->ds_link, ds->ds_data, ds->ds_ctl0, ds->ds_ctl1 Ctl2%%08X Ctl3%%08X Sta0%%08X Sta1%%08X,ds->ds_hw[0], ds->ds_hw[1], lastds->ds_hw[2], lastds->ds_hw[3]	DEBUG	[%s] Wrong parameters, __func__	ERROR
Error entering wow mode	DEBUG	device name=%s not found, pReq-	ERROR

		>ifName	
Wakingup due to wow signal	DEBUG	unable to register KIFDEV to UMI	ERROR
%s, wowStatus = 0x%x, __func__, wowStatus	DEBUG	ERROR: %s: Timeout at page %#0x addr %#0x	ERROR
Pattern added already	DEBUG	ERROR: %s: Timeout at page %#0x addr %#0x	ERROR
Error : All the %d pattern are in use. Cannot add a new pattern , MAX_NUM_PATTERN	DEBUG	Invalid IOCTL %#08x, cmd	ERROR
Pattern added to entry %d ,i	DEBUG	%s: unable to register device, dev->name	ERROR
Remove wake up pattern	DEBUG	ath_pci: 32-bit DMA not available	ERROR
mask = %p pat = %p ,maskBytes,patternBytes	DEBUG	ath_pci: cannot reserve PCI memory region	ERROR
mask = %x pat = %x ,(u_int32_t)maskBytes, (u_int32_t)patternBytes	DEBUG	ath_pci: cannot remap PCI memory region) ;	ERROR
Pattern Removed from entry %d ,i	DEBUG	ath_pci: no memory for device state	ERROR
Error : Pattern not found	DEBUG	%s: unable to register device, dev->name	ERROR
PPM STATE ILLEGAL %x %x, forcePpmStateCur, afp->forceState	DEBUG	ath_dev_probe: no memory for device state	ERROR
FORCE_PPM %4d %6.6x %8.8x %8.8x %8.8x %3.3x %4.4x,	DEBUG	%s: no memory for device state, __func__	ERROR
failed to allocate tx descriptors: %d, error	DEBUG	kernel MIBCTL registration failed!	ERROR
failed to allocate beacon descriptots: %d, error	DEBUG	Bad ioctl command	ERROR
failed to allocate UAPSD descriptots: %d, error	DEBUG	WpsMod: Failed to configure gpio pin	ERROR
hal qnum %u out of range, max %u!,	DEBUG	WpsMod: Failed to register interrupt handler	ERROR
HAL AC %u out of range, max %zu!,	DEBUG	registering char device failed	ERROR
HAL AC %u out of range, max %zu!,	DEBUG	unregistering char device failed	ERROR
%s: unable to update hardware queue %u!,	DEBUG	%s:%d - ERROR: non-NULL node pointer in %p, %p<%s>!	ERROR
Multicast Q:	DEBUG	%s:%d - ERROR: non-NULL node pointer in %p, %p<%s>!	ERROR
%p , buf	DEBUG	can't alloc name %s, name	ERROR
buf flags - 0x%08x ----- , buf->bf_flags	DEBUG	%s: unable to register device, dev->name	ERROR
buf status - 0x%08x, buf->bf_status	DEBUG	failed to automatically load module: %s; \	ERROR
# frames in aggr - %d, length of aggregate - %d, length of frame - %d, sequence number - %d, tidno - %d,	DEBUG	Unable to load needed module: %s; no support for \	ERROR
isdata: %d isaggr: %d isampdu: %d ht: %d isretried: %d isxretried: %d shpreamble: %d isbar: %d ispspoll: %d aggrburst: %d calcairtime: %d qosnulleosp: %d,	DEBUG	Module %s\ is not known, buf	ERROR
%p: 0x%08x 0x%08x 0x%08x 0x%08x 0x%08x 0x%08x 0x%08x 0x%08x 0x%08x 0x%08x 0x%08x 0x%08x,	DEBUG	Error loading module %s\, buf	ERROR
0x%08x 0x%08x 0x%08x 0x%08x 0x%08x 0x%08x 0x%08x 0x%08x	DEBUG	Module %s\ failed to initialize, buf	ERROR

0x%08x 0x%08x,			
0x%08x 0x%08x 0x%08x 0x%08x,	DEBUG	ath_pci: 32-bit DMA not available	ERROR
sc_txq[%d] : , i	DEBUG	ath_pci: cannot reserve PCI memory region	ERROR
tid %p pause %d : , tid, tid->paused	DEBUG	ath_pci: cannot remap PCI memory region) ;	ERROR
%d: %p , j, tid->tx_buf[j]	DEBUG	ath_pci: no memory for device state	ERROR
%p , buf	DEBUG	%s: unable to attach hardware: '%s' (HAL status %u),	ERROR
axq_q:	DEBUG	%s: HAL ABI mismatch;	ERROR
%s: unable to reset hardware; hal status %u, __func__, status	DEBUG	%s: failed to allocate descriptors: %d,	ERROR
****ASSERTION HIT****	DEBUG	%s: unable to setup a beacon xmit queue!,	ERROR
MacAddr=%s,	DEBUG	%s: unable to setup CAB xmit queue!,	ERROR
TxBufIdx=%d, i	DEBUG	%s: unable to setup xmit queue for %s traffic!,	ERROR
Tid=%d, tidno	DEBUG	%s: unable to register device, dev->name	ERROR
AthBuf=%p, tid->tx_buf[i]	DEBUG	%s: autocreation of VAP failed: %d,	ERROR
%s: unable to reset hardware; hal status %u,	DEBUG	ath_dev_probe: no memory for device state	ERROR
%s: unable to reset hardware; hal status %u,	DEBUG	kdot11RogueAPEnable called with NULL argument.	ERROR
%s: unable to start recv logic,	DEBUG	kdot11RogueAPEnable: can not add more interfaces	ERROR
_fmt, __VA_ARGS__ \	DEBUG	kdot11RogueAPGetState called with NULL argument.	ERROR
sample_pri=%d is a multiple of refpri=%d, sample_pri, refpri	DEBUG	kdot11RogueAPDisable called with NULL argument.	ERROR
=====ft->ft_numfilters=%u=====, ft->ft_numfilters	DEBUG	%s: SKB does not exist., __FUNCTION__	ERROR
filter[%d] filterID = %d rf_numpulses=%u; rf->rf_minpri=%u; rf->rf_maxpri=%u; rf->rf_threshold=%u; rf->rf_filterlen=%u; rf->rf_mindur=%u; rf->rf_maxdur=%u,j, rf->rf_pulseid,	DEBUG	%s: recvd invalid skb	ERROR
NOL	DEBUG	unable to register KIFDEV to UMI	ERROR
WARNING!!! 10 minute CAC period as channel is a weather radar channel	DEBUG	The system is going to factory defaults.....!!!	CRITICAL
%s disable detects, __func__	DEBUG	%s, msg	CRITICAL
%s enable detects, __func__	DEBUG	%02x, *(data + i)	CRITICAL
%s disable FFT val=0x%x , __func__, val	DEBUG	Inside crypt_open in driver #####	CRITICAL
%s enable FFT val=0x%x , __func__, val	DEBUG	Inside crypt_release in driver #####	CRITICAL
%s debug level now = 0x%x , __func__, dfs_debug_level	DEBUG	Inside crypt_init module in driver @@@@	CRITICAL
RateTable:%d, maxvalidrate:%d, ratemax:%d, pRc->rateTableSize,k,pRc->rateMaxPhy	DEBUG	Inside crypt_cleanup module in driver @@@@	CRITICAL
%s: txRate value of 0x%x is bad., __FUNCTION__, txRate	DEBUG	SKB is null : %p ,skb	CRITICAL
Valid Rate Table:-	DEBUG	DST is null : %p ,dst	CRITICAL

Index:%d, value:%d, code:%x, rate:%d, flag:%x, i, (int)validRateIndex[i],	DEBUG	DEV is null %p %p ,dev,dst	CRITICAL
RateTable:%d, maxvalidrate:%d, ratemax:%d, pRc->rateTableSize,k,pRc->rateMaxPhy	DEBUG	Packet is Fragmented %d,pBufMgr->len	CRITICAL
Can't allocate memory for ath_vap.	DEBUG	Marked the packet proto:%d sip:%x dip:%x sport:%d dport:%d spi:%d,isr:%p:%p %p	CRITICAL
Unable to add an interface for ath_dev.	DEBUG	SAV CHECK FAILED IN DECRYPTION	CRITICAL
%s: [%02u] %-7s , tag, ix, ciphers[hk->kv_type]	DEBUG	FAST PATH Breaks on BUF CHECK	CRITICAL
%02x, hk->kv_val[i]	DEBUG	FAST PATH Breaks on DST CHECK	CRITICAL
mac %02x-%02x-%02x-%02x-%02x-%02x, mac[0], mac[1], mac[2], mac[3], mac[4], mac[5]	DEBUG	FAST PATH Breaks on MTU %d %d %d,bufMgrLen(pBufMgr),mtu,dst_mtu(pDst->path)	CRITICAL
mac 00-00-00-00-00-00	DEBUG	FAST PATH Breaks on MAX PACKET %d %d,bufMgrLen(pBufMgr),IP_MAX_PACKET	CRITICAL
%02x, hk->kv_mic[i]	DEBUG	SAV CHECK FAILED IN ENCRYPTION	CRITICAL
txmic	DEBUG	Match Found proto %d spi %d,pPktInfo->proto,pFlowEntry->pre.spi	CRITICAL
%02x, hk->kv_txmic[i]	DEBUG	PRE: proto: %u srcip:%u.%u.%u.%u sport :%u dstip: %u.%u.%u.%u dport: %u,	CRITICAL
Cannot support setting tx and rx keys individually	DEBUG	POST: proto: %u srcip:%u.%u.%u.%u sport :%u dstip: %u.%u.%u.%u dport: %u,	CRITICAL
bogus frame type 0x%x (%s),	DEBUG	Clearing the ISR %p,p	CRITICAL
ERROR: ieee80211_encap ret NULL	DEBUG	PROTO:%d %u.%u.%u.%u--->%u.%u.%u.%u,	CRITICAL
ERROR: ath_amsdu_attach not called	DEBUG	ESP-DONE: %p %p,sav,m	CRITICAL
%s: no memory for cwm attach, __func__	DEBUG	ESP-BAD: %p %p,sav,m	CRITICAL
%s: error - acw NULL. Possible attach failure, __func__	DEBUG	Bug in ip_route_input_slow().	CRITICAL
%s: unable to abort tx dma, __func__	DEBUG	Bug in ip_route_input_slow().	CRITICAL
%s: no memory for ff attach, __func__	DEBUG	Bug in ip_route_input \	CRITICAL
Failed to initiate PBC based enrole association	DEBUG	Bug in ip_route_input_slow().	CRITICAL
KERN_EMERG Returing error in INTR registration	DEBUG	AH: Assigning the secure flags for sav :%p,sav	CRITICAL
KERN_EMERG Initialzing Wps module	DEBUG	ESP: Assigning the secure flags for sav :%p skb:%p src:%x dst:%x,sav,skb,ip->ip_src.s_addr,ip->ip_dst.s_addr	CRITICAL
%s:%d %s, __FILE__, __LINE__, __func__	DEBUG	%s Buffer %d mtu %d path mtu %d header %d trailer %d,__func__,bufMgrLen(pBufMgr),mtu ,dst_mtu(pDst->path),pDst->header_len,pDst->trailer_len	CRITICAL

Appendix E. RJ-45 Pin-outs

Signal	RJ-45 Cable RJ-45 PIN	Adapter DB-9 PIN	Signal
CTS	NC	NC	NC
DTR	NC	NC	NC
TxD	6	3	RxD
GND	5	5	GND
GND	4	5	GND
RxD	3	2	TxD
DSR	NC	NC	NC
RTS	NC	NC	NC